

Keyboard

Multi touch trigger pad / step key

Sythesizer

Type: Analog synthesis (Kick, Snare, Hi Tom, Lo Tom, Closed Hi Hat/Open Hi Hat)

PCM synthesis (Clap, Claves, Agogo, Crash)

Kick: Click, Pitch, Decay, Part Level

Snare: Snappy, Pitch, Decay, Part Level

Tom: Hi Pitch, Lo Pitch, Decay, Part Level

Hi Hat: Closed Decay, Open Decay, Grain, Part Level

PCM: PCM Speed, Part Level

Sequencer

Number of Parts: 10

Number of Steps: 16

Number of Recording Patterns: 8

Connectors

Audio Output: Headphones (3.5mm stereo mini jack)

Sync:

 Sync In (3.5mm monaural mini jack, Maximum input level: 20V)

 Sync Out(3.5mm monaural mini jack, Maximum Output level: 5V)

MIDI: MIDI IN

Power

Battery Life: Approximately 10 hours (using alkaline batteries)

Power Supply: AA alkaline battery × 6 or AA nickel-metal hydride battery × 6 Or AC adapter "KA-350" (optional)

Others

Accessories: AA alkaline battery ×6 (for verifying operation), Cable

Options: AC adapter (DC 9V)

Dimensions: (W x D x H) 193 × 115 ×45 mm / 7.60" x 4.53" x 1.77"

Weight: 372 g / 0.82lbs (Excluding batteries)