













Premier
NXT II GEN

**CONCERT BASS
DRUM & CRADLE**


PNG-OB4018CR

SETUP GUIDE


PARTS

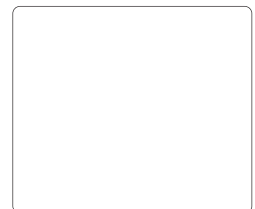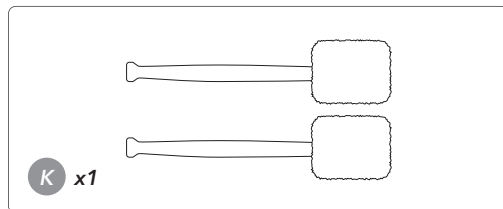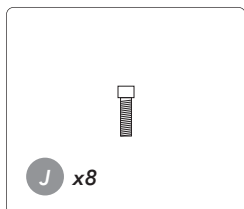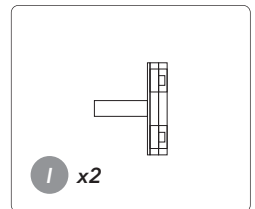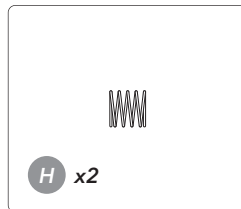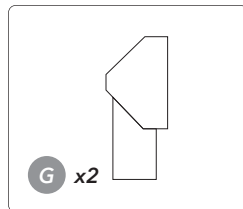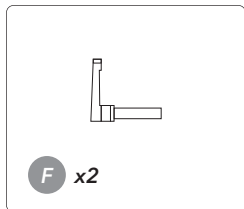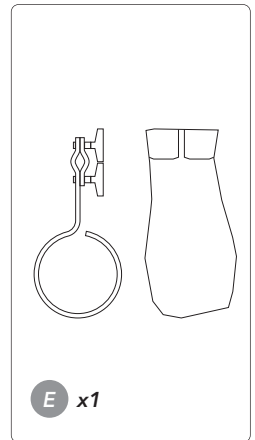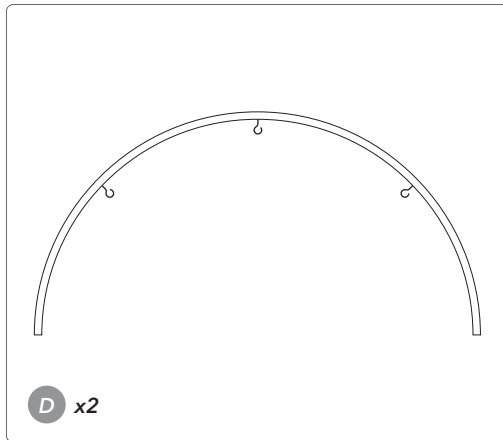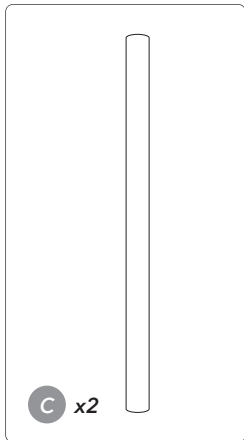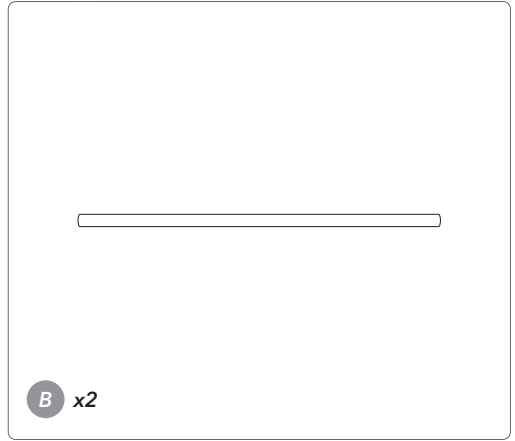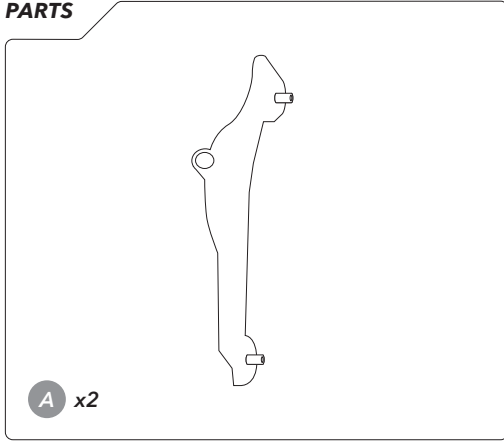


STEP 1

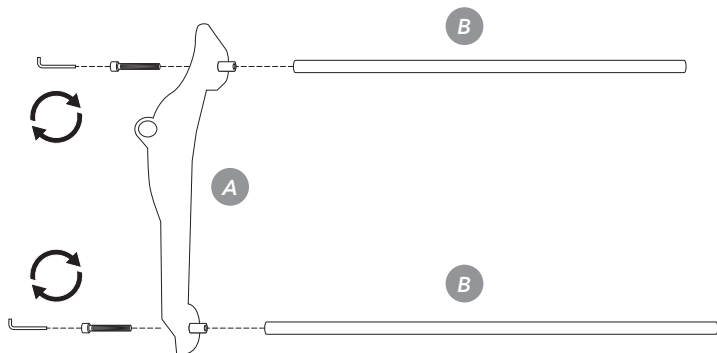


STEP 2

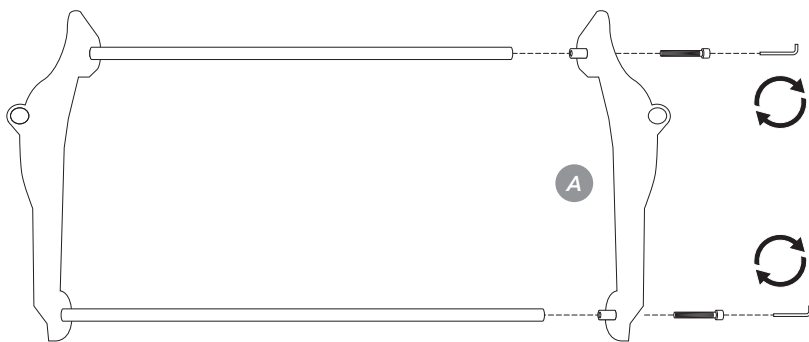


STEP 3

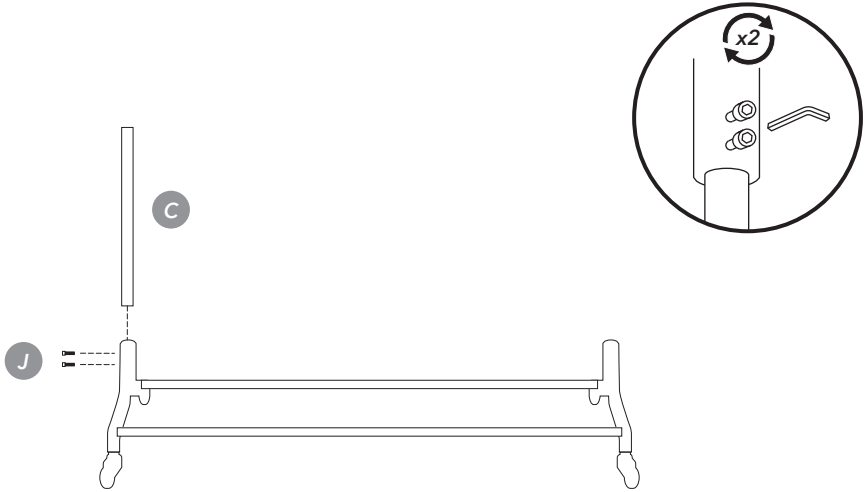


STEP 4

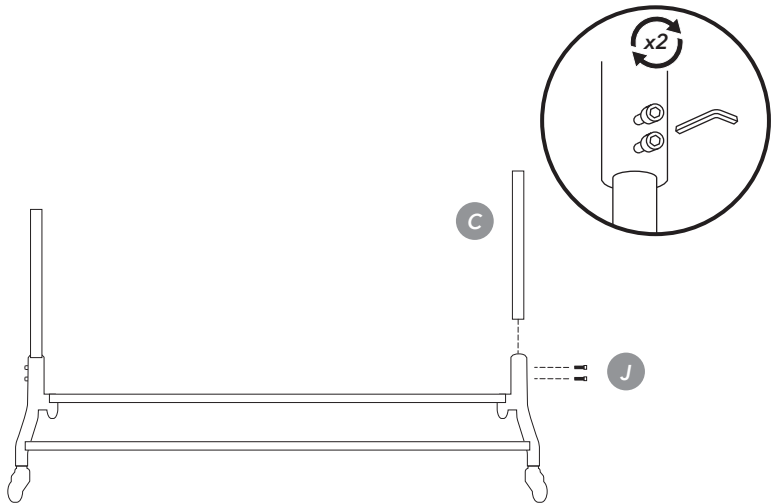


STEP 5

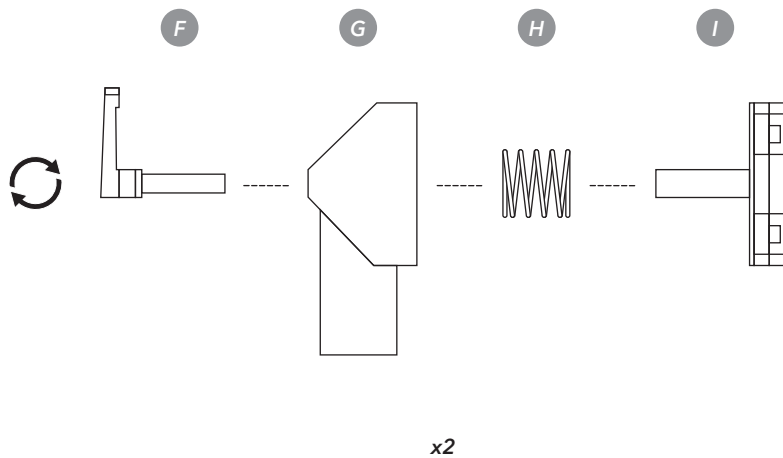


STEP 6

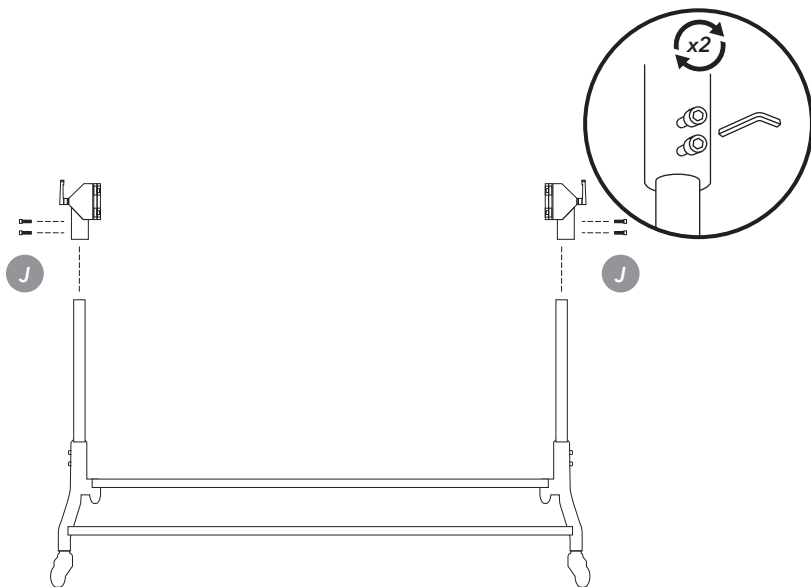


STEP 7

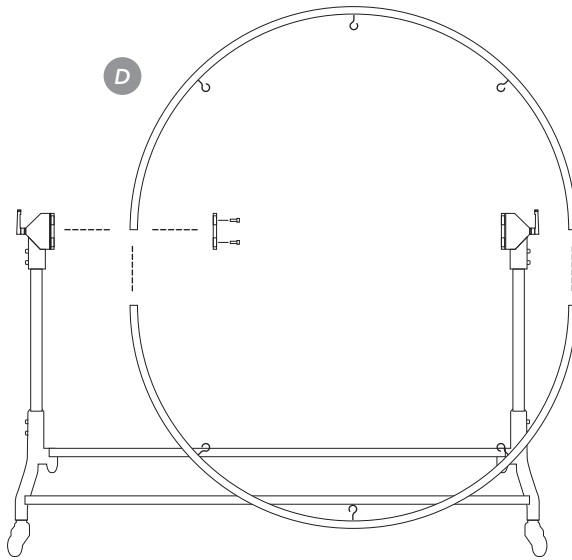


STEP 8


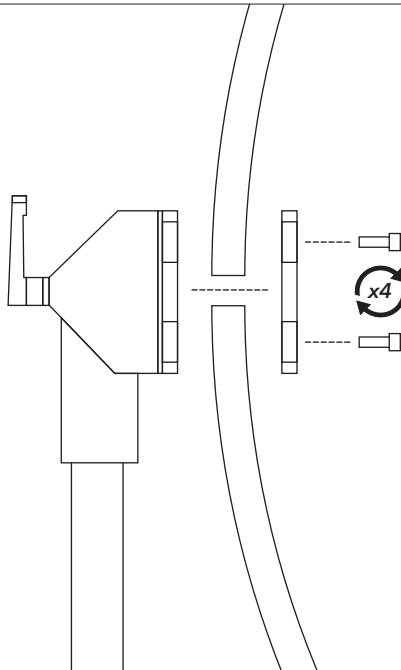


STEP 9

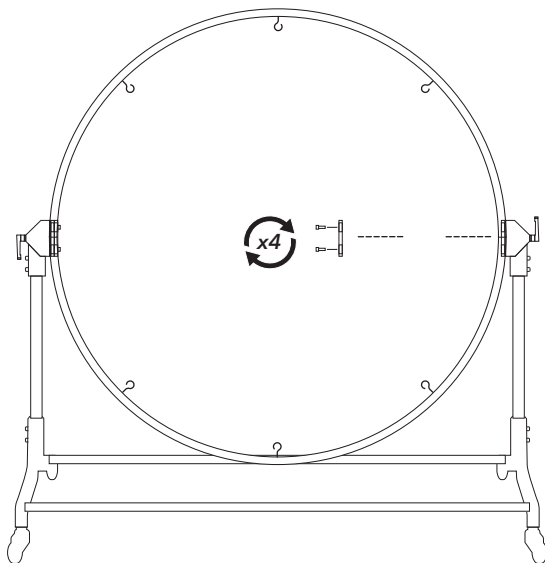


STEP 10

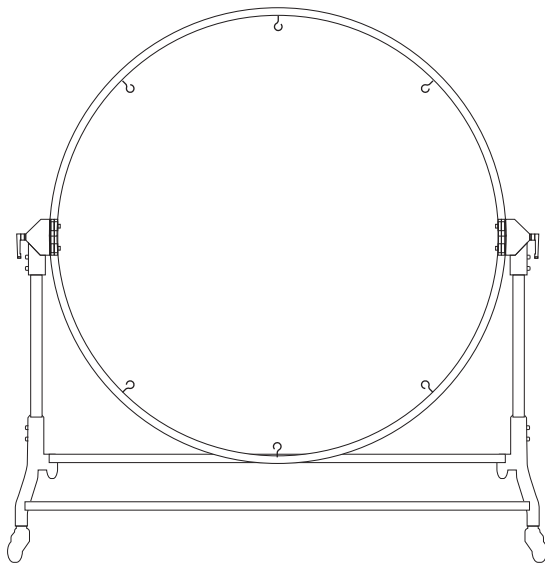


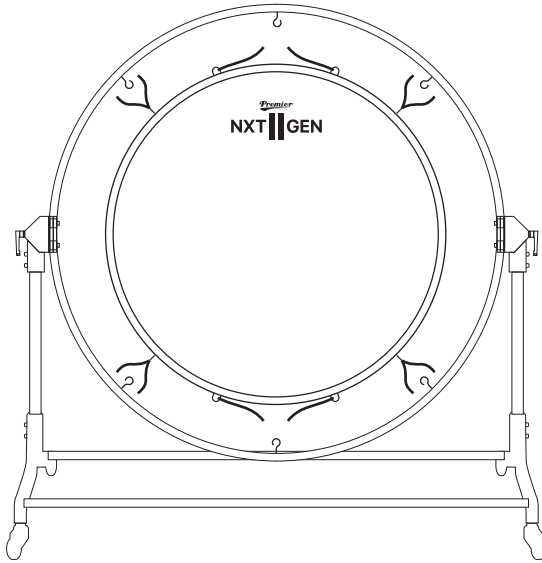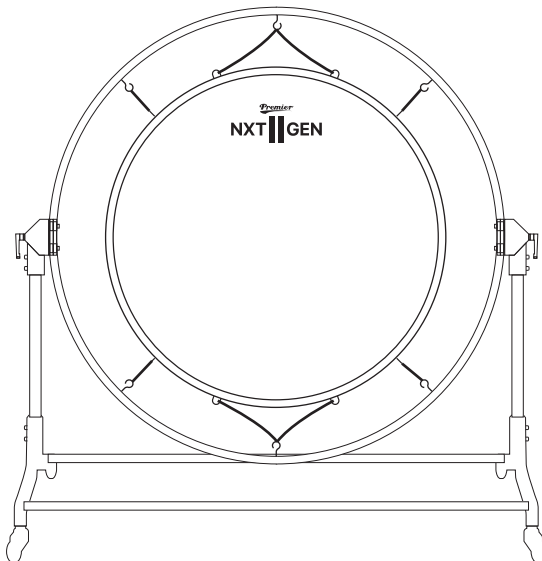STEP 11**STEP 12**

STEP 13

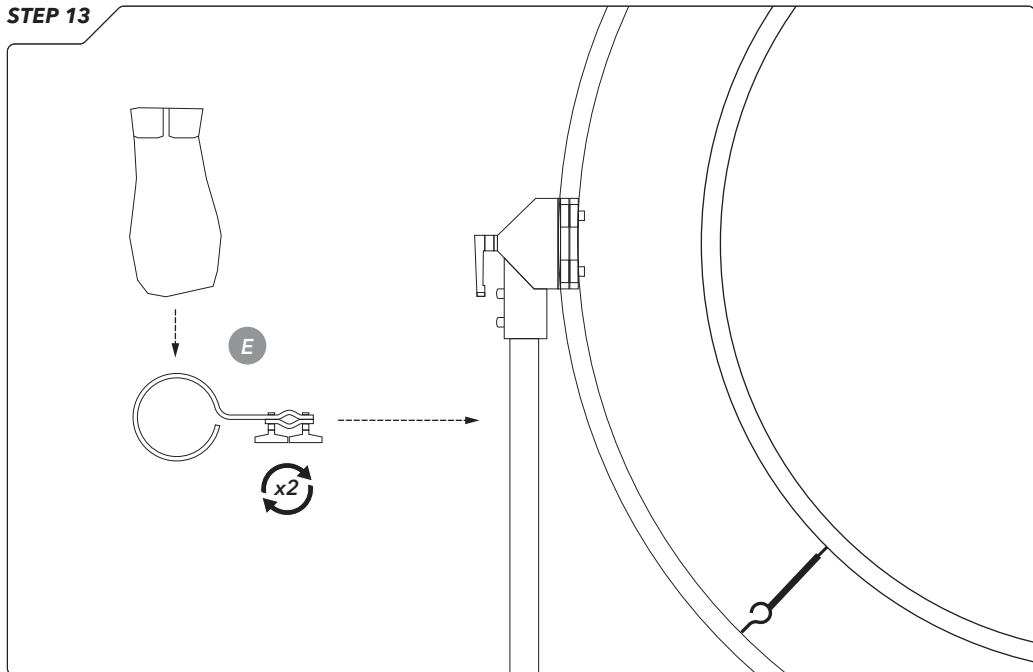

STEP 14

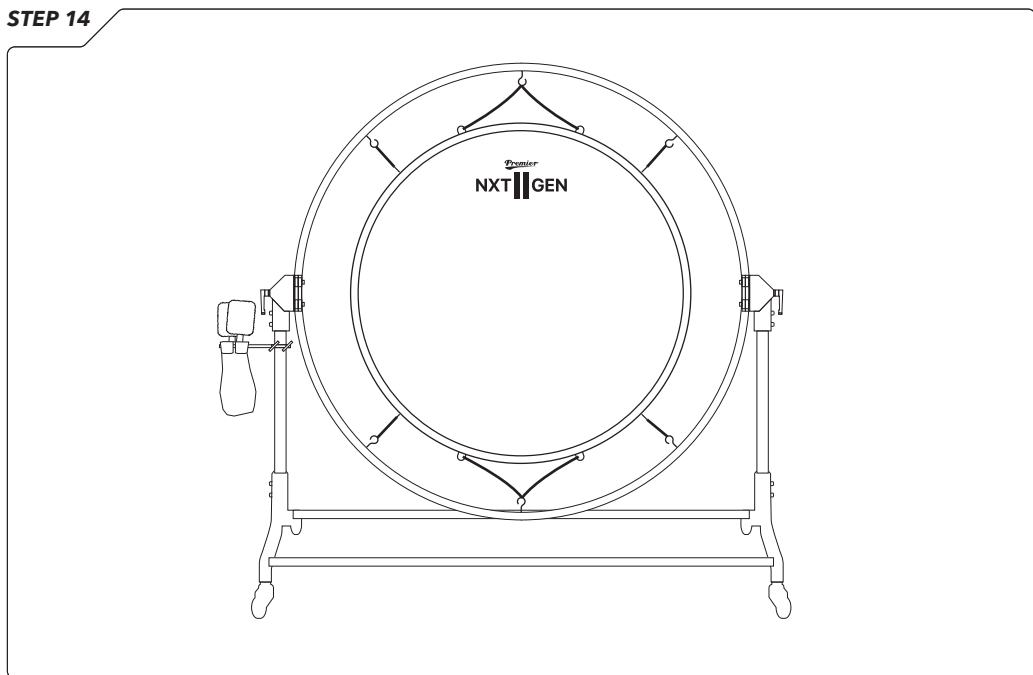

Premier
NXT || GEN

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: +44 (0) 330 365 4444 or info@gear4music.com

KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM
LAHNSTRASSE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND
WWW.GEAR4MUSIC.COM