

 
 
 
 
 
 
 
 
 
 
 
 
Premier
NXT || GEN

**CHROME CHIMES,
2.5 OCTAVE**


PNG-OCC2.5

SETUP GUIDE


PARTS

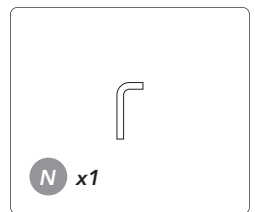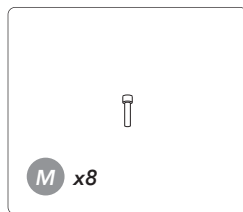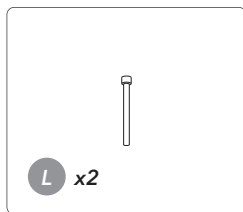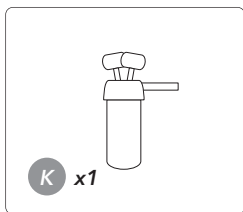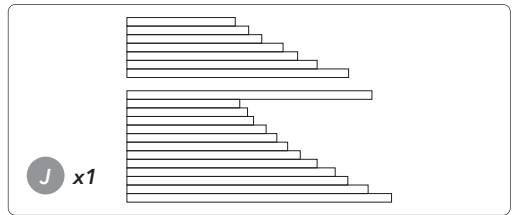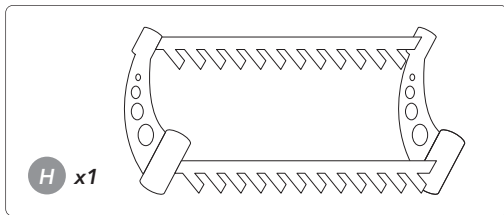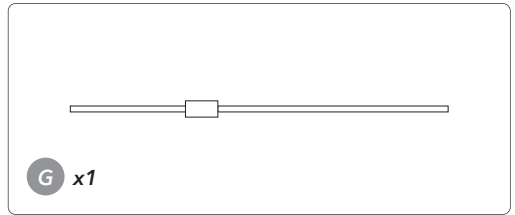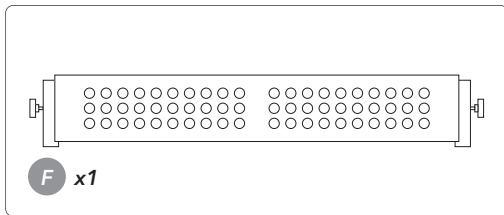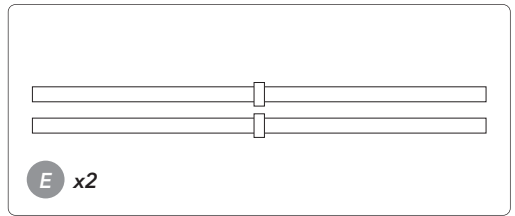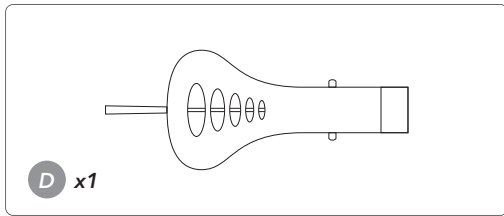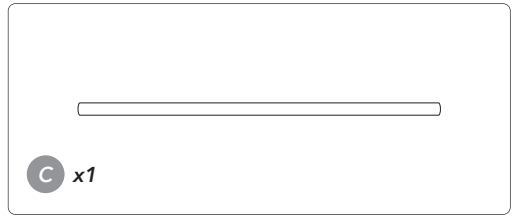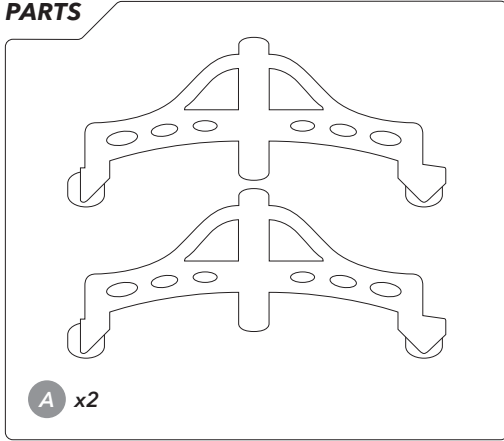

 
STEP 1


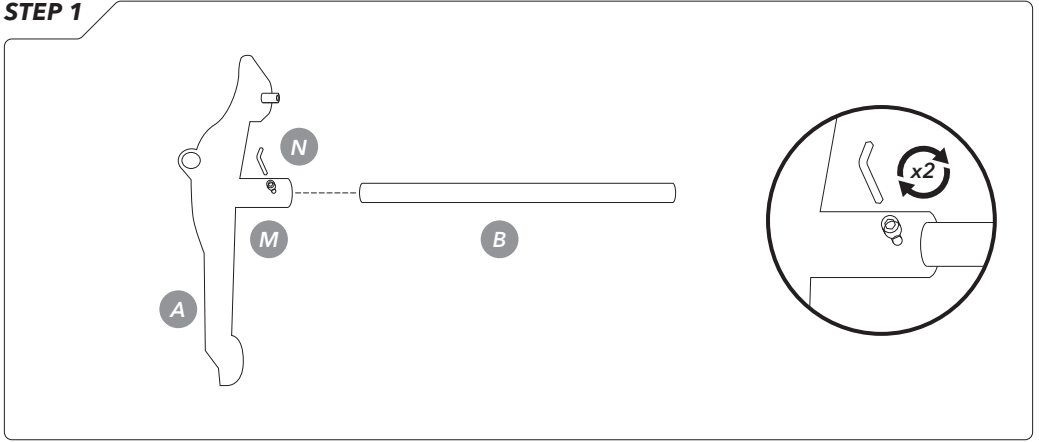


 STEP 2

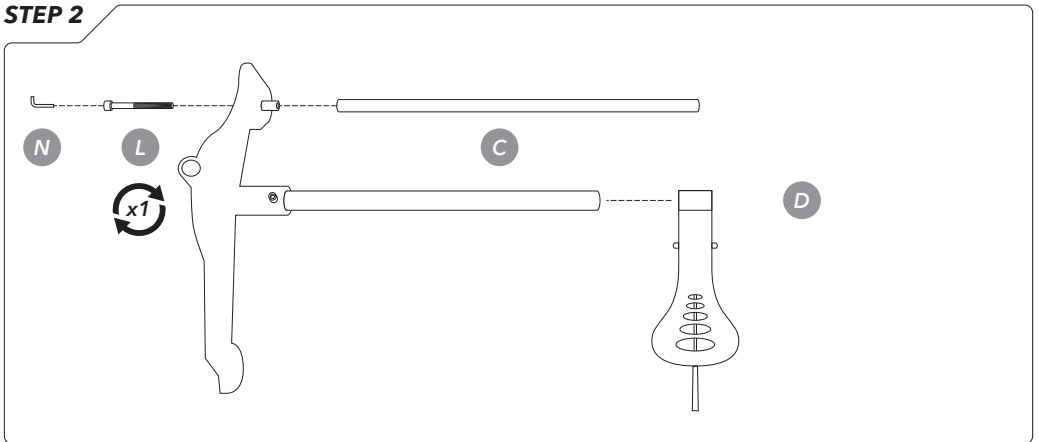


   STEP 3



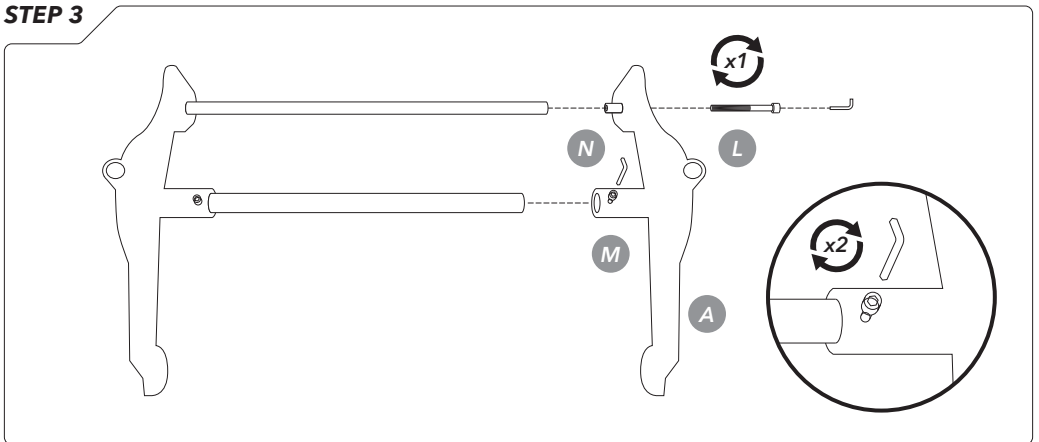


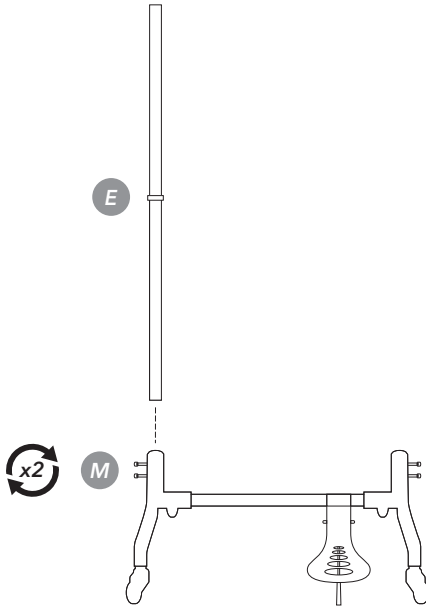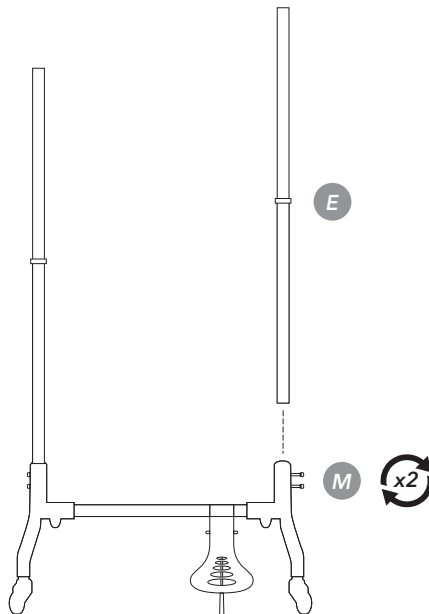STEP 4**STEP 5**

 
STEP 6

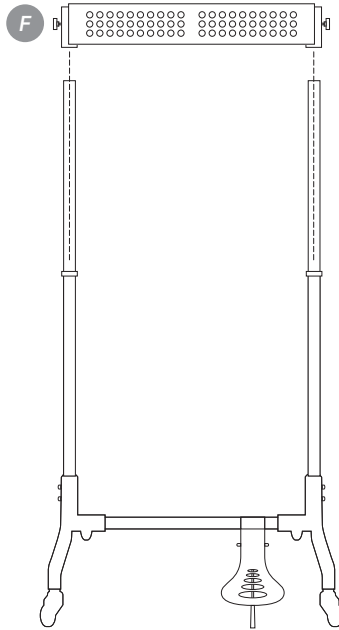

   
STEP 7

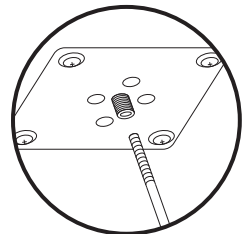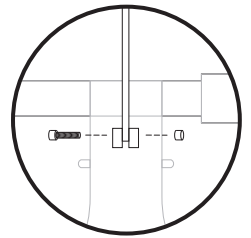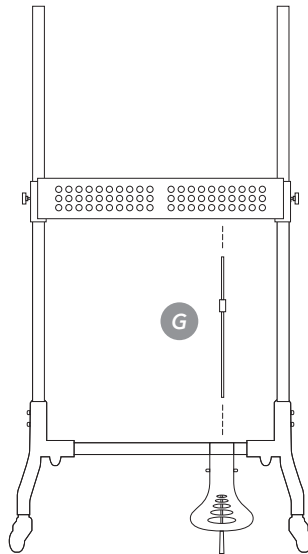

 
STEP 8

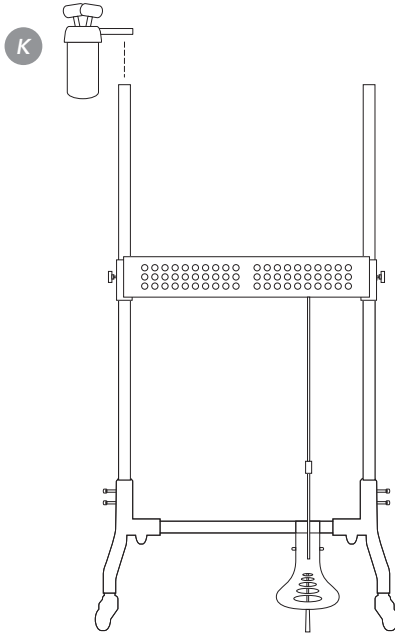

 
STEP 9

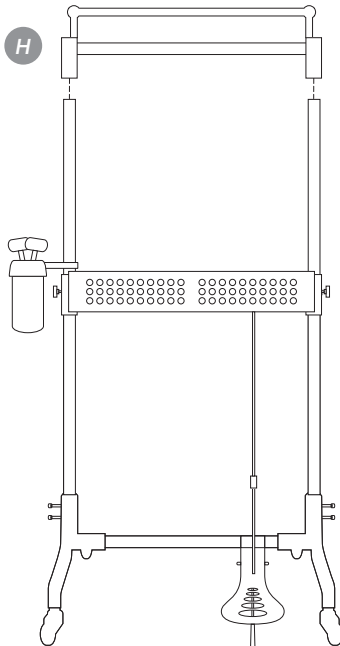

 
STEP 10

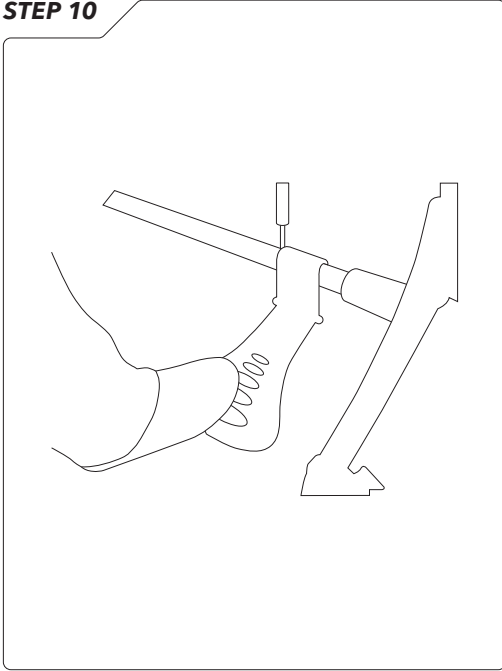

 
STEP 11

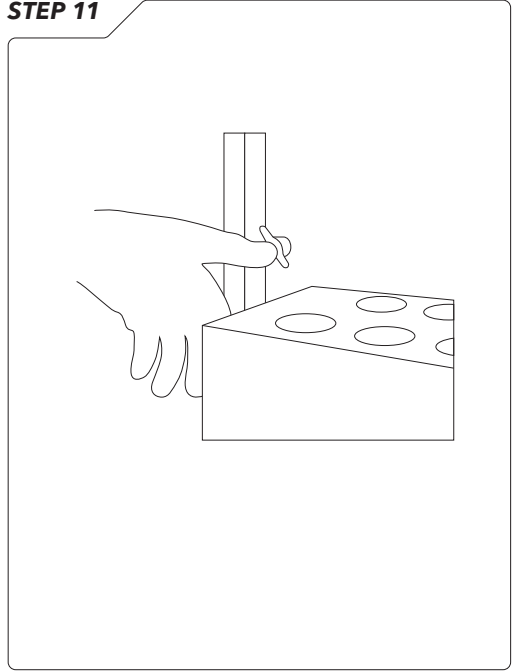

 
STEP 12

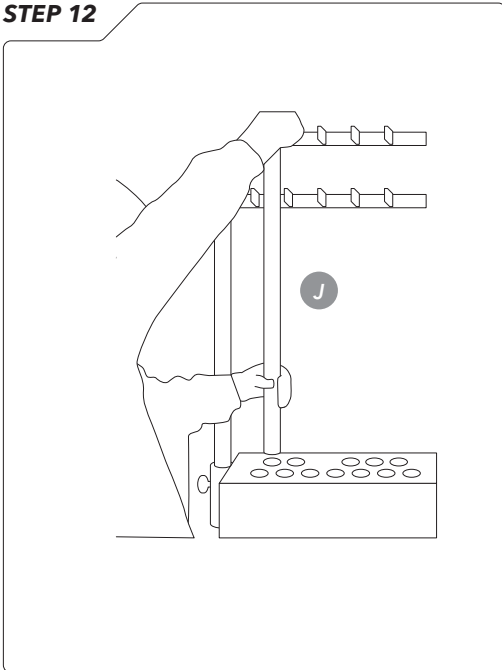

 STEP 13

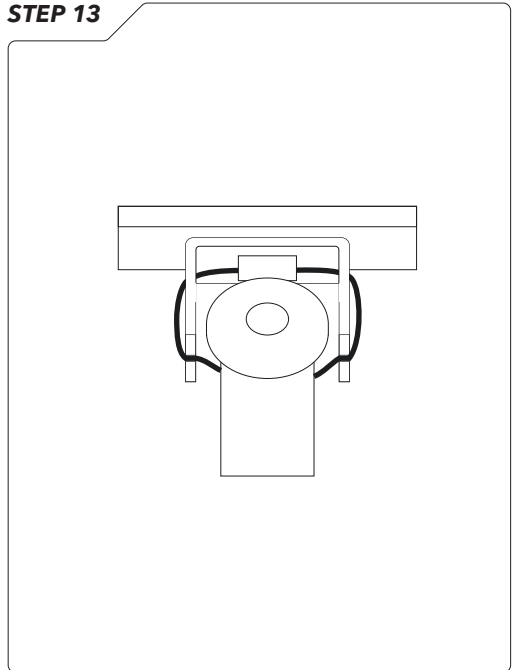

 STEP 14

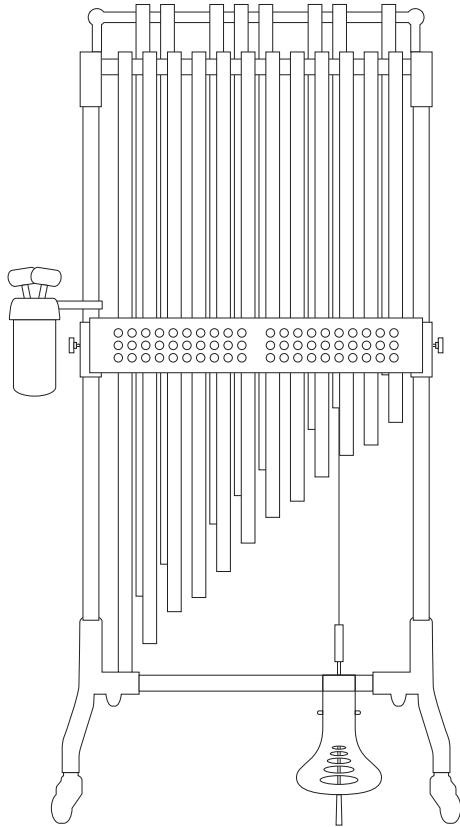

Premier
NXT || GEN

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: +44 (0) 330 365 4444 or info@gear4music.com

KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM
LAHNSTRASSE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND
WWW.GEAR4MUSIC.COM