 


# SONORI PIANOS

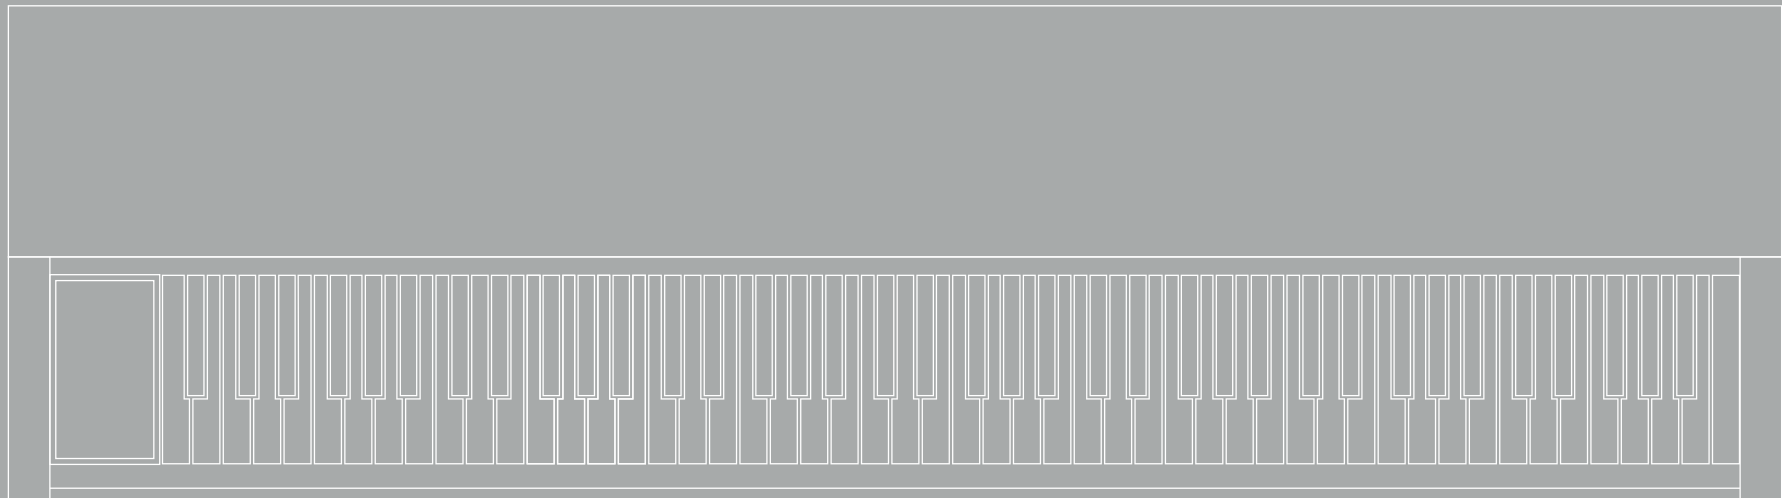

# Warnings

## WARNING!

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel  
Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock  
The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product  
No naked flame sources, such as lighted candles, should be placed on the product  
Allow adequate air circulation and avoid obstructing vents (if present) to prevent internal heat build-up. The ventilation must not be impeded by covering the appliance with items such as newspapers, table-cloths, curtains etc.  
The mains plug is used to disconnect the appliance from the mains supply. Ensure that the mains outlet is easily-accessible and remove the plug from the mains outlet if you notice any abnormality with the appliance.

## VAROVÁNÍ

Nezakrývejte. Uvnitř nejsou žádné součásti opravitelné uživatelem. S požadavkem na servis se obraťte na kvalifikované servisní oddělení.  
Neumisťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným prašením, mechanickými vibracemi nebo šokem.  
Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt.  
Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt.  
Umožněte dostatečnou cirkulaci vzduchu a vyhněte se obstrukci ventilátorů (pokud jsou přítomné) pro efektivitu interního přehřívání. Ventilace nesmí být narušena překrytím zařízení výrobky jako např. noviny, kuchyňské utěrky, záclony apod.  
Hlavní kabel umožňuje odpojit zařízení od elektriny. Ujistěte se, že hlavní napájecí výstup je snadno dostupný a odpojte kabel pokud zaznamenáte jakoukoliv abnormalitu na zařízení.

## DVARSELI

Dækslet må ikke åbnes. Ingen bruger-udsiktelige dele indeni. Overlad service til kvalificeret service personale  
Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støv, mekaniske vibrationer eller støt  
Produktet må ikke udsættes for vand eller stænk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet  
Må ikke placeres nær åben ild, tændte stearinlys må ikke placeres på produktet  
Vær sikker på at der er tilstrækkelig luftcirkulation og undgå at dække ventiler (hvis der er nogen) for at undgå at produktet bliver varmt. Ventilationen må ikke blokeres med overdækning af apparatet med genstande som aviser, dug, gardiner osv.  
Stikket bruges til at afbryde apparatet fra strømmen. Sikre at stikkontakten er let tilgængelig, og fjern stikket fra stikkontakten, hvis du bemærker noget unormalt med apparatet.

## WAARSCHUWING!

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhoud over aan bevoegd onderhoudspersoneel.  
Plaats het product niet in de buurt van een hittebron zoals een radiator of in direct zonlicht of in een stofrijke omgeving, mechanische vibratie of schok.  
Plaats het product niet in de buurt van spatteende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas.  
Er mogen geen open vlammen zoals aangestoken kaarsen op de apparatuur worden geplaatst.  
Zorg om overhitting te voorkomen voor voldoende ventilatie en bellemmer ventilatieroosters niet. Bedek het product niet met dingen zoals kanten, tafellakens, gordijnen etc.  
De stekker van dit apparaat wordt gebruikt om het apparaat aan en uit te zetten. Zorg ervoor dat het stopcontact gemakkelijk bereikbaar is en haal de stekker uit het stopcontact als u enige onregelmatigheid ondervindt.

## VAROITUS!

Älä avaa kannetta. Ei sisällä käyttäjä-huollotettavia osia. Huollot saa suorittaa vain pätevä huoltomies.  
Älä säilytä tuotetta minkään kuumaa lämmityslaitetta, patteria tai suorassa auringonpaisteessa, pölyisessä, mekaanisessa värinäössä tai iskussa  
Tuotetta ei saa altistaa tippuvalle tai loiskeelle tai nesteitä sisältäviä tuotteita kuten maljakko eivät saa olla tuotteen lähetyvillä  
Avotulia kuten sytyttyä kynttilä ei saa olla tuotteen päällä.  
Salli riittävä ilmankierto ja vältä tuuletusaukkojen tukkiminen (jos sellaisia on olemassa) estämään sisäisen lämmön muodostuminen. Tuletusta ei saa estää peittämällä laite esineillä, kuten sanomalehdillä, pöytäliinoilla, verhoilla jne.

## EN

## ATTENTION!

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation à du personnel de réparation qualifié  
Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques  
L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé dessus  
Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil  
Assurer une circulation d'air suffisante et éviter d'obstruer les fentes (le cas échéant) afin d'éviter une surchauffe interne. La ventilation ne doit pas être bloquée en couvrant l'appareil avec des objets tels que des journaux, des nappes, des rideaux, etc.  
La prise secteur est utilisée comme dispositif de débranchement. La prise murale doit être facile d'accès, et en cas d'anomalie de l'appareil, débrancher la prise de courant au niveau de la prise murale.

## CZ

## WARNING!

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile. Überlassen Sie Wartungsarbeiten qualifiziertem Fachpersonal.  
Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Vibrationen oder Stößen.  
Schützen Sie das Produkt vor Tropfen oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt.  
Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden.  
Sorgen Sie für eine ausreichende Luftzirkulation und vermeiden Sie, dass die Lüftungsschlitze (falls vorhanden) abgedeckt werden, um einen internen Wärmestau zu verhindern. Die Belüftung darf nicht durch Abdecken des Gerätes mit Gegenständen wie Zeitungen, Tischdecken, Vorhängen usw. blockiert werden.  
Der Netzstecker dient zum Trennen des Gerätes vom Netz. Vergewissern Sie sich, dass die Steckdose leicht zugänglich ist, und ziehen Sie den Stecker aus der Steckdose, wenn Sie eine Anomalie mit dem Gerät bemerken.

## DK

## AVVERTIMENTO!

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto.  
Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock.  
Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto.  
Non esporre il prodotto a fuoco, candele o oggetti simili.  
Assicurarsi la circolazione dell'aria e non ostruire le ventole, se presenti, per evitare il surriscaldamento. La ventilazione non deve subire impedimenti dovuti a giornali, tovaglie, tende, ecc.  
La spina principale viene utilizzata per disconnettere il prodotto dalla principale fonte di energia. Assicurarsi che la spina sia facilmente accessibile e disconnettere l'unità nel caso si notassero dei difetti di funzionamento.

## NL

## ADVARSELI

Ikke åpne dekslet. Inneholder ingen deler som kan brukes. Overlat reparasjon til kvalifisert servicepersonell.  
Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støv, mekanisk vibrasjon eller støt.  
Produktet må ikke utsettes for drypping eller spruting, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet.  
Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet.  
Tillat tilstrekkelig luftcirkulasjon og unngå å blokkere ventiler (hvis tilstede) for å forhindre intern varmeoppsamling. Pass på at ventilasjon ikke hindres ved å unngå å dekke apparatet med ting som aviser, borddunker, gardiner osv.  
Stikkontakten brukes til å koble apparatet fra strømforsyningen. Forsikre deg om at stikkontakten er lett tilgjengelig og ta støtselet ut av stikkontakten hvis du oppdager uregelmessigheter under bruk av apparatet.

## FI

## OSTRZEZENIE!

Nie otwierać pokrywy. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla wyszkolonego personelu.  
Nie umieszczać produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym wibracjom.  
Produkt ten nie może być ekspozowany na kapanie lub chłapanie, a przedmioty wypełnione płynami, takie jak wazy, nie powinny być na nim umieszczane.  
Źródła otwartego ognia, takie jak np. świece, nie powinny być umieszczane na produkcie.  
Należy zapewnić odpowiednią wentylację i unikać blokowania otworów wentylacyjnych, aby uniknąć wewnętrznej wzrostu temperatury. Wentylacja nie powinna być utrudniana poprzez nakrywanie urządzenia gazetami, obrusami czy zastonami.

## FR

Wytzcka sieciowa sluzy do odlaczenia urzadzenia od zasilania sieciowego. Nalezny upewnic sie, ze gniazdo sieciowe jest latwo dostepne, a w razie wystapienia nieprawidlosci w funkcjonowaniu urzadzenia odlaczaj je od zasilania sieciowego.

## ATENÇÃO!

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado  
Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque  
Não mantenha o produto num local húmido ou perto líquidos como vasos, etc.  
Não aproxime o produto a fontes de fogo vivo, como velas  
Mantenha o produto num espaço suficientemente arejado de forma a evitar sobre-aquecimento. Não bloqueie a ventilação do instrumento, cobrindo-o com artigos como cortinas, toalhas de mesa ou jornais  
O transformador é utilizado para conectar e desconectar o artigo da principal fonte de energia. Certifique-se que a ficha é facilmente acessível e que o artigo está devidamente ligado à corrente se detectar alguma anomalia com o funcionamento

## PT

## VÝSTRAHA!

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko.  
Nevystavujte produkt do blízkosti akéhokoľvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so silečným žiarením, nadmerným prašným prostredím, mechanickým vibráciami alebo šokom.  
Produkt nesmie prísť do kontaktu s vodou a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt.  
Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkt.  
Umožnite dostatočnú cirkuláciu vzduchu a zabráňte obstrukcii ventilačných otvorov (ak sú prítomné) kvôli prevencii vnútorného prehrievania. Ventilácia nesmie byť narušená prekrytím zariadenia výrobkami ako napr. noviny, kuchynské utierky, záclony a pod.  
Hlavný kábel umožňuje odpojiť zariadenie od elektriny. Uistite sa, že hlavný napájací výstup je ľahko dostupný a odpojte kábel ak zaznamenáte akúkoľvek abnormalitu na zariadení.

## IT

## OPOZORIL!

Ne odpirajte pokrova. V notranjosti ni nobenih delov, ki jih uporabnik lahko sam popravlja. Popravilo prepustite usposobljenemu osobju  
Ne postavljajte izdelka na lokacijo v bližini vira toplote, kot je radiator, ali na območje, ki je izpostavljeno neposredni sončni svetlobi, pretiranemu prahu, mehanskim tresljajem ali udarcem  
Izdelek ne sme biti izpostavljen kapljanju ali brizganju in nobeni predmeti, napolnjeni z vodo, kot so vase, se ne smejo postaviti na izdelek  
Nobenež od virov odprtega ognja, kot so vžgane sveče, se ne sme postavljati na izdelek  
Zagotovite zadostno kroženje zraka in umaknite ovire na odprtinah (če obstajajo), zaradi preprečevanja kopičenja notranje toplote. Ventilacija se ne sme ovirati s prekrivanjem naprave s predmeti, kot so časopisi, prti, zavese itn.  
Omežni vič se uporablja za izklop naprave iz električnega omrežja. Poskrbite, da je omežna vtična zlahka dostopna in izvečite vtičak iz vtičnice, če opazite kakršno koli nepravilnost pri napravi.

## ¡ADVERTENCIA!

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado.  
No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo.  
Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato.  
No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato.  
Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstruya o tape las aberturas con objetos como periódicos, manteles, cortinas, etc.  
El enchufe se utiliza para desconectar el producto de la corriente. Si nota algún defecto, desconéctelo de la toma de corriente.

## ES

## VARNING!

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal  
Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock.  
Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten.  
Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten.  
Tillåt tillräcklig luftcirkulation och blockera ej eventuella ventiler för att undvika intern överhettning. Ventilen bör ej täckas av föremål såsom tidningar, dukar, gardiner etc.  
Nätkontakten används för att koppla bort apparaten från eluttaget. Se till att eluttaget är lättåtkomligt och avlägsna kontakten från eluttaget om du upptäcker något abnormalt med produkten.

## SE

# Sonori Touchscreen Digital Pianos

Thank you for purchasing a G4M Sonori Touchscreen Digital Piano. Featuring touchscreen technology plus a wide range of high-quality voices including selected XLN Audio Addictive Keys sounds, for a premium playing experience. To get the most out of your product, please read this manual carefully.

## BOX CONTENTS

- 1 x 88 Key Touchscreen Digital Piano
- 1 x PSU/ Power Cable
- 1 x User Manual

## FEATURES

- 88 Hammer Action Keys
- 42 Premium Sounds
- Touchscreen Control Panel
- Bluetooth Connectivity
- Instrument Specific DSP Effects
- Aux Input, Aux Output, MIDI and USB Outputs

# Sonori Grand Piano Connections

## BOTTOM PANEL

### 1. HEADPHONES OUTPUTS

Two sets of standard headphones can be connected via the HEADPHONES outputs for private practice. The internal speakers are automatically muted when headphones are connected to headphones 1 jack.

### 2. USB TO HOST

The G4M Sonori Touchscreen Pianos allow the transfer of MIDI via USB from the piano to a compatible audio interface or "host." Use the audio interface to control the MIDI signal.

### 3. MIDI OUTPUT

Use the MIDI OUT to transfer MIDI data, including note and touch velocity, via a 5-pin MIDI cable (not included) from the piano to the MIDI INPUT of a compatible external device.

### 4. L + R OUTPUTS

The 6.35mm Left (Mono) + Right jacks can be used to connect the piano to a compatible external sound system, such as a keyboard amplifier, interface, or mixer.

### 5. LINE IN




The 6.35mm LINE IN stereo input allows you to mix an external sound source (such as a smartphone or MP3 player) with the piano's internal sounds, for playback through the piano's in-built speakers or headphone output.

### 6. PEDAL UNIT

Connect the hard-wired cable from the three pedal unit here.

### 7. POWER INPUT

   Safely connect the included power cable, firstly to the piano and then to the mains, before turning on the piano.

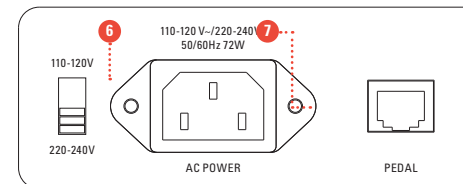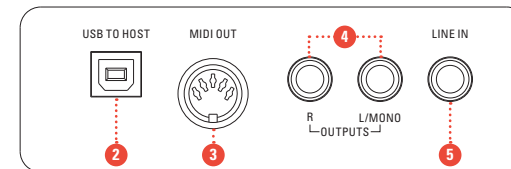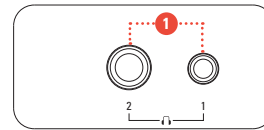

# Sonori High Top Piano Connections

## BOTTOM PANEL

### 1. HEADPHONES OUTPUTS

Two sets of standard headphones can be connected via the HEADPHONES outputs for private practice. The internal speakers are automatically muted when headphones are connected to headphones 1 jack.

### 2. LINE IN

The 6.35mm LINE IN stereo input allows you to mix an external sound source (such as a smartphone or MP3 player) with the piano's internal sounds, for playback through the piano's in-built speakers or headphone output.

### 3. L + R OUTPUTS

The 6.35mm Left (Mono) + Right jacks can be used to connect the piano to a compatible external sound system, such as a keyboard amplifier, interface, or mixer.

### 4. MIDI OUTPUT

Use the MIDI OUT to transfer MIDI data, including note and touch velocity, via a 5-pin MIDI cable (not included) from the piano to the MIDI INPUT of a compatible external device.

### 5. USB TO HOST

 
 
The G4M Sonori Touchscreen Pianos allow the transfer of MIDI via USB from the piano to a compatible audio interface or "host." Use the audio interface to control the MIDI signal.

### 6. PEDAL UNIT

Connect the hard-wired cable from the three pedal unit here.

### 7. POWER INPUT

Safely connect the included power cable, firstly to the piano and then to the mains, before turning on the piano.

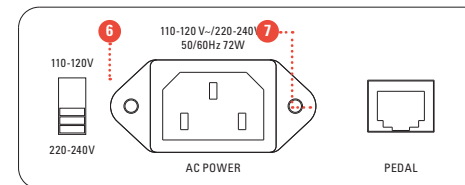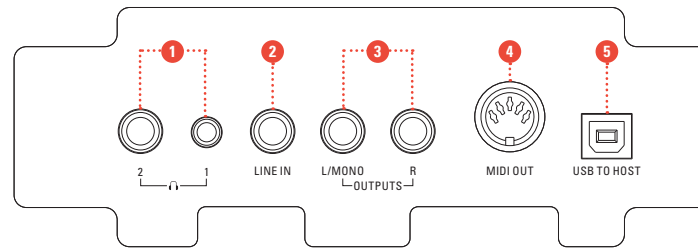

# Sonori Low Top Piano Connections

## BOTTOM PANEL

### 1. HEADPHONES OUTPUTS

Two sets of standard headphones can be connected via the HEADPHONES outputs for private practice. The internal speakers are automatically muted when headphones are connected to headphones 1 jack.

### 2. LINE IN

The 6.35mm LINE IN stereo input allows you to mix an external sound source (such as a smartphone or MP3 player) with the piano's internal sounds, for playback through the piano's in-built speakers or headphone output.

### 3. L + R OUTPUTS

The 6.35mm Left (Mono) + Right jacks can be used to connect the piano to a compatible external sound system, such as a keyboard amplifier, interface, or mixer.

### 4. MIDI OUTPUT

Use the MIDI OUT to transfer MIDI data, including note and touch velocity, via a 5-pin MIDI cable (not included) from the piano to the MIDI INPUT of a compatible external device.

### 5. USB TO HOST

 
 
The G4M Sonori Touchscreen Pianos allow the transfer of MIDI via USB from the piano to a compatible audio interface or "host." Use the audio interface to control the MIDI signal.

### 6. PEDAL UNIT

Connect the hard-wired cable from the three pedal unit here.

### 7. POWER INPUT

Safely connect the included power supply, firstly to the piano and then to the mains, before turning on the piano.

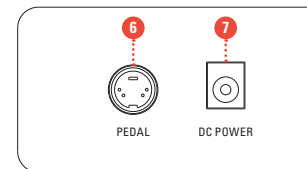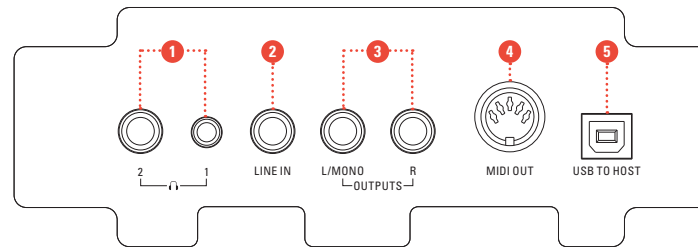


## Side Panel

### 1. POWER

Press this button to turn the piano on/off.

### 2. VOLUME

 Adjust this dial to control the speaker volume. When headphones are connected, use this dial to control headphone volume.

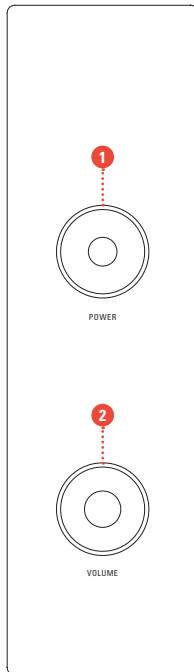

## Foot Pedals

After following the included assembly guide, and before powering on the piano, please ensure that the foot pedals cable is connected to the pedal input jack on the rear connection panel.

The G4M Sonori Pianos feature a three-pedal unit, providing the same pedal configuration as a grand piano.

### 1. SOFT PEDAL (LEFT)

 
Pressing the soft pedal will change the character of the notes played, making them softer and quieter.

### 2. SOSTENUTO PEDAL (CENTRE)

The sostenuto pedal is similar to the damper pedal, however pressing this pedal will only sustain the notes being played when the pedal is pressed. Any notes played after the pedal is pressed/held down will not sustain.

### 3. DAMPER/SUSTAIN PEDAL (RIGHT)

When the sustain pedal is pressed down, the sound of all notes played will sustain, even after releasing the keys.

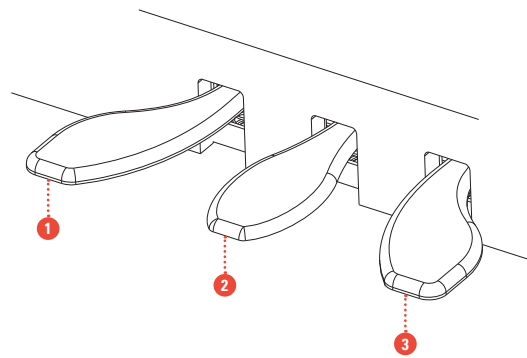

# Touchscreen

The G4M Sonori Pianos feature an easy-to-navigate touchscreen system.

## 1. SOUND TITLE

Displays the selected sound name and indicates the XLN Audio Addictive Keys sounds.

## 2. INSTRUMENT IMAGE

Displays an image of the selected sound.

## 3. INSTRUMENT GROUPS

Press to select the first sound in each of the four instrument categories. For example, pressing Upright selects sound Upright 01.

## 4. FAVOURITES

 
Allows you to quickly add/remove sounds to your favourites list or access the Favourites list from the Homescreen.

## 5. HOME

Allows you to navigate quickly back to the home screen.

## 6. SETTINGS

Press to enter the Settings menu.

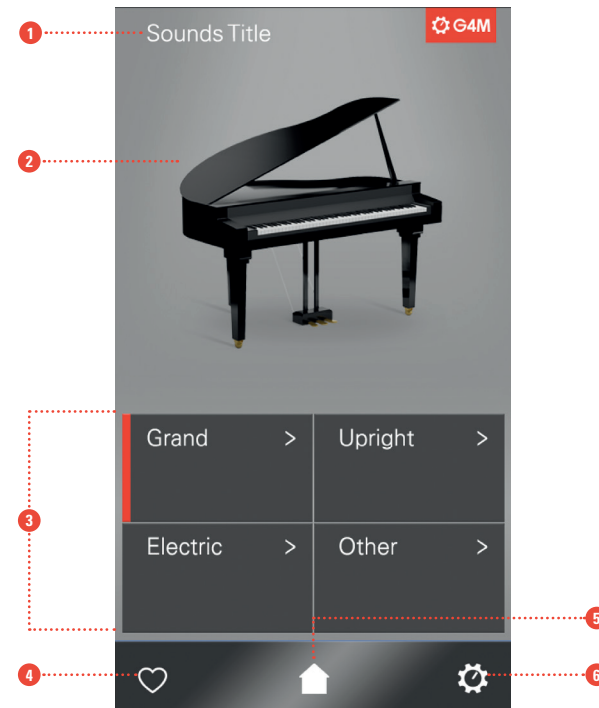



# Sounds

## SOUND SELECT

 
The G4M Sonori Pianos feature 42 instrument sounds which can be accessed using the four instrument groups.

The red indicator line confirms which group is selected. The default selection is Grand Pianos.

Press an instrument group to access the first sound in that category. For example, Grand Piano 01 as shown in the image.

The other sounds in the selected category can then be accessed by pressing the < and > arrows.

To select sounds from a different group, first press the home icon to return to the homescreen, then select the required instrument group from the four options.

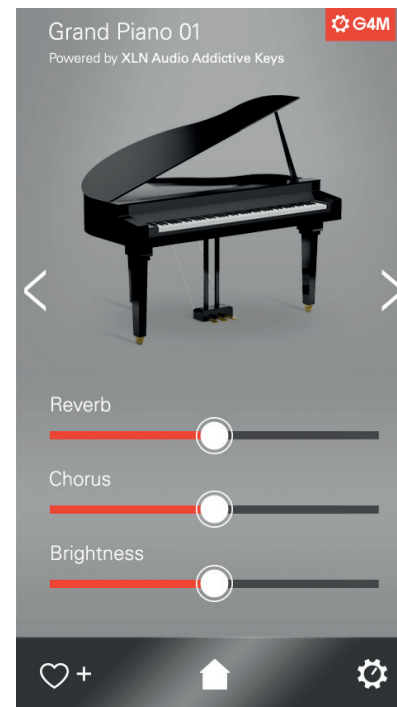

# Sound Categories

GRAND PIANOS	
Sound Name	Sound Description
GRAND 01	German Studio Grand
GRAND 02	Bright Acoustic Grand
GRAND 03	Mellow Grand
GRAND 04	Punchy Pop Grand
GRAND 05	Chorused Grand
GRAND 06	Baroque Style Grand
GRAND 07	Ambient Multi-Octave Grand
GRAND 08	Dancey, House-Style Grand


UPRIGHT PIANOS	
Sound Name	Sound Description
UPRIGHT 01	Bright Upright
UPRIGHT 02	Mellow, Warm Upright
UPRIGHT 03	Traditional Upright
UPRIGHT 04	Old School Upright
UPRIGHT 05	Modern Pop Upright
UPRIGHT 06	Honky-Tonk Upright
UPRIGHT 07	Lo-Fi Aged Upright
UPRIGHT 08	Experimental Upright


ELECTRIC PIANOS	
Sound Name	Sound Description
SUITCASE 01	Classic Suitcase Electric Stage Piano
SUITCASE 02	70s Tine Based Suitcase Piano
SUITCASE 03	Filtered Electric Piano
SUITCASE 04	Ambient Electric Piano
ELECTRIC 05	Classic 70s Electric Grand
ELECTRIC 06	Stereo Electric Grand
ELECTRIC 07	Filtered Electric Grand
ELECTRIC 08	Experimental Shifting Delay Electric Grand
WURLI 09	Vintage 60s Reed Based Electric Piano
WURLI 10	Overdriven Reed Based Electric Piano
CLAV 11	Funky 70s Electric Clavichord
CLAV 12	Wah-Wah Effect 70s Electric Clavichord


OTHER	
Sound Name	Sound Description
ROCK ORGAN 01	Classic Tonewheel Organ
JAZZ ORGAN 02	Jazz Drawbar Organ
GOSPEL ORGAN 03	Spiritual Worship Style Organ
CHURCH ORGAN 04	Classic Pipe Organ
CHOIR 05	Classic Sampled Layered Choir Voice
STRINGS 06	Rich Synthesised String Ensemble
PAD 07	Sweeping Synth Pad
PAD 08	Ethereal Square Wave Pad
PAD 09	Poly-Synth Pad
BASS 10	Classic Ladder-Style Bass
BASS 11	Vintage Envelope Bass
BRASS 12	Classic Synth Brass
BRASS 13	70s Polyphonic Synth Brass
BELLS 14	Ambient Synth Bells


# Favourites

The G4M Sonori Pianos allow your favourite sounds and effects settings to be stored and easily recalled.

To add a sound to your favourites list, simply click on the  icon on the bottom bar of the instrument screen.

Once added to the favourites list, the instrument screen now shows a  symbol, to indicate that the sound has been added.

If an instrument's effects are edited, the  will return, allowing the edited sound to also be saved as a favourite.

 
To access another saved sound, the favourites list can be accessed by pressing the  icon, followed by the Favourites button. Press the required favourited sound button to select it from the list.

To remove a saved sound from the favourites list, press the  icon.

If the favourites list is full a message will be displayed when trying to add sounds.

All favourites and effects settings will be saved when the piano is turned off.


To exit the favourites list, press the home icon to return to the home screen.

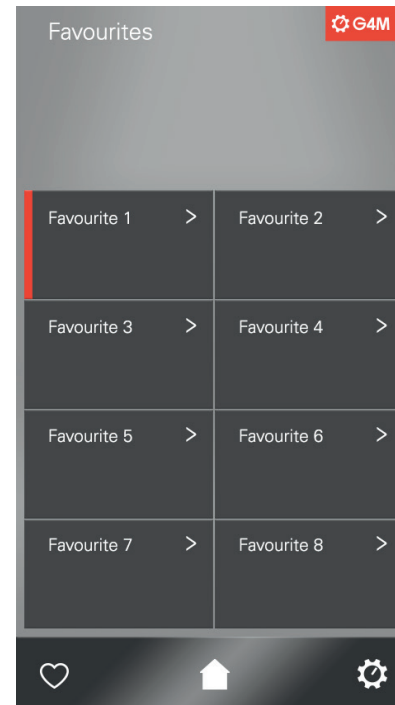


# Settings

## SETTINGS MENU

To access the settings menu, press the  icon on the home screen.

 Access individual settings by pressing on their menu buttons. Press the  icon to return to the main settings menu, or the home icon to return to the home screen.

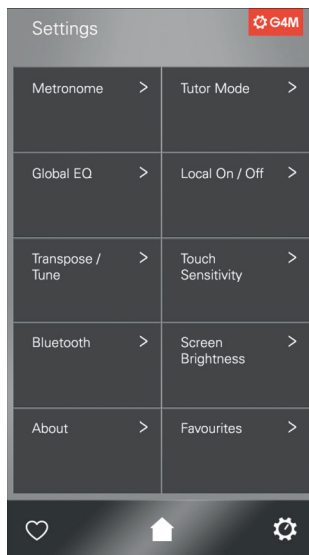


## METRONOME


Press the Off/On button to control the metronome sound as required.


Use the left and right arrow buttons to select the required time signature.

The metronome tempo can be set as required. Move the tempo slider to the left to reduce the tempo. Move the tempo slider to the right to increase the tempo.

 The metronome volume can be adjusted by moving the volume slider to the left to decrease, or to the right to increase the volume, as preferred.

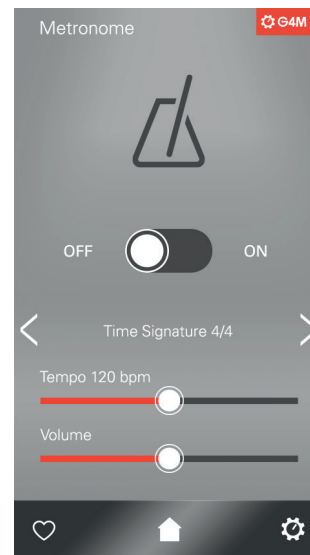

	RANGE	DEFAULT
TIME SIGNATURE	1/4, 2/4, 3/4, 4/4, 5/4, 6/4, 3/8, 6/8, 7/8, 9/8, 12/8	4/4
TEMPO	 = 20 - 280 (Quarter note basis) BPM	120
VOLUME	0 - 127	100

Press the  icon to return to the main settings menu, or the home icon to return to the home screen.

Please note, metronome settings will not be retained when the piano is powered off.

# Settings

 
## TUTORMODE

The G4M Sonori piano features a tutor mode which divides the piano notes into two equal “twin” keyboards with nearly identical registers, allowing two people to play the same notes simultaneously. This is ideal for tuition settings.

Press the Off/On button to enter or exit tutor mode as required.

Piano key C#4 is the split point. In this mode, the left and right pedals both function as sustain pedals.

Press the icon to return to the main settings menu, or the home icon to return to the home screen.

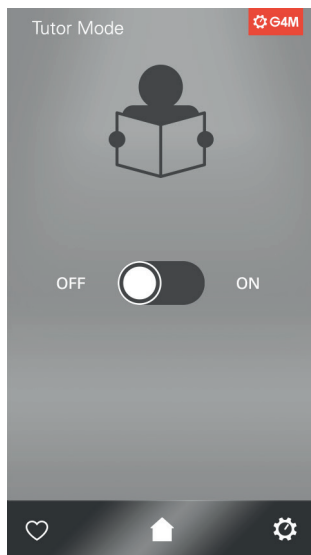

## GLOBALEQ

Adjust the levels of the low, mid and high frequency bands for fine-tuning the piano’s global sound exactly to your preference.

 
Frequency Bands: High: 5kHz, Mid: 800Hz-3.5Hz, Low: 100Hz

Move the sliders to the left to cut the EQ bands and to the right to boost the EQ bands from their default settings.

The default EQ settings can be easily recalled by pressing the Reset button.

Press the icon to return to the main settings menu, or the home icon to return to the home screen.

Global EQ settings will be retained when the piano is powered off.

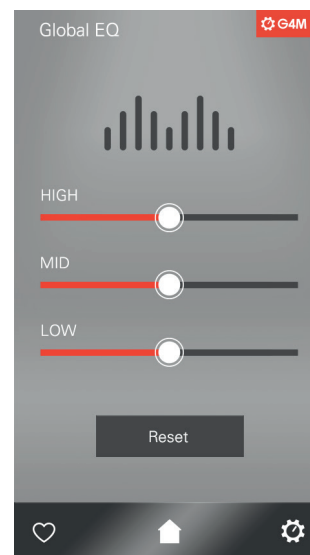


## LOCAL ON/OFF

Intended for MIDI users, this setting is used mainly when connecting the piano to external devices to use the piano as a MIDI input device. Setting Local control to Off prevents the input data of the keyboard from being sent to the internal speaker system of the piano, thereby silencing it while the data outputs as MIDI signals to any external connected devices.

Press the Off/On button to control the internal speaker system as required.

 Press the icon to return to the main settings menu, or the home icon to return to the home screen.

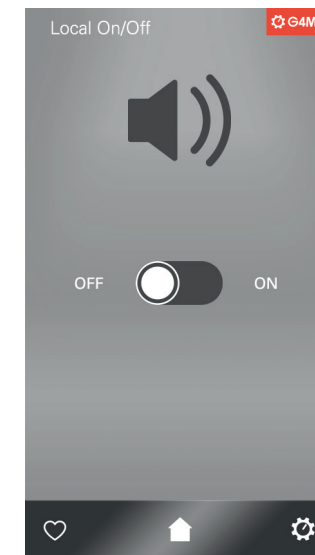


# Settings

## TRANPOSE/TUNE

 
The piano's default pitch is 440Hz and can be fine-tuned as required in 1Hz steps. The piano's key can also be transposed in units of semitones.

Use the Tuning +/- buttons to increase and decrease the tuning from 415-466Hz.

Use the Transpose +/- buttons to transpose the piano's key up or down across a range of +/- 12 semitones.

Press the  icon to return to the main settings menu, or the home icon to return to the home screen.

Please note, transpose and tuning settings will not be retained when the piano is powered off.

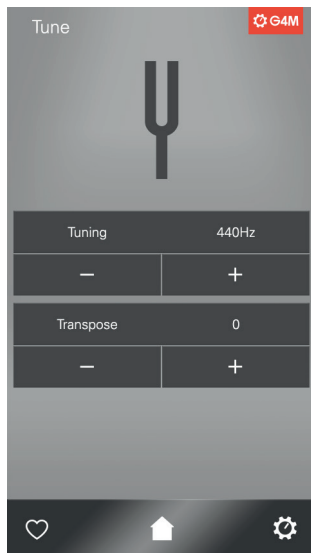

## TOUCH SENSITIVITY

The touch sensitivity of the piano keys relates to how responsive the volume of a note is to the speed of the player's keystrokes.

The G4M Sonori piano provides different touch settings to suit different types of players:

**Normal:** This setting represents the responsiveness of traditional acoustic pianos.

**Soft:** Even with soft playing, louder sounds can be achieved in this setting.


**Hard:** This setting is suitable for players with a strong touch.

**Fixed:** All notes are sounded equally regardless of the playing velocity.

 
This setting turns off the velocity sensitivity and all notes will produce the same velocity regardless of how hard or soft the keys are played.

Select the desired sensitivity level by pressing the corresponding button.

When using Fixed sensitivity, use the slider to adjust the fixed velocity level, as required.

Press the  icon to return to the main settings menu, or the home icon to return to the home screen.

Touch sensitivity settings will be retained when the piano is powered off.

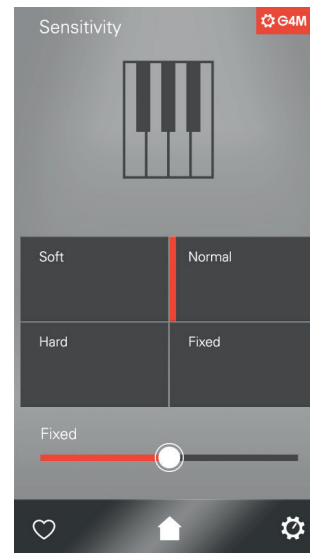

# Settings

## BLUETOOTH


The G4M Sonori piano features Bluetooth connectivity, allowing you to connect compatible mobile devices for audio playback through the piano's speakers and to transmit MIDI messages to compatible devices.

 
Press the Off/On button to control the Bluetooth connectivity as required.

The piano name will show up as "G4M Piano" on your devices list.

When using Bluetooth audio, control the volume of the Bluetooth signal with your connected device.


For Bluetooth MIDI connectivity, make sure your application supports Bluetooth MIDI, and note that Bluetooth performance may vary depending on the device and operating system.

Press the  icon to return to the main settings menu, or the home icon to return to the home screen.

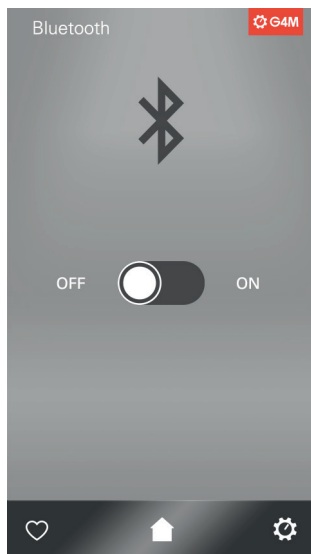


## SCREEN BRIGHTNESS

The screen brightness can be adjusted by moving the MIN-MAX slider to the left to decrease, or to the right to increase, the brightness as preferred.

Press the  icon to return to the main settings menu, or the home icon to return to the home screen.

 Brightness settings will be retained when the piano is powered off.

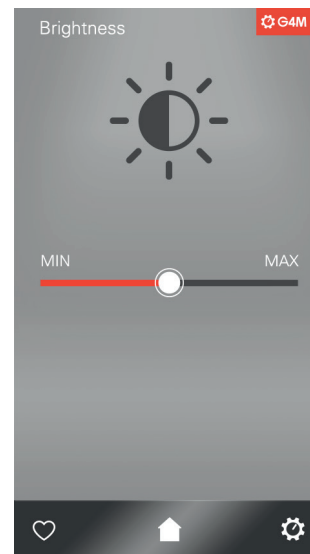

# Specifications

Keys.....	88 Hammer Action	Weights: .....	Low Top Piano: 59.0kg
Voices .....	42		High Top Piano: 83.8kg
Polyphony .....	256 Notes		Grand Piano: 89.8kg
Pedals .....	Soft, Sostenuto, Sustain		
Effects.....	Instrument Specific, including Reverb, Tremolo, Chorus		
Features .....	Metronome, Favourites, Tutor Mode, Tuning/ Transpose, Global EQ, Touch Sensitivity		
Connections .....	Bluetooth Audio, Bluetooth MIDI, 6.35mm Aux In/Out, USB to Host, 3.5mm & 6.35mm Headphones, MIDI Out, Power Input		
Speakers.....	Low Top Piano: Tweeter 2 x 5W, Woofer 2 x 15W		
	High Top Piano: Tweeter 2 x 5W, Woofer 2 x 20W, Mid-Range Horn 2 x 5W, Full Frequency Horn 2 x 10W		
	Grand Piano: Tweeter 2 x 5W, Woofer 2 x 20W, Mid-Range Horn 2 x 5W, Full Frequency Horn 2 x 10W		
Dimensions .....	Low Top Piano: Height: 1060 x Width: 1420 x Depth: 480 mm		
	High Top Piano: Height: 1180 x Width: 1420 x Depth: 460 mm		
	Grand Piano: Height: 1105 x Width: 1450 x Depth: 890 mm		



