

Histon Digital Radio

User Manual

MAJORITY

HOME AUDIO • CAMBRIDGE

Contents

 
Controls And Functions.....	1
What's in the Box?.....	3
Support	4
Getting Started	5
Instructions Guide	5
DAB/DAB+ Radio	6
DAB/DAB+ Radio Presets	7
Station Information for DAB Radio	8
FM Radio.....	9
FM Radio Presets.....	11
Station Information for FM Radio	12
Clock & Date Settings.....	13
Dual Alarm Setting	15
Alarm Functions	16
Other Functions.....	17
Troubleshooting.....	19
Technical Specifications	20
Warranty	20
Safety Information.....	21

3

YEAR
WARRANTY

Register your product online for a FREE 3 year
extended warranty at: www.majority.co.uk

Side View

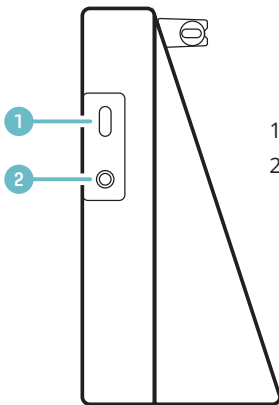


1

2

1. DC Power Input
2. Headphone jack

 Top View

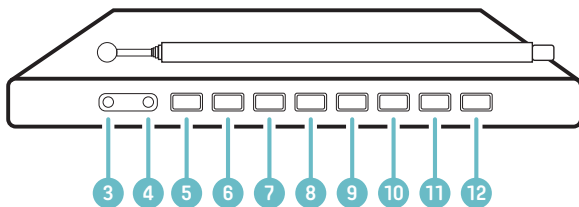

3

4

5

6

7

8

9

10

 
11

12

3. Power
4. Mode
5. Info/Menu
6. Dimmer
7. Preset
8. Previous
9. Next
10. Enter/Snooze
11. Volume -
12. Volume +

Controls And Functions


Back View

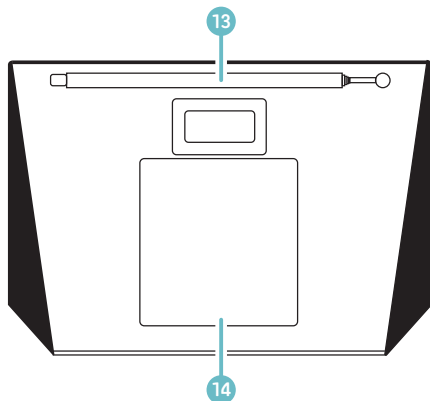

13. Antenna

14. Battery Compartment

 Front View

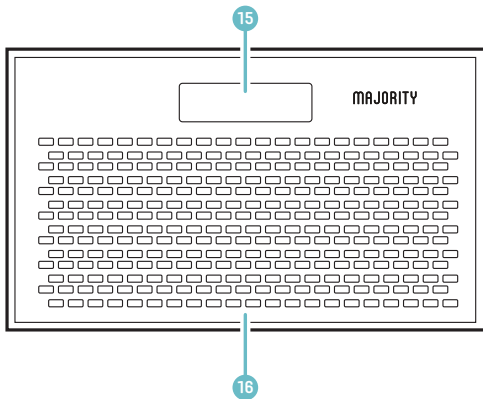

15. Display

16. Speaker

Box Contents

1. Majority Histon II Radio
2. UK Power Supply
3. Instructions Guide



Support

Thank you for your purchase of the Majority Histon II.

Please follow the guidance of the manual to set up your radio and enjoy its fantastic variety of stations and features.

If you require further assistance with your new radio, please contact our support team on the Majority website:

www.majority.co.uk

Getting Started

Please note all (Ref.) refer to Pages 1-3 of the Controls and Functions guide.

Plug the power cable into the side of the system (Ref.1) and the power supply into the mains. Alternatively, insert 4 x AA batteries into the battery compartment (Ref.14) for portability.

Ensure the antenna (Ref.13) is extended as far as possible so that you can rotate it which will enable you to get the best signal you can. Press the 'Power' button to turn on the unit (Ref.3). The 'Welcome screen' will be displayed on your radio followed by the language selection. Press the 'Enter/Snooze' button (Ref.10) to confirm the language and continue with the radio set-up. It will automatically take you to DAB radio mode or the previous mode you were using.

When DAB Radio is activated for the first time, you may need to scan for available stations if it does not do this automatically. To begin the scan, press and **hold** the 'Info/Menu' button (Ref.5). Use the 'Prev/Next' buttons (Ref.8/9) to scroll through to "Scan Setting" and press the 'Enter/Snooze' button to confirm the choice (Ref.10).

Once the scan is complete, scroll through the stations by using the 'Prev' and 'Next' buttons. Press 'Enter/Snooze' to select a station. To change the mode, press the 'Mode' button (Ref.4) to switch between DAB Radio and FM Radio.

Standby

To place the music system in standby, press the 'Power' button (Ref.3). To switch off without unplugging, press and **hold** the 'Power' button (Ref.3). To turn off power to the unit, switch it off at the mains. The cord must be out of reach of children.

DAB/DAB+ Radio

Press the 'Mode' button (**Ref.4**) to switch to DAB/DAB+ Radio. On first use it will automatically scan all stations and save them.

Fully extend the antenna (**Ref.13**).

A DAB scan should have already occurred upon setting up, however if a DAB scan has not occurred or you wish to rescan for available stations, press and **hold** the 'Info/Menu' button (**Ref.5**) to open radio settings. Use the 'Prev/Next' buttons (**Ref.8/9**) to scroll through to "Full Scan" and press the 'Enter/Snooze' button to confirm the choice (**Ref.10**).

After the scan has finished, the radio will automatically play the first station stored.

To browse through all stations that have been stored, use the 'Next' (**Ref.9**) and 'Prev' buttons (**Ref.8**) to scroll through them. When on the chosen station, press the 'Enter/Snooze' button (**Ref.10**) to begin listening to that station.

The radio will display station information when you press the 'Info/Menu' button (**Ref.5**). Press it multiple times to view all information. Please see page 9 for further details.

When you turn on the radio again after it switching off, it will automatically tune to the same station (DAB or FM) that was last selected.

DAB/DAB+ Radio Presets

How to store a preset station

To be able to quickly access your favourite DAB/DAB+ stations, you can preset them. Up to 10 different preset stations can be set for you to browse between.

To store a station as a preset, it is best to be listening to the station at the time. Once listening to a station, press and **hold** the 'Preset' button (Ref.7) for **2-3 seconds** until the **Preset Store** settings open, and "Preset Store <1: (Empty)" displays to show empty preset 1. Release the 'Preset' button.

Press the 'Prev' (Ref.8) or 'Next' (Ref.9) buttons to change the "<1" to the number you want to store the station as. Follow by pressing the 'Enter/Snooze' button (Ref.10) to save to that preset number.

Once the station is saved as a preset, the display will then show "Preset (x) stored".

How to play a preset radio station

To play your preset radio stations, press the 'Preset' (Ref.7) button to open **Preset Recall** settings. Do not hold down the button as this will open Preset Store settings.

Press the 'Prev' (Ref.8) or 'Next' (Ref.9) buttons to scroll through your preset stations from 1-10.

Once you have found the chosen preset station you wish to play, press the 'Enter/Snooze' button (Ref.10) to select your choice. The station will now begin to play.

Station Information for DAB Radio

When you are listening to a DAB/DAB+ radio station with good signal, you can press the 'Info/Menu' button (**Ref.5**) repeatedly to show the different programme information.

Bit Rate: Shows the data rate at which the signal is being transmitted.

Bit Error Rate (BER): Provides details of the signal error rate.

Channel and Frequency: Displays the station's transmission channel number and frequency.

PTY (Programme Type): Shows the type and description of the program provided by the DAB station.

Time and Date: Displays the time and date information provided by the broadcaster.

Bit Rate: The data rate which the signal is being transmitted.

Dynamic Label Segment (DLS): Displays scrolling text information supplied by the broadcaster.

FM Radio

Press the 'Mode' button (**Ref.4**) multiple times to switch to FM. The first time you do this, the FM frequency "87.5 MHz" will be displayed on the screen.

Fully extend the antenna (**Ref.13**).

To listen to a specific frequency, press and **hold** the 'Next' button (**Ref.9**) to search forward quickly, or the 'Prev' button (**Ref.8**) to search back quickly. It will stop searching when the button is released.

To search slowly, press the 'Next' (**Ref.9**) and 'Prev' (**Ref.8**) button multiple times rather than holding.

The radio will display station information when you press the 'Info/Menu' button (**Ref.5**). Press multiple times to view all information available.

Mono and Auto

When on FM mode, you can change between Mono and Auto by pressing the 'Enter/Snooze' button (**Ref.10**).

Playing 'Strong' or 'All' FM Stations

When on FM mode, you can decide if you would like to pick up all stations (even if they do not have a good signal), or just the stations with strong signal.

To do this, press and **hold** the 'Info/Menu' button (**Ref.5**) and use the 'Prev' or 'Next' buttons (**Ref.8/9**) to scroll through to 'FM Scan Set'. Confirm this choice by selecting 'Enter/Snooze' (**Ref.10**).

You can now choose between 'Only' or 'All'. Select "Only" with the 'Enter' button to only receive the stations with good signal.

FM Radio Presets

How to store a preset FM station

Up to 10 stations can be preset for easy navigation. To store a station that you are currently playing:

Press and **hold** the 'Preset' button (**Ref.7**) for 2-3 seconds until the **Preset Store** settings open and "<1: (Empty)" will show on the display. Release your finger from the 'Preset' button.

Press the 'Prev' (**Ref.8**) or 'Next' (**Ref.9**) button to change the "<1" to the preset number you want to store the station as. Follow by pressing the 'Enter' button (**Ref.10**) to save. The display will then show "Preset (X) stored" to signify the saved preset station.

Follow the same guidance to set up to 10 preset DAB stations. To delete a stored preset station, simply save another station in that preset number.

How to play a preset radio station

To listen to one of your preset stations, do the following:

Press the 'Preset' button (**Ref.7**) to open the **Preset Recall** screen. Do not hold down the button as this will open the Preset Store settings.

Press the 'Prev' (**Ref.8**) or 'Next' (**Ref.9**) buttons to scroll through your saved preset stations. You can store up to 10 presets.

Press the 'Enter/Snooze' button (**Ref.10**) to select your choice and this station will begin to play.

Station Information for FM Radio

When you are listening to a FM radio station with good signal, you can press the 'Info/Menu' button (**Ref.5**) repeatedly to browse through different programme information.

Signal Strength: Displays a signal bar with the strength of the current station.

Time and Date: Displays the time and the date.

Frequency: Displays the station's transmission frequency.

Audio Type: Displays the audio type of the station you are listening to. It will either be Stereo or Mono.

Radio Text: Displays scrolling text information supplied by the broadcaster.

Programme Type: Displays a description of the type of programme provided by the broadcaster.

Clock & Date Settings

Once the radio has been put into DAB mode, the time and date should automatically set. If this does not happen or you wish to alter the time and date, follow the below guidance:

Manually Setting the Time

Ensure the unit is turned on and out of standby.

To enter radio settings, press and **hold** the 'Info/Menu' button (**Ref.5**).

Use the 'Prev/Next' buttons (**Ref.8/9**) to scroll through to "Time/Date" and press the 'Enter/Snooze' button to confirm the choice (**Ref.10**).

Once this option is selected, the hour will then flash on the display screen. You can now alter the time hour by pressing the 'Prev' (**Ref.8**) or 'Next' (**Ref.9**) buttons until the required hour is displayed.

To confirm the hour press the 'Enter/Snooze' (**Ref.10**) button.

The minutes will then flash on the display screen. Press the 'Prev' (**Ref.8**) or 'Next' (**Ref.9**) buttons until the required minute is displayed.

To confirm the minute press 'Enter/Snooze' (**Ref.10**).

The time is now set and you will be able to alter the date in the next step.

Manually Setting the Date

The date can be changed straight after changing the time.

The year will flash on the display screen. To change the date year, press the 'Prev' (**Ref.8**) or 'Next' (**Ref.9**) buttons until the required year is displayed.

To confirm the year press the 'Enter/Snooze' (**Ref.10**) button.

The month will now flash on the display screen. Press the 'Prev' (**Ref.8**) or 'Next' (**Ref.9**) buttons until the required month is displayed.

To confirm the month press the 'Enter/Snooze' (**Ref.10**) button.

The day unit will then flash on the display screen. Press the 'Prev' (**Ref.8**) or 'Next' (**Ref.9**) buttons until the required date is displayed.

To confirm the date, press 'Enter/Snooze' (**Ref.10**).

Dual Alarm Setting

Alarm 1/Alarm 2 Setting

1. Press and **hold** the 'Info/Menu' button (**Ref.5**).
2. Use the 'Prev/Next' buttons (**Ref.8/9**) to choose "Alarm 1 Set" or "Alarm 2 Set" and press the 'Enter/Snooze' button (**Ref.10**) for the alarm you wish to set.
3. Once alarm 1 or 2 is selected, OFF will display on the screen. To turn the alarm on, use the 'Next' button (**Ref.9**) to make "ON" flash on the display. Press the 'Enter/Snooze' button (**Ref.10**) to confirm the alarm switch on.
4. The hour digits for the alarm will then flash. To set the hour you want the alarm to sound, press the 'Prev' or 'Next' buttons (**Ref.8/9**) to browse to the hour and press the 'Enter' button (**Ref.10**) to confirm your choice.
5. The minutes of the alarm are now able to be set. Using the 'Prev' or 'Next' buttons (**Ref.8/9**), scroll up and down the minutes and press the 'Enter' button (**Ref.10**) to confirm your choice.
6. Now choose when you would alarm to sound. Using the 'prev' or 'Next' buttons, scroll through the alarm options: 'Once/Daily/Weekends/Weekdays'. Use the 'Enter' button to confirm selection.
7. Once the alarm time is set, you can change the alarm volume by pressing the 'Prev' or 'Next' buttons (**Ref.8/9**) to choose the noise level. Press the 'Enter' button (**Ref.10**) to confirm.
8. You can now choose the alarm tone sound. Press the 'Prev' or 'Next' buttons (**Ref.8/9**) to change between which sound you would like: Alarm, DAB or FM Radio, and press the 'Enter/Snooze' button (**Ref.10**) to confirm.

Alarm Functions

To Cancel Alarm 1 or Alarm 2

To cancel the alarm, press and **hold** the 'Info/Menu' button (**Ref.5**).

Use the 'Prev/Next' buttons (**Ref.8/9**) to choose "Alarm 1 Set" if you wish to cancel alarm 1, or "Alarm 2 Set" if you wish to cancel alarm 2. Press the 'Enter/Snooze' button to confirm your choice (**Ref.10**).

To turn the Alarm off, press the 'Next' button (**Ref.9**) so that "OFF" is flashing and press the 'Enter/Snooze' button (**Ref.10**) to confirm.

Snooze/Switch off Alarm when Sounding

When the alarm sounds, press the 'Enter/Snooze' button (**Ref.10**) to snooze the alarm for another 9 minutes. The radio will go into standby mode.

To turn the alarm off completely, press the 'Power' button (**Ref.3**).

If you do not turn the alarm off or put it on snooze, the alarm will sound for 10 mins before it turns off automatically.

Other Functions

Sleep Setting

This enables you to programme the radio to switch off at a selection of set times up to 120 minutes from activation.

Press and **hold** the 'Info/Menu' button (**Ref.5**).

Use the 'Prev/Next' buttons (**Ref.8/9**) to choose "Sleep Timer" and press the 'Enter/Snooze' button (**Ref.10**) to confirm this option.

Using the 'Prev' or 'Next' buttons (**Ref.8/9**), choose the sleep timer amount from activation: OFF, 15mins, 30mins, 45mins, 60mins, 90mins or 120mins.

When your choice is displayed press the 'Enter/Snooze' button (**Ref.10**). The system will automatically start the timer.

To turn the sleep timer off, follow the above instructions and select "OFF" from the choices.

Once the timer has been set, the minutes will count down on the display screen. Example: if set to turn off in 5 minutes, "S5" will flash, counting down to "S0". The radio will then go into standby mode.

System Reset

To erase all setting and preset options, and reset your radio, perform a factory reset. This would also be advisable if you are having any functionality issues with your radio.

To perform a factory reset, press and **hold** the 'Info/Menu' button (Ref.5).

Use the 'Prev/Next' buttons (Ref.8/9) to browse to the "Factory Reset" option and press the 'Enter' button (Ref.10) to confirm.

The display screen will then show "Factory Reset?". To confirm the factory reset, use the 'Next' button (Ref.9) to choose "Yes". Press 'Enter/Snooze' (Ref.10) to initiate the factory reset.

SW Version – Software Version Display

To view the software version, press and **hold** the 'Info/Menu' button (Ref.5).

Use the 'Prev/Next' buttons (Ref.8/9) to select "SW Version" and press the 'Enter/Snooze' button (Ref.10). The software version will then display.

Dimmer

Press the dimmer button (Ref.6) repeatedly to switch through low, medium and high brightness options. The dimmer button can be used in standby mode or when in use.

Observation	Potential Cause/Solution
No sound	The station is not tuned in properly. Please perform a rescan for available stations or manually scroll through available stations.
Cannot preset stations	Ensure that you are pressing and holding down the Preset button for 2-3 seconds to open Preset Store settings. Only press, do not hold down, to open Preset Recall
FM: Static sound DAB: Burbling/ intermittent cut-out	Signal reception is low. Adjust the aerial or move the unit to a stronger signal location. Rescan. Re-scan stations and/or a factory reset.
Cannot locate DAB/DAB+ mode	FM mode is indicated by "FM" and the station frequency. DAB mode does not display "DAB" on the screen. Instead, the first available DAB station name will display.
Desired station not found	Weak signal. Use the manual tune function and try rescanning in a different area.
Display shows "No Service"	There is no DAB coverage in your area, or poor reception. Adjust the position of the aerial, or move the unit to a stronger signal location.
Display is blank	This may occur if the broadcaster changes the label of a service or removes a label while tuned. The radio will try to retune or perform a scan.
Time and Date not setting automatically	For the time and date to set automatically you need to turn on the system and switch to DAB radio and let this scan. Alternatively, you can set these in radio settings.

Specifications

Technical Specifications

Power supply:	DC 5V 1A Power Input
Mode:	FM (87.5MHz – 108MHz) DAB / DAB+ (174-240MHz)
Output Connector:	3.5mm Earphone jack
Battery Power	4 x AA batteries
Dimensions:	13 x 4.5 x 14 cm
Weight	550g
No-load power consumption	0.07W
Average active efficiency	75.26%
Output	5.0V \approx 1.0A 5.0W
Input	100-240V~, 50-60Hz, 0.2A Max.
Model no.	ADo600501000UK-MICROUSB
Brand	Adition
Manufacturer	Shenzhen Adition Audio Science & Technology Co.,Ltd

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majority.co.uk for the warranty to be valid. Once on the web page, use the menu to find “register your product”. You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

Warning & Safety Information

EN Safety and Usage Guidelines (All where applicable)

General Safety Information - Read and Retain: Review all safety and operating instructions before use; keep them for future reference.

Follow Instructions: Adhere strictly to all safety and operational guidelines. **Water Exposure:** Keep the device away from water; avoid placing liquids near it. **Ventilation:** Ensure ventilation openings are unobstructed to prevent overheating. **Power Sources:** Keep the device away from heat-emitting appliances. **Warranty Installer Safety:** Follow the manufacturer's instructions and use approved mounting kits only. Avoid drilling into areas with cables, gas, or water lines. Use proper tools and safety apparatus. **Regular Maintenance:** Inspect regularly for wear or damage, especially if wall-mounted. **Relocation:** Detach from the wall mount before moving. **Child Safety:** Keep out of children's reach and ensure heavy items are securely mounted. **Seismic Precautions:** Use specialized mounts in earthquake-prone areas. **Electrical Safety - Power Source:** Use the specified power source; consult an electrician if unsure. **Cable Management:** Protect the power cord from damage. **Power Disconnection:** Keep the main plug accessible; unplug during storms or long periods of non-use. **Battery Safety - Charging:** Use the manufacturer's charger; avoid extreme conditions. **Heat Exposure:** Keep batteries away from heat to prevent explosion or leakage. **Control:** Use the intended controls; always keep away from children. **Battery Warning:** Batteries and items containing batteries are hazardous. Incorrect types can cause hazards. **External Batteries:** Use only specified types, observing correct polarity. **Battery Removal:** Remove batteries if not used for an extended period. **Disposal:** Follow local regulations for battery disposal; do not incinerate. **Connectivity Safety - Cable Connections:** Power off devices before connecting or disconnecting cables. **Bluetooth Pairing:** Ensure a secure connection; avoid interference from other devices. **Volume Control:** Keep volume moderate to prevent hearing damage. **Connectivity and Data Security - Wireless Security:** Review privacy policies and secure your network. **Software Updates:** Keep software updated for security and performance. **Children's Safety Warnings - Product Use:** Use for intended purposes only. **Flammable Materials:** Do not place open flames near the product. **Overheating:** Avoid covering the product to prevent overheating and fire risks. **Disposal and Recycling - Product Disposal:** Dispose of at a recycling center according to local laws. **Environmental Compliance:** Follow regulations for battery and electronic waste disposal. **User Maintenance - Cleaning:** Unplug before cleaning; use a dry cloth only. **Servicing:** Only qualified personnel should perform repairs. **Data Protection:** Reset to factory settings before returning or disposing of the product. **Disclaimer:** Failure to follow these instructions may result in injury, death, or property damage. The manufacturer is not liable for damage caused by improper use.

DE Sicherheits- und Verwendungsrichtlinien (alle, wo zutreffend)

Allgemeine Sicherheitsinformationen - Lesen und Aufbewahren: Überprüfen Sie alle Sicherheits- und Bedienungsanleitungen vor der Verwendung; bewahren Sie diese für zukünftige Referenz auf. **Befolgen Sie die Anweisungen:** Halten Sie sich strikt an alle Sicherheits- und Betriebsrichtlinien. **Wassereexposition:** Halten Sie das Gerät fern von Wasser; vermeiden Sie das Platzen von Flüssigkeiten in der Nähe. **Belüftung:** Stellen Sie sicher, dass die Belüftungsoffnungen nicht blockiert sind, um Überhitzung zu vermeiden. **Wärmequellen:** Halten Sie das Gerät fern von wärmeabstrahlenden Geräten. **Wandmontage - Sicherheit bei der Installation:** Befolgen Sie die Anweisungen des Herstellers und verwenden Sie zugelassene Werkzeuge und Materialien. Vermeiden Sie das Bohren in Bereiche mit Wasserleitungen. Verwenden Sie geeignete Werkzeuge und Sicherheitsausrüstung. **Regelmäßige Wartung:** Überprüfen Sie regelmäßig auf Abnutzung oder Beschädigungen, insbesondere bei Wandmontage. **Umzug:** Lösen Sie das Gerät von der Wandhalterung, bevor Sie es bewegen. **Kindersicherheit:** Halten Sie das Gerät außerhalb der Reichweite von Kindern und stellen Sie sicher, dass schwere Gegenstände sicher montiert sind. **Vorkkehrungen bei Erdbeben:** Verwenden Sie in erdbebengefährdeten Gebieten spezielle Halterungen. **Elektrische Sicherheit - Stromquelle:** Verwenden Sie die angegebene Stromquelle; konsultieren Sie einen Elektriker, wenn Sie unsicher sind. **Kabelmanagement:** Schützen Sie das Stromkabel vor Beschädigungen. **Batterieentladung:** Halten Sie das Gerät fern von Hitze, Feuchtigkeit und anderen Gefahren. **Wärmeexposition:** Halten Sie Batterien fern von Hitze, um Explosionen oder Auslaufen zu verhindern. **Batteriezustand:** Bei Beschädigungen die Nutzung einstellen; ordnungsgemäß entsorgen. **Ersetze:** Verwenden Sie nur empfohlene Batterien; falsche Typen können Gefahren verursachen. **Externe Batterien:** Verwenden Sie nur spezifizierte Typen und beachten Sie die korrekte Polarität. **Batterieentfernung:** Entfernen Sie Batterien bei längerer Nichtbenutzung. **Entsorgung:** Befolgen Sie lokale Vorschriften zur Batterientisorgung; nicht verbrennen. **Verbindungssicherheit - Kabelverbindungen:** Schalten Sie Geräte vor dem Verbinden oder Trennen von Kabeln aus. **Bluetooth-Kopplung:** Stellen Sie eine sichere Verbindung her; vermeiden Sie Störungen durch andere Geräte. **Laustärkeregelung:** Halten Sie die Lautstärke moderat, um Hörschäden zu vermeiden. **Verbinden - Datensicherheit - WLAN-Sicherheit:** Überprüfen Sie die Datensicherheitsrichtlinien und sichern Sie Ihr Netzwerk. **Software-Updates:** Halten Sie die Software für Sicherheit und Leistung aktuell. **Sicherheitswarnungen für Kinder - Produktnutzung:** Nur für Erwachsene bestimmt; von Kindern fernhalten. **Batteriewarnung:** Halten Sie Batterien und Produkte mit Batterien außerhalb der Reichweite von Kindern. **Laustärkeregelung:** Halten Sie die Lautstärke zum Schutz des Gehörs von Kindern sicher. **Brandgefahr - Entflammbare Materialien:** Stellen Sie keine offenen Flammen in die Nähe des Produkts. **Überhitzung:** Decken Sie das Produkt nicht ab, um Überhitzung und Brandgefahr zu vermeiden. **Entsorgung und Recycling - Produktentsorgung:** Entsorgen Sie das Produkt gemäß den örtlichen Vorschriften in einem Recycling- oder Entsorgungszentrum. **Reinigung:** Verwenden Sie die empfohlenen Reinigungsmittel. **Sicherheit bei der Reinigung - Reinigung:** Vor der Reinigung vom Stromnetz trennen; nur ein trockenes Tuch verwenden. **Wartung:** Reparaturen nur von qualifiziertem Personal durchführen lassen. **Datenschutz:** Setzen Sie das Gerät vor Rückgabe oder Entsorgung auf Werkseinstellungen zurück. **Haftungsausschluss:** Die Nichtbeachtung dieser Anweisungen kann zu Verletzungen, Tod oder Sachschäden führen. Der Hersteller haftet nicht für Schäden, die durch unsachgemäße Nutzung verursacht werden.

FR Consignes de Sécurité et d'Utilisation (toutes celles applicables)

Informations Générales de Sécurité: Lisez attentivement toutes les consignes de sécurité et d'utilisation avant l'usage; conservez-les pour référence future. **Suivre les Instructions:** Respectez strictement toutes les consignes de sécurité et d'utilisation. **Exposition à l'Eau:** Gardez l'appareil à l'écart de l'eau; évitez de placer des liquides à proximité. **Ventilation:** Assurez-vous que les ouvertures de ventilation ne sont pas obstruées pour éviter la surchauffe. **Sources de Chaleur:** Tenez l'appareil à l'écart des appareils émettant de la chaleur. **Fixation Murale - Sécurité de l'Installation:** Suivez les instructions du fabricant et n'utilisez que les kits de montage approuvés. Évitez de percer des zones contenant des câbles, des conduites de gaz ou d'eau. Utilisez des outils et équipements de sécurité appropriés. **Entretien Régulier:** Inspectez régulièrement l'appareil pour détecter tout signe d'usure ou de dommage, en particulier où il est fixé au mur. **Repositionnement:** Débranchez l'appareil du support mural avant de le déplacer. **Sécurité des Enfants:** Gardez l'appareil hors de portée des enfants et assurez-vous que les objets lourds sont solidement fixés. **Précautions Sismiques:** Évitez de couvrir le produit pour prévenir la surchauffe ou les risques d'incendie. **Sécurité Électrique - Source d'Alimentation:** Utilisez la source d'alimentation spécifiée; consultez un électricien en cas de doute. **Gestion des Câbles:** Protégez le cordon d'alimentation contre les dommages. **Déconnexion de l'Alimentation:** Gardez la prise principale accessible; débranchez en cas d'orage ou de non-utilisation prolongée. **Sécurité des Piles - Recharge:** Utilisez le chargeur du fabricant; évitez les conditions extrêmes. **Exposition à la Chaleur:** Gardez les piles à l'écart de la chaleur pour éviter l'explosion ou les fuites. **État de la Pile:** Cessez l'utilisation si la pile est endommagée; jetez-la correctement. **Remplacement:** Utilisez que les piles recommandées; des types incorrects peuvent causer des dangers. **Piles Externes:** Utilisez uniquement les types spécifiques, en respectant la polarité. **Retrait des Piles:** Retirez les piles si l'appareil n'est pas utilisé pendant une longue période. **Élimination:** Suivez les réglementations locales pour l'élimination des piles; ne les incinerez pas. **Sécurité de la Connectivité - Connexions de Câbles:** Éteignez les appareils avant de connecter ou de déconnecter des câbles. **Appairage Bluetooth:** Assurez-vous d'une connexion sécurisée; évitez les interférences avec d'autres appareils. **Contrôle du Volume:** Maintenez un volume modéré pour éviter les dommages auditifs. **Sécurité de la Connectivité et des Données - Sécurité du Réseau Sans Fil:** Examinez les politiques de confidentialité et sécurisez votre réseau. **Mises à Jour Logicielles:** Gardez le logiciel à jour pour la sécurité et la performance. **Avertissements de Sécurité pour les Enfants - Utilisation du Produit:** Destiné aux adultes; gardez hors de portée des enfants. **Avertissement sur les Piles:** Gardez les piles et les articles contenant des piles hors de portée des enfants. **Contrôle du Volume:** Maintenez un niveau sonore sûr pour protéger l'audience des enfants. **Risque d'Incendie - Matériaux Inflammables:** Ne placez pas de flammes nues près du produit. **Surchauffe:** Évitez de couvrir le produit pour prévenir la surchauffe et les risques d'incendie. **Élimination et Recyclage - Élimination du Produit:** Déposez-le dans un centre de recyclage conformément aux lois locales. **Conformité Environnementale:** Suivez les réglementations concernant l'élimination des piles et des déchets électroniques. **Entretien de l'Utilisateur - Nettoyage:** Débranchez avant de nettoyer; utilisez uniquement un chiffon sec. **Reparations:** Seul le personnel qualifié doit effectuer les réparations. **Protection des Données:** Réinitialisez aux paramètres d'usine avant de retourner ou d'éliminer le produit. **Clause de Non-Responsabilité:** Le non-respect de ces consignes peut entraîner des blessures, la mort ou des dommages matériels. Le fabricant décline toute responsabilité en cas de dommages causés par une mauvaise utilisation.

ES Guías de Seguridad y Uso (Cuando sea aplicable)

Información General de Seguridad - Leer y Conservar: Revise todas las instrucciones de seguridad y operación antes de usar; guárdelas para referencia futura. **Seguir las Instrucciones:** Cumpla estrictamente con todas las guías de seguridad y operativas. **Exposición al Agua:** Mantenga el dispositivo alejado del agua; evite colocar líquidos cerca de él. **Ventilación:** Asegure de que las aberturas de ventilación no estén obstruidas para evitar el sobrecalentamiento. **Fuentes de Calor:** Mantenga el dispositivo alejado de los aparatos que emitan calor. **Montaje en Pared - Seguridad de Instalación:** Siga las instrucciones del fabricante y use solo kits de montaje aprobados. Evite perforar áreas con cables, gas o tuberías de agua. Use herramientas y equipos de seguridad adecuados. **Mantenimiento Regular:** Inspeccione regularmente para detectar desgaste o daños, especialmente si está montado en la pared. **Reubicación:** Desmonte del soporte de pared antes de moverlo. **Seguridad Infantil:** Manténgalo fuera del alcance de los niños y asegúrese de que los objetos pesados estén montados de forma segura. **Precauciones Sísmicas:** Use soportes especializados en áreas propensas a terremotos. **Seguridad Eléctrica - Fuente de Energía:** Use la fuente de energía especificada; consulte a un electricista si tiene dudas. **Gestión de Cables:** Proteja el cable de alimentación contra daños. **Déconexión de Energía:** Mantenga el enchufe principal accesible; desenchufe durante tormentas o largos períodos de inactividad. **Seguridad de las Baterías - Carga:** Use el cargador del fabricante; evite condiciones extremas. **Exposición al Calor:** Mantenga las baterías alejadas del calor para evitar explosiones o fugas. **Estado de la Batería:** Deje de usarla si la batería está dañada; deséchela adecuadamente. **Reemplazo:** Use solo las baterías recomendadas; tipos incorrectos pueden causar peligros. **Baterías Externas:** Use solo los tipos especificados, respetando la polaridad correcta. **Retiro de Baterías:** Retire las baterías si no se usa durante un periodo prolongado. **Eliminación:** Siga las normativas locales para la eliminación de baterías y desechos electrónicos. **Reemplazo de Baterías:** Reemplace las baterías solo si es necesario. **Seguridad de Conectividad - Conexiones de Cables:** Apague los dispositivos antes de conectar o desconectar cables. **Emparejamiento Bluetooth:** Asegure una conexión segura; evite interferencias de otros dispositivos. **Control de Volumen:** Mantenga un volumen moderado para prevenir daños auditivos. **Seguridad de Conectividad y Datos - Seguridad de Red Inalámbrica:** Revise las políticas de privacidad y asegure su red. **Actualizaciones de Software:** Mantenga el software actualizado para la seguridad y el rendimiento. **Advertencias de Seguridad para Niños - Uso del Producto:** Destinado a adultos; manténgalo fuera del alcance de los niños. **Advertencia sobre Baterías:** Mantenga las baterías y los artículos que contienen baterías fuera del alcance de los niños. **Control de Volumen:** Mantenga un nivel de volumen seguro para proteger la audición de los niños. **Riesgo de Incendio - Materiales Inflammables:** No coloque llamas abiertas cerca del producto. **Sobrecalentamiento:** Evite cubrir el producto para prevenir la sobrecalentamiento y los riesgos de incendio. **Seguridad de la Instalación - Limpieza:** Desenchufe antes de limpiar; use solo un paño seco. **Reparaciones:** Solo personal calificado debe realizar reparaciones. **Protección de Datos:** Restablezca a la configuración de fábrica antes de devolver o desechar el producto. **Descargo de Responsabilidad:** El incumplimiento de estas instrucciones puede resultar en lesiones, muerte o daños a la propiedad. El fabricante no se hace responsable de los daños causados por un uso inadecuado.

Warning & Safety Information

IT Linee Guida per la Sicurezza e l'Uso (Quando Applicabile)

Informazioni Generali sulla Sicurezza - Leggere e Conservare: Rivedere tutte le istruzioni di sicurezza e di funzionamento prima dell'uso; conservarle per riferimenti futuri. **Seguire le Istruzioni:** Attenersi rigorosamente a tutte le linee guida di sicurezza e operative. **Esposizione all'Acqua:** Tenere il dispositivo lontano dall'acqua; evitare di posizionare liquidi nelle vicinanze. **Ventilazione:** Assicurarsi che le aperture di ventilazione non siano ostruite per evitare il surriscaldamento. **Fonti di Calore:** Tenere il dispositivo lontano da apparecchi che emettono calore. **Montaggio a Parete - Sicurezza dell'Installazione:** Seguire le istruzioni del produttore e utilizzare solo kit di montaggio approvati. Evitare di perforare aree con cavi, gas o tubazioni d'acqua. Utilizzare strumenti e dispositivi di sicurezza adeguati. **Manutenzione Regolare:** Ispezionare regolarmente per verificare l'usura o i cavi, soprattutto se montato a parete. **Ricoilazione:** Staccare dal supporto a parete prima di spostare. **Sicurezza dei Bambini:** Tenere fuori dalla portata dei bambini e assicurarsi che gli oggetti pesanti siano montati in modo sicuro. **Precauzioni Similiche:** Utilizzare supporti specializzati nelle zone soggette a terremoti. **Sicurezza Elettrica - Fonte di Alimentazione:** Usare la fonte di alimentazione specificata; consultare un elettricista in caso di dubbi. **Gestione dei Cavi:** Proteggere il cavo di alimentazione da danni. **Disconnessione/Energia:** Mantenere la spina principale accessibile; scollegare durante i temporali o in caso di lunghi periodi di inattività. **Sicurezza della Batteria - Carica:** Utilizzare il caricatore del produttore; evitare condizioni estreme. **Esposizione al Calore:** Tenere le batterie lontane dal calore per evitare esplosioni o perdite. **Condizioni della Batteria:** Interrompere l'uso se la batteria è danneggiata; smaltirla correttamente. **Sostituzione:** Usare solo batterie raccomandate; tipi errati possono causare pericoli. **Batterie Esterne:** Utilizzare solo i tipi specifici, osservando la polarità corretta. **Rimozione della Batteria:** Rimuovere le batterie se non utilizzate per un periodo prolungato. **Smaltimento:** Seguire le normative locali per lo smaltimento delle batterie; non incenerire. **Sicurezza della Connettività - Conessioni dei Cavi:** Spegnere i dispositivi prima di collegare o scollegare i cavi. **Accoppiamento Bluetooth:** Assicurare una connessione sicura; evitare interferenze da altri dispositivi. **Controllo del Volume:** Mantenere un volume moderato per prevenire danni all'udito. **Sicurezza della Connettività e dei Dati - Sicurezza della Rete Wireless:** Rivedere le politiche sulla privacy e proteggere la propria rete. **Aggiornamenti Software:** Mantenere il software aggiornato per la sicurezza e le prestazioni. **Avvertenze di Sicurezza per Bambini - Uso del Prodotto:** Destinato agli adulti; tenere lontano dai bambini. **Avvertenza sulla Batteria:** Tenere le batterie e gli oggetti contenenti batterie fuori dalla portata dei bambini. **Controllo del Volume:** Mantenere un livello di volume sicuro per proteggere l'udito dei bambini. **Rischio di incendio - Materiali Infiammabili:** Non posizionare fiamme libere vicino al prodotto. **Surriscaldamento:** Evitare di coprire il prodotto per prevenire surriscaldamenti o rischi di incendio. **Smaltimento e Riciclaggio - Smaltimento del Prodotto:** Smaltire in un centro di riciclaggio secondo le leggi locali. **Conformità Ambientale:** Seguire le normative per lo smaltimento delle batterie e dei rifiuti elettronici. **Manutenzione dell'Utente - Pulizia:** Scollegare prima della pulizia; utilizzare solo un panno asciutto. **Riparazioni:** Solo personale qualificato deve eseguire le riparazioni. **Protezione dei Dati:** Ripristinare le impostazioni di fabbrica prima di restituire o smaltire il prodotto. **Disclaimer:** Il mancato rispetto di queste istruzioni può causare lesioni, morte o danni materiali. Il produttore non è responsabile per danni causati da un uso improprio.

NL Veiligheids- en Gebruiksaanwijzingen (Waar van Toepassing)

Algemene Veiligheidsinformatie - Lezen en Bewaren: Lees alle veiligheids- en gebruiksinstructies voor gebruik; bewaar ze voor toekomstig gebruik. **Voig Instructies:** Houd u strikt aan alle veiligheids- en optionele richtlijnen. **Waterblootstelling:** Houd het apparaat uit de buurt van water; vermijd het plaatsen van vloeistoffen in de buurt. **Ventilatie:** Zorg ervoor dat de ventilatieopeningen niet geblokkeerd zijn om oververhitting te voorkomen. **Warmtebronnen:** Houd het apparaat uit de buurt van warmteafgevend apparaten. **Muurbevestiging - Installatieveiligheid:** Volg de instructies van de fabrikant en gebruik alleen goedgekeurde bevestigingssets. Vermijd boren in gebieden met kabels, gas- of waterleidingen. Gebruik geschikte gereedschappen en veiligheidsapparatuur. **Regelmatig Onderhoud:** Inspecteer regelmatig op slijtage of schade, vooral als het aan de muur is bevestigd. **Verplaatsing:** Maak los van de muurbevestiging voordat u het verplaatst. **Kindveiligheid:** Houd buiten het bereik van kinderen en zorg ervoor dat zware voorwerpen veilig zijn gemonteerd. **Seismische Voorzorgmaatregelen:** Gebruik gespecialiseerde bevestigingen in aardbevingsgevoelige gebieden. **Elektrische Veiligheid - Stroomvoorziening:** Gebruik de gespecificeerde stroombron; raadpleeg een elektricien bij twijfel. **Kabelbeheer:** Bescherm het netsnoer tegen beschadiging. **Stroomuitschakeling:** Zorg ervoor dat de hoofdstekker toegankelijk blijft; trek de stekker uit tijdens onweers of lange perioden van niet-gebruik. **Batterijveiligheid Opladen:** Gebruik de oplader van de fabrikant; vermijd extreme omstandigheden. **Hitsensitiviteit:** Houd batterijen uit de buurt van hitte om explosie of lekkage te voorkomen. **Batterijoplossing:** Stop met het gebruik als de batterij beschadigd is; gooi deze op de juiste manier weg. **Vervanging:** Gebruik alleen aanbevolen batterijen; onjuiste types kunnen gevaar opleveren. **Externe Batterijen:** Gebruik alleen gespecificeerde types, met inachtneming van de juiste polariteit. **Vervangeren van Batterijen:** Vervanger batterijen als ze voor langere tijd niet worden gebruikt. **Afvalverwerking:** Volg de lokale voorschriften voor het weggooien van batterijen; verbrand ze niet. **Verbindingsveiligheid - Kabelaansluitingen:** Schakel apparaten uit voordat u kabels aansluit of loskoppelt. **Bluetooth-koppeling:** Zorg voor een veilige verbinding; vermijd interferentie van andere apparaten. **Volume-regeling:** Houd het volume gematigd om gehoorbeschadiging te voorkomen. **Verbindingen en Gegevensbeveiliging - Draadloze Beveiliging:** Controleer het privacybeleid en beveilig uw netwerk. **Software-updates:** Houd de software up-to-date voor veiligheid en prestaties. **Waarschuwingen voor Kindveiligheid - Productgebruik:** Bedoeld voor volwassenen; houd uw de buurt van kinderen. **Batterijwaarschuwing:** Houd batterijen en voorwerpen met batterijen buiten het bereik van kinderen. **Volume-regeling:** Houd een veilig volume om het gehoor van kinderen te beschermen. **Brandgevaar - Ontvlambare Materialen:** Plaats geen open vuur in de buurt van het product. **Oververhitting:** Bedek het product niet om oververhitting en brandrisico's te voorkomen. **Afvalverwerking en Recycling - Productafval:** Vervorder het bij een recyclingpunt volgens de lokale wetgeving. **Milieu-naleving:** Volg de voorschriften voor het weggooien van batterijen en elektronisch afval. **Gebruikersonderhoud - Schoonmaak:** Trek de stekker uit voordat u schoonmaakt; gebruik alleen een droge doek. **Onderhoud:** Alleen gekwalificeerd personeel mag reparaties uitvoeren. **Gegevensbescherming:** Stel terug naar de fabriek instellingen voordat u het product retourneert of weggooit. **Disclaimer:** Het niet volgen van deze instructies kan leiden tot letsel, overlijden of materiële schade. De fabrikant is niet aansprakelijk voor schade veroorzaakt door onjuist gebruik.

Declaration of Conformity:

We, Izilia Ltd, Newton House, 2 Pioneer Court, Histon, Cambridge, CB24 9PT declare under our sole responsibility that the product:
Product Name: Histon Digital Radio Model: CB24-DAB-BLK-2 Brand Name: Majority

To which this declaration referred is in conformity to the following harmonized standards or normative documents (CE & RoHS 2.0):
EN 55032:2015, EN 55032:2015, EN61000-3-2:2014, EN61000-3-3:2013, EN62368-1:2004+A11:2017, ETSI EN 301 489-1 V2.2.3(2019-11), ETSI EN 301 489-17, V3.2.2(2019-12), ETSI EN 300 328 V2.2.2 (2019-07), EN 62479-2:2010, IEC 62321-1:2013, IEC 62321-4:2013, IEC 62321-5:2013, IEC 62321-6:2015, IEC 62321-7-1:2015, IEC 62321-7-2:2017, IEC 62321-8:2017, (IEC)NO 1275:2008, EN50564:2011, (IEC)NO 801:2013.

Complying with the requirements or provisions of Council Directives which relate to:
EMC Directive 2014/30/EU, RED Directive 2014/53/EU, LVD Directive 2014/35/EU, Directive (2011/65/EU) and its amendment directives 2015/863/EU (RoHS 2.0) of the European parliament, ERP Directive 2009/112/EC.

All essential test suites have been carried out.
Point of Contact: Eddie Latham | Founder

Signed: *E. Latham* Date of Issue: January 2024 Place of Issue: Cambridge, UK

Importer's Addresses:

UK: Izilia Ltd, Newton House, 2 Pioneer Court, Histon, Cambridge, CB24 9PT
Email: techsupport@majority.co.uk

EU RP: AR Experts, Po Box 5047, 3620 AA Breukelen, The Netherlands
Email: info@ar-experts.eu

US: Izilia Ltd C/O A.N.Deringer Inc, 19520 Wilmington Ave, Rancho Dominguez, CA, 90220
Email: techsupport@majority.co.uk

ATTENTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION

RISQUE D'ELECTROCUTION NE PAS OUVRIIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference



MAJORITY

www.majority.co.uk



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

FC UK CE RoHS  