

Little Shelford

Portable Digital Radio

User Manual

MAJORITY

Contents

Box Contents	1
Controls And Functions.....	2
Support	4
Instructions Guide	5
Basic Operation	5
DAB/DAB+ Radio.....	6
DAB/DAB+ Presets.....	7
FM Radio	9
FM Radio Presets	10
Bluetooth Mode.....	12
Settings: Clock and Date	13
Settings: Dual Alarm Clock	14
Settings: Alarm Functions and Snooze	15
Radio Settings	17
Additional Features	18
Troubleshooting.....	19
Specifications	20
Warranty	20
Safety Information.....	21

3

YEAR
WARRANTY

Register your product online for a FREE 3 year
extended warranty at: www.majority.co.uk

What's in the Box?

Majority Little Shelford Radio


USB Type-C Cable

User Guide




Controls And Functions

Top View/Control Buttons

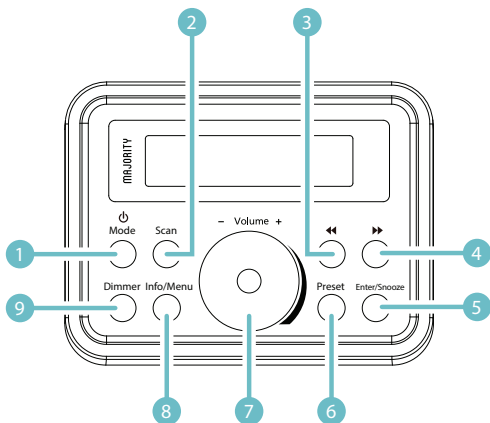

- | | |
|-----------------|--------------------|
| 1. Standby/Mode | 6. Preset |
| 2. Scan | 7. Volume Dial -/+ |
| 3. Previous | 8. Info/Menu |
| 4. Next | 9. Dimmer |
| 5. Enter/Snooze | |

Back View/Connections

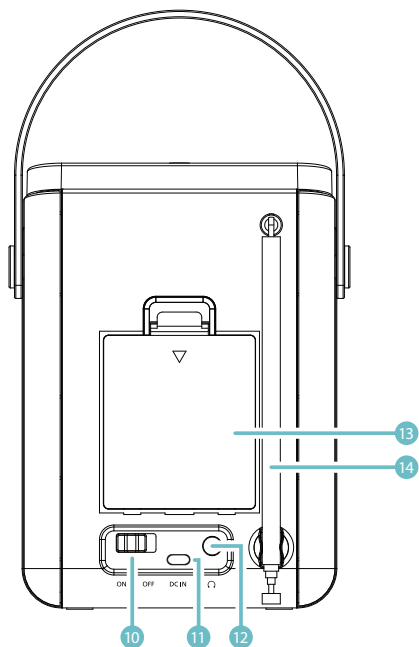

10. On/Off Power Switch

11. USB-type C Port

12. 3.5mm Earphone Jack

13. Battery compartment

14. Aerial

Support

Thank you for your purchase of the Majority Little Shelford.

Please follow the guidance of the manual to set up your radio and enjoy its fantastic variety of stations and features.

If you require further assistance with your new radio, please contact our support team on the Majority website: www.majority.co.uk/support

Basic Operation

Please note all (Ref.) refer to Page 2-3 Controls and Functions mapping guide.

Starting up your radio

Insert the USB Type-C cable into the Power Input port (Ref.11) located at the back of the radio and connect the other end to a power source or a wall socket using a USB plug (not included) to power on the radio. Alternatively, insert 4 x AA batteries into the battery compartment (Ref. 13) to power on the radio and use it portably.

Ensure the antenna (Ref.14) is extended as far as possible so that you can rotate it. This will enable you to get the best signal you can.

Switch the button on the rear of the unit to "ON" (Ref.10) and the screen will show "Welcome to Digital Radio".

From the "Welcome to Digital Radio" screen, click the 'Standby/Mode' button (Ref.1) to switch your radio on. At this point, you will be required to select your chosen radio language. Press the 'Enter/ Snooze' button (Ref.5) to confirm the language and continue your radio set-up.

When DAB mode is activated for the first time, a scan will automatically commence, or will play the last station before the unit was turned off.

Select 'Standby/Mode' (Ref.1) to switch between DAB, FM and Bluetooth.

Standby

To change your radio back to Standby, press and hold the 'Standby/ Mode' (Ref.1) button . To turn your radio off completely, switch the 'ON/OFF' button at the back of the unit to 'OFF' (Ref.10).

DAB/DAB+ Radio

Fully extend the antenna (**Ref.14**) to ensure that the best signal can be received before scanning.

From the “Welcome to Digital Radio” screen, click the ‘Standby/Mode’ button (**Ref.1**) and your radio will automatically scan for DAB stations. On first use it, will automatically scan all stations and save them, and also synchronise the time and date of the station.

If the unit hasn’t automatically scanned or you would like to rescan the available stations, press the ‘Scan’ button (**Ref.2**) and then release. This would be advisable to repeat on DAB mode if you are having trouble listening to particular stations.

By pressing the ‘Scan’ button, the radio will scan for available stations up the frequency band and store all stations that have a good signal. After searching has finished it will automatically play the first station stored.

To select a different station, use the ‘<<’ (**Ref.3**) or ‘>>’ (**Ref.4**) buttons to find your desired station. Select the station by clicking the ‘Enter/Snooze’ (**Ref.5**) button.

PLEASE NOTE : DAB mode is not indicated by displaying “DAB” on the screen, instead the first available station will display with rolling text information.

Rescanning DAB Stations

When in DAB mode, press the ‘Scan’ button (**Ref.2**) to rescan for available DAB stations in your area. The radio will now begin scanning for DAB stations with the screen displaying “Full Scan.”

DAB/DAB+ Presets

Storing DAB Stations

You can store up to 10 DAB radio stations for easy navigation.

To store a station that you are currently playing:

Press and **hold** the 'Preset' (Ref.6) button for **2-3 seconds** until the **Preset Store** settings open and the display shows "Preset Store<x:(Empty)>". Release the "Preset" button.

Press the '<<' or '>>' button (Ref.3/4) to change the "<1" to the number you want to store the station as. Press 'Enter/Snooze' (Ref.5) button to save the station to that preset number. The display will then show "Preset x stored".

Note: If there is an existing DAB station stored under a preset, it will be over written when you store the new station.

Recalling a DAB stored station

Press the 'Preset' (Ref.6) button to open Preset Recall settings. Do not hold down the button as this will open Preset Store settings.

Press the '<<' or '>>' button (Ref.3/4) to scroll through your preset stations. Follow by pressing the 'Enter/Snooze' (Ref.5) button to select your choice and the station will begin playing.

Station Information for DAB/DAB+ Radio

When you are listening to a DAB/DAB+ radio station with good signal, you can press the 'Info/Menu' button (Ref.8) repeatedly to show the different programme information.

Signal Strength: Displays a signal bar with the strength of the current station.

Bit Error Rate: Provides details of the signal error rate.

Channel and Frequency: Displays the station's transmission channel number and frequency.

PTY (Programme Type): Shows the type and description of the program provided by the DAB station.

Time and Date: Displays the time and date information provided by the broadcaster.

Bit Rate: The data rate which the signal is being transmitted.

Dynamic Label Segment (DLS): Displays scrolling text information supplied by the broadcaster.

FM Radio

Press the 'Standby/Mode' button (**Ref.1**) multiple times to switch between DAB, FM and Bluetooth. The first time you switch to FM mode, the FM frequency "87.5 MHz" will be displayed on the screen.

Fully extend the antenna (**Ref.14**).

To scan for the available stations with good signal up the bandwidth, press the 'Scan' button (**Ref.2**) for the radio to begin scanning up the frequency band. The next available station with good signal will then begin to play.

To scan down the frequency band, press and **hold** the 'Scan' button (**Ref.2**) for a few seconds for the station down the frequency band with good signal.

How to tune a specific frequency manually

To listen to a specific frequency, press and **hold** the '>>' button (**Ref.4**) to search up the bandwidth quickly and **hold** the '<<' button (**Ref.3**) to search down quickly. It will stop searching when the button is released.

To search slowly, press '<<' or '>>' (**Ref.3/4**) multiple times to scroll through.

Stereo and Mono

When on FM mode, press the 'Enter/Snooze' button (**Ref.5**) to switch between Stereo and Mono mode.

FM Radio Presets

Storing FM Stations

You can store up to 10 FM radio stations for easy navigation.

To store a station that you are currently playing:

Press and **hold** the 'Preset' (Ref.6) button for **2-3 seconds** until the **Preset Store** settings open and the display shows "Preset Store<x:(Empty)>". Release the 'Preset' button.

Press the '<<' or '>>' button (Ref.3/4) to change the "<1" to the number you want to store the station as. Then press 'Enter/Snooze' (Ref.5) button to save the station to that preset number. The display will then show "Preset x stored".

Note: If there is an existing FM station stored under a preset, it will be over written when you store the new station.

Recalling a FM stored station

Press the 'Preset' (Ref.6) button to open Preset Recall settings. Do not hold down the button as this will open Preset Store settings.

Press the '<<' or '>>' button (Ref.3/4) to scroll through your preset stations. Follow by pressing the 'Enter/Snooze' (Ref.5) button to select your choice and the station will begin playing.

Station Information for FM Radio

When you are listening to an FM radio station with good signal, you can press the 'Info/Menu' button (**Ref.8**) repeatedly to show the different programme information.

PTY (Program Type): Shows the type and description of the program provided by the DAB station.

Signal Strength: Displays a signal bar with the strength of the current station.

Time and Date: Displays the time and the date.

Frequency: Displays the station's transmission frequency.

Audio Type: Displays the audio type of the station you are listening to. It will either be Stereo or Mono.

Radio Text: Displays scrolling text information supplied by the broadcaster.

Bluetooth Mode

Setting Up Bluetooth

To choose Bluetooth mode, press the 'Standby/Mode' button (**Ref.1**) repeatedly until Bluetooth mode is selected.

Go to Bluetooth settings on your device and ensure that it is switched on. "Majority Little Shelford" should then display in available devices. Select this option to connect to it and it should display "Connected".

To choose the music you wish to play, you will need to choose the album or playlist from your device.

The volume, next or previous track can be changed from your device or from the unit using the Volume dial (**Ref.7**) or the '<<' and '>>' buttons (**Ref.3/4**).

The operational range between the unit and a Bluetooth device is approximately 10 metres without any obstructions.

Settings: Clock and Date

Manually Setting the Time

Ensure the unit is in working mode (i.e. listening to DAB/FM Radio). Press and **hold** the 'Info/Menu' button (**Ref.8**) for 1-2 seconds to open the 'Set Menu' option.

Use the '<<' or '>>' (**Ref.3/4**) buttons to choose your option and select Time/Date by pressing 'Enter/Snooze' (**Ref.5**).

The hour digit will now flash. Press '<<' or '>>' to scroll through to the correct hour. Press 'Enter/Snooze' to confirm.

Once this is confirmed, you will be able to press '<<' or '>>' to select the minutes. Press 'Enter/Snooze' to confirm.

Manually Setting the Date

After setting the time (per instructions above) the year will now flash. Press '<<' or '>>' (**Ref.3/4**) to scroll through to the correct year. Press 'Enter/Snooze' to confirm (**Ref.5**).

Once this is confirmed, you will be directed to the month. To change the month, use the '<<' and '>>' buttons (**Ref.3/4**). Press 'Enter/Snooze' to confirm (**Ref.5**).

Once this is confirmed, you will be able to press '<<' or '>>'(**Ref.3/4**) to select the Date. Press 'Enter/Snooze' to confirm (**Ref.5**).

Settings: Dual Alarm Clock

Alarm Setting

Ensure the unit is in working mode (i.e. listening to DAB/FM Radio). Press and **hold** the 'Info/Menu' button (**Ref.8**) for 1-2 seconds to open the 'Set Menu' option.

Scroll through using the '<<' or '>>' buttons (**Ref.3/4**) to find the "Alarm 1 Set" or "Alarm 2 Set" option, and select a choice by pressing 'Enter/Snooze' to confirm (**Ref.5**).

To turn the alarm on or off, press '<<' or '>>' button (**Ref.3/4**), so that "ON" is flashing, and press the 'Enter/Snooze' button to confirm.

The hour digits for the alarm will flash -press '<<' or '>>' button to change the hour and press the 'Enter/Snooze' button to confirm.

From this you will then be able to change the minutes, volume, desired alarm sound (e.g alarm, DAB or FM) following by selecting 'Enter/Snooze'.

The last option for setting your alarm is to select "Alarm Mode" and choose between having your alarm 1/2 to play Once, Daily, Weekends or Weekdays only.

PLEASE NOTE:You can press the "Info/Menu" button to get back to the previous step when programming the alarm. When Alarm sounds, if no operation, it can last for one hour.

Settings: Alarm Functions and Snooze

Turn off the Alarm when sounding

To turn off the Alarm 1 or Alarm 2, when it sounds, press 'Standby/Mode' button (Ref.1).

If the alarm is set to be "Weekday", "Weekend" or "Daily" then the alarm icon will still display on the Standby display screen for the alarm set for the next day.

If it was set to "Once" then the alarm icon will disappear from the display screen after sounding.

How to cancel your alarm

Follow the guidance to setting your alarm, but instead of using the '<<' or '>>' buttons to turn the alarm ON, scroll to OFF. Confirm the selection by pressing 'Enter/Snooze'.

Snooze Function

When the alarm sounds, press the 'Enter/Snooze' button (**Ref.5**) to delay the alarm for another 9 minutes and the radio will go into Standby mode.

To take the radio off of Snooze or to stop sounding the Snooze alarm, press 'Standby/Mode' button (Ref.1).

Settings: Sleep Timer

Ensure the unit is in working mode (i.e. listening to DAB/FM Radio). Press and **hold** the 'Info/Menu' button (**Ref.8**) for 1-2 seconds to open the "Set Menu" option.

Scroll through using the '<<' or '>>' buttons (**Ref.3/4**) to find the "Sleep Set" option and select it by pressing 'Enter/Snooze' to confirm (**Ref.5**).

The screen will now display "Set Sleep: OFF". Now use the '<<' and '>>' buttons to browse through a range of sleep timer lengths: 120/90/60/45/30/15/5 minutes or OFF.

When your choice is displayed, press the 'Enter/Snooze' button to confirm (**Ref.5**). The system will automatically start the timer.

To turn the sleep timer off, follow the above instructions and select "OFF" from the choices.

Once the timer has been set, the minutes will countdown on the display screen. For example, if set to turn off in 5 minutes, "S5" will flash, counting down to "S0" when the radio will go into Standby Mode.

Radio Settings

When the radio is turned on, press and **hold** the 'Info/Menu' (**Ref.8**) button. This will open "Set Menu" and display the **following** settings:

Factory Reset:

Press the '<<' or '>>' button (**Ref.3/4**) in the "Set Menu" screen to scroll through to the sub-option of "Factory Reset".

Press the 'Enter/Snooze' button and the display will show "Factory reset?" Press the '<<' or '>>' button to select "Yes" or "No".

Then re-press the 'Enter/Snooze' button (**Ref.5**) to confirm your desired option.

System Version:

Press the '<<' or '>>' button (**Ref.3/4**) in the "Set Menu" screen to scroll through to the sub-option of "System Version".

Press the 'Enter/Snooze' button to check the system version information.

Language:

Press the '<<' or '>>' button (**Ref.3/4**) in the "Set Menu" screen to scroll through to the sub-option of "Language".

The Little Shelford default language is English. Press the 'Enter/ Snooze' button (**Ref.5**) to confirm English language on your radio. Should you wish to set a different language, use the arrow buttons (**Ref.3,4**) to select from English, French, Italian, German and Spanish. Press the 'Enter/Snooze' button to confirm your selection.

Additional Features

Dimmer:

Select the 'Dimmer' button (**Ref.9**) repeatedly to scroll through a range of dimmer settings for the radio display screen.

Headphone Jack:

Plug in your earphones via the 3.5mm headphone jack (**Ref.12**) to listen to audio from your radio.

Please Note: that Bluetooth earphones are not compatible with this device.

Power Supply and Batteries:

The unit is powered and charged by USB-C 5V 1A and is also portable when powered by 4 x AA batteries (not supplied). These can be inserted into the battery compartment at the back of the unit.

Troubleshooting

Observation	Potential Cause/Solution
No sound	The station is not tuned in properly. Please perform a rescan for available stations or manually scroll through available stations.
Cannot preset stations	Ensure that you are pressing and holding down the Preset button for 2-3 seconds to open Preset Store settings. Only press, do not hold, to open Preset Recall.
FM: Static sound DAB: Burbling/ intermittent cut-out	Signal reception is low. Adjust the aerial or move the unit to a stronger signal location. Re-scan stations and or/ a factory reset.
Sound is distorted	The volume is too high. Adjust the volume control.
Desired station not found	Weak signal. Use the manual tune function and try rescanning in a different area.
Display shows "No Service"	There is no DAB coverage in your area, or poor reception. Adjust the position of the aerial, or move the unit to a stronger signal location.
Display is blank	This may occur if the broadcaster changes the label of a service or removes a label while tuned. The radio will try to retune or perform a scan.
Time and Date not setting automatically	Go to DAB mode and this will automatically set once a scan is performed. Alternatively, set in your 'Settings'.
Other problems/ functional issues	Please perform a factory reset of the radio in your settings.

Specifications

Specifications

Power Supply	USB-C (100-240V)
Battery Supply	4 x AA Batteries for portability
Modes	DAB/DAB+ Band III 5A-13F 174-240MHz FM (87.5MHz - 108MHz) Bluetooth
Output Connector	3.5mm Earphone Jack
Dimension (WxHxD)	13 x 10 x 17 cm
Net Weight	762 g
Input	100-240V~, 50-60Hz, 0.2A Max
Output	5.0V = 1.0A 5.0W
Average active efficiency	75.26%
No-load power consumption	0.07W

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majority.co.uk for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

Warning & Safety Information

EN Safety and Usage Guidelines (All where applicable)

General Safety Information - Read and Retain: Review all safety and operating instructions before use; keep them for future reference.
Follow Instructions: Adhere strictly to all safety and operational guidelines. **Water Exposure:** Keep the device away from water; avoid placing liquids near it. **Ventilation:** Ensure ventilation openings are unobstructed to prevent overheating. **Power Sources:** Keep the device away from heat-emitting appliances. **Warranty Installation:** Follow the manufacturer's instructions and use approved mounting kits only. Avoid drilling into areas with cables, gas, or water lines. Use proper tools and safety apparatus. **Regular Maintenance:** Inspect regularly for wear or damage, especially if wall-mounted. **Relocation:** Detach from the wall mount before moving. **Child Safety:** Keep out of children's reach and ensure heavy items are securely mounted. **Seismic Precautions:** Use specialized mounts in earthquake-prone areas. **Electrical Safety - Power Source:** Use the specified power source; consult an electrician if unsure. **Cable Management:** Protect the power cord from damage. **Power Disconnection:** Keep the main plug accessible; unplug during storms or long periods of non-use. **Battery Safety - Charging:** Use the manufacturer's charger; avoid extreme conditions. **Heat Exposure:** Keep batteries away from heat to prevent explosion or leakage. **Control:** Use the intended controls; keep away from children. **Battery Warning:** Discontinue use if the battery is damaged. **Replacement:** Only use recommended batteries; incorrect types can cause hazards. **External Batteries:** Use only specified types, observing correct polarity. **Battery Removal:** Remove batteries if not used for an extended period. **Disposal:** Follow local regulations for battery disposal; do not incinerate. **Connectivity Safety - Cable Connections:** Power off devices before connecting or disconnecting cables. **Bluetooth Pairing:** Ensure a secure connection; avoid interference from other devices. **Volume Control:** Keep volume moderate to prevent hearing damage. **Connectivity and Data Security - Wireless Security:** Review privacy policies and secure your network. **Software Updates:** Keep software updated for security and performance. **Children's Safety Warnings - Product Use:** Intended for adults; keep away from children. **Battery Warning:** Discontinue use if the battery is damaged. **Replacement:** Only use recommended batteries; incorrect types can cause hazards. **Volume Control:** Maintain a safe volume level to protect children's hearing. **Fire Hazard - Flammable Materials:** Do not place open flames near the product. **Overheating:** Avoid covering the product to prevent overheating and fire risks. **Disposal and Recycling - Product Disposal:** Dispose of at a recycling center according to local laws. **Environmental Compliance:** Follow regulations for battery and electronic waste disposal. **User Maintenance - Cleaning:** Unplug before cleaning; use a dry cloth only. **Servicing:** Only qualified personnel should perform repairs. **Data Protection:** Reset to factory settings before returning or disposing of the product. **Disclaimer:** Failure to follow these instructions may result in injury, death, or property damage. The manufacturer is not liable for damage caused by improper use.

DE Sicherheits- und Verwendungsrichtlinien (alle, wo zutreffend)

Allgemeine Sicherheitsinformationen - Lesen und Aufbewahren: Überprüfen Sie alle Sicherheits- und Bedienungsanleitungen vor der Verwendung; bewahren Sie diese für zukünftige Referenz auf. **Befolgen Sie die Anweisungen:** Halten Sie sich strikt an alle Sicherheits- und Betriebsrichtlinien. **Wassere Exposition:** Halten Sie das Gerät fern von Wasser; vermeiden Sie das Platzen von Flüssigkeiten in der Nähe. **Belüftung:** Stellen Sie sicher, dass die Belüftungsoffnungen nicht blockiert sind, um Überhitzung zu vermeiden. **Wärmeeinwirkung:** Halten Sie das Gerät fern von wärmeabstrahlenden Geräten. **Wandmontage - Sicherheit bei der Installation:** Befolgen Sie die Anweisungen des Herstellers und verwenden Sie zugelassene Befestigungen. Vermeiden Sie das Bohren in Behälter, Gas- oder Wasserleitungen. Verwenden Sie geeignete Werkzeuge und Sicherheitsausrüstung. **Regelmäßige Wartung:** Überprüfen Sie regelmäßig auf Abnutzung oder Beschädigungen, insbesondere bei Wandmontage. **Umzug:** Lösen Sie das Gerät von der Wandhalterung, bevor Sie es bewegen. **Kindersicherheit:** Halten Sie das Gerät außerhalb der Reichweite von Kindern und stellen Sie sicher, dass schwere Gegenstände sicher montiert sind. **Vorkkehrungen bei Erdbeben:** Verwenden Sie in erdbebengefährdeten Gebieten spezielle Halterungen. **Elektrische Sicherheit - Stromquelle:** Verwenden Sie die angegebene Stromquelle; konsultieren Sie einen Elektriker, wenn Sie unsicher sind. **Kabelmanagement:** Schützen Sie das Stromkabel vor Beschädigungen. **Entfernung:** Halten Sie die Stromquelle moderat, um Hörbeschädigungen zu vermeiden. **Wartung:** Entfernen Sie die Batterien, wenn das Produkt überhitzt ist. **Ersetzen:** Verwenden Sie das vom Hersteller bereitgestellte Ladegerät; vermeiden Sie extreme Bedingungen. **Wärmee Exposition:** Halten Sie Batterien fern von Hitze, um Explosionen oder Auslaufen zu verhindern. **Batteriezustand:** Bei Beschädigungen die Nutzung einstellen; ordnungsgemäß entsorgen. **Ersetze:** Verwenden Sie nur empfohlene Batterien; falsche Typen können Gefahren verursachen. **Externe Batterien:** Verwenden Sie nur spezifizierte Typen und beachten Sie die korrekte Polarität. **Batterieentfernung:** Entfernen Sie Batterien bei längerer Nichtbenutzung. **Entsorgung:** Befolgen Sie lokale Vorschriften für Batterientisorgung; nicht verbrennen. **Verbindungssicherheit - Kabelverbindungen:** Schalten Sie Geräte vor dem Verbinden oder Trennen von Kabeln aus. **Bluetooth-Kopplung:** Stellen Sie eine sichere Verbindung her; vermeiden Sie Störungen durch andere Geräte. **Laustärkeregelung:** Halten Sie die Lautstärke moderat, um Hörbeschädigungen zu vermeiden. **Datensicherheit - WLAN-Sicherheit:** Überprüfen Sie die Datenschutzzrichtlinien und sichern Sie Ihr Netzwerk. **Software-Updates:** Halten Sie die Software für Sicherheit und Leistung aktuell. **Sicherheitswarnungen für Kinder - Produktnutzung:** Nur für Erwachsene bestimmt; von Kindern fernhalten. **Batteriewarnung:** Halten Sie Batterien und Produkte mit Batterien außerhalb der Reichweite von Kindern. **Laustärkeregelung:** Halten Sie die Lautstärke zum Schutz des Gehörs von Kindern sicher. **Brandgefahr - Entflammbare Materialien:** Stellen Sie keine offenen Flammen in die Nähe des Produkts. **Überhitzung:** Decken Sie das Produkt nicht ab, um Überhitzung und Brandgefahr zu vermeiden. **Entsorgung und Recycling - Produktentsorgung:** Entsorgen Sie das Produkt gemäß den lokalen Vorschriften in einem Recycling- oder Entsorgungszentrum. **Wartung:** Verwenden Sie die von der Fabrik empfohlenen Ersatzteile. **Reinigung:** Verwenden Sie eine weiche Reinigungsvorrichtung. **Reinigung:** Vor der Reinigung vom Stromnetz trennen; nur ein trockenes Tuch verwenden. **Wartung:** Reparaturen nur von qualifiziertem Personal durchführen lassen. **Datenschutz:** Setzen Sie das Gerät vor Rückgabe oder Entsorgung auf Werkseinstellungen zurück. **Haftungsausschluss:** Die Nichtbeachtung dieser Anweisungen kann zu Verletzungen, Tod oder Sachschäden führen. Der Hersteller haftet nicht für Schäden, die durch unsachgemäße Nutzung verursacht werden.

FR Consignes de Sécurité et d'Utilisation (toutes celles applicables)

Informations Générales de Sécurité: Consultez toutes les consignes de sécurité et d'utilisation avant l'usage; conservez-les pour référence future. **Suivre les Instructions:** Respectez strictement toutes les consignes de sécurité et d'utilisation. **Exposition à l'Eau:** Gardez l'appareil à l'écart de l'eau; évitez de placer des liquides à proximité. **Ventilation:** Assurez-vous que les ouvertures de ventilation ne sont pas obstruées pour éviter la surchauffe. **Sources de Chaleur:** Tenez l'appareil à l'écart des appareils émettant de la chaleur. **Fixation Murale - Sécurité de l'Installation:** Suivez les instructions du fabricant et n'utilisez que les kits de montage approuvés. Évitez de percer des zones contenant des câbles, des conduites de gaz ou d'eau. Utilisez des outils et équipements de sécurité appropriés. **Entretien Régulier:** Inspectez régulièrement l'appareil pour détecter tout signe d'usure ou de dommage, en particulier où il est fixé au mur. **Repositionnement:** Débranchez l'appareil du support mural avant de le déplacer. **Sécurité des Enfants:** Gardez l'appareil hors de portée des enfants et assurez-vous que les objets lourds et inflammables sont correctement stockés. **Précautions Sismiques:** Évitez de couvrir le produit pour prévenir la surchauffe ou les risques d'incendie. **Sécurité Électrique - Source d'Alimentation:** Utilisez la source d'alimentation spécifiée; consultez un électricien en cas de doute. **Gestion des Câbles:** Protégez le cordon d'alimentation contre les dommages. **Déconnexion de l'Alimentation:** Gardez la prise principale accessible; débranchez en cas d'orage ou de non-utilisation prolongée. **Sécurité des Piles - Recharge:** Utilisez le chargeur du fabricant; évitez les conditions extrêmes. **Exposition à la Chaleur:** Gardez les piles à l'écart de la chaleur pour éviter l'explosion ou les fuites. **État de la Pile:** Cessez l'utilisation si la pile est endommagée; jetez-la correctement. **Remplacement:** Utilisez que les piles recommandées; des types incorrects peuvent causer des dangers. **Piles Externes:** Utilisez uniquement les types spécifiques, en respectant la polarité. **Retrait des Piles:** Retirez les piles si l'appareil n'est pas utilisé pendant une longue période. **Élimination:** Suivez les réglementations locales pour l'élimination des piles; ne les incinerez pas. **Sécurité de la Connectivité - Connexions de Câbles:** Éteignez les appareils avant de connecter ou de déconnecter des câbles. **Appairage Bluetooth:** Assurez-vous d'une connexion sécurisée; évitez les interférences avec d'autres appareils. **Contrôle du Volume:** Maintenez un volume modéré pour éviter les dommages auditifs. **Sécurité de la Connectivité et des Données - Sécurité du Réseau Sans Fil:** Examinez les politiques de confidentialité et sécurisez votre réseau. **Mises à Jour Logicielles:** Gardez le logiciel à jour pour la sécurité et la performance. **Avertissements de Sécurité pour les Enfants - Utilisation du Produit:** Destiné aux adultes; gardez hors de portée des enfants. **Avertissement sur les Piles:** Gardez les piles et les articles contenant des piles hors de portée des enfants. **Contrôle du Volume:** Maintenez un niveau sonore sûr pour protéger l'audience des enfants. **Risque d'Incendie - Matériaux Inflammables:** Ne placez pas de flammes nues près du produit. **Surchauffe:** Évitez de couvrir le produit pour prévenir la surchauffe et les risques d'incendie. **Élimination et Recyclage - Élimination du Produit:** Déposez-le dans un centre de recyclage conformément aux lois locales. **Conformité Environnementale:** Suivez les réglementations concernant l'élimination des piles et des déchets électroniques. **Entretien de l'Utilisateur - Nettoyage:** Débranchez avant de nettoyer; utilisez uniquement un chiffon sec. **Réparations:** Seul le personnel qualifié doit effectuer les réparations. **Protection des Données:** Réinitialisez aux paramètres d'usine avant de retourner ou d'éliminer le produit. **Clause de Non-Responsabilité:** Le non-respect de ces consignes peut entraîner des blessures, la mort ou des dommages matériels. Le fabricant décline toute responsabilité en cas de dommages causés par une mauvaise utilisation.

ES Guías de Seguridad y Uso (Cuando sea aplicable)

Información General de Seguridad - Leer y Conservar: Revise todas las instrucciones de seguridad y operación antes de usar; guárdelas para referencia futura. **Seguir las Instrucciones:** Cumpla estrictamente con todas las guías de seguridad y operativas. **Exposición al Agua:** Mantenga el dispositivo alejado del agua; evite colocar líquidos cerca de él. **Ventilación:** Asegure que las aberturas de ventilación no estén obstruidas para evitar sobrecalentamiento. **Fuentes de Calor:** Mantenga el dispositivo alejado de los aparatos que emitan calor. **Montaje en Pared - Seguridad de Instalación:** Siga las instrucciones del fabricante y use solo kits de montaje aprobados. Evite perforar áreas con cables, gas o tuberías de agua. Use herramientas y equipos de seguridad adecuados. **Mantenimiento Regular:** Inspeccione regularmente para detectar desgaste o daños, especialmente si está montado en la pared. **Reubicación:** Desmonte del soporte de pared antes de moverlo. **Seguridad Infantil:** Manténgalo fuera del alcance de los niños y asegúrese de que los objetos pesados estén montados de forma segura. **Precauciones Sísmicas:** Use soportes especializados en áreas propensas a terremotos. **Seguridad Eléctrica - Fuente de Energía:** Use la fuente de energía especificada; consulte a un electricista si tiene dudas. **Gestión de Cables:** Proteja el cable de alimentación contra daños. **Déconexión de Energía:** Mantenga el enchufe principal accesible; desenchufe durante tormentas o largos períodos de inactividad. **Seguridad de las Baterías - Carga:** Use el cargador del fabricante; evite condiciones extremas. **Exposición al Calor:** Mantenga las baterías alejadas del calor para evitar explosiones o fugas. **Estado de la Batería:** Deje de usarla si la batería está dañada; deséchela adecuadamente. **Reemplazo:** Use solo las baterías recomendadas; tipos incorrectos pueden causar peligros. **Baterías Externas:** Use solo los tipos especificados, respetando la polaridad correcta. **Retiro de Baterías:** Retire las baterías si no se usa durante un periodo prolongado. **Eliminación:** Siga las normativas locales para la eliminación de baterías y los desechos electrónicos. **Seguridad de la Conexividad - Conexiones de Cables:** Apague los dispositivos antes de conectar o desconectar cables. **Emparejamiento Bluetooth:** Asegure una conexión segura; evite interferencias de otros dispositivos. **Control de Volumen:** Mantenga un volumen moderado para prevenir daños auditivos. **Seguridad de Conectividad y Datos - Seguridad de Red Inalámbrica:** Revise las políticas de privacidad y asegure su red. **Actualizaciones de Software:** Mantenga el software actualizado para la seguridad y el rendimiento. **Advertencias de Seguridad para Niños - Uso del Producto:** Destinado a adultos; manténgalo fuera del alcance de los niños. **Advertencia sobre Baterías:** Mantenga las baterías y los artículos que contienen baterías fuera del alcance de los niños. **Control de Volumen:** Mantenga un nivel de volumen seguro para proteger la audición de los niños. **Riesgo de Incendio - Materiales Inflammables:** No coloque llamas abiertas cerca del producto. **Sobrecalentamiento:** Evite cubrir el producto para prevenir la sobrecalentamiento y el riesgo de incendio. **Eliminación y Reciclaje - Eliminación del Producto:** Déjelo en un centro de reciclaje según las leyes locales. **Cumplimiento Ambiental:** Siga las normativas para la eliminación de baterías y desechos electrónicos. **Mantenimiento del Usuario - Limpieza:** Desenchufe antes de limpiar; use solo un paño seco. **Reparaciones:** Solo personal calificado debe realizar reparaciones. **Protección de Datos:** Restablezca a la configuración de fábrica antes de devolver o desechar el producto. **Descargo de Responsabilidad:** El incumplimiento de estas instrucciones puede resultar en lesiones, muerte o daños a la propiedad. El fabricante no se hace responsable de los daños causados por un uso inadecuado.

Warning & Safety Information

IT Linee Guida per la Sicurezza e l'Uso (Quando Applicabile)

Informazioni Generali sulla Sicurezza - Leggere e Conservare: Rivedere tutte le istruzioni di sicurezza e di funzionamento prima dell'uso; conservare per riferimenti futuri. **Seguire le Istruzioni:** Attenersi rigorosamente a tutte le linee guida di sicurezza e operative. **Esposizione all'Acqua:** Tenere il dispositivo lontano dall'acqua; evitare di posizionare liquidi nelle vicinanze. **Ventilazione:** Assicurarsi che le aperture di ventilazione non siano ostruite per evitare il surriscaldamento. **Fonti di Calore:** Tenere il dispositivo lontano da apparecchi che emettono calore. **Montaggio a Parete - Sicurezza dell'Installazione:** Seguire le istruzioni del produttore e utilizzare solo kit di montaggio approvati. Evitare di perforare aree con cavi, gas o tubazioni d'acqua. Utilizzare strumenti e dispositivi di sicurezza adeguati. **Manutenzione Regolare:** Ispezionare regolarmente per verificare l'usura o i danni, soprattutto se montato a parete. **Riciclaggio:** Staccare dal supporto a parete prima di spostare. **Sicurezza dei Bambini:** Tenere fuori dalla portata dei bambini e assicurarsi che gli oggetti pesanti siano montati in modo sicuro. **Precauzioni Simiche:** Utilizzare supporti specializzati nelle zone soggette a terremoti. **Sicurezza Elettrica - Fonte di Alimentazione:** Usare la fonte di alimentazione specificata; consultare un elettricista in caso di dubbi. **Gestione dei Cavi:** Proteggere il cavo di alimentazione da danni. **Disconnessione dell'Energia:** Mantenere la spina principale accessibile; scollegare durante i temporali o in caso di lunghi periodi di inattività. **Sicurezza della Batteria - Carica:** Utilizzare il caricatore del produttore; evitare condizioni estreme. **Esposizione al Calore:** Tenere le batterie lontane dal calore per evitare esplosioni o perdite. **Condizioni della Batteria:** Interrompere l'uso se la batteria è danneggiata; smaltirla correttamente. **Sostituzione:** Usare solo batterie raccomandate; tipi errati possono causare pericoli. **Batterie Esterne:** Utilizzare solo i tipi specifici, osservando la polarità corretta. **Rimozione della Batteria:** Rimuovere le batterie se non utilizzate per un periodo prolungato. **Smaltimento:** Seguire le normative locali per lo smaltimento delle batterie; non incenerire. **Sicurezza della Connettività - Connessioni dei Cavi:** Spegnere i dispositivi prima di collegare o scollegare i cavi. **Accompimento Bluetooth:** Assicurare una connessione sicura; evitare interferenze da altri dispositivi. **Controllo del Volume:** Mantenere un volume moderato per prevenire danni all'udito. **Sicurezza della Connettività e dei Dati - Sicurezza della Rete Wireless:** Rivedere le politiche sulla privacy e proteggere la propria rete. **Aggiornamenti Software:** Mantenere il software aggiornato per la sicurezza e le prestazioni. **Avvertenze di Sicurezza per Bambini - Uso del Prodotto:** Destinato agli adulti; tenere lontano dai bambini. **Avvertenza sulla Batteria:** Tenere le batterie e gli oggetti contenenti batterie fuori dalla portata dei bambini. **Controllo del Volume:** Mantenere un livello di volume sicuro per proteggere l'udito dei bambini. **Rischio di Incendio - Materiali Infiammabili:** Non posizionare fiamme libere vicino al prodotto. **Surriscaldamento:** Evitare di coprire il prodotto per prevenire surriscaldamenti o rischi di incendio. **Smaltimento e Riciclaggio - Smaltimento del Prodotto:** Smaltire in un centro di riciclaggio secondo le leggi locali. **Conformità Ambientale:** Seguire le normative per lo smaltimento delle batterie e dei rifiuti elettronici. **Manutenzione dell'Utente - Pulizia:** Scollegare prima della pulizia; utilizzare solo un panno asciutto. **Riparazioni:** Solo personale qualificato deve eseguire le riparazioni. **Protezione dei Dati:** Ripristinare le impostazioni di fabbrica prima di restituire o smaltire il prodotto. **Disclaimer:** Il mancato rispetto di queste istruzioni può causare lesioni, morte o danni materiali. Il produttore non è responsabile per danni causati da un uso improprio.

NL Veiligheids- en Gebruiksaanwijzing (Waar van Toepassing)

Algemene Veiligheidsinformatie - Lezen en Bewaren: Lees alle veiligheids- en gebruiksinstructies voor gebruik; bewaar ze voor toekomstig gebruik. **Voig Instructies:** Houd u strikt aan alle veiligheids- en operationele richtlijnen. **Waterblootstelling:** Houd het apparaat uit de buurt van water; vermijd het plaatsen van vloeistoffen in de buurt. **Ventilatie:** Zorg ervoor dat de ventilatieopeningen niet geblokkeerd zijn om oververhitting te voorkomen. **Warmtebron:** Houd het apparaat uit de buurt van warmteafgevend apparaten. **Muurbevestiging - Installatieveiligheid:** Volg de instructies van de fabrikant en gebruik alleen goedgekeurde bevestigingssets. Vermijd boren in gebieden met kabels, gas- of waterleidingen. Gebruik geschikte gereedschappen en veiligheidsapparatuur. **Regelmatig Onderhoud:** Inspecteer regelmatig op slijtage of schade, vooral als het aan de muur is bevestigd. **Verplaatsing:** Maak los van de muurbevestiging voordat u het verplaatst. **Kindveiligheid:** Houd buiten het bereik van kinderen en zorg ervoor dat zware voorwerpen veilig zijn gemonteerd. **Seismische Voorzorgmaatregelen:** Gebruik gespecialiseerde bevestigingen in aardbevingsgevoelige gebieden. **Elektrische Veiligheid - Stroomvoorziening:** Gebruik de gespecificeerde stroombron; raadpleeg een elektricien bij twijfel. **Kabelbeheer:** Bescherm het netsnoer tegen beschadiging. **Stroomuitschakeling:** Zorg ervoor dat de hoofdstekker toegankelijk blijft; trek de stekker uit tijdens onweers of lange perioden van niet-gebruik. **Batterijveiligheid Opleveren:** Gebruik de oplader van de fabrikant; vermijd extreme omstandigheden. **Hitsensitiviteit:** Houd batterijen uit de buurt van hitte om explosie of lekkage te voorkomen. **Batterijconditie:** Stop met het gebruik als de batterij beschadigd is; gooi deze op de juiste manier weg. **Vervanging:** Gebruik alleen aanbevolen batterijen; onjuiste types kunnen gevaar opleveren. **Externe Batterijen:** Gebruik alleen gespecificeerde types, met inachtneming van de juiste polariteit. **Verwijderen van Batterijen:** Verwijder batterijen als ze voor langere tijd niet worden gebruikt. **Afvalverwerking:** Volg de lokale voorschriften voor het weggooien van batterijen; verbrand ze niet. **Verbindingsveiligheid - Kabelaansluitingen:** Schakel apparaten uit voordat u kabels aansluit of loskoppelt. **Bluetooth-koppeling:** Zorg voor een veilige verbinding; vermijd interferentie van andere apparaten. **Volume-regeling:** Houd het volume gematigd om gehoorbeschadiging te voorkomen. **Verbindings en Gegevensverbinding - Draadloze Beveiliging:** Controleer het privacybeleid en beveilig uw netwerk. **Sicurezza-updates:** Houd de software up-to-date voor veiligheid en prestaties. **Waarschuwingen voor Kindveiligheid - Productgebruik:** Bedoeld voor volwassenen; houd uw de buurt van kinderen. **Batterijwaarschuwing:** Houd batterijen en voorwerpen met batterijen buiten het bereik van kinderen. **Volume-regeling:** Houd een veilig volume om het gehoor van kinderen te beschermen. **Brandgevaar - Ontvlambare Materialen:** Plaats geen open vuur in de buurt van het product. **Oververhitting:** Bedek het product niet om oververhitting en brandrisico's te voorkomen. **Afvalverwerking en Recycling - Productafval:** Verwijder het bij een recyclingcentrum volgens de lokale wetgeving. **Milieu-naleving:** Volg de voorschriften voor het weggooien van batterijen en elektronisch afval. **Gebruikersonderhoud - Schoonmaak:** Trek de stekker uit voordat u schoonmaakt; gebruik alleen een droge doek. **Onderhoud:** Alleen gekwalificeerd personeel mag reparaties uitvoeren. **Gegevensbescherming:** Stel terug naar de fabriek instellingen voordat u het product retourneert of weggooit. **Disclaimer:** Het niet volgen van deze instructies kan leiden tot letsel, overlijden of materiële schade. De fabrikant is niet aansprakelijk voor schade veroorzaakt door onjuist gebruik.

Declaration of Conformity:

We, Izilla Ltd, Newton House, 2 Pioneer Court, Histon, Cambridge, CB24 9PT declare under our sole responsibility that the product:
Product Name: Little Shefford Portable Digital Radio Model: LSH-DAB-8LK UK, LSH-DAB-CRM, LSH-DAB-DUK, LSH-DAB-GRY UK, LSH-DAB-RED UK Brand Name: Majority

To which this declaration referred is in conformity to the following harmonized standards or normative documents (CE & RoHS 2.0):
EN 55032:2017, EN 55032:2015, EN61000-3-2:2014, EN61000-3-3:2013, EN60238-1:2004+A11:2017, ETSI EN 301 489-1 V2.2.3:2019-11, ETSI EN 301 489-17 V3.2.2:2019-12, ETSI EN 300 328 V2.2.2:2019-07, EN 62479-1:2019, IEC 62321-1:2013, IEC 62321-4:2013, IEC 62321-5:2013, IEC 62321-6:2015, IEC 62321-7-1:2015, IEC 62321-7-2:2017, IEC 62321-8:2017, (IEC)NO 1275:2008, EN50564-2011, (IEC)NO 801:2013.

Complying with the requirements or provisions of Council Directives which relate to:
EMC Directive 2014/30/EU, RED Directive 2014/53/EU, LVD Directive 2014/35/EU, Directive (2011/65/EU) and its amendment directives 2015/863/EU (RoHS 2.0) of the European parliament, ERP Directive 2009/112/EC.

All essential test suites have been carried out.

Point of Contact: Eddie Latham | Founder

Signed: *E. Latham* Date of Issue: January 2024 Place of Issue: Cambridge, UK

Importer's Addresses:

UK: Izilla Ltd, Newton House, 2 Pioneer Court, Histon, Cambridge, CB24 9PT

Email: techsupport@majority.co.uk

EU RP: AR Experts, Po Box 5047, 3620 AA Breukelen, The Netherlands

Email: info@ar-experts.eu

US: Izilla Ltd C/O A.N.Deringer Inc, 19520 Wilmington Ave, Rancho Dominguez, CA, 90220

Email: techsupport@majority.co.uk



ATTENTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION

RISQUE D'ELECTROCUTION NE PAS OUVRIR




IMPORTANT: Please read all instructions carefully before use and keep for future reference



MAJORITY

www.majority.co.uk

FR




FR

Cet appareil, ses accessoires et piles se recyclent

À DÉPOSER EN MAGASIN

À DÉPOSER EN DÉCHÈTERIE

OU



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

FC UK CE RoHS

