



HD Projector  
AC-HDP30  
User Manual



## **ATENÇÃO!**

PT

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado.  
 Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque.  
 Não mantenha o produto num local húmido ou perto líquidos como vasos, etc.  
 Não aproxime o produto a fontes de fogo vivo, como velas.  
 Mantenha o produto num espaço suficientemente arejado de forma a evitar sobre-aquecimento. Não bloquee a ventilação do instrumento, cobrindo-o com artigos como cortinas, toalhas de mesa ou jornais.

## **VÝSTRAHA!**

SK

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obrátte na kvalifikované servisné stredisko.  
 Nevytávajte produkt do blízkosti akéhokoľvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so slnečným žiareniom, nadmerným prásnym prostredím, mechanickým vibráciám alebo šokom.  
 Produkt nesmie prísť do kontaktu s vodou a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt.  
 Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkt.  
 Umožnite dostatočnú cirkuláciu vzduchu a zabráňte obstrukcii ventilačných otvorov (ak sú prítomné) kvôli prevencii vnútorného prehrevania. Ventilácia nesmie byť narušená prekrytím zariadenia výrobkami ako napr. noviny, kuchynské utierky, záclony a pod.

## **OPOZORILO!**

SI

Ne odpirajte pokrova. V notranosti ní nobenih delov, k jih uporabnik lahko sam popravlja. Popravilo prepustite usposobljenemu osobju.  
 Na postavljajte izdelek na lokacijo v bližini vira toplove, kot je radiator, ali na območje, ki je izpostavljeno neposredni sončni svetlobi, pretiranem prahu, mehanskim tresljajem ali udarcem.  
 Izdelek ne sme biti izpostavljen kapljjanju ali brizganju in nobeni predmeti, napolnjeni z vodo, kot so vase, se ne smejo postaviti na izdelek.  
 Nobenega od virov odprtega ognja, kot so vžgane sveče, se ne sme postavljati na izdelek.  
 Zagotovite zadostno kroženje zraka in umaknite ovire na odprtinhah (če obstajajo), zaradi preprečevanja kopicanja notranje topote. Ventilacija se ne sme ovirati s prekrivanjem naprave s predmeti, kot so časopisi, parti, zavesi itn.

## **¡ADVERTENCIA!**

ES

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado.  
 No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo.  
 Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato.  
 No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato.  
 Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstruya o tape las aberturas con objetos como periódicos, manteles, cortinas, etc.

## **WARNING!**

SE

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal.  
 Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock.  
 Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten.  
 Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten.  
 Tillåt tillräcklig luftcirkulation och blockera ej eventuella ventiler för att undvika intern överhettning. Ventilen bör ej täckas av föremål såsom tidningar, dukar, gardiner etc.

# Introduction

AC-HDP30



Thank you for purchasing the HDP30 HD Projector.  
To get the most out of your product,  
please read this manual carefully.

## CONTENTS


- 1 x AVCOM HDP30 HD Projector
- 1 x Remote
- 1 x UK cable
- 1 x EU cable
- 1 x User Manual

## FEATURES

- Compact and durable design
- Upscale up to 1080p
- Automatic keystone
- Focus from 75cm

# Functions

AC-HDP30

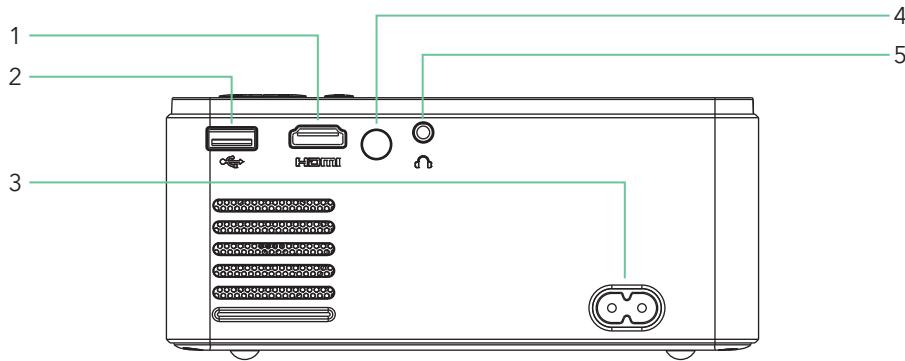

## REAR PANEL

### 1. HDMI Input

Connect your computer, gaming console or similar device here to use the projector as your main or second screen.

### 2. USB Input

Connect your smartphone here to share your screen, or connect a USB storage drive to play files contained on it.

### 3. AC Power Input


Plug the power cable provided here to give the unit power.

### 4. IR Receiver

This receives the signal from the remote. Make sure that the line of sight between the remote and the receiver is not obstructed.

### 5. Minijack Audio Output

Connect your speakers or headphones here to listen to the sound from the projector.

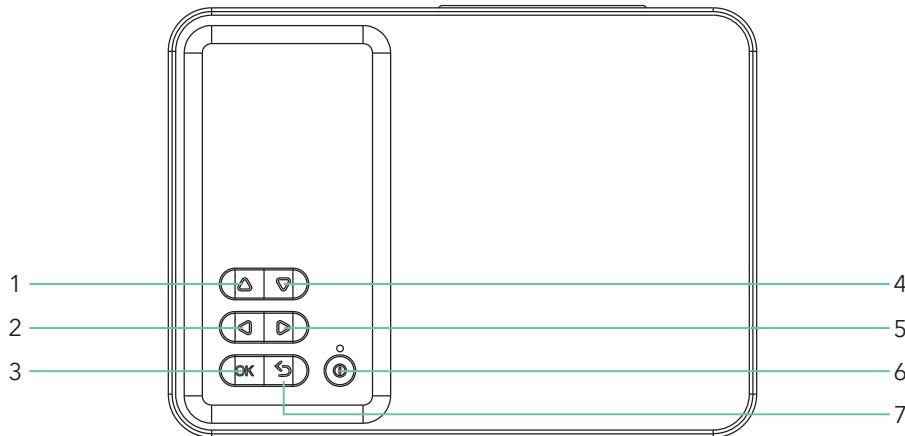

## TOP PANEL

### 1. UP Button

Navigates up in menu screens.

### 2. Left Button

Navigates left in menu screens.

### 3. OK Button

Selects the highlighted option on the screen.

### 4. Down Button

Navigates down in menu screens.

### 5. Right Button

Navigates right in menu screens.

### 6. Power Button


Press and hold this button to turn the projector on or off.

### 7. Back Button

Navigates to the previous menu page.

# Functions

AC-HDP30

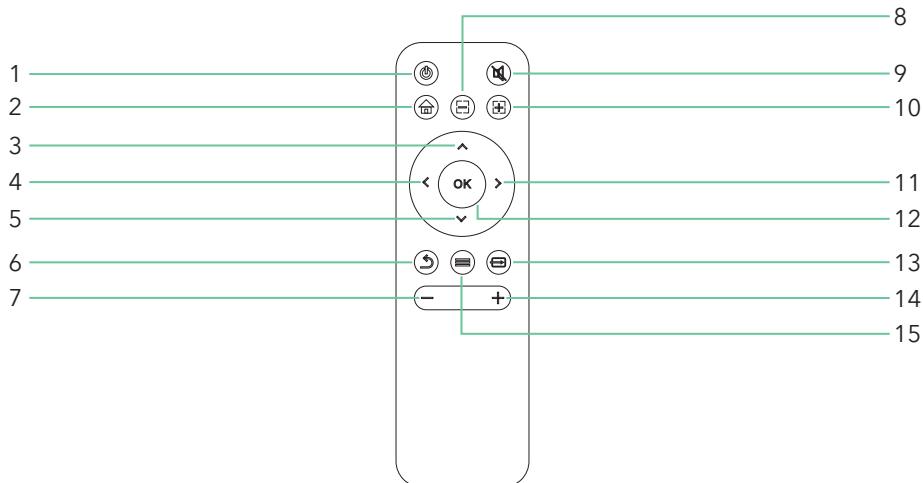

## REMOTE CONTROL

### 1. Power

Turns the projector on or off.

### 2. Home

Returns to the home menu.

### 3. UP

Navigates up in menu screens.

### 4. Left

Navigates left in menu screens.

### 5. Down

Navigates down in menu screens.

### 6. Return

Returns to the previous menu.

### 7. Vol -

Decreases volume.

### 8. Focus -

Zooms the projector lens out.

### 9. Mute

Mutes the audio output.

### 10. Focus +

Zooms the projector in.

### 11. Right

Navigates right in menu screens.

### 12. OK

Confirms selections.

### 13. Signal Source

Switches between input sources (e.g., HDMI, USB).

### 14. Vol +

Increases volume.

### 15. Menu

Opens the settings menu.

## CONNECTING A DEVICE - WIRELESS

### ANDROID

1. Go to Settings and choose the casting option. The name of this may differentiate depending on the make of your device.
2. Choose HDP30 from the list of devices.

### iOS

1. Open up Airplay.
2. Choose HDP30 from the list of devices.

## CONNECTING A DEVICE - WIRED

### ANDROID

1. Download the casting app from our website: [av.com/driver-downloads](http://av.com/driver-downloads)
2. Connect the device to the projector via a USB cable.
3. Follow the instructions on the app to mirror your screen.

### iOS

1. Connect the device to the projector via a USB cable.
2. Allow the projector to connect to start mirroring.

## CONNECTING TO WIFI AND BLUETOOTH

### WIFI

1. Select the Settings option.
2. Select the Network option.
3. Select your WiFi and enter your password (if applicable).

### BLUETOOTH

1. Select the Settings option.
2. Select the Bluetooth option.
3. Select the device that you want to connect.



# Specifications

AC-HDP30



Projection Image	LCD
Light Source	LED
Native/Scaled Resolution	720p/1080p
Projection Ratio	1.28:1
Aspect Ratio	16:9/3:4
Inputs	HDMI/USB
Outputs	3.5mm Audio Minijack
Supported Video	
File Formats (via USB)	MP4/MOV/ M4V/AVI/ FLV/MKV/ WEBM
Supported Image	
File Formats (via USB)	JPG/JPEG/ PNG/BMP
Supported Audio	
File Formats (via USB)	MP3/M4A
Power Consumption	35W
Power Input	220-240V AC, 50/60Hz
Dimensions	163mm x 120mm x 73mm

