



Suitcase Turntable with Bluetooth

AC-STT

User Manual

WARNING!

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel.

Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock.

The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. No naked flame sources, such as lighted candles, should be placed on the product.

Allow adequate air circulation and avoid obstructing vents (if present) to prevent internal heat build-up. The ventilation must not be impeded by covering the appliance with items such as newspapers, table-cloths, curtains etc.

VAROVÁNÍ!

Nezakrývejte. Uvnitř nejsou žádné součásti opravitelné uživatelem. S požadavkem na servis se oďte ke kvalifikované servisní oddělení. Neumisťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným pršením, mechanickými vibracemi nebo šokem.

Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt. Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt.

Umožněte dostatečnou cirkulaci vzduchu a vyhněte se obstrukci ventilátorů (pokud jsou přítomné) pro předejití interního přehřívání. Ventilace nesmí být narušena překrytím zařízení výrobky jako např. noviny, kuchyňské utěrky, záclony apod.

DVARSELI

Dækslet må ikke åbnes. Ingen bruger-udsiftelige dele indeni. Overlad service til kvalificeret service personale.

Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støv, mekaniske vibrationer eller stød.

Produktet må ikke udsættes for vand eller stænk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet.

Må ikke placeres nær åben ild, tændte stearinlys må ikke placeres på produktet.

Vær sikker på at der er tilstrækkelig luftcirkulation og undgå at dække ventiler (hvis der er nogen) for at undgå at produktet bliver varmt. Ventilatorerne må ikke blokeres med overdækning af apparatet med genstande som aviser, dug, gardiner osv.

WAARSCHUWING!

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhoud over aan bevoegd onderhoudspersoneel.

Plaats het product niet in de buurt van een hittebron zoals een radiator of in direct zonlicht of in een stofrijke omgeving, mechanische vibratie of schok.

Plaats het product niet in de buurt van spatende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas.

Er mogen geen open vlammen zoals aangestoken kaarsen op de apparatuur worden geplaatst.

Zorg om overhitting te voorkomen voor voldoende ventilatie en bellemmer ventilatieroosters niet. Bedek het product niet met dingen zoals kranten, tafelakens, gordijnen etc.

VAROITUS!

Älä avaa kanta. Ei sisällä käyttäjä-huollettava osia. Huollot saa suorittaa vain pätevä huoltomies.

Älä säilytä tuotetta minkään kuumien lähellä kuten patteri tai suorassa auringonpaisteessa, pölyisessä, mekaanisessa värinässä tai iskussa. Tuotetta ei saa altistaa tippuvalle tai loiskeelle tai nesteitä sisältäviä tuotteita kuten maljakko eivätkä saa olla tuotteen lähetyillä.

Avotulla kuten syttyneitä kynttilä ei saa olla tuotteen päällä. Salli riittävä ilmankierto ja vältä tuuletusaukkojen tukkiminen (jos sellaisia on olemassa) estämään sisäisen lämmön muodostumisen. Tuuletusta ei saa estää peittämällä laite esineillä, kuten sanomalehdillä, pöytäliinoilla, verhoilla jne.

EN

ATTENTION!

FR

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation à du personnel de réparation qualifié. Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques.

L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé dessus.

Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil.

Assurer une circulation d'air suffisante et éviter d'obstruer les fentes (le cas échéant) afin d'éviter une surchauffe interne. La ventilation ne doit pas être bloquée en couvrant l'appareil avec des objets tels que des journaux, des nappes, des rideaux, etc.

WARNING!

DE

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile. Überlassen Sie Wartungsarbeiten qualifiziertem Fachpersonal.

Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Vibrationen oder Stößen.

Schützen Sie das Produkt vor tropfenden oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt.

Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden.

Sorgen Sie für eine ausreichende Luftzirkulation und vermeiden Sie, dass die Lüftungsschlitze (falls vorhanden) abgedeckt werden, um einen internen Wärmestau zu verhindern. Die Belüftung darf nicht durch Abdecken des Gerätes mit Gegenständen wie Zeitungen, Tischdecken, Vorhängen usw. blockiert werden.

AVVERTIMENTO!

IT

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto.

Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock.

Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto.

Non esporre il prodotto a fuoco, candele o oggetti simili.

Assicurarsi la circolazione dell'aria e non ostruire le ventole, se presenti, per evitare il surriscaldamento. La ventilazione non deve subire impedimenti dovuti a giornali, tovaglie, tende, ecc.

ADVARSEL!

NO

Ikke åpne dekslet. Inneholder ingen deler som kan brukes. Overlat reparasjon til kvalifisert servicepersonell.

Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støv, mekanisk vibrasjon eller støt.

Produktet må ikke utsettes for drypping eller spruting, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet.

Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet.

Tillat tilstrekkelig luft sirkulasjon og unngå å blokkere ventiler (hvis tilstede) for å forhindre intern varmeoppsamling. Pass på at ventilasjon ikke hindres ved å unngå å dekke apparatet med ting som aviser, bordduger, gardiner osv.

OSTRZEŻENIE!

PL

Nie otwierać pokryw. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla wyszkolonego personelu.

Nie umieszczaj produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym wibracją. Produkt ten nie może być ekspozowany na kapanie lub chłapanie, a przedmioty wypełnione płynami, takie jak wazy, nie powinny być na nim umieszczone.

Źródła otwartego ognia, takie jak np. świece, nie powinny być umieszczane na produkcie.

Należy zapewnić odpowiednią wentylację i unikać blokowania otworów wentylacyjnych, aby uniknąć wewnętrznego wzrostu temperatury. Wentylacja nie powinna być utrudniana poprzez nakrywanie urządzenia gazetami, obrusami czy zasłonami.

ATENÇÃO!

PT

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado.

Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque.

Não mantenha o produto num local húmido ou perto líquidos como vasos, etc.

Não aproxime o produto a fontes de fogo vivo, como velas.

Mantenha o produto num espaço suficientemente arejado de forma a evitar sobre-aquecimento. Não bloqueie a ventilação do instrumento, cobrindo-o com artigos como cortinas, toalhas de mesa ou jornais.

VÝSTRAHA!

SK

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko.

Nevystavujte produkt do blízkosti akéhokolvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so sľnečným žiarením, nadmerným prášnym prostredím, mechanickým vibráciám alebo šokom.

Produkt nesmie prísť do kontaktu s vodou a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt.

Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkt.

Umožnite dostatočnú cirkuláciu vzduchu a zabráňte obštrukcii ventilačných otvorov (ak sú prítomné) kvôli prevencii vnútorného prehrievania. Ventilácia nesmie byť narušená prekrytím zariadenia výrobkami ako napr. noviny, kuchynské utierky, záclony a pod.

OPOZORILO!

SI

Ne odpirajte pokrova. V notranjosti ni nobenih delov, ki jih uporabnik lahko sam popravlja. Popravilo prepustite usposobljenemu oseboju.

Ne postavljajte izdelka na lokacijo v bližini vira toplote, kot je radiator, ali na območje, ki je izpostavljen neposredni sončni svetlobi, pretiranem prahu, mehanskim tresljajem ali udarcem.

Izdelek ne sme biti izpostavljen kapljanju ali brizganju in nobeni predmeti, napolnjeni z vodo, kot so vaze, se ne smejo postaviti na izdelek.

Nobenega od virov odprtega ognja, kot so vžgane sveče, se ne sme postavljati na izdelek.

Zagotovite zadostno kroženje zraka in umaknite ovire na odprtinah (če obstajajo), zaradi preprečevanja kopičenja notranje toplote. Ventilacija se ne sme ovirati s prekrivanjem naprave s predmeti, kot so časopisi, prti, zavese itn.

¡ADVERTENCIA!

ES

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado.

No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo.

Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato.

No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato.

Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstruya o tape las aberturas con objetos como periódicos, manteles, cortinas, etc.

VARNING!

SE

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal.

Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock.

Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten.

Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten.

Tillåt tillräcklig luftcirkulation och blockera ej eventuella ventiler för att undvika intern överhettning. Ventilen bör ej täckas av föremål såsom tidingar, dukar, gardiner etc.

Introduction

AC-STT



 
Thank you for purchasing the AVCOM Suitcase Turntable with Bluetooth. To get the most out of your product, please read this manual carefully.

CONTENTS

- 1 x Suitcase Turntable with Bluetooth
- 1 x Power Cable
- 1 x User Manual

FEATURES

- Built-in Stereo Speakers
- Three-Speed Turntable
- Bluetooth Connectivity

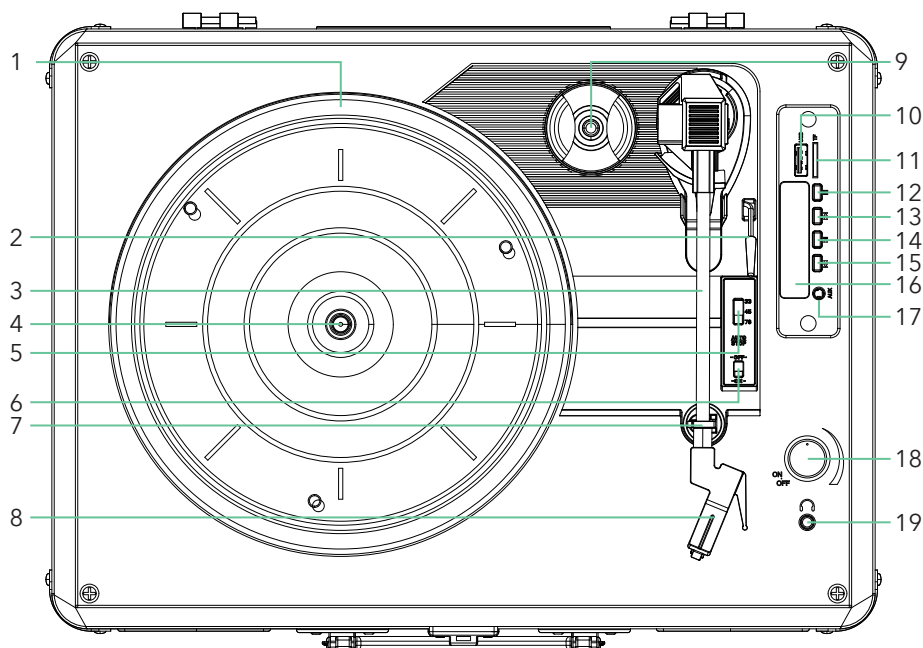

TURNTABLE TOP

1. Turntable Platter

The rotating platform where vinyl records are placed for playback.

2. Tone Arm Lift Lever

Used to raise and lower the tonearm safely onto the record.

3. Tone Arm

A removable adapter for playing 45 RPM records with larger center holes.

4. Turntable Spindle

The central pin that holds records in place while spinning.

5. Auto Stop ON/OFF Switch

Enables or disables the auto-stop function, which stops the turntable when a record ends.

6. Speed Selection Switch

Adjusts playback speed between 33, 45, and 78 RPM to match the record type.

7. Tone Arm Holder

A secure clip to hold the tonearm in place when not in use.

8. Stylus

The needle that reads the grooves of the vinyl to produce sound.

9. 45 RPM Adaptor

A removable adapter for playing 45 RPM records with larger center holes.

10. USB Input

Allows playback of digital music files stored on USB drives.

11. SD Card Input

Supports microSD cards for digital music playback.

12. Play Mode Select/Record Button

Toggles between different playback modes and enables recording functions.

13. Next Track / FM Program Mode Button

Skips to the next track in digital playback mode or changes FM radio stations.

14. Pause & Play / Delete Button

Starts or pauses digital music playback; also used to delete stored files.

15. Previous Track / FM Program Mode Button

Goes back to the previous track or tunes FM radio frequencies.

16. LED Display

A screen that provides visual feedback on playback mode, volume level, and FM station.

17. Aux Input

A 3.5mm input for connecting external audio devices like smartphones or MP3 players.

18. Power ON/OFF & Volume Knob

 
 
A combined control to turn the unit on/off and adjust volume levels.

19. Headphone Output

A 3.5mm minijack port for headphones.

Functions

AC-STT

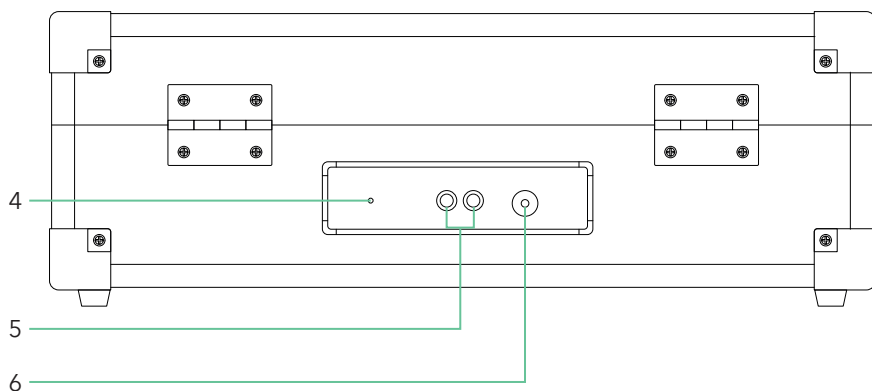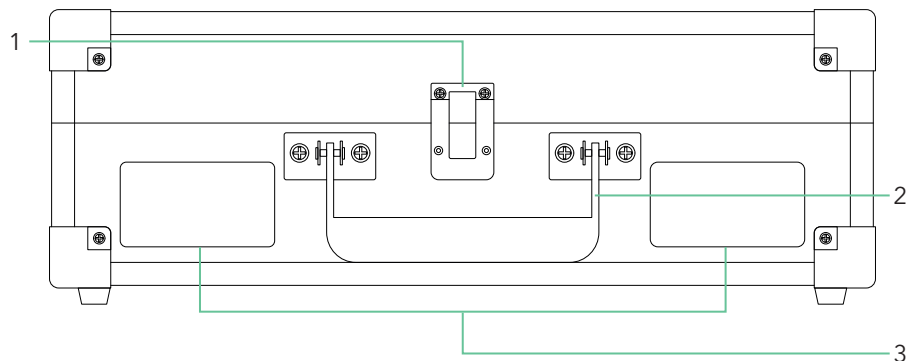

FRONT PANEL

1. Suitcase Latch

A latch to secure the turntable when the suitcase is closed for transport.

2. Handle

A built-in carrying handle for easy portability.

3. Stereo Speakers

Integrated stereo speakers for standalone playback.

REAR PANEL

4. FM Antenna

A retractable antenna to improve FM radio reception.

5. RCA Line Out

Output ports for connecting the turntable to an external speaker or amplifier.

6. DC Power Input

The power input port for connecting the turntable to an AC power adapter.

Connection and Setup

AC-STT



Getting Started

Open the top cover to access the turntable.

Connect the power adapter to a wall outlet and plug the DC connector into the "DC IN" jack on the unit.

Turn on the unit by rotating the Power/Volume knob clockwise - the display will show "-Pho."

Adjust the volume using the same knob to your preferred level.

When finished, turn off the unit by rotating the knob counterclockwise until the display light turns off.

Close and lock the cover for safe storage.

Connecting to an External Speaker (Optional)

Use an RCA cable (not included) to connect the LINE OUT jacks to an external speaker or amplifier.

Red plug → Right Channel Input

White plug → Left Channel Input

 
Playing a Record

1. Remove the stylus cover - If this is your first use, take off the protective plastic cover from the stylus.
2. Unlock the Tone Arm - Gently release it from the holder.
3. Place the Record -If playing a 45 RPM single, place the 45 RPM adapter on the spindle first. For other records, place them directly on the spindle.
4. Select the Speed - Use the Speed Selector Switch to set the correct speed (33, 45, or 78 RPM).
5. Enable Auto-Stop (Optional) - Set the Auto Stop switch to ON if you want the turntable to stop automatically at the end of the record.
6. Start Playback -Lift the Tone Arm Lift Lever to raise the tone arm. Move the tone arm over the record to the desired starting position.

Lower the Tone Arm Lift Lever to place the stylus onto the record. Playback will begin automatically.

7. Stopping Playback -The turntable will stop automatically if Auto Stop is ON.If Auto Stop is OFF, manually raise the tone arm when the record finishes.

8. Return the Tone Arm - Lift the tone arm and place it back onto the Tone Arm Holder, then lock it in place.

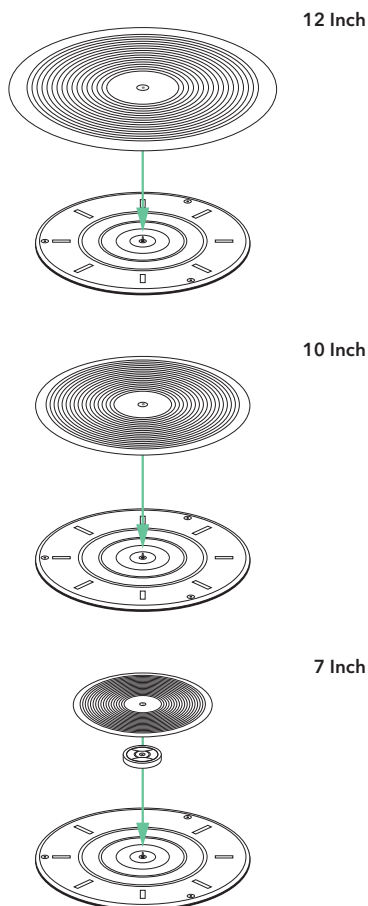

Using the Multimedia Modes

AC-STT



Bluetooth

1. Turn on the unit by rotating the Power/Volume knob clockwise.
2. Enter Bluetooth mode by pressing the "M" button until the display shows "BT".
3. Enable Bluetooth on your device (smartphone, tablet, etc.).
4. Select "AC-STT" from the list of available devices on your Bluetooth settings.
5. Wait for the connection - The display will confirm when pairing is successful.
6. Play music from your device - Audio will stream through the turntable's built-in speakers.
7. Adjust the volume using either your device or the Power/Volume knob on the turntable.
8. To disconnect or pair a new device, turn Bluetooth off on your current device and repeat the pairing process.

USB/SD Card

1. Insert a USB drive or TF (microSD) card into the corresponding port on the turntable.
2. Switch to USB/SD mode by pressing the "M" button until the display shows "USB" or "SD".
3. Playback starts automatically - The first track on the storage device will begin playing.
4. Control playback using the buttons:
 - a. Next Track - Press the "Next" button to skip forward.
 - b. Previous Track - Press the "Previous" button to go back.

- c. Pause/Play - Press the "Pause/Play" button to stop or resume playback.

5. Adjust the volume using the Power/Volume knob.

6. To remove the USB/SD card, first stop playback, then carefully unplug the device.

FM Radio

1. Switch to FM mode by pressing the "M" button until the display shows "FM".
2. Extend the FM antenna for better signal reception.
3. Tune to a station:
 - a. Press "Next" to scan forward to the next available station.
 - b. Press "Previous" to scan backward.
4. Adjust the volume using the Power/Volume knob. To exit FM mode, press the "M" button to switch to another function (Bluetooth, USB, etc.).

USB/SD Card Recording

1. Insert a USB drive or SD (microSD) card into the corresponding port.
2. Start recording by pressing the Record button while playing a vinyl record, FM radio, or AUX input audio.
3. The unit will automatically save the recording onto the USB or SD card.
4. Stop recording by pressing the Record button again.
5. Playback your recording by switching to USB/SD mode and selecting the recorded file.

Replacing the Stylus

The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in the sound quality. Follow these steps to safely replace the stylus:

Removing the Old Stylus

1. Ensure the unit is powered off and unplugged to prevent accidental damage.
2. Carefully lift and hold the tonearm to prevent it from moving during the replacement process.
3. If a protective cover is on the stylus, remove it before proceeding.
4. Hold the stylus gently and pull it downward away from the tonearm cartridge. It should release with minimal force.

Installing the New Stylus

 
 
 
 
1. Position the replacement stylus with the cartridge, ensuring it is correctly aligned with the mounting slot.
2. Gently push the new stylus upwards into the cartridge until it clicks securely into place. Avoid using excessive force.
3. Lightly tap the stylus to confirm it is properly secured and does not move out of place.
4. If applicable, place the stylus cover back on to protect it when not in use.
5. Turn the turntable back on and play a record to ensure smooth sound quality and proper functionality.

Maintenance Cautions

The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in the sound quality. Follow these steps to safely replace the stylus:

- Unplug the unit before cleaning - Avoid electric shock by disconnecting the power source.

- Use a soft, dry cloth - Harsh chemicals or abrasive materials can damage the surface.
- Handle records properly - Hold them by the edges to prevent scratches and dust buildup.
- Store in a cool, dry place - Keep the unit and records away from direct sunlight and humidity.
- Avoid moving the unit while in use - This can cause damage to the stylus and record.
- Regularly clean the stylus - Use a soft brush to remove dust and debris for optimal performance.
- Secure the tonearm when not in use - Prevent damage by locking it in place after playback.

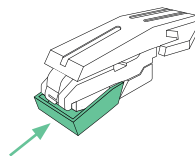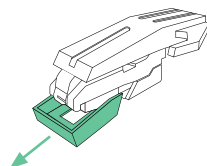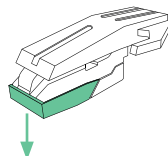

Troubleshooting

AC-STT



ISSUE	POSSIBLE CAUSES	SOLUTION
No power	Power adapter not plugged in properly	Ensure the adapter is securely connected to the outlet and the unit
	Faulty power outlet	Try a different power outlet
No sound or low volume	Volume set too low	Increase the volume using the Power/Volume knob.
	External speakers not properly connected	Check RCA cables and ensure correct input selection.
	Bluetooth device volume too low	Increase the volume on the paired device
Turntable not spinning	Auto-stop switch is ON	If playing a record that does not reach the end, set auto-stop to OFF
	Tonearm not positioned correctly	Move the tonearm slightly towards the record
	Loose belt (if applicable)	Check and adjust the belt under the platter
Poor sound quality	Dusty or worn-out stylus	Clean the stylus or replace it if necessary
	Dirty or scratched record	Clean the record with an anti-static cloth
	Weak Bluetooth signal	Ensure the paired device is within close range
Bluetooth not pairing	Device not in pairing mode	Press "M" until the display shows "BT" and retry pairing
	Previously paired device interfering	Disconnect other Bluetooth devices before pairing
USB/TF not playing	Unsupported file format	Ensure files are in MP3 or WAV format
	USB/TF card not inserted properly	Remove and reinsert the storage device
FM radio signal weak	FM antenna not extended	Fully extend the antenna and reposition if needed
	Poor signal area	Move the unit to a different location for better reception

Specifications

AC-STT



Power Input AC 100-
240V~; 50/60
Hz

Power Output DC 5V, 1A/5W

Recording USB/SD

Turntable Speeds 33 $\frac{1}{3}$ /
45/
78rpm

FM Radio Frequency Range . . . 87.5-108 MHz

Speaker Driver Power 2x5W

Inputs Aux mini-jack/
Bluetooth/
USB/
SD

Outputs Stereo Phono

Dimensions 350mm x
260mm x
125mm

Weight 2.65kg

