

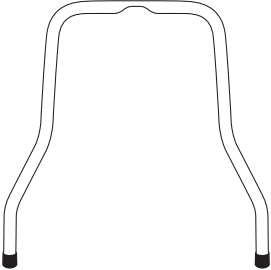
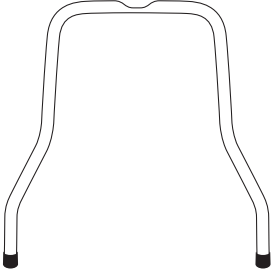
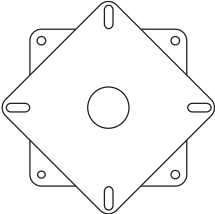
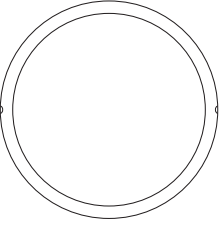
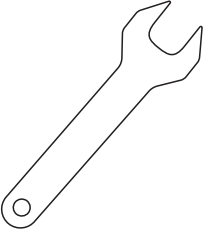
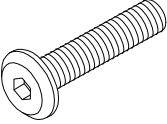
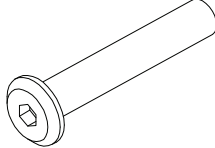
 
 
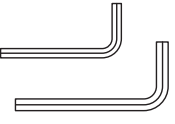
 








MUSICIANS BARSTOOL



G4M-MB24 / G4M-MB30

SETUP GUIDE

CONTENTS CHECKLIST

1  X1	2  X1	3  X1
4  X1	5  X1	6  X1
A  20MM X4	B  25MM X4	C  15MM X4
D  20MM X4	E  15MM X4	F  X2
G  X4	H  X4	

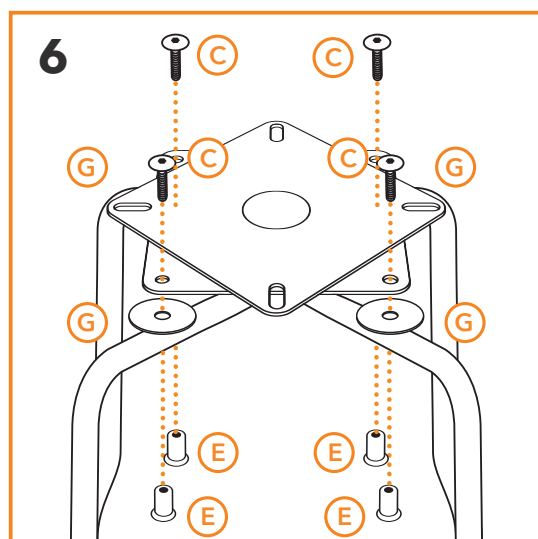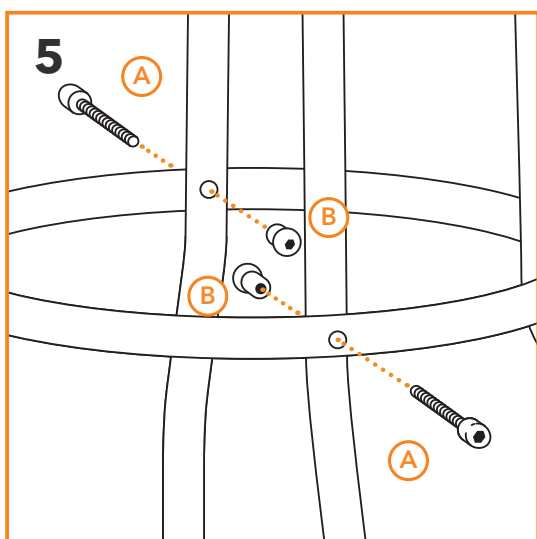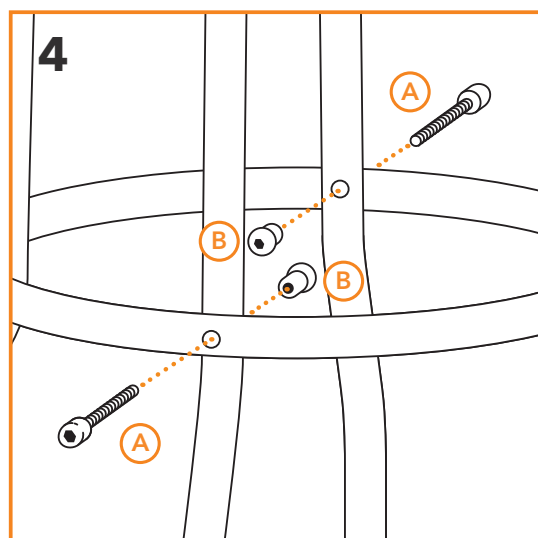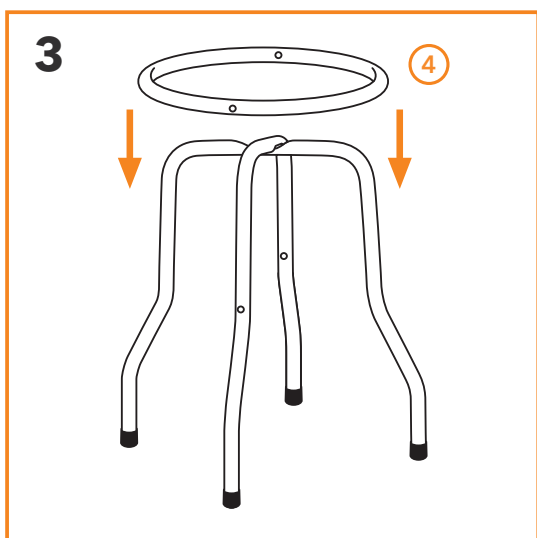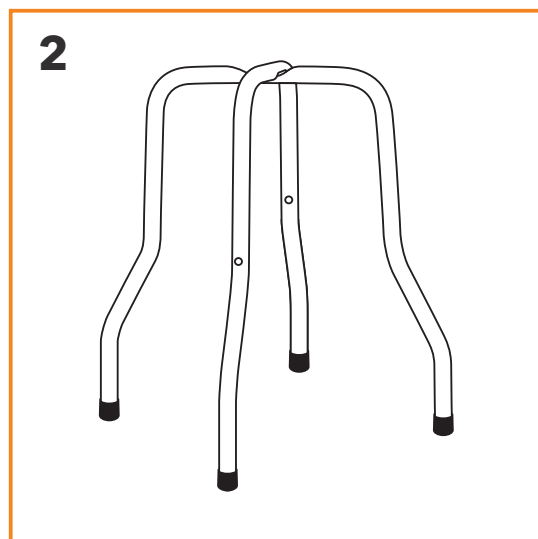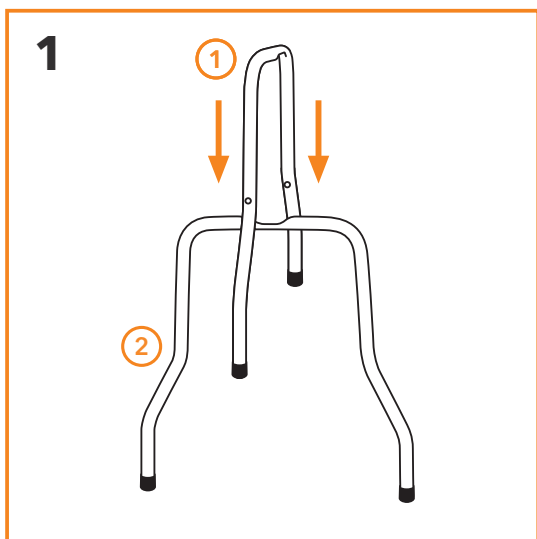

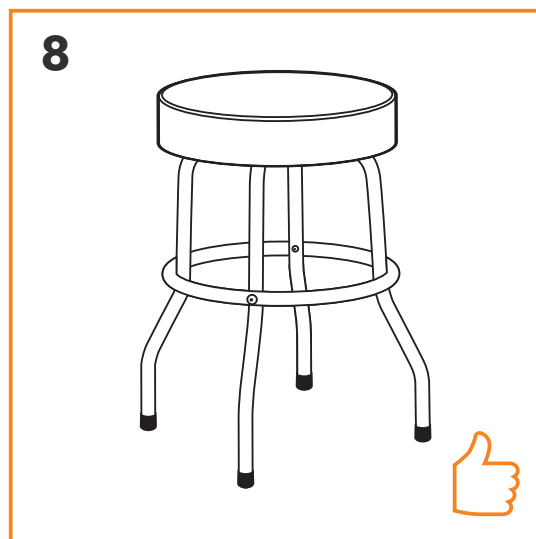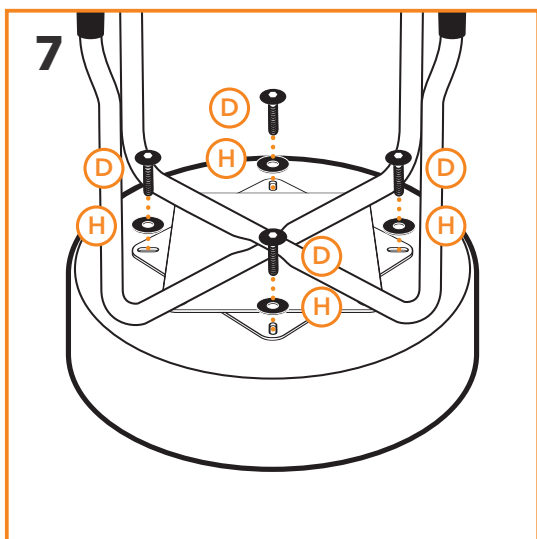

KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM
METALLVÄGEN 45A | 195 72 ROSERSBERG | STOCKHOLM | SVERIGE
LAHNSTRASSE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **info@gear4music.com**