

VISIONPAD-9

USER MANUAL

WARNING!

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel

Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock

The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. No naked flame sources, such as lighted candles, should be placed on the product

Allow adequate air circulation and avoid obstructing vents (if present) to prevent internal heat build-up. The ventilation must not be impeded by covering the appliance with items such as newspapers, table-cloths, curtains etc.

The mains plug is used to disconnect the appliance from the mains supply. Ensure that the mains outlet is easily-accessible and remove the plug from the mains outlet if you notice any abnormality with the appliance.

VAROVÁNÍ!

Nezakrývejte. Uvnitř nejsou žádné součásti opravitelné uživatelem. S požadavkem na servis se obraďte na kvalifikované servisní oddělení. Neumisťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným prášením, mechanickými vibracemi nebo šokem.

Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt. Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt.

Umožněte dostatečnou cirkulaci vzduchu a vyhněte se obstrukci ventilátorů (pokud jsou přítomné) pro předejití interního přehřívání. Ventilace nesmí být narušena překrytím zařízení výrobky jako např. noviny, knihy nebo utěrky, záclony apod.

Hlavní kabel umožňuje odpojit zařízení od elektřiny. Ujistěte se, že hlavní napájecí výstup je snadno dostupný a odpojte kabel pokud zaznamenáte jakoukoliv abnormalitu na zařízení.

DVARSEL!

Dækslet må ikke åbnes. Ingen bruger-udskeftelige dele indeni. Overlad service til kvalificeret service personale

Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støv, mekaniske vibrationer eller stød

Produktet må ikke udsættes for vand eller stænk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet

Må ikke placeres nær åben ild, tændte stearinlys må ikke placeres på produktet

Vær sikker på at der er tilstrækkelig luftcirkulation og undgå at dække ventiler (hvis der er nogen) for at undgå at produktet bliver varmt.

Ventilationen må ikke blokeres med overdækning af apparatet med genstande som aviser, dug, gardiner osv.

Stikket bruges til at afbryde apparatet fra strømmen. Sikre at stikkontakten er let tilgængelig, og fjern stikket fra stikkontakten, hvis du bemærker noget unormalt med apparatet.

WAARSCHUWING!

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhoud over aan bevoegd onderhoudspersoneel.

Plaats het product niet in de buurt van een hittebron zoals een radiator of in direct zonlicht of in een stofrijke omgeving, mechanische vibratie of schok.

Plaats het product niet in de buurt van spatende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas.

Er mogen geen open vlammen zoals aangestoken kaarsen op de apparatuur worden geplaatst.

Zorg om overhitting te voorkomen voor voldoende ventilatie en bellemmer ventilatieroosters niet. Bedek het product niet met dingen zoals kranten, tafellakens, gordijnen etc.

De stekker van dit apparaat wordt gebruikt om het apparaat aan en uit te zetten. Zorg ervoor dat het stopcontact gemakkelijk bereikbaar is en haal de stekker uit het stopcontact als u enige onregelmatigheid ondervindt.

EN

VAROITUS!

FI

Älä avaa kannetta. Ei sisällä käyttäjä-huollettavia osia. Huollot saa suorittaa vain pätevä huoltomies.

Älä säilytä tuotetta minkään kuuman lähellä kuten patteri tai suorassa auringonpaisteesta, pölyisessä, mekaanisessa värinässä tai iskussa. Tuotetta ei saa altistaa tippuvalle tai loiskeelle tai nesteitä sisältäviä tuotteita kuten maljako eivät saa olla tuotteen lähetyillä.

Avotulia kuten sytytetty kynttilä ei saa olla tuotteen päällä. Salli riittävä ilmankierto ja vältä tuuletusaukkojen tukkiminen (jos sellaisia on olemassa) estämään sisäisen lämmön muodostuminen. Tuuletusta ei saa estää peittämällä laite esineillä, kuten sanomalehdillä, pöytäliinoilla, verhoilla jne.

Verkkovirtapistoketta käytetään irrottamaan laite verkkovirrasta. Varmista, että pistorasia on helposti saatavilla ja irrota pistotulppa pistorasiasta, jos havaitset jotain epänormaalia laitteessa.

ATTENTION!

FR

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation à du personnel de réparation qualifié

Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques. L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé dessus

Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil

Assurer une circulation d'air suffisante et éviter d'obstruer les fentes (le cas échéant) afin d'éviter une surchauffe interne. La ventilation ne doit pas être bloquée en couvrant l'appareil avec des objets tels que des journaux, des nappes, des rideaux, etc.

La prise secteur est utilisée comme dispositif de débranchement. La prise murale doit être facile d'accès, et en cas d'anomalie de l'appareil, débrancher la prise de courant au niveau de la prise murale.

WARNING!

DE

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile. Überlassen Sie Wartungsarbeiten qualifiziertem Fachpersonal.

Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Vibrationen oder Stößen.

Schützen Sie das Produkt vor tropfenden oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt.

Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden.

Sorgen Sie für eine ausreichende Luftzirkulation und vermeiden Sie, dass die Lüftungsschlitze (falls vorhanden) abgedeckt werden, um einen internen Wärmestau zu verhindern. Die Belüftung darf nicht durch Abdecken des Gerätes mit Gegenständen wie Zeitungen, Tischdecken, Vorhängen usw. blockiert werden.

Der Netzstecker dient zum Trennen des Gerätes vom Netz. Vergewissern Sie sich, dass die Steckdose leicht zugänglich ist, und ziehen Sie den Stecker aus der Steckdose, wenn Sie eine Anomalie mit dem Gerät bemerken.

AVVERTIMENTO!

NL

IT

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto.

Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock.

Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto.

Non esporre il prodotto a fuoco, candele o oggetti simili.

Assicurarsi la circolazione dell'aria e non ostruire le ventole, se presenti, per evitare il surriscaldamento. La ventilazione non deve subire impedimenti dovuti a giornali, tovaglie, tende, ecc.

La spina principale viene utilizzata per disconnettere il prodotto dalla principale fonte di energia. Assicurarsi che la spina sia facilmente accessibile e disconnettere l'unità nel caso si notassero dei difetti di funzionamento.

ADVARSEL!

NO

OPZORIO!

SI

Ikke åpne dekselet. Inneholder ingen deler som kan brukes. Overlat reparasjon til kvalifisert servicepersonell.

Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støv, mekanisk vibrasjon eller støt.

Produktet må ikke utsettes for drypping eller spruting, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet. Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet.

Tillat tilstrekkelig luft sirkulasjon og unngå å blokkere ventiler (hvis tilstede) for å forhindre intern varmeoppsamling. Pass på at ventilasjon ikke hindres ved å unngå å dekke apparatet med ting som aviser, bordduker, gardiner osv.

Stikkontakten brukes til å koble apparatet fra strømforsyningen.

Forsikre deg om at stikkontakten er lett tilgjengelig og ta støpselet ut av stikkontakten hvis du oppdager uregelmessigheter under bruk av apparatet.

OSTRZEŻENIE!

PL

¡ADVERTENCIA!

ES

Nie otwierać pokrywy. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla wyszkolonego personelu.

Nie umieszczaj produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym wibracjom. Produkt ten nie może być ekspozowany na kapanie lub chłapanie, a przedmioty wypelnione płynami, takie jak wazy, nie powinny być na nim umieszczane.

Źródła otwartego ognia, takie jak np. świece, nie powinny być umiejscowiane na produkcie.

Należy zapewnić odpowiednią wentylację i unikać blokowania otworów wentylacyjnych, aby uniknąć wewnętrznego wzrostu temperatury. Wentylacja nie powinna być utrudniana poprzez nakrywanie urządzenia gazetami, obrusami czy zasłonami.

Wtyczka sieciowa służy do odłączenia urządzenia od zasilania sieciowego. Należy upewnić się, że gniazdo sieciowe jest łatwo dostępne, a w razie wystąpienia nieprawidłowości w funkcjonowaniu urządzenia odłączyć je od zasilania sieciowego.

ATENÇÃO!

PT

WARNING!

SE

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado

Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque

Não mantenha o produto num local húmido ou perto líquidos como vasos, etc.

Não aproxime o produto a fontes de fogo vivo, como velas

Mantenha o produto num espaço suficientemente arejado de forma a evitar sobre-aquecimento. Não bloqueie a ventilação do instrumento, cobrindo-o com artigos como cortinas, toalhas de mesa ou jornais
O transformador é utilizado para conectar e desconectar o artigo da principal fonte de energia. Certifique-se que a ficha é facilmente acessível e que o artigo está devidamente ligado à corrente se detectar alguma anomalia com o funcionamento

VÝSTRAHA!

SK

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko.

Nevystavujte produkt do blízkosti akéhokoľvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so sľučným žiarením, nadmerným prášnym prostredím, mechanickým vibráciami alebo šokom.

Produkt nesmie prísť do kontaktu s vodou a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt.

Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkt.

Umožnite dostatočnú cirkuláciu vzduchu a zabráňte obštrukcii ventilačných otvorov (ak sú prítomné) kvôli prevencii vnútorného prehrievania. Ventilácia nesmie byť narušená prekrytím zariadenia výrobkami ako napr. noviny, kuchynské utierky, záclony a pod. Hlavný kábel umožňuje odpojiť zariadenie od elektriny. Uistite sa, že hlavný napájací výstup je ľahko dostupný a odpojte kábel ak zaznamenáte akúkoľvek abnormalitu na zariadení.

Ne odpirajte pokrova. V notranjosti ni nobenih delov, ki jih uporabnik lahko sam popravlja. Popravilo prepustite usposobljenemu osebi

Ne postavljajte izdelka na lokacijo v bližini vira toplote, kot je radiator, ali na območje, ki je izpostavljeno neposredni sončni svetlobi, pretiranemu prahu, mehanskim tresljajem ali udarcem

Izdelek ne sme biti izpostavljen kapljanju ali brizganju in nobeni predmeti, napolnjeni z vodo, kot so vaze, se ne smejo postaviti na izdelek. Nobenega od virov odprtega ognja, kot so vžgane sveče, se ne sme postavljati na izdelek

Zagotovite zadostno kroženje zraka in umaknite ovire na odprtinah (če obstajajo), zaradi preprečevanja kopičenja notranje toplote. Ventilacija se ne sme ovirati s prekrivanjem naprave s predmeti, kot so časopisi, prti, zavese itn.

Omrežni vtič se uporablja za izklop naprave iz električnega omrežja.

Poskrbite, da je omrežna vtičnica zlahka dostopna in izvlecite vtičnik iz vtičnice, če opazite kakršno koli nepravilnost pri napravi.

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado.

No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo.

Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato.

No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato.

Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstruya o tape las aberturas con objetos como periódicos, manteles, cortinas, etc.

El enchufe se utiliza para desconectar el producto de la corriente. Si nota algún defecto, desconéctelo de la toma de corriente.

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal

Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock.

Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten.

Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten.

Tillåt tillräcklig luftcirkulation och blockera ej eventuella ventiler för att undvika intern överhettning. Ventilen bör ej täckas av föremål såsom tidningar, dukar, gardiner etc.

Nätkontakten används för att koppla bort apparaten från eluttaget. Se till att eluttaget är lättåtkomligt och avlägsna kontakten från eluttaget om du upptäcker något abnormalt med produkten.

INTRODUCTION

Thank you for purchasing the VISIONPAD-9 Electronic Drum Pad by Gear4music. To get the most out of your product, please read this manual carefully.


BOX CONTENTS

- 1 x VISIONPAD-9 Electronic Drum Pad
- 1 x DC Power Supply
- 1 x Hi-Hat Pedal
- 1 x Kick Pedal
- 1 x Pair of Drum Stick
- 1 x User Manual

FEATURES

- Seven touch-sensitive mesh-head drum pads and two pedals, perfect for both practice and performance.
- Experience the full range of a traditional kit, right at your fingertips.
- Explore all genres with 273 percussion sounds and 100 backing tracks.
- Ideal for musicians on the go, thanks to its compact and portable design.
- Practice in silence using the headphone output.

FUNCTIONS

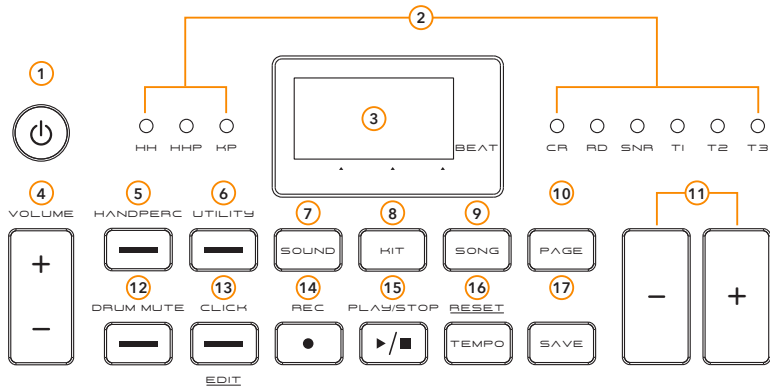

FRONT PANEL

1. POWER

Press this button to turn the unit on/off.

2. PAD LIGHT INDICATORS

This indicates the pad currently being played.

3. DISPLAY

View this for a comprehensive overview of your current set-up.

4. VOLUME +/-

Use these buttons to change the accompaniment volume.

5. HAND PERC

Press this button to enter Hand Percussion mode.

6. UTILITY

Press this button to open the UTILITY menu.

7. SOUND

Press this button to open the SOUND menu.

8. KIT

Press this button to open the KIT menu.

9. SONG

Press this button to open the SONG menu.

10. PAGE

Press this button to change sub-menu.

11. +/-

Use these buttons to change values when editing kit and voice numbers etc.

12. DRUM MUTE

Press this button to mute or unmute the drum part in a song.

13. CLICK

Press this button to turn the metronome on/off.

14. REC

Press this button to start/stop recording.

15. PLAY/STOP

Press this button to start/stop the playback of recordings.


16. TEMPO

Press this button to open the TEMPO menu.

17. SAVE

Press this button to save the current kit settings to a user kit.

FUNCTIONS

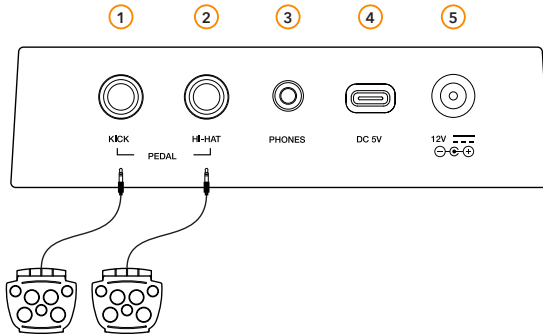

REAR PANNEL

1. KICK PEDAL

Use this input to connect your kick drum pedal to the VISIONPAD-9.

2. HI-HAT PEDAL

Use this input to connect your hi-hat pedal to the VISIONPAD-9.

Notes:

If connecting a kick pad or Hi-Hat pedal, please use a MONO cable.

3. PHONES OUTPUT

Use this to connect a standard pair of headphones with a 3.5mm input.

4. USB-C PORT

Use this port to connect to your computer for USB MIDI functionality. Or you can power up the VISIONPAD-9 via a 5V/2A USB-C DC Power Supply or 5V/2A Power Bank.

5. 12V DC POWER INPUT

Use this socket to connect the VISIONPAD-9 to a power supply unit.

GETTING STARTED

POWER SUPPLY

Connect the included 12V DC power supply to the VISIONPAD-9 unit.

Press the [POWER] button to turn the unit on/off.



AUTO POWER OFF

As a power saving feature, the VISIONPAD-9 will auto power off after 30 mins of being idle. To turn off this setting, simply press and hold the [PLAY/STOP] button when powering on the unit.




VOLUME

When the VISIONPAD-9 is powered on, it is advised to carefully adjust the volume to your desired playing level, using the [VOLUME +/-] buttons. The volume level (0-16) will be shown on the display.




PEDALS

Connect the supplied foot pedals to the KICK and HI-HAT inputs.

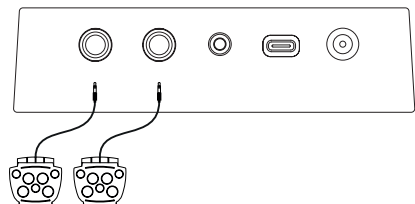


HEADPHONES OUTPUT

Standard stereo headphones (not included) can be connected for silent practice. The internal speakers will be muted when headphones are connected. This output can also be used to connect the VISIONPAD-9 to an external sound system such as an amplifier, interface, or mixer.

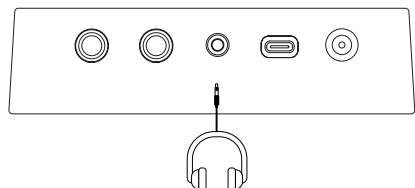

USB POWER & MIDI

The VISIONPAD-9 allows power and MIDI data to be transferred via USB to an audio interface or computer (USB cable not included). For detailed MIDI settings, please refer to the MIDI Implementation Chart in the appendix. You can also power the VISIONPAD-9 by connecting the USB-C cable to a 5V USB DC adapter or a portable power bank.

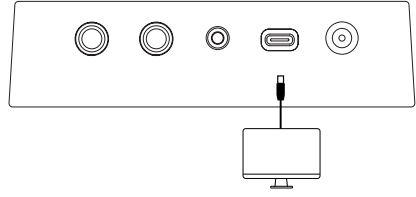


PLAYING THE MESH PADS

When playing the mesh pads, avoid striking the rim or edge areas of the pads, as this may cause unwanted noise or crosstalk.

Note: 1. When mounting the module on a snare drum stand, ensure the drum pads are angled properly toward the player. This positioning helps minimize the risk of hitting the pad edges. We recommend using a 14-inch snare drum stand for best results.

2. A snare drum stand is not included with the VISIONPAD-9, please purchase it separately.

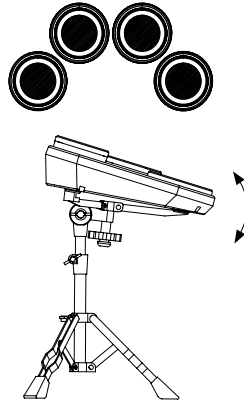


OPERATION

SELECTING A DRUM KIT


To select a drum kit sound, press the [KIT] button to enter the kit menu. The display will show the current kit number. Use the [+/-] buttons to select a Preset Kit (001 -045) or a User Kit (U01 -U10). For a full list of available kits, please refer to the Drum Kit List appendix.

Press the [PAGE] button to cycle through sub-menus from Kit Number to Kit Volume. Use the [+/-] buttons to adjust the kit Volume Level (0-32).

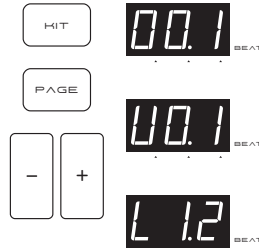


SET PAD SOUND

To assign a sound to a pad, press the [SOUND] button to enter the Sound menu. The display will show the current sound number for the selected pad, and the corresponding pad indicator light will turn on. Strike the desired pad to select it, then use the [+/-] buttons to choose the required voice from 001~273, see the Drum Sound List appendix for full sound details.

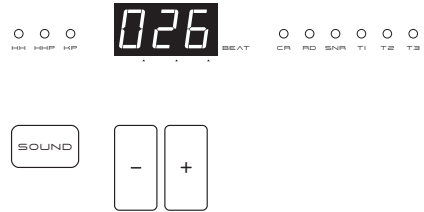

EDIT THE PAD SOUND

Strike the desired pad to select it, then press the [PAGE] button to cycle through the sub-menu options: Sound Number, Level, Pan, Tune, Reverb, and MIDI Note.

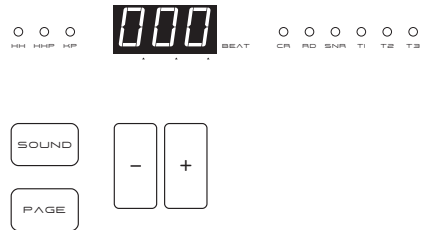

PAD LEVEL

Strike the desired pad to select it, then use the [+/-] buttons to adjust its volume level from 0 to 32.



PAD PAN

The VISIONPAD-9 includes a pad panning feature, allowing you to control how much of a pad's sound is sent to the left and right speakers/outputs, creating a wider stereo image. Strike the desired pad to select it, then use the [+/-] buttons to adjust the pan setting, from -8 (hard left) to .00 (Centre) to +8 (hard right).



P.-8 BEAT

PAGE



 
PAD TUNE

The VISIONPAD-9 allows you to tune pad sounds, enabling you to raise or lower the pitch to alter the timbre and tone. Strike the desired pad to select it, then use the [+/-] buttons to adjust the tuning, from -8 (lower pitch) to +8 (higher pitch).



t.00 BEAT

PAGE




PAD REVERB

The VISIONPAD-9 allows you to apply reverb to pad sounds, adding a sense of space or echo. Strike the desired pad to select it, then use the [+/-] buttons to set the reverb level from 0 to 16.



r.02 BEAT

 PAGE



PAD MIDI NOTE

Strike the pad you wish to edit. The display will show the current MIDI note of the pad. Use the [+/-] buttons to select the desired MIDI note number from 00 to 99.




n.38 BEAT

PAGE




SAVE YOUR OWN USER KITS

To save the current kit settings, press the [SAVE] button to enter the kit save menu. Use the [+/-] buttons to select one of the user kits (U01 to U10). During this selection, the user kit number will flash. Press the [SAVE] button again to save the current kit settings to the selected user kit.

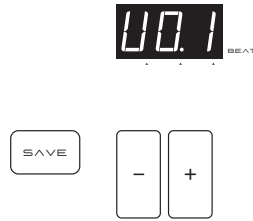

PLAYING SONGS

The VISIONPAD-9 includes 100 built-in songs. To play a song, firstly press the [SONG] button to enter the song menu. Use the [+/-] buttons to select a song (001 to 100), then press the [PLAY/STOP] button to start or stop playback.

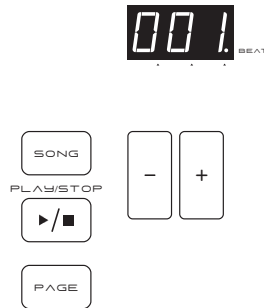


Each song has its own default tempo and drum kit. Please refer to the Song List in the appendix for detailed song style information. If a song is changed during playback, the new song will begin at the end of the current measure.

Press the [PAGE] button to cycle through the sub-menu options: Song Number, Song Level, and PAD LED.


SET SONG LEVEL

The volume of the song's accompaniment can be adjusted using the [+/-] buttons. The display will show "L" followed by the volume level (0 -32). Changes are automatically saved after adjustment.

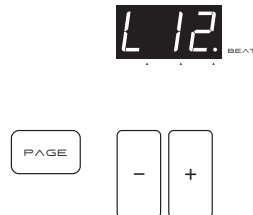

PAD LED

 Use the [+/-] buttons to toggle the pad indicator LED on or off during song playback.



DRUM MUTE

 
When playing the built-in songs, you can mute the drum track - a useful feature for practice. To enable or disable this function, press the [DRUM MUTE] button while a song is playing. The button light will turn on when drum mute is active.



Note: The drum mute function cannot be used during playback of user recordings.

TEMPO


The tempo of the built-in songs can be adjusted. To change the tempo, press the [TEMPO] button to enter the Tempo menu, then use the [+/-] buttons to set the desired tempo between 30 and 280 BPM. To reset the tempo to its default value, press and hold the [TEMPO] button.



METRONOME


The VISIONPAD-9 features a built-in metronome. Press the [CLICK] button to start the metronome and press it again to turn it off.

Press and hold the [CLICK] button to enter the Click menu, then press [PAGE] to cycle through the sub-menus: Beat, Rhythm, Level and Sound.

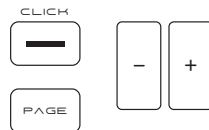


SET CLICK BEAT

Use the [+/-] buttons to select the required click beat, from 0-9.

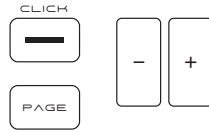


SET CLICK RHYTHM

Use the [+/-] buttons to select the required click rhythm: 2 (half note), 4 (quarter note), 8 (eighth note), 3 (eighth note triplet) or 16 (sixteenth note).

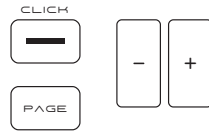

SET CLICK LEVEL

Use the [+/-] buttons to select the required click level, from 0-16.

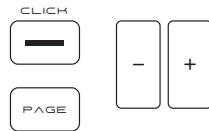

HAND PERCUSSION

The VISIONPAD-9 also features a Hand Percussion Mode, allowing the pads to be played with your hands instead of drumsticks. Press the [HAND PERC] button to activate this mode. The button light will turn on when the function is enabled.

 



RECORDING

The VISIONPAD-9 allows you to record your performance. Once you have selected your desired settings, press the [REC] button. The [REC] button indicator will light up, and the [PLAY/STOP] button indicator will begin flashing to indicate the unit is ready to record.


To start recording, either strike a drum pad or press the [PLAY/STOP] button. Both the [REC] and [PLAY/STOP] indicators will remain lit during recording. Recording begins after a 4-beat metronome pre-count. To turn off the metronome during recording, press the [CLICK] button. To stop recording, press the [PLAY/STOP] button again. The record indicator will turn off. The VISIONPAD-9 can record up to 8,000 strikes. When the memory becomes full, the display will show "FL", and recording will automatically stop.

Press the [PAGE] button to cycle through the recording sub-menus: User Song, Kit, Song, Beat, and Tempo.

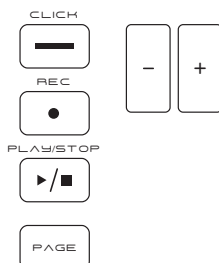


SET USER SONG

 Use the [+/-] buttons to select the User Song number, from U01 to U05.



SET RECORDING KIT

 Use the [+/-] buttons to select the Kit number, from 1 to 45 factory kits and U01 to U10 user kits.




SET RECORDING SONG

Use the [+/-] buttons to select a song for accompaniment, from 1 to 100 or --- for no accompaniment.



SET RECORDING BEAT

 Use the [+/-] buttons to select the required click beat, from 0-9.



SET RECORDING TEMPO

Use the [+/-] buttons to set the tempo for recording, from 30-280 bpm.



PLAYBACK


To listen back to your recording, press the [PLAY/STOP] button to start and stop playback. Press [SAVE] to save your song to current User Song number U01 to U05. If the recorded song hasn't been saved, the song data will be lost after the power is turned off.



USB MIDI


The VISIONPAD-9 features a USB-C jack that allows connection to a computer for MIDI input and output. It works without requiring any driver installation on Windows or macOS systems and will be recognized as "e-drum."

Note: The module is compatible with the following USB ports: USB 3.0, USB 2.0 Full Speed, and USB High Speed.

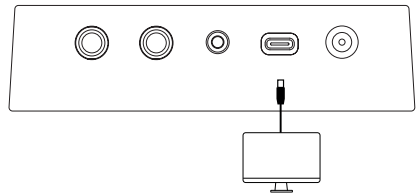

UTILITY SETTINGS

In Utility Settings, you can configure the global Reverb Level, 3-Band EQ and Pad trigger parameters. Press the [UTILITY] button to enter the Utility Menu, then press the [PAGE] button to cycle through the different sub-menu parameter pages.

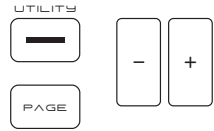

DETAILED PARAMETERS AND THEIR RANGES:

SUB-MENU	DISPLAY	RANGE	DESCRIPTION
Reverb		0-4	To set up the global reverb level.
EQ High		1-9	To set up the global High-band EQ level.
EQ Middle		1-9	To set up the global Mid-band EQ level.
EQ Low		1-9	To set up the global Low-band EQ level.
Pad X-Talk		0-15	This setting helps prevent "crosstalk" - a phenomenon where striking one pad causes an adjacent pad to produce sound unintentionally. For example, hitting the snare may also trigger sound from Tom 1. In such cases, you can gradually increase the X-talk value for Tom 1 to reduce this effect. Adjustable value from 0 to 15. Note: 1. If the X-talk value is set too high, when two pads are played simultaneously, the one struck with less force may not produce sound. 2. If the current page is for the Hi-Hat Pedal or Kick Pedal, the LED display will show "t00".
Pad Gain		0-31	Pad Gain adjusts the pad's sensitivity. A higher setting makes the pad sound louder, even with a soft hit. A lower setting makes it sound quieter, even with a hard hit. Adjustable values 0 to 31.
Pad Threshold		0-31	Sets the minimum trigger level for the pads. A pad will only produce sound when the signal is above this threshold. This helps prevent unwanted sounds, like crosstalk. If the value is set too high, soft hits may not trigger any sound. Adjustable values 0 to 31.

 
Note: 1. These settings will be saved automatically when you turn off the power: utility settings, master volume, the number/volume/pad LED setting of the current song, volume/sound setting of the click.



2. Hold [UTILITY] + [SAVE] buttons and turn on the power, the utility settings, song number and master volume will be reset to the default settings.

FACTORY RESET

Press the [POWER] button to turn off the VISIONPAD-9. Then, hold the [+/-] volume buttons and press [POWER] to turn it on. All data will be reset to factory default settings.



TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE AND SOLUTION
No sound.	Use the [VOLUME +/-] buttons to set an appropriate volume level.
No sound from the pads.	Make sure the pad volume is not set to "0".
No click sound.	<ol style="list-style-type: none">1. Make sure the click is turned on.2. Make sure the click volume is not set to "0".
The pad volume doesn't match the song playback volume.	Adjust the pad volume to match the song playback volume.
Cannot connect to computer.	<ol style="list-style-type: none">1. Make sure the USB cable is connected properly.2. Reconnect - keep the computer on, turn the module on, then connect the USB cable.

PROMPT MESSAGES

MESSAGES ON DISPLAY	MEANING
PoF	Auto Power Off function is disabled.
nUL	No data in the user song.
FUL	The memory of the user song is full.

DRUM SOUND LIST

NUMBER	KICK (1-24)
001	Rock Kick
002	Fusion Kick
003	1970's Kick
004	Reggae Kick
005	Old School Kick
006	Magic Kick
007	Noise Kick
008	Lo-Fi Kick
009	Junkyard Kick
010	24" Acoustic Kick
011	24" Standard Kick
012	Brush Kick
013	Jazz Kick
014	Room Kick
015	Vintage Kick
016	HipHop Kick
017	Drum & Bass Kick
018	Electronic Kick 1
019	Dance Kick
020	FX Mix Kick
021	Techno Kick
022	808 Kick
023	909 Kick
024	Electronic Kick 2
NUMBER	SNARE (25-63)
025	14" Acoustic Snare
026	14" Standard Snare
027	14" Funk Snare
028	Brush Snare
029	14" Jazz Snare
030	14" Rock Snare
031	13" Damped Snare
032	Orchestra Snare
033	Orchestra Snare Rim
034	Room Snare
035	Fusion Snare
036	Big Band Snare
037	Vintage Snare
038	Live Snare
039	Reggae Snare
040	R&B Snare 1
041	808 Snare
042	909 Snare
043	R&B Snare 2
044	Electronic Snare

045	Power Snare
046	Dance Snare
047	Old School Snare
048	House Snare
049	Lo-Fi Snare
050	Junkyard Snare
051	Noise Snare
052	Drum & Bass Snare
053	Techno Snare
054	Techno Snare Rim
055	Magic Snare
056	Acoustic Snare Stick
057	Standard Snare Stick
058	Brush Snare Stick
059	Rock Snare Stick
060	Live Snare Stick
061	Room Snare Stick
062	Fusion Snare Stick
063	Brush Swirl
NUMBER	TOM (64-133)
064	Acoustic Tom 1
065	Acoustic Tom 2
066	Acoustic Tom 3
067	Acoustic Tom 4
068	Acoustic Tom 5
069	Acoustic Tom 6
070	Brush Tom 1
071	Brush Tom 2
072	Brush Tom 3
073	Brush Tom 4
074	Brush Tom 5
075	Brush Tom 6
076	Jazz Tom 1
077	Jazz Tom 2
078	Jazz Tom 3
079	Jazz Tom 4
080	Jazz Tom 5
081	Jazz Tom 6
082	808 Tom 1
083	808 Tom 2
084	808 Tom 3
085	808 Tom 4
086	808 Tom 5
087	808 Tom 6
088	909 Tom 1
089	909 Tom 2

090	909 Tom 3
091	909 Tom 4
092	909 Tom 5
093	909 Tom 6
094	Electronic Tom 1
095	Electronic Tom 2
096	Electronic Tom 3
097	Electronic Tom 4
098	Electronic Tom 5
099	Electronic Tom 6
100	Power Tom 1
101	Power Tom 2
102	Power Tom 3
103	Power Tom 4
104	Power Tom 5
105	Power Tom 6
106	Lo-Fi Tom 1
107	Lo-Fi Tom 2
108	Lo-Fi Tom 3
109	Lo-Fi Tom 4
110	Lo-Fi Tom 5
111	Lo-Fi Tom 6
112	Junkyard Tom 1
113	Junkyard Tom 2
114	Junkyard Tom 3
115	Junkyard Tom 4
116	Junkyard Tom 5
117	Junkyard Tom 6
118	Noise Tom 1
119	Noise Tom 2
120	Noise Tom 3
121	Noise Tom 4
122	Noise Tom 5
123	Noise Tom 6
124	Techno Tom 1
125	Techno Tom 2
126	Techno Tom 3
127	Techno Tom 4
128	Techno Tom 5
129	Techno Tom 6
130	Magic Tom 1
131	Magic Tom 2
132	Magic Tom 3
133	Magic Tom 4
NUMBER	RIDE (134-141)
134	20" Funk Ride
135	808 Ride

136	909 Ride
137	Ride
138	House Ride
139	Lo-Fi Ride
140	Junkyard Ride
141	Noise Ride
NUMBER	CRASH (25-63)
142	16" Acoustic Crash 1
143	16" Acoustic Crash 2
144	16" Acoustic Crash Edge
145	16" Rock Crash
146	16" Rock Crash Edge
147	808 Crash
148	909 Crash
149	Electronic Crash
150	EDM Crash 1
151	EDM Crash 2
152	Brush Crash
153	Lo-Fi Crash
154	China
155	Splash
NUMBER	HI-HAT (156-185)
156	14" Acoustic Hi-hat Close
157	14" Acoustic Hi-hat Open
158	14" Acoustic Hi-hat Edge Close
159	14" Acoustic Hi-hat Edge Open
160	14" Acoustic Hi-hat Pedal
161	14" Acoustic Hi-hat Splash
162	Rock Hi-hat Close
163	Rock Hi-hat Open
164	Fusion Hi-hat Close
165	Fusion Hi-hat Open
166	Lo-Fi Hi-hat Close
167	Lo-Fi Hi-hat Open
168	Lo-Fi Hi-hat Edge
169	Lo-Fi Hi-hat Pedal
170	Lo-Fi Hi-hat Splash
171	808 Hi-hat Close
172	808 Hi-hat Open
173	808 Hi-hat Pedal
174	808 Hi-hat Splash
175	909 Hi-hat Close
176	909 Hi-hat Open
177	909 Hi-hat Pedal
178	909 Hi-hat Splash
179	Dance Hi-hat Close
180	Dance Hi-hat Open

181	Dance Hi-hat Pedal
182	Dance Hi-hat Splash
183	EDM Hi-hat Close
184	EDM Hi-hat Open
185	EDM Hi-hat Pedal
NUMBER	PERCUSSION 1 (186-216)
186	Vibra-slap
187	Vibraphone G3
188	Vibraphone A3
189	Vibraphone B3
190	Vibraphone C4
191	Vibraphone D4
192	Vibraphone E4
193	Vibraphone F4
194	Vibraphone G4
195	Vibraphone A4
196	Vibraphone B4
197	Vibraphone C5
198	Vibraphone D5
199	Vibraphone E5
200	Vibraphone F5
201	Vibraphone G5
202	Orchestra Timp C2
203	Orchestra Timp D2
204	Orchestra Timp E2
205	Orchestra Timp F2
206	Orchestra Timp G2
207	Orchestra Timp A2
208	Orchestra Timp B2
209	Orchestra Timp C3
210	Orchestra Timp D3
211	Orchestra Timp E3
212	Orchestra Timp F3
213	Orchestra Timp G3
214	Orchestra Timp A3
215	Orchestra Timp B3
216	Orchestra Timp C4
NUMBER	PERCUSSION 2 (217-248)
217	Taiko Drum
218	Maracas
219	Sticks
220	Metronome Bell
221	Synth Percussion
222	High Q

223	Low Q
224	Mute Hi Conga
225	Open Hi Conga
226	Low Conga
227	High Bongo
228	Low Bongo
229	High Timbale 1
230	High Timbale 2
231	Low Timbale 1
232	Low Timbale 2
233	High Agogo
234	Low Agogo
235	Claves
236	Jingle Bell
237	Cowbell
238	Bell Tree
239	Tambourine
240	Cabasa
241	Long Guiro
242	Short Guiro
243	Wood Hi
244	Wood Low
245	Friction Drum Muted
246	Friction Drum Open
247	Triangle Mute
248	Triangle Open
NUMBER	WORLD (249-272)
249	Barrel Drum 1
250	Barrel Drum 2
251	Woodblock 1
252	Woodblock 2
253	Folk Drum
254	Woodblock 3
255	Woodblock 4
256	Woodblock 5
257	Woodblock 6
258	Tuned Drum 1
259	Tuned Drum 2
260	Tuned Drum 3
261	Gong 1
262	Gong 2
263	Gong 3
264	Large Gong 1
265	Large Gong 2

266	Cymbal 1
267	Cymbal 2
268	Hand Cymbal
269	Metal Gong
270	Dark Cymbal
271	Brass Bells
272	Metal Gong 2
TYPE	UTILITY (273)
273	Mute

DRUM KIT LIST

NUMBER	PRESET KIT NAME
001	Standard 1
002	Hard Rock
003	Ballad
004	Acoustic
005	Latin Perc
006	Standard 2
007	Jazz Brush
008	Dance
009	Rock
010	Jazz 1
011	808 1
012	909 1
013	Latin
014	Room
015	Jazz 2
016	Metal
017	Vibraphone
018	Electronic
019	Reggae
020	Fusion
021	Drum & Bass
022	Pop
023	Brush
024	World
025	Ska
026	Oriental Percussion
027	Orchestra
028	Lo_Fi
029	1970's
030	Hip Hop
031	Big Band
032	Old School
033	Rock Ballad
034	808 2
035	909 2
036	Magic
037	Live
038	House
039	Percussion
040	Techno
041	Vintage
042	Junkyard
043	Noise
044	Studio 1
045	Studio 2

NUMBER	USER KIT NAME
U01	Standard 1
U02	Hard Rock
U03	Ballad
U04	Acoustic
U05	Latin Perc
U06	Standard 2
U07	Jazz Brush
U08	Dance
U09	Rock
U10	Jazz 1

DRUM SONG LIST

NUMBER	PRESET
001	Gospel 1
002	Gospel 2
003	Latin Pop 1
004	Latin Pop 2
005	City Pop
006	Pop Fusion
007	Jazz Fusion
008	Hardcore
009	Slow R&B
010	City Funk
011	R&B 1
012	Funk 1
013	Medium Swing
014	Electro Dance
015	Disco 1
016	Trance 1
017	Hip-hop 1
018	Punk 1
019	Punk 2
020	Hardcore Rock
021	Pop Rock
022	Bossa Nova 1
023	Salsa 1
024	Reggae 1
025	Mambo 1
026	R&B Pop
027	Dance Pop 1
028	Dance Pop 2
029	Electro Pop
030	Blues Funk
031	Nu Jazz Funk
032	Funk 2
033	Funk 3
034	Pop Funk 1
035	Pop Funk 2
036	Retro Funk
037	Fusion 1
038	Fusion 2
039	Fusion 3
040	Fusion 4
041	Cool Jazz
042	Big Band 1
043	Big Band 2
044	Swing
045	3/4 Jazz

046	Jazz
047	Latin Jazz 1
048	Latin Jazz 2
049	Dance 1
050	Disco House
051	Trance 2
052	Trip-hop
053	Break Beat 1
054	Dance Funk
055	Hip-hop 2
056	Dance 2
057	Drum N' Bass
058	Break Beat 2
059	Classic Rock
060	Heavy Rock
061	Rock Ballad
062	Rock N' Roll
063	Rock
064	80's Metal
065	Shuffle
066	60's Rock
067	Samba 1
068	Bossa Nova 2
069	Salsa 2
070	Ska
071	Reggae 2
072	Latin Rock 1
073	Latin Rock 2
074	Mambo 2
075	Samba 2
076	Latin Pop 3
077	Guitar Bossa
078	Latin Dance 1
079	Latin Dance 2
080	R&B 2
081	Jazzy Funk
082	Blues
083	Country Pop
084	Country Blues
085	Ballad
086	Brit Pop
087	8 Beat Pop
088	60's Pop
089	8 Beat 1
090	8 Beat 2
091	8 Beat Ballad 1

092	8 Beat Ballad 2
093	16 Beat Ballad 1
094	16 Beat Ballad 2
095	World
096	Latin
097	Disco 2
098	Metal
099	Hard Rock
100	8 Beat 3

MIDI IMPLEMENTATION CHART

FUNCTION		TRANSMITTED	RECOGNIZED	REMARKS
Basic Channel	Default	1ch	1-16ch	
	Changed	x	x	
Mode	Default	x	x	
	Messages	x	x	
	Altered	*****	*****	
Note Number	Note	0-127	0-127	
	True Voice	*****	0-127	
Velocity	Note On	o (9nH, V=1-127)	1-127	
	Note Off	o (9nH, V=0)	0-127	
After Touch	Key's	x	x	
	Channel	x	x	
Pitch Bend		x	o	
Control Change	0	x	o	Bank Select
	1	x	o	Modulation
	5	x	o	Portamento Time
	6	x	o	Data Entry
	7	x	o	Volume
	10	x	o	Pan
	11	x	o	Expression
	64	x	o	Sustain Pedal
	65	x	o	Portamento On/Off
	66	x	o	Sostenuto Pedal
	67	x	o	Soft Pedal
	80	x	o	Reverb Program
	81	x	o	Chorus Program
	91	x	o	Reverb Level
	93	x	o	Chorus Level
120	x	o	All Sound Off	
121	x	o	Reset All Controllers	
123	x	o	All Notes Off	
Program Change		x	o	
System Exclusive		x	o	
System Common	Song Position	x	x	
	Song Select	x	x	
	Tune Request	x	x	
System Real Time	Clock	x	x	Start/Stop Only
	Commands	o	x	
Aux Messages	Local On/Off	x	x	
	All Notes Off	x	x	
	Active Sensing	o	x	
	System Reset	x	x	

SPECIFICATIONS

Pads	.7 x Mesh Head Drum Pads with touch sensitivity
Foot Pedals	.2 x foot pedals (kick and hi-hat)
Display	.3 Digi LED
Headphones Outputs	.3.5mm Mini Jack Stereo
Drum Kits	.45 Preset Kits + 10 User Kits
Sounds	.273 Preset Sounds
Songs	.100 Preset Songs + 5 User Songs
Connectors	.Kick Pedal, Hi-Hat Pedal, Phones, USB-C, DC In
Dimensions	.Height 106mm Width 369mm Length 505mm
Weight	.4.1 Kgs
Power	.DC 12 2A

WWW.GEAR4MUSIC.COM

KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM
LAHNSTRAÙE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **info@gear4music.com**