

ALESIS®



REFERENCE MANUAL

TABLE OF CONTENTS

INTRODUCTION	1
REGISTRATION	1
FRONT PANEL OVERVIEW	2
REAR PANEL OVERVIEW	2
HOOKUP DIAGRAM	3
COMPUTER INSTALLATION	4
GETTING STARTED – USING KITS	6
SAVING KITS.....	6
PROGRAM CHANGE MESSAGES	7
EDITING KITS	8
TRIGGER MIDI CHANNEL	8
TRIGGER MIDI NOTE	9
SETTING GLOBAL PARAMETERS	10
GAIN.....	11
VELOCITY CURVE	12
THRESHOLD	13
X-TALK (CROSSTALK).....	14
RETRIGGER.....	15
TRIGGER TYPE.....	16
USING HI-HAT PEDALS	17
EDITING HI-HAT PEDAL PARAMETERS	17
SENDING MESSAGES	18
ALL NOTES OFF.....	18
RETURN TO DEFAULT VALUE	18
FACTORY RESET	18
MIDI SYSEX TRANSFERS	18
USING THE TRIGGER IO WITH BFD LITE	19
DEFAULT SETTINGS FOR THE TRIGGER IO.....	20
ADJUSTING KIT PERFORMANCE IN BFD LITE.....	20
CUSTOMIZING YOUR KIT IN BFD LITE.....	21
OTHER APPLICATIONS OF THE TRIGGER IO	22
UPGRADING SOFTWARE	23
UPGRADE PROCEDURE.....	23
TRIGGER IO KIT PRESETS	24
TRIGGER IO DEFAULT GLOBAL PARAMETERS	25
TROUBLESHOOTING	26
MIDI IMPLEMENTATION	29

INTRODUCTION

Congratulations on your purchase of the Alesis Trigger IO USB/MIDI Percussion Interface. With the Alesis Trigger IO, you can connect your favorite acoustic drum triggers or electronic percussion pads and control sounds on external drum machines, modules or software devices. Here at Alesis, we take pride in building electronic instruments and controllers for the modern musician. The Trigger IO allows you to explore new avenues of sonic possibilities with an intuitive percussion interface. You no longer have to worry about feeling disembodied from your music experience. The Trigger IO offers an ideal approach to controlling and sequencing rhythm content. We hope that you enjoy this great product!

Sincerely,


The People of Alesis.

REGISTRATION

Please visit <http://www.alesis.com> to register your new Trigger IO. Registration helps you by ensuring that we can keep you informed on up-to-the minute product news. Registering your product also ensures that you can get the latest updates and software available for your product. If you would like, Alesis can also send you information on other products that might interest you.


Your feedback helps us, too. When you let us know the types of music products you use and dream about, you help us bring you cutting-edge products like the Trigger IO.

FRONT PANEL OVERVIEW

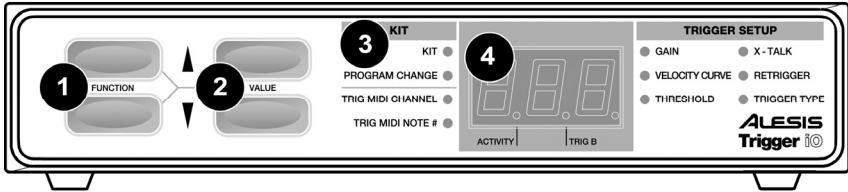

- 1. FUNCTION UP/DOWN** – These buttons are used to select through different functions on the Trigger IO.
- 2. VALUE UP/DOWN** – These buttons are used to cycle through kits and parameters for the different functions.
- 3. FUNCTION LEDs** – Each function on the Trigger IO is paired with a corresponding LED on the panel. These LED will reflect which function is currently being selected.
- 4. LED SCREEN** – The LED screen displays information about the state of the Trigger IO. The screen also features a small “Activity” LED which will light up each time a trigger generates a Note On message, as well as a “Trig B” LED which will light up when the secondary zone (ring) of a dual-zone trigger generates a Note On message.


REAR PANEL OVERVIEW

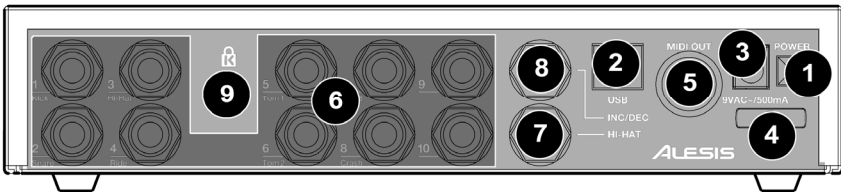

- 1. Power Button** – This button function as a AC/USB power switch. If the button is in the IN position (AC), the unit will draw power from the connected AC power adapter. If the button is in the OUT position (USB), the unit will draw power from the USB connection to your computer.
Please note: If your computer's USB port does not provide sufficient power to the Trigger IO, please use the included AC adapter to power the unit.
- 2. USB Port** – The USB port is used to transmit MIDI data between the Trigger IO and a computer. If you are using the USB port, there will be no need for the power adapter to be plugged in – The Trigger IO will be powered through the USB port.
- 3. Power Adapter Input** – If you do not wish to power the unit through the USB port, please use an optional AC power adapter to connect the Trigger IO to a power source.
- 4. Power Adapter Restraint** – You can secure the power adapter cord to this restraint to prevent accidental unplugging.
- 5. MIDI OUT** – Use a five-pin MIDI cable to connect this output to the MIDI IN of an external device, such as a drum machine, synthesizer or sound module.
- 6. 10 TRS Trigger Inputs** – Please connect your trigger sources to these ten ¼” TRS inputs. You will notice that some of the inputs are marked. If you would like to take advantage of certain pre-programmed presets, such as the GM or BFD Lite drum mappings, please follow these markings to connect your triggers.
- 7. HI-HAT Input** – Please connect your hi-hat pedal to this input.
- 8. INC/DEC pedal input** – Please connect a dual footswitch button to this input. Using this footswitch input allows you to remotely increment and decrement values from your dual footswitch.
- 9. KENSINGTON LOCK** – You may use this Kensington lock slot to secure the unit to a table or surface.


HOOKUP DIAGRAM

Please study the following diagram to connect your Trigger IO.

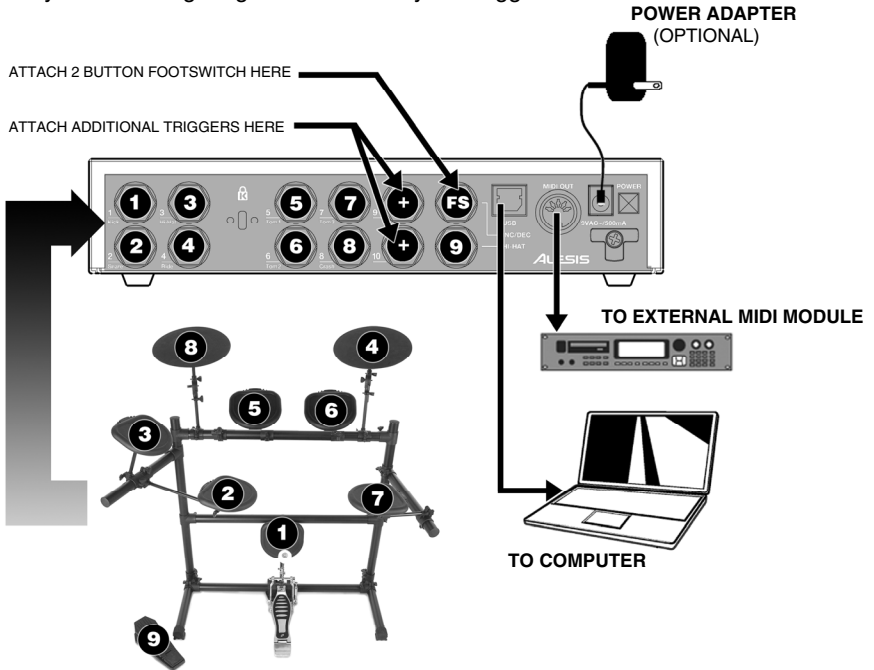

1. Before turning on the Trigger IO, connect all triggers, pads, footswitches, MIDI devices and external modules as shown above. If you would like to use the Trigger IO with a computer, connect a USB cord from the Trigger IO to your computer's USB port.
2. Connect a power source to the Trigger IO. You have two options for powering the Trigger IO:
 - a. Connect the Trigger IO to a computer's USB port – the computer's USB bus will provide power.
 - b. Connect an optional 9V AC power adapter to the Trigger IO.
3. Use the power switch on the rear panel of the Trigger IO to turn it on.

Important: Please use the appropriate cables to connect your triggers to the Trigger IO. For single zone triggers, please use TS cables to connect them to the Trigger IO. If using dual-zone triggers, please make sure that you are using TRS cables. Using TS cables to connect dual-zone triggers to the Trigger IO will only allow you to use the primary zone (tip) of the drum.

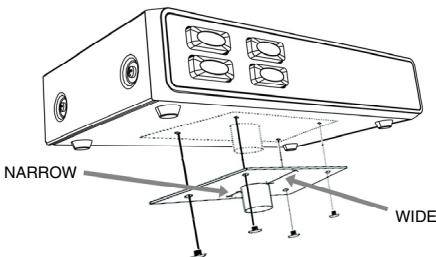

The Trigger IO can be mounted on a drum or cymbal stand and is compatible with most drum mounts on the market today. Please attach the drum mount as shown on the left.

(drum mount not included)

COMPUTER INSTALLATION

The Trigger IO is a Plug-and-Play device so there is no driver or special software installation required. When the Trigger IO is connected to a computer, it will automatically be recognized as an available USB device.

How to connect and use the Trigger IO with a software application:

1. Connect a USB cord from the USB port of the Trigger IO to the USB port of your computer.

When the Trigger IO is connected to a computer using a USB cord, the computer's USB bus will provide power to the unit. If you would like to use an alternate power source, plug in a 9v AC power adapter.

2. Press the power switch on the back panel of the Trigger IO. The display will turn on to let you know that the Trigger IO is on.

Tip

It is a good idea to connect and turn on the Trigger IO before starting any software applications with which you intend to use the Trigger IO. Otherwise the software program will not recognize the Trigger IO as being connected.

3. Open up your software application.
4. Next, select the Trigger IO as a MIDI input device. Usually, this is done in the Preferences menu of the software application.

If you are using Windows XP, you will notice that the Trigger IO may appear as 'USB Audio Device' or 'USB Audio Device (Emulated)'. Please make sure that this MIDI input is enabled and active.



(Cubase LE example shown on left. You may access the MIDI inputs by going to Devices | Device Setup and clicking on All MIDI Inputs.)

5. Now the Trigger IO should be ready to use with the software application.


A Note About Audio Latency

- Latency describes the time that it takes for your soundcard to respond to a command. In other words, this is the time that it takes for your computer to process incoming data (for example, MIDI Note events) and output a sound. The lower your latency is, the faster your computer will respond to commands and output sound.

Please make sure that your soundcard's latency (or buffer) is set to a low number so when you hit the pads on the Trigger IO, your computer will output the sound promptly. Latency and buffering is usually adjusted in your software's Preferences menu. In general, if latency is higher than about 15-20ms, you will start to notice a significant delay between the time that you hit the pads and the time that the sound comes out of your computer.

If you still experience too much latency or "lag" with your internal soundcard audio drivers, you might want to download one of the free and widely available ASIO (Audio Stream Input/Output) drivers from the Internet. In general, ASIO drivers perform better and with lower latency since they create a more efficient communication between audio devices and software. You may download and install the free ASIO4ALL driver (PC) by visiting www.asio4all.com. (Only compatible with USB audio interfaces)

GETTING STARTED – USING KITS

KIT		TRIGGER SETUP
KIT <input checked="" type="radio"/>		<input type="radio"/> GAIN <input type="radio"/> X-TALK
PROGRAM CHANGE <input type="radio"/>		<input type="radio"/> VELOCITY CURVE <input type="radio"/> RETRIGGER
TRIG MIDI CHANNEL <input type="radio"/>		<input type="radio"/> THRESHOLD <input type="radio"/> TRIGGER TYPE
TRIG MIDI NOTE # <input type="radio"/>		

What is a Kit?

A Kit, also known as a Preset, is a collection of parameters which describe different configurations of the Trigger IO. These parameters include the MIDI Note Numbers assigned to triggers, MIDI Channels on which the triggers are sending information, as well as associated Program Change messages. Using kits allows you to store and access different trigger setups and allows you to address different hardware and software module configurations.

The Trigger IO automatically goes into Kit selection function when it is turned on. Notice that the LED next to Kit is lit. If you are in a different function, you can always get to the Kit selection function by using the **function up/down** buttons.


When in Kit selection function, you can use the value up/down buttons to select different kits. The Trigger IO will automatically load the kits as you step through the values. There are 21 available kits that you can load, modify and store.

SAVING KITS

If you have made changes to the selected kit (i.e. changed MIDI note numbers, channels), you will notice that the LED next to Kit will begin blinking. This means that there are changes which have not yet been saved. To save these changes, please use the **function up/down** buttons to return to the Kit Function. This will save the changes you have made to the current kit.

Alternatively, if you have made changes to the current kit but do not wish to save them, press **function down** and **value down** buttons simultaneously. This will cancel any changes made after the kit was loaded.

PROGRAM CHANGE MESSAGES

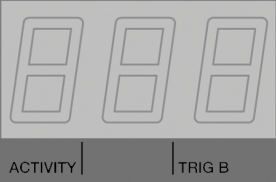KIT		TRIGGER SETUP
KIT <input type="radio"/>		<input type="radio"/> GAIN <input type="radio"/> X - TALK
PROGRAM CHANGE <input checked="" type="radio"/>		<input type="radio"/> VELOCITY CURVE <input type="radio"/> RETRIGGER
TRIG MIDI CHANNEL <input type="radio"/>		<input type="radio"/> THRESHOLD <input type="radio"/> TRIGGER TYPE
TRIG MIDI NOTE # <input type="radio"/>		

A *Program Change*, often referred to as a *Patch Change*, is a MIDI message used for sending data to devices to cause them to change to a new program. This allows you to tell a hardware or software device which sound to play. For example, if your Trigger IO is controlling a rock drum kit in your DAW or on an external hardware device, using a *Program Change* command allows you to easily switch to an electronic kit. Program Change messages also give you the freedom to re-orchestrate MIDI content without having to redo any MIDI note information.

Each kit on the Trigger IO can have an associated Program Change message (0-127). This means that, effectively, you can have each kit on the Trigger IO address a different set of sounds in your DAW or external MIDI device. By default, each kit on the Trigger IO is set to “---”. A Program Change message of “---” means that no Program Change message will be sent when the kit is loaded.

How to set a Program Change Message:

1. Use the **function up/down** buttons to select Program Change.
2. Select the desired Program Change message (0-127) using the value up/down buttons to dial in the value. The Program message will be sent automatically and will affect only that kit.
3. Subsequently, every time you load the kit the selected Program Change message will be sent to your DAW or external MIDI device.

REMEMBER TO SAVE YOUR CHANGES BY GOING BACK TO KIT!


EDITING KITS

Editing kits is a powerful tool for customizing your Trigger IO. When you are editing a kit, the information displayed on the screen will always reflect the parameters of the last trigger in the current kit that was hit. To modify the parameters of a certain trigger, just strike it – this is often referred to as “chase mode”. The parameters that you can modify for each trigger are Pad MIDI Channel, Pad Note Number.

Please note that editing Program Change, MIDI Channel and MIDI Note # will only affect the specific trigger in the current kit.

Other settings, such as Trigger Type, Gain, Velocity Curve, Crosstalk and Retrigger time are also editable per trigger but will affect the specific trigger in every kit on the Trigger IO. For information on setting these parameters, please consult “Setting Global Parameters” section of this manual.

TRIGGER MIDI CHANNEL

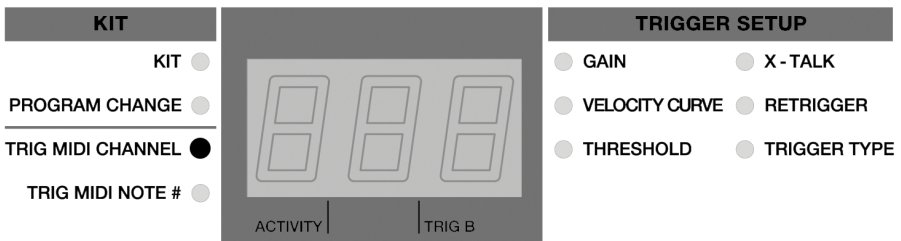

This is the MIDI Channel on which the trigger is sending information. Each trigger can be set to transmit on a separate channel.

For example, this could be very useful if you are trying to control different devices or modules with different triggers, and want to make sure that certain MIDI information is received only by a specific device. In this case, you can set different MIDI Channels which your external synths or sample playback engines will be “listening” to. Then assigning those different MIDI Channels to different pads will ensure that the triggers only communicate with the specific device that you want them to.


How to set Trigger MIDI Channel:

1. Use the **function up/down** buttons to select Trig MIDI Channel.
2. To choose the trigger you wish to modify, just strike the trigger/pad. The current MIDI Channel will be displayed.
3. Select the desired channel, using the **value up/down** buttons to dial in the value. As you move through the choices, the value will be loaded automatically.

REMEMBER TO SAVE YOUR CHANGES BY GOING BACK TO KIT!

TRIGGER MIDI NOTE

KIT	TRIGGER SETUP
KIT <input type="radio"/>	<input type="radio"/> GAIN <input type="radio"/> X-TALK
PROGRAM CHANGE <input type="radio"/>	<input type="radio"/> VELOCITY CURVE <input type="radio"/> RETRIGGER
TRIG MIDI CHANNEL <input type="radio"/>	<input type="radio"/> THRESHOLD <input type="radio"/> TRIGGER TYPE
TRIG MIDI NOTE # <input checked="" type="radio"/>	



This is the MIDI Note Number that the particular pad or trigger is sending.

For example, if you are controlling an external drum machine, there are unique MIDI Note Numbers associated with the kick drum, snare drum or hi-hat. If the initial configuration does not trigger the sounds you want, change the MIDI Note Numbers to trigger the desired sounds.

Please note: When using a hi-hat pedal with the Trigger IO, Input 3 (labeled Hi-Hat) can transmit two different MIDI Note Numbers, depending on the position of the pedal. When you press the pedal down and engage the hi-hat input, the Trigger IO will output a closed hi-hat note. With the pedal released, engaging the hi-hat input will output an open hi-hat note.

How to change Trigger MIDI Note #:

1. Use the **function up/down** buttons to select Trig MIDI Note #.
2. To choose the trigger you wish to modify, just strike the trigger/pad. The display will alternate between showing the trigger's current MIDI Note # and MIDI Note Name.
3. Select the desired MIDI Note #, using the **value up/down** buttons to dial in the value. As you move through the choices, the value will be loaded automatically.

REMEMBER TO SAVE YOUR CHANGES BY GOING BACK TO KIT!

SETTING GLOBAL PARAMETERS

Global parameters change how your connected triggers function in a general way. The following parameters will affect each trigger input on a global level, regardless of the specific kit that you are working with. So even if you change kits, the settings for each trigger input will remain in place as long as


they are saved. The global parameters include Gain, Velocity Curve, Threshold, Crosstalk, Retrigger and Trigger Type. Please take some time to optimize the Trigger IO for use with your preferred trigger devices.

Once you begin tweaking the trigger parameters, you will notice that the LED next to Kit will begin blinking, alerting you that changes have been made to the existing configuration. Similarly to editing kit parameters, such as MIDI Channel and MIDI #, global parameters can be saved by using the **function up/down** buttons to return to Kit. Once you return to Kit, the changes will be saved.

TRIGGER SETUP

- GAIN
- X - TALK
- VELOCITY CURVE
- RETRIGGER
- THRESHOLD
- TRIGGER TYPE

GAIN

KIT		TRIGGER SETUP
KIT <input type="radio"/>		<input checked="" type="radio"/> GAIN <input type="radio"/> X-TALK
PROGRAM CHANGE <input type="radio"/>		<input type="radio"/> VELOCITY CURVE <input type="radio"/> RETRIGGER
TRIG MIDI CHANNEL <input type="radio"/>		<input type="radio"/> THRESHOLD <input type="radio"/> TRIGGER TYPE
TRIG MIDI NOTE # <input type="radio"/>		

The Gain parameter describes how a trigger will react when it is engaged. With a high gain setting, you don't have to engage the trigger very hard to achieve a maximum velocity output. On the other hand, with a low gain setting it is harder to achieve a maximum velocity output when engaging the trigger hard. If you find it very easy to achieve maximum velocity (127) when you engage a specific trigger, you might want to set its Gain to a lower value. This will allow for more dynamics in your playing style.

Adjusting a trigger's Gain may also prevent any "crosstalk" with adjacent trigger. Crosstalk occurs when vibrations from engaging a trigger are transferred to another trigger and cause it to trigger as well. If one trigger is naturally more sensitive than others, it may trigger in response to slight vibrations from other trigger. Reducing its Gain could prevent crosstalk. On the other hand, if a trigger is naturally insensitive and does not respond unless it is hit very hard, striking it very hard may cause other triggers to trigger as well. Increasing its Gain and striking more softly could prevent crosstalk.


How to change trigger Gain:

1. Select the trigger you would like to edit by striking the trigger/pad.
2. Use the **function up/down** buttons to select Gain. The current Gain level for the trigger will be displayed.
3. Use the **value up/down** buttons to dial in a new Gain value. The value will be loaded automatically.

REMEMBER TO SAVE YOUR CHANGES BY GOING BACK TO KIT!

VELOCITY CURVE

KIT		TRIGGER SETUP			
KIT	<input type="radio"/>	<input type="radio"/> GAIN	<input type="radio"/> X - TALK		
PROGRAM CHANGE	<input type="radio"/>	<input checked="" type="radio"/> VELOCITY CURVE	<input type="radio"/> RETRIGGER		
TRIG MIDI CHANNEL	<input type="radio"/>	<input type="radio"/> THRESHOLD	<input type="radio"/> TRIGGER TYPE		
TRIG MIDI NOTE #	<input type="radio"/>				






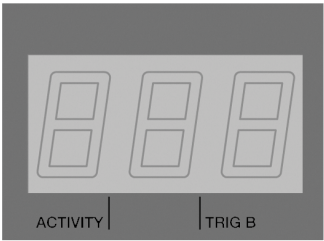


A Velocity Curve describes how a trigger's velocity varies with the force applied. This is a useful feature when trying to customize how a trigger responds to your playing style. Different Velocity Curves will have different input/output ratios associated with them and will cause a different response, so take some time to get familiar with how the Velocity Curve setting corresponds to the way you like to play.

Velocity is most often used to control a sound's volume or brightness. So when you play "hard", the triggered sound is typically louder/brighter.

How to change Velocity Curve:


1. Select the trigger you would like to edit by striking the trigger/pad.
2. Use the **function up/down** buttons to select Velocity Curve. The current Velocity Curve will be displayed.
3. Use the **value up/down** buttons to select a Velocity Curve. The value will be loaded automatically.

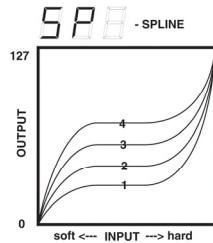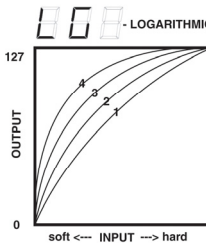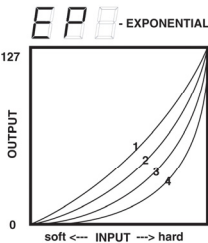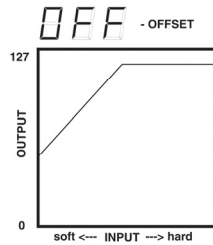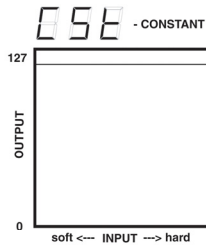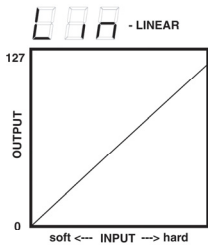

REMEMBER TO SAVE YOUR CHANGES BY GOING BACK TO KIT!

THRESHOLD

KIT	TRIGGER SETUP
KIT <input type="radio"/>	<input type="radio"/> GAIN <input type="radio"/> X - TALK
PROGRAM CHANGE <input type="radio"/>	<input type="radio"/> VELOCITY CURVE <input type="radio"/> RETRIGGER
TRIG MIDI CHANNEL <input type="radio"/>	<input checked="" type="radio"/> THRESHOLD <input type="radio"/> TRIGGER TYPE
TRIG MIDI NOTE # <input type="radio"/>	




False triggering occurs when a trigger is engaged accidentally, often due to stage vibrations. The Threshold setting helps prevent false triggering. The threshold value is the minimum velocity needed to be registered for the trigger to output data. This Threshold should be set based on your playing style. Try different Threshold settings until you find one that works best for you.

How to change trigger Threshold:

1. Select the trigger you would like to edit by striking the trigger/pad.
2. Use the **function up/down** buttons to select Threshold.
3. Use the **value up/down** buttons to dial in the desired Threshold value. The value will be loaded automatically.

REMEMBER TO SAVE YOUR CHANGES BY GOING BACK TO KIT!

X-TALK (CROSSTALK)

KIT		PAD SETUP
KIT <input type="radio"/>		<input type="radio"/> GAIN <input checked="" type="radio"/> X-TALK
PROGRAM CHANGE <input type="radio"/>		<input type="radio"/> VELOCITY CURVE <input type="radio"/> RETRIGGER
PAD MIDI CHANNEL <input type="radio"/>		<input type="radio"/> THRESHOLD <input type="radio"/> TRIGGER TYPE
PAD MIDI NOTE # <input type="radio"/>		

Crosstalk occurs when triggers in close proximity are falsely triggered. For example, when using acoustic drum triggers mounted on a drum kit, hitting a certain drum may cause the drums to vibrate and other triggers to trigger as well. There is no definitive way to deal with crosstalk. Setting a combination of Gain and Threshold for each trigger can help alleviate crosstalk. You may also wish to use the X-Talk function as well.

The X-Talk feature describes the degree to which the Trigger IO will attempt to reject crosstalk. Positive X-Talk values attempt to intelligently suppress crosstalk. If a very loud and a very soft trigger arrive almost simultaneously, the X-Talk function will assume that the soft trigger is crosstalk and will suppress it from sounding. The higher the X-Talk value, the higher the velocities that will be suppressed. This means that when using high X-Talk values, you can't play hard and soft notes simultaneously. At a setting of 7, it may even be difficult to play a drum roll.

Please spend some time to fine tune your triggers by experimenting with different Gain, Threshold and X-Talk settings to prevent crosstalk. As we mentioned, there is no definitive solution to crosstalk problems, but we have included enough control parameters for you to make the most out of any trigger setup, provided you spend the time to optimize it.

How to change X-Talk:

1. Select the trigger you would like to edit by striking the trigger/pad.
2. Use the **function up/down** buttons to select X-Talk.
3. Use the **value up/down** buttons to dial in the desired X-Talk rejection value (min = 0, max = 7). The value will be loaded automatically.

REMEMBER TO SAVE YOUR CHANGES BY GOING BACK TO KIT!

RETRIGGER

KIT	PAD SETUP
KIT <input type="radio"/>	<input type="radio"/> GAIN <input type="radio"/> X - TALK
PROGRAM CHANGE <input type="radio"/>	<input type="radio"/> VELOCITY CURVE <input checked="" type="radio"/> RETRIGGER
PAD MIDI CHANNEL <input type="radio"/>	<input type="radio"/> THRESHOLD <input type="radio"/> TRIGGER TYPE
PAD MIDI NOTE # <input type="radio"/>	

The Retrigger setting describes how the Trigger IO interprets and outputs successive triggers from the same input. The Retrigger setting is the minimum amount of time between successive triggers needed to generate a second sound.

For example, if a trigger is engaged twice within a 50 ms time period and the Retrigger setting is 100ms, the Trigger IO will ignore the second sound and only output the first. On the other hand, if the Retrigger setting is set to 25ms, the Trigger IO will output both sounds, since the second sound occurs beyond the Retrigger boundary.

The Retrigger setting should be set depending on your playing style. If you like to play with fast drum rolls, you may want to decrease the Retrigger time setting in order to capture all the nuances of your playing style.


How to change Retrigger setting:

1. Select the trigger you would like to edit by striking the trigger/pad.
2. Use the function up/down buttons to select Retrigger.
3. Use the value up/down buttons to dial in the desired Retrigger setting (0-127 ms).

REMEMBER TO SAVE YOUR CHANGES BY GOING BACK TO KIT!

TRIGGER TYPE

KIT		PAD SETUP			
KIT	<input type="radio"/>	<input type="radio"/> GAIN	<input type="radio"/> X-TALK		
PROGRAM CHANGE	<input type="radio"/>	<input type="radio"/> VELOCITY CURVE	<input type="radio"/> RETRIGGER		
PAD MIDI CHANNEL	<input type="radio"/>	<input type="radio"/> THRESHOLD	<input checked="" type="radio"/> TRIGGER TYPE		
PAD MIDI NOTE #	<input type="radio"/>				

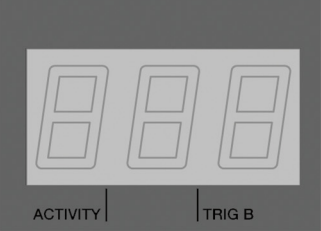

You can select the type of trigger you are using in the Trigger Type function. There are many different types of triggers available on the market today – too many to cover individually in this manual – but most triggers can be grouped into the categories outlined below. Please consult your trigger devices’ documentation to find out which of the following categories best fits the device.

If you have a single zone drum trigger, then ignore the “ring” column in the table below. Select PP if you have a piezo trigger or SS if you have a switch trigger.

If you have a dual zone drum, then use a TRS cable and select the appropriate type from the table below. If you have a dual zone drum but only a TS cable, then you can still use the primary zone (tip) but not the secondary zone (ring).

Please make sure that your trigger’s Trigger Type is configured correctly before editing or using it. If the Trigger Type is configured incorrectly, your trigger may not function properly or at all. You will need to select a Trigger Type which matches your specific trigger, as shown in the table below. Once you have finished configuring the Trigger Type, exit Trigger Type mode to resume playing.

TRIGGER TYPE	TIP	RING
PP	PIEZO	PIEZO
SS	SWITCH	SWITCH
PS	PIEZO	SWITCH
SP	SWITCH	PIEZO
SUS	SWITCH AS SUSTAIN PEDAL*	
HH	HI-HAT PEDAL**	

*To be used with footswitches. When the footswitch is pressed down, it generates a sustain message (MIDI CC 64). When it is depressed, it cancels the sustain.

**Hi-hat foot pedals will automatically be detected so there is no need to set a Trigger Type.

How to set Trigger Type:

1. Use the **function up/down** buttons to select Trigger Type.
2. Select the trigger you would like to edit by striking the trigger/pad.
3. Use the **value up/down** buttons to dial in the desired Trigger Type.

REMEMBER TO SAVE YOUR CHANGES BY GOING BACK TO KIT!

USING HI-HAT PEDALS

When using a hi-hat pedal connected to the Hi-hat pedal input on the Trigger IO, the Hi-hat input (Input 3) can send two different MIDI Notes, depending on the position of the Hi-hat pedal. In effect, this allows you to assign two different notes for the hi-hat input (Input 3) and with the pedal toggle between which note the hi-hat trigger sending. In addition, you can also assign another MIDI Note Number to the pedal down position of the pedal.

- To assign open hi-hat sound to Hi-hat input (Input 3), engage the hi-hat trigger with the hi-hat pedal in the UP position. Then use the **function up/down** buttons to select MIDI Note # and use the **value up/down** buttons to dial in the desired note number.
- To assign a closed hi-hat sound to Hi-hat input (Input 3), engage the hi-hat trigger with the hi-hat pedal in the DOWN position. Then use the **function up/down** buttons to select MIDI Note # and use the **value up/down** buttons to dial in the desired note number.
- To assign a pedal-hat sound to the Hi-hat pedal input (HI-hat), press down on the hi-hat pedal. Then use the **function up/down** buttons to select MIDI Note # and use the **value up/down** buttons to dial in the desired note number.

EDITING HI-HAT PEDAL PARAMETERS

When editing hi-hat pedal parameters, some of the edit functions are used in a slightly different manner. Please see below for detailed description of hi-hat pedal parameters.

Gain – This setting is used in much the same way as it is used for other triggers. Please refer to “Gain” section of this manual for information.

Velocity Curve – This setting is used in much the same way as it is used for other triggers. Please refer to “Velocity Curve” section of this manual for information.

Threshold – When editing a hi-hat pedal, the Threshold function has a slightly different meaning. For a hi-hat pedal, the Threshold value describes the minimum distance between pedal positions, when changing directions, necessary for the Trigger IO to output a CC value. If you like to use the hi-hat pedal for subtle nuances, you may wish to set the hi-hat pedal Threshold to a low value.

X-Talk – For a hi-hat pedal, the X-Talk function is used as a Calibration function. This allows you to calibrate the pedal for optimum performance. If a hi-hat pedal is selected, you will see “CAL” displayed on the screen. You can adjust the calibration manually or you can let the Trigger IO adjust it automatically by leaving the pedal in the up position and pressing **up value** and **down value** buttons simultaneously. This will automatically calibrate the pedal.

Retrigger – This setting is used in much the same way as it is used for other triggers. Please refer to “Retrigger” section of this manual for information. Please note that the Retrigger parameter only refers to hi-hat control messages and not the pedal-hat Note message.

Trigger Type – Hi-hat pedals are automatically detected by the Trigger IO, so there will be no need to set the Trigger Type.

SENDING MESSAGES

In addition to global parameters, there are four special functions available on the Trigger IO: the *All Notes Off* message, the *Return to Default Value* message, and the *Factory Reset* message, as well as MIDI SysEx messages. You might rarely have to use these, but it is good to keep in mind that they are available in case you run into trouble.

ALL NOTES OFF

This function sends an *All Notes Off* message on all MIDI channels. An *All Notes Off* message will terminate any MIDI note that is still playing. This message can be used to recover from erroneous stuck notes.

- To send an *All Notes Off* message, press **function up** and **function down** buttons simultaneously.

RETURN TO DEFAULT VALUE

This message will set the parameter being edited back to its original value.

- To send a *Return to Default Value* message, press the **function down** and **value down** buttons simultaneously.

FACTORY RESET

This operation resets all functions back to the factory setup condition. Sometimes you might have gone a little too far changing the configuration of the Trigger IO. In this case, you might want to use the *Factory Reset* message to restore everything, including presets, back to the way it originally was.

- To send a *Factory Reset* message, hold down the **value up** and **value down** buttons simultaneously while powering on the Trigger IO. You will see “rES” displayed on the screen to let you know that the Trigger IO has been reset.

MIDI SYSEX TRANSFERS

MIDI System Exclusive (SysEx) messages allow you to transfer parameter and program data to and from the Trigger IO over the USB or MIDI connection. Using SysEx software editors, many of which are available free over the Internet (SendSX, MIDI-OX, SysEx Librarian), you can quickly dump and transfer preset information to and from the Trigger IO.

- To request a Data Dump from the Trigger IO, please make sure that the Trigger IO is connected via MIDI or USB to your SysEx application. Then press **function up** and **value up** simultaneously. This will transfer all the presets from the Trigger IO to your SysEx application.
- To transfer data to the Trigger IO, please make sure that the Trigger IO is connected via USB to your SysEx application. Then, simply play the SysEx data you would like to transfer to the Trigger IO.

USING THE TRIGGER IO WITH BFD LITE

The Trigger IO comes bundled with the BFD Lite software drum module, which includes high-quality drum samples. You can trigger these drum samples directly from the Trigger IO with the authentic feel and control of playing a real drum kit.

Once you have installed the BFD Lite software, you can begin playing immediately. Following are some basic tips and suggestions on how to begin using the software:

Instructions:

1. Install the BFD Lite software included with the Trigger IO.
2. Plug the Trigger IO into your computer's USB port with the included USB cable.
3. If you are running Windows, go to **Start | All Programs | FXpansion | BFD Lite | BFD Lite Standalone**

If you are running Mac OS, go to **Applications | BFD Lite** to launch the application.

This will launch BFD Lite in standalone mode. However, you may also use BFD Lite as a plug-in in your favorite sequencing environment.

4. The Trigger IO is a Plug and Play device, which means that it will automatically work with BFD Lite once the application has been launched.

Try engaging the triggers. If there is no sound, you will need to make sure that the BFD Lite software is set to use your preferred audio device (i.e. internal soundcard, external audio interface, etc.) as the sound output.



In Windows, you can select the device by clicking on the pull-down menu in the top left corner of the screen.

Please note: Depending on the soundcard you are using, you may experience different amounts of audio latency, or delay between when you engage your trigger and when the sound comes out of your speakers. In

BFD Lite Standalone, you can access your soundcard's latency by clicking on the Cfg.. (Configuration) button and adjusting your soundcard's buffer settings, if available.



For more information, please refer to A Note About Audio Latency discussion in the Computer Installation section of this manual.

5. When you have successfully selected your audio device, you should hear sounds when you engage the triggers. You are now ready to jam.

DEFAULT SETTINGS FOR THE TRIGGER IO

The Trigger IO has been initialized with a preset which automatically maps the first 8 trigger inputs to drum sounds in the BFD Lite software. You can access this configuration by selecting preset 0 on the Trigger IO while in Kit function.

The configuration of the kit is labeled on the back of the Trigger IO and is as shown below. Please ensure that your triggers are connected in the way described below to take advantage of the BFD Lite preset.

1. KICK NOTE # 35	3. HI-HAT NOTE # 44/42*	5. TOM1 NOTE # 47	7. TOM3 NOTE # 43
2. SNARE NOTE #38	4. RIDE NOTE #55	6. TOM2 NOTE # 45	8. CRASH NOTE # 49

 
*When using a hi-hat foot pedal connected to the Hi-hat footswitch input on the Trigger IO, the Hi-hat input will alternate between sending MIDI Note # 44 and MIDI Note # 42, depending on the position of the Hi-hat footswitch. With the hi-hat pedal pressed down, the Hi-hat input will send MIDI Note # 42 (closed hi-hat). With the hi-hat pedal released, the Hi-hat input will send MIDI Note # 44 (open hi-hat).

You will notice that in this configuration each trigger has a different MIDI Note Number associated with it. It is these Note Numbers that trigger the specific sound. Please refer to Trigger MIDI Note section of this manual for more information on how MIDI Notes are used.

ADJUSTING KIT PERFORMANCE IN BFD LITE

Each kit in BFD Lite has a few general controls you can use to optimize the performance of the kit to the Trigger IO and your playing style. You can use these controls to solo, mute and adjust tuning and level for each particular kit piece.

1. **SOLO** – Pressing this button will solo only that kit piece and no other piece will be heard.
2. **MUTE** – Pressing this button will mute the particular kit piece so it will not play when it is triggered.
3. **TRIM** – This knob functions as a volume gain knob. Use this knob to adjust the level of the kit piece.
4. **TUNE** – Turn this knob to tune the kit piece up and down.
5. **DYNAMICS** – Using this control, you can make a kit-piece play ‘softer’ or ‘harder’. BFD Lite’s sounds are recorded with many velocity layers: adjusting the Dynamics control can achieve a variety of realistic levels of striking force: from soft and jazzy to hard and loud.



! Additional Information

Please refer to the BFD Lite user manual which can be found under **Start | All Programs | FXpansion | BFD Lite | BFD Lite Manual** for additional information about the BFD Lite Software. The concepts discussed in this chapter are quick tips on how to begin using the Trigger IO with the BFD software. However, the software also offers much more in-depth control for realistic and customizable performance. Please take the time to familiarize yourself with the software by reading the BFD Lite Manual.

CUSTOMIZING YOUR KIT IN BFD LITE

You may wish to customize your kit to your desired playing style. You can quickly switch the sounds that the pads are triggering by changing the MIDI Note Number that the pad is assigned to. To do so, make sure that you are in Pad Note Number function by pressing the function button until the LED next to Pad Note Number is lit. Then strike the pad that you want to change and use the **value up** and **value down** buttons to scroll to a different Note Number.

Below is a list of the default Note Number mappings in BFD Lite. To use one of these sounds with a pad, you will need to assign the specific Note Number to the pad by following the procedure in the paragraph above.

NOTE NUMBER	KIT PIECE	HIT STYLE
56	CYM2	BELL
55	CYM2	HIT
54	CYM1	BELL
53	CYM3	BELL
52	HIHAT	HALF SHANK
51	CYM3	HIT
50	HIHAT	HALF TIP
49	CYM1	HIT
48	HIHAT	CLOSED SHANK
47	TOMH	HIT
46	HIHAT	OPEN TIP
45	TOMM	HIT
44	HIHAT	PEDAL
43	TOMF	HIT
42	HIHAT	CLOSED TIP
41	SNARE	FLAM
40	SNARE	RIM
39	SNARE	DRAG
38	SNARE	HIT
37	SNARE	SIDESTICK
36	KICK	HIT
35	KICK	NO SNARE
24	HIHAT	VARIABLE TIP
33	HIHAT	¾ TIP
32	HIHAT	¾ SHANK
31	HIHAT	¼ TIP
30	HIHAT	¼ SHANK
29	SNARE2	FLAM
28	SNARE2	RIM
27	SNARE2	DRAG
26	SNARE2	HIT
25	SNARE2	SIDESTICK
24	KICK2	HIT
23	KICK2	NO SNARE
22	HIHAT	VARIABLE SHANK

OTHER APPLICATIONS OF THE TRIGGER IO

	C8 (96)
94	B7 (95)
92	A7 (93)
90	G7 (91)
	F7 (89)
87	E7 (88)
85	D7 (86)
	C7 (84)
82	B6 (83)
80	A6 (81)
78	G6 (79)
	F6 (77)
75	E6 (76)
73	D6 (74)
	C6 (72)
70	B5 (71)
68	A5 (69)
66	G5 (67)
	F5 (65)
63	E5 (64)
61	D5 (62)
	C5 (60)
58	B4 (59)
56	A4 (57)
54	G4 (55)
	F4 (53)
51	E4 (52)
49	D4 (50)
	C4 (48)
46	B3 (47)
44	A3 (45)
42	G3 (43)
	F3 (41)
39	E3 (40)
37	D3 (38)
	C3 (36)
34	B2 (35)
32	A2 (33)
30	G2 (31)
	F2 (29)
27	E2 (28)
	D2 (26)
25	C2 (24)
22	B1 (23)
20	A1 (21)
18	G1 (19)
	F1 (17)
15	E1 (16)
	D1 (14)
13	C1 (12)
	B0 (11)
10	A0 (9)

The Trigger IO can be used for a variety of applications which use MIDI as their control protocol. For example, the Trigger IO can be used to trigger melodic sounds on sound modules or VST instruments. This means that you can play pitched instruments, such as vibraphones, marimbas, xylophone, even a piano or a violin, straight from the Trigger IO.

As you have already seen throughout this manual, the Trigger IO uses MIDI Note information to trigger events, such as drum hits. However, MIDI Notes also represent actual musical notes and pitches (much like keys on a piano). This allows pitched content to be played from MIDI devices (such as the Trigger IO).

For this reason, we include a handy chart which shows you how MIDI Note Numbers correspond to musical pitches (as shown on a piano keyboard). The musical pitches are followed by their corresponding MIDI Note Numbers in ().

You can use this chart to help you quickly setup the Trigger IO for working with pitched content.


UPGRADING SOFTWARE


As we continue to improve the Trigger IO to provide you the best user experience, software upgrades may be released at www.alesis.com. Please check regularly for software upgrades and latest news from Alesis.


UPGRADE PROCEDURE


To see if your software version is the most current version available, you will need to compare it to the upgrade version, if one is available, on our website.

1. Press and hold the **function up** and **value down** buttons while powering on the Trigger IO.
2. After a couple of seconds you will see:

 followed by X.XX (upgrader version)

 followed by Y.YY (software version)

 ready for upgrade

3. Please compare the software version displayed with the version of the software upgrade on the Alesis website, if available.
4. If you wish to proceed with the upgrade procedure, please follow the instructions below. If there is no software upgrade available or you do not wish to proceed, please turn off the Trigger IO. You can then turn it back on and resume normal operation.
5. To proceed with the upgrade procedure, download the SysEx upgrade file (.syx) to your computer.
6. Then, use any MIDI software utility, such as MIDI-OX, to transfer the SysEx file to the Trigger IO.
7. When the transfer and upgrade is in progress, you will see the display on the Trigger IO count down from 127 to 0.
8. When the upgrade has completed you will see  displayed on the screen. You can now reboot the Trigger IO.

TRIGGER IO KIT PRESETS

KIT#0 – BFD LITE

			INPUT									
			1	2	3	4	5	6	7	8	9	10
ZONE	TIP	CHANNEL	10	10	10	10	10	10	10	10	10	10
		MIDI NOTE #	35	38	46	55	47	45	43	49	55	53
	RING	CHANNEL	10	10	10	10	10	10	10	10	10	10
		MIDI NOTE #	35	40	48	54	35	35	35	58	35	35

HI HAT FOOT SWITCH – CHANNEL 10, MIDI NOTE # 44
(INPUT3) CLOSED HI HAT NOTE # 42

KIT#1 – GM DRUMS

			INPUT									
			1	2	3	4	5	6	7	8	9	10
ZONE	TIP	CHANNEL	10	10	10	10	10	10	10	10	10	10
		MIDI NOTE #	35	38	46	51	50	48	45	49	55	52
	RING	CHANNEL	10	10	10	10	10	10	10	10	10	10
		MIDI NOTE #	35	37	35	53	35	35	35	35	35	35

HI HAT FOOT SWITCH – CHANNEL 10, MIDI NOTE # 44
(INPUT3) CLOSED HI HAT NOTE # 42

KIT#2 – GM PERC

			INPUT									
			1	2	3	4	5	6	7	8	9	10
ZONE	TIP	CHANNEL	10	10	10	10	10	10	10	10	10	10
		MIDI NOTE #	35	60	70	67	62	63	64	58	75	81
	RING	CHANNEL	10	10	10	10	10	10	10	10	10	10
		MIDI NOTE #	35	61	35	68	35	35	35	35	35	35

HI HAT FOOT SWITCH – CHANNEL 10, MIDI NOTE # 35
(INPUT3) CLOSED HI HAT NOTE # 42

KIT#3 – CHROMATIC 1

			INPUT									
			1	2	3	4	5	6	7	8	9	10
ZONE	TIP	CHANNEL	1	1	1	1	1	1	1	1	1	1
		MIDI NOTE #	60	62	64	66	68	70	72	74	76	78
	RING	CHANNEL	1	1	1	1	1	1	1	1	1	1
		MIDI NOTE #	61	63	65	67	69	71	73	75	77	79

**HI HAT FOOT SWITCH – CHANNEL 1, MIDI NOTE # 35
(INPUT3) CLOSED HI HAT NOTE # 42**

KIT#4 – CHROMATIC 2

			INPUT									
			1	2	3	4	5	6	7	8	9	10
ZONE	TIP	CHANNEL	1	1	1	1	1	1	1	1	1	1
		MIDI NOTE #	48	50	52	54	56	58	60	62	64	66
	RING	CHANNEL	1	1	1	1	1	1	1	1	1	1
		MIDI NOTE #	49	51	53	55	57	59	61	63	65	67

**HI HAT FOOT SWITCH – CHANNEL 1, MIDI NOTE # 35
(INPUT3) CLOSED HI HAT NOTE # 42**

TRIGGER IO DEFAULT GLOBAL PARAMETERS

The following are the factory default global parameters for the Trigger IO:

	INPUTS 1-10	HI HAT INPUT
GAIN	20	20
VEL CURVE	Lin	Lin
THRESHOLD	4	15
X-TALK	1	10
RETRIGGER	10	40
TRIGGER TYPE	PP	HH

TROUBLESHOOTING

SYMPTOM	CAUSE	SOLUTION
The display does not light up.	No power.	If you are using USB power, check that the power switch on the back of the Trigger IO is in the OUT (USB) position. If you are using an AC adapter, check that the adapter is plugged into a live power outlet and that the power switch is in the IN (AC) position.
MIDI: No sound from target device.	Trigger IO USB not properly connected.	Check your computer's USB connections to confirm that the Trigger IO is recognized and installed. Turn your computer off and then on again if necessary. (Choose "shut down" rather than "restart" to ensure that the USB devices are properly reset.)
	Problems caused by use of a USB hub.	Try unplugging the Trigger IO from any USB hubs and connecting directly to the computer.
	Software application not set up to receive MIDI data from Trigger IO controller.	Ensure that the Trigger IO or "USB" MIDI device is listed as an active MIDI source in your application.
	Software application not receiving MIDI data.	Many software applications have MIDI IN and OUT indicators. Play the triggers and look for the MIDI IN light to indicate activity.
	Trigger IO's MIDI channel not the same as application's incoming MIDI channel.	Be sure that the Trigger IO is sending on the channel that the target device expects.
	Trigger IO's 5-pin MIDI OUT not connected to sound source's MIDI IN.	Ensure that any 5-pin cables are connected to the proper inputs and outputs.
My footswitch behaves in an opposite manner.	Footswitch was plugged in after power was turned on.	If using a footswitch with the INC/DEC input, turn the unit's power off, wait a moment, and then turn it on again. Please always make sure that footswitches and triggers are connected to the Trigger IO prior to powering on the unit.
		For other footswitches, go to Trigger Type and reselect the type with the footswitch in the UP position.
My pad is triggering even when no pads are hit.	The pad's Gain setting is set too high or the Threshold is too low.	Lower the pad's Gain setting or raise the Threshold setting.

SYMPTOM	CAUSE	SOLUTION
Notes sustain continuously.	Stuck notes due to incomplete MIDI data.	Send an <i>All Notes Off</i> message by pressing function up and function down buttons simultaneously.
Pad triggers when another pad is hit.	Gain, X-Talk and Threshold not set correctly.	Please refer to “Setting Global Parameters” section to fine tune the Trigger IO.
There is too much delay or latency between the time that the pad is hit and the time that the sound triggers on the computer.	There is another device on your computer’s USB bus.	Try unplugging USB devices (especially high-bandwidth devices like disc drives) from your computer.
	Your software’s latency settings are not correct.	Try adjusting the software settings on your computer. Please note that not all software has these settings. Please refer to the “Computer Installation” section of this manual for more information on latency.
When using MIDI-OX for SysEx transfers, the Trigger IO’s presets become messed up.	MIDI-OX output buffer is not set correctly.	Please ensure that the MIDI-OX output buffer is set to at least 256 bytes or higher.
My trigger isn’t sending any Note On messages, even though I’m hitting it.	The Trigger Type is set incorrectly.	Try selecting a different Trigger Type.
	The Threshold level is too high.	Try lowering the trigger’s Threshold level.
I am using a dual-zone trigger and I can’t adjust my secondary zone setting.	The primary zone of the trigger is triggering at the same time and, therefore, being selected for editing.	Reduce the gain and/or increase the threshold for the primary zone while editing the secondary zone, then return the primary zone back to its proper setting.
Some sounds are louder than others.	Gain not set correctly.	Use each trigger’s Gain setting to balance out the level of the sounds.
When I try to change kits remotely with my footswitch pedal, I get the wrong kit or nothing happens	Software or hardware application not receiving Program Change message.	Make sure the software application can receive MIDI Program Change messages. Some programs do not accept Program Changes messages. If you are using a hardware module, make sure the drum kit you are selecting matches the program change number that you set for that kit on the Trigger IO.

SYMPTOM	CAUSE	SOLUTION
Improper open and closed hi-hat sounds	Variable-position pedal not calibrated properly.	<p>If your hardware or software program does not completely open or close your hi-hat sounds as it should as your foot moves through the range of your variable-position hi-hat pedal, the TriggerIO probably needs to be calibrated to match the output of your particular pedal.</p> <p>Perform the calibration procedure described in the "X-Talk" discussion on page 17 of this manual. Begin with the TriggerIO's automatic calibration feature (as described on that page). This procedure typically results in an excellent match between your pedal and the TriggerIO. To really dial in your pedal's performance, experiment to see if other calibration values (selected by using the up and down buttons within the "X-Talk" parameter) result in even better performance for your particular pedal type and playing style</p>
My hi-hat pedal is sending information even when I am not using it.	Pedal's threshold is set too low.	Increase the pedal's threshold setting.

MIDI IMPLEMENTATION

Function		Transmitted	Recognized	Remarks
Basic Channel	Default	1-16	X	Memorized
	Changed	1-16	X	Adjustable by user per pad
Note Number:		0-127	X	
Velocity	Note On	1-127	X	
	Note Off	0	X	
After Touch		X	X	
Pitch Bend		X	X	
Control Change	Ctrl # 4	0-127	X	Foot Pedal CC message
	Ctrl # 64	0-127	X	Sustain Pedal CC message
Program Change		0-127 *	X	
System Exclusive		O	O	
System Common	Song Pos	X	X	
	Song Sel	X	X	
	Tune	X	X	
System Realtime	Clock	X	X	
	Commands	X	X	
Aux Messages	Local On/Off	X	X	
	All Notes Off	O	X	
	Active Sense	X	X	
	Reset	X	X	
	GM On	X	X	
Notes:				
* 1 Set Per Kit				

O:YES
X:NO

www.alesis.com