

While holding down the applicable button, press one of the highlighted keys or buttons shown below to select a Song or set a parameter.

1 Song playback

To select a Song, follow step 1 (Book Select), and then step 2 (Song No. Select).

1 Book Select

2 Song No. Select

Quick Play

Demo Songs

1 Book		2 Song No.		50 Classical Music Masterpieces (Number/Song)	
50 Classical Music Masterpieces (50 Classics)	1-50	1	Canon D dur	11	Salut d'amour op.12
Beyer 1-50	1-50	2	Air On the G String	12	From the New World
Beyer 51-100	1-50	3	Jesus, Joy of Man's Desiring	13	Sicilienne
Beyer 101-106	1-6	4	Twinkle, Twinkle, Little Star	14	Clair de lune
Burgmüller 1-25	1-25	5	Piano Sonata op.31-2 "Tempest" 3rd mov.	15	Jupiter (The Planets)
Czerny 100, 1-50	1-50	6	Ode to Joy	16	Menuett (Eine kleine Nachtmusik K.525)
Czerny 100, 51-100	1-50	7	Wiegenlied op.98-2	17	Menuett G dur
Czerny 30, 1-30	1-30	8	Grande Valse Brillante	18	Marcia alla Turca
Hanon 1-20	1-20	9	Polonaise op.53 "Héroïque"	19	Piano Concerto No.1 op.11 2nd mov.
Hanon 1-Variation 1-22	21-42	10	La Campanella	20	The Nutcracker Medley
		21	Prelude (Wohltemperierte Klavier I No.1)	31	Etude op.10-3 "Chanson de l'adieu"
		22	Menuett G dur BWV Anh.114	32	Etude op.10-12 "Revolutionary"
		23	Piano Sonata No.15 K.545 1st mov.	33	Valse op.64-1 "Petit chien"
		24	Turkish March	34	Nocturne op.9-2
		25	Piano Sonata op.13 "Pathétique" 2nd mov.	35	Nocturne KK4a-16/BI 49 [Posth.]
		26	Für Elise	36	Träumerei
		27	Piano Sonata op.27-2 "Mondschein" 1st mov.	37	Barcarolle
		28	Impromptu op.90-2	38	La prière d'une Vierge
		29	Frühlingslied op.62-6	39	Liebessträume No.3
		30	Fantaisie-Impromptu	40	Blumenlied
		41	Humoresque	42	Arietta
		43	Tango (España)	44	The Entertainer
		45	Maple Leaf Rag	46	La Fille aux Cheveux de Lin
		46	La Fille aux Cheveux de Lin	47	Arabesque No.1
		47	Arabesque No.1	48	Cakewalk
		48	Cakewalk	49	Je te veux
		49	Je te veux	50	Gymnopédies No.1

2 Voice settings

Voices		Reverb Types		Reverb Depth		VRM Lite		Stereophonic Optimizer		Duo Type		Volume Balance (Dual/Duo mode)		Octave Shift (Dual/Duo mode)		Touch Sensitivity	
Mellow Grand	C1	Concert Hall	C2	Default setting	F2	On	C3	On	C3	Separated	F4	Default setting	C5	0 (Voice 2)	F5	Medium	C6
Pop Grand	D1	Chamber	D2	1 step down	G2	Off	D3	Off	D3	Balanced	G4	1 step down	D5	+1 (Voice 2)	G5	Hard	D6
DX E.Piano	E1	Off	E2	1 step up	A2	Off	E3	Off	E3	1 step up	A4	1 step up	E5	-1 (Voice 1)	A5	Fixed	E6
Harpischord	F1		F2		B2		F3		F3		B4		F5	+1 (Voice 1)	B5		F6
Pipe Organ	G1		G2				G3		G3				G5				G6
Strings	A1		A2				A3		A3				A5				A6

ARIUS YDP-166, YDP-146, YDP-S56, YDP-S36

Quick Operation Guide

3 Metronome settings

Voice confirmation of current Tempo value

Tempo (Metronome, Songs, etc.)

Metronome Beat

Metronome Volume

METRONOME +

A#-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4

1 2 3 4 5 6 7 8 9 0

10 steps down 10 steps up

0 2 3 4 5 6

1 step down 1 step up

A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5

To increase the value by 1:

To decrease the value by 1:

4 Other settings

Operation Confirmation Sounds

Auto Power Off

Voice confirmation of current system version

Tuning

Bluetooth

IAC ON/OFF and Depth

Transpose

Local Control

Program Change

Control Change

MIDI Transmit Channel

MIDI Receive Channel

Speaker

Audio Loopback

Volume Limiter

DEMOS/SONG ON

PIANO/VOICE +

Off On

Disable Enable

440.0 Hz 442.0 Hz

Off On

Off 1 step down 1 step up

Default setting

-6 -5 -4 -3 -2 -1

0 (normal pitch) +1 +2 +3 +4 +5

On/Off On/Off

On/Off

1 step down 1 step up

Off

1 step down 1 step up

ALL

Off Normal

Off On

Off On

Off 20% 50% 80%

A#-1 C#0 D#0 F#0 G#0 A#0 C#1 D#1 F#1 G#1 A#1 C#2 D#2 F#2 G#2 A#2 C#3 D#3 F#3 G#3 A#3 C#4 D#4 F#4 G#4 A#4 C#5 D#5 F#5 G#5 A#5 C#6 D#6 F#6 G#6 A#6

A-1 B-1 C0 D0 E0 F0 G0 A0 B0 C1 D1 E1 F1 G1 A1 B1 C2 D2 E2 F2 G2 A2 B2 C3 D3 E3 F3 G3 A3 B3 C4 D4 E4 F4 G4 A4 B4 C5 D5 E5 F5 G5 A5 B5 C6 D6 E6 F6 G6 A6 B6 C7

5 Tuning settings

To tune up (in about 0.2 Hz steps):

To tune down (in about 0.2 Hz steps):

Default pitch: 440.0 Hz

6 Duo setting

To turn Duo on or off:

7 Bluetooth (Audio) pairing

Start pairing (press and hold):