



DIGITAL DRUM KIT
USER MANUAL



WARNING!

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel.

Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock.

The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. No naked flame sources, such as lighted candles, should be placed on the product.

Allow adequate air circulation and avoid obstructing vents (if present) to prevent internal heat build-up. The ventilation must not be impeded by covering the appliance with items such as newspapers, table-cloths, curtains etc.

The mains plug is used to disconnect the appliance from the mains supply. Ensure that the mains outlet is easily-accessible and remove the plug from the mains outlet if you notice any abnormality with the appliance.

VAROVÁNÍ!

Nezakrývejte. Uvnitř nejsou žádné součásti opravitelné uživatelem. S požadavkem na servis se odkáží na kvalifikované servisní oddělení.

Neumisťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným pršením, mechanickými vibracemi nebo šokem.

Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt. Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt.

Umožněte dostatečnou cirkulaci vzduchu a vyhněte se obstrukci ventilátorů (pokud jsou přítomné) pro předejití interního přehřívání. Ventilace nesmí být narušena překrytím zařízení výrobky jako např. noviny, kuchyňské utěrky, záclony apod.

Hlavní kabel umožňuje odpojit zařízení od elektřiny. Ujistěte se, že hlavní napájecí výstup je snadno dostupný a odpojte kabel pokud zaznamenáte jakoukoliv abnormalitu na zařízení.

DVARSELI!

Dækslet må ikke åbnes. Ingen bruger-udskeftelige dele inden. Overlad service til kvalificeret service personale.

Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støv, mekaniske vibrationer eller stød.

Produktet må ikke udsættes for vand eller stænk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet.

Må ikke placeres nær åben ild, tændte stearinlys må ikke placeres på produktet.

Vær sikker på at der er tilstrækkelig luftcirkulation og undgå at dække ventiler (hvis der er nogen) for at undgå at produktet bliver varmt.

Ventilationen må ikke blokeres med overdækning af apparatet med genstande som aviser, dug, gardiner osv.

Stikket bruges til at afbryde apparatet fra strømmen. Sikre at stikkontakten er let tilgængelige, og fjern stikket fra stikkontakten, hvis du bemærker noget unormalt med apparatet.

WAARSCHUWING!

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhoud over aan bevoegd onderhoudspersoneel.

Plaats het product niet in de buurt van een hittebron zoals een radiator of in direct zonlicht of in een stofrijke omgeving, mechanische vibratie of schok.

Plaats het product niet in de buurt van spattende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas.

Er mogen geen open vlammen zoals aangestoken kaarsen op de apparatuur worden geplaatst.

Zorg om overhitting te voorkomen voor voldoende ventilatie en bellemmer ventilatieroosters niet. Bedek het product niet met dingen zoals kranten, tafellakens, gordijnen etc.

De stekker van dit apparaat wordt gebruikt om het apparaat aan en uit te zetten. Zorg ervoor dat het stopcontact gemakkelijk bereikbaar is en haal de stekker uit het stopcontact als u enige onregelmatigheid ondervindt.

EN

VAROITUS!

FI

Älä avaa kanttä. Ei sisällä käyttäjä-huollettavia osia. Huollot saa suorittaa vain pätevä huoltomies.

Älä säilytä tuotetta minkään kuumien lähtöjen kuten patteri tai suorassa auringonpaisteessa, pölyisessä, mekaanisessa värinässä tai iskussa.

Tuotetta ei saa altistaa tippuvalle tai loiskeelle tai nesteitä sisältäviä tuotteita kuten maljakoja eivätkä saa olla tuotteen lähetytyllä.

Avotulita kuten sytytetty kynttilä ei saa olla tuotteen päällä.

Salli riittävä ilmankierto ja vältä tuuletusaukkojen tukkiminen (jos sellaisia on olemassa) estämään sisäisen lämmön muodostuminen. Tuuletusta ei saa estää peittämällä laite esineillä, kuten sanomalehdillä, pöytäliinoilla, verhoilla jne.

Verkkovirtapistoketta käytetään irrottamaan laite verkkovirrasta. Varmista, että pistorasias on helposti saatavilla ja irrota pistotulppa pistorasiasista, jos havaitset jotain epänormaalia laitteessa.

ATTENTION!

FR

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation à du personnel de réparation qualifié. Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques.

L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé dessus.

Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil.

Assurer une circulation d'air suffisante et éviter d'obstruer les fentes (le cas échéant) afin d'éviter une surchauffe interne. La ventilation ne doit pas être bloquée en couvrant l'appareil avec des objets tels que des journaux, des nappes, des rideaux, etc.

La prise secteur est utilisée comme dispositif de débranchement. La prise murale doit être facile d'accès, et en cas d'anomalie de l'appareil, débrancher la prise de courant au niveau de la prise murale.

WARNUNG!

DE

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile. Überlassen Sie Wartungsarbeiten qualifiziertem Fachpersonal.

Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Vibrationen oder Stößen.

Schützen Sie das Produkt vor tropfenden oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt.

Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden.

Sorgen Sie für eine ausreichende Luftzirkulation und vermeiden Sie, dass die Lüftungsschlitze (falls vorhanden) abgedeckt werden, um einen internen Wärmestau zu verhindern. Die Belüftung darf nicht durch Abdecken des Gerätes mit Gegenständen wie Zeitungen, Tischdecken, Vorhängen usw. blockiert werden.

Der Netzstecker dient zum Trennen des Gerätes vom Netz. Vergewissern Sie sich, dass die Steckdose leicht zugänglich ist, und ziehen Sie den Stecker aus der Steckdose, wenn Sie eine Anomalie mit dem Gerät bemerken.

AVVERTIMENTO!

IT

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto. Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock.

Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto.

Non esporre il prodotto a fuoco, candele o oggetti simili.

Assicurarsi la circolazione dell'aria e non ostruire le ventole, se presenti, per evitare il surriscaldamento. La ventilazione non deve subire impedimenti dovuti a giornali, tovaglie, tende, ecc.

La spina principale viene utilizzata per disconnettere il prodotto dalla principale fonte di energia. Assicurarsi che la spina sia facilmente accessibile e disconnettere l'unità nel caso si notassero dei difetti di funzionamento.

ADVARSEL!

NO

Ikke åpne deksleet. Inneholder ingen deler som kan brukes. Overlat reparasjon til kvalifisert servicepersonell.
Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støv, mekanisk vibrasjon eller støt.
Produktet må ikke utsettes for dryppning eller spruting, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet.
Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet.
Tillat tilstrekkelig luft sirkulasjon og unngå å blokkere ventiler (hvis tilstede) for å forhindre intern varmeoppsamling. Pass på at ventilasjon ikke hindres ved å unngå å dekke apparatet med ting som aviser, bordduker, gardiner osv.
Stikkontakten brukes til å koble apparatet fra strømforsyningen.
Forsikre deg om at stikkontakten er lett tilgjengelig og ta stapslet ut av stikkontakten hvis du oppdager uregelmessigheter under bruk av apparatet.

OSTRZEŻENIE!

PL

Nie otwierać pokryw. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla wyszkolonego personelu.
Nie umieszczać produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym wibracjom. Produkt ten nie może być ekspozowany na kapanie lub chłapanie, a przedmioty wypełnione płynami, takie jak wazy, nie powinny być na nim umieszczane.
Źródła otwartego ognia, takie jak np. świece, nie powinny być umieszczane w produkcie.
Należy zapewnić odpowiednią wentylację i unikać blokowania otworów wentylacyjnych, aby uniknąć wewnętrznego wzrostu temperatury. Wentylacja nie powinna być utrudniana poprzez nakrywanie urządzenia gazetami, obrusami czy zasłonami.
Wtyczka sieciowa służy do odłączenia urządzenia od zasilania sieciowego. Należy upewnić się, że gniazdo sieciowe jest łatwo dostępne, a w razie wystąpienia nieprawidłowości w funkcjonowaniu urządzenia odłączyć je od zasilania sieciowego.

ATENÇÃO!

PT

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado.
Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque.
Não mantenha o produto num local húmido ou perto líquidos como vasos, etc.
Não aproxime o produto a fontes de fogo vivo, como velas.
Mantenha o produto num espaço suficientemente arejado de forma a evitar sobre-aquecimento. Não bloqueie a ventilação do instrumento, cobrindo-o com artigos como cortinas, toalhas de mesa ou jornais.
O transformador é utilizado para conectar e desconectar o artigo da principal fonte de energia. Certifique-se que a ficha é facilmente acessível e que o artigo está devidamente ligado à corrente se detectar alguma anomalia com o funcionamento.

VÝSTRAHA!

SK

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko.
Nevystavujte produkt do blízkosti akéhokolvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so slnečným žiarením, nadmerným prášnym prostredím, mechanickým vibráciám alebo šokom.
Produkt nesmie prísť do kontaktu s vodou a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt.
Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkt.
Umožnite dostatočnú cirkuláciu vzduchu a zabráňte obštrukcii ventilačných otvorov (ak sú prítomné) kvôli prevencii vnútorného prehrievania. Ventilácia nesmie byť narušená prekrytím zariadenia výrobkami ako napr. noviny, kuchynské utierky, záclony a pod.
Hlavný kábel umožňuje odpojiť zariadenie od elektriny. Uistite sa, že hlavný napájací výstup je ľahko dostupný a odpojte kábel ak zaznamenáte akukolvek abnormalitu na zariadení.

OPOZORILO!

SI

Ne odpirajte pokrova. V notranjosti ni nobenih delov, ki jih uporabnik lahko sam popravlja. Popravilo prepustite usposobljenemu oseboju.
Ne postavljajte izdelka na lokacijo v bližini vira toplote, kot je radiator, ali na območje, ki je izpostavljeno neposredni sončni svetlobi, pretiranemu prahu, mehanskim tresljajem ali udarcem.
Izdelek ne sme biti izpostavljen kapljanju ali brizganju in nobeni predmeti, napolnjeni z vodo, kot so vaze, se ne smejo postaviti na izdelek.
Nobenega od virov odprtega ognja, kot so vžgane sveče, se ne sme postavljati na izdelek.
Zagotovite zadostno kroženje zraka in umaknite ovire na odprtinah (če obstajajo), zaradi preprečevanja kopičenja notranje toplote. Ventilacija se ne sme ovirati s prekrivanjem naprave s predmeti, kot so časopisi, prti, zavese itn.
Omrežni vtič se uporablja za izklop naprave iz električnega omrežja. Poskrbite, da je omrežna vtičnica zlahka dostopna in izvlecite vtič iz vtičnice, če opazite kakršno koli nepravilnost pri napravi.

¡ADVERTENCIA!

ES

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado.
No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo.
Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato.
No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato.
Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstruya o tape las aberturas con objetos como periódicos, manteles, cortinas, etc.
El enchufe se utiliza para desconectar el producto de la corriente. Si nota algún defecto, desconéctelo de la toma de corriente.

WARNING!

SE

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal.
Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock.
Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten.
Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten.
Tillåt tillräcklig luftcirkulation och blockera ej eventuella ventiler för att undvika intern överhettning. Ventilen bör ej täckas av föremål såsom tidningar, dukar, gardiner etc.
Nätkontakten används för att koppla bort apparaten från eluttaget. Se till att eluttaget är lättåtkomligt och avlägsna kontakten från eluttaget om du upptäcker något abnormt med produkten.


INTRODUCTION

Thank you for purchasing the TOUCHBEAT Drum Kit by Gear4music. To get the most out of your product, please read this manual carefully.

FEATURES

- 36 authentic kits with 950 customisable sounds.
- Play along with 15 built-in songs or jam via Bluetooth.
- 7" touchscreen module for fast, intuitive control.
- Responsive dual-zone mesh pads and custom rubber cymbals for best-in-class feel.
- Sturdy, height-adjustable metal frame for performers of all sizes and styles.

OVERVIEW

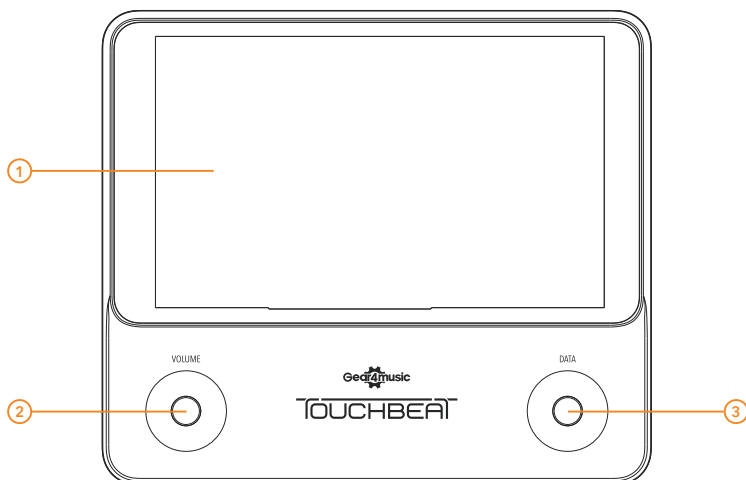

FRONT PANEL

1. TOUCHSCREEN

Multi-touch control surface providing access to all module functions (Home, Main Menu, Settings, Edit, Save). Context-sensitive widgets and soft keys update per screen. Gestures supported: tap, swipe (horizontal kit browsing).


2. MAIN VOLUME

Rotary master level for all audio outputs (headphones and line outs). This is a global control; it does not alter individual pad/kit balances – use Edit Mode → Volume for per-trigger levels.

3. DATA CONTROL (DATA WHEEL/ENCODER)

Detented rotary control for fast parameter entry and list navigation. When a parameter is highlighted (orange), turning the wheel adjusts the value or steps through items. In Kit Select on Home, it functions like the left/right arrows for rapid kit cycling.

FEATURES

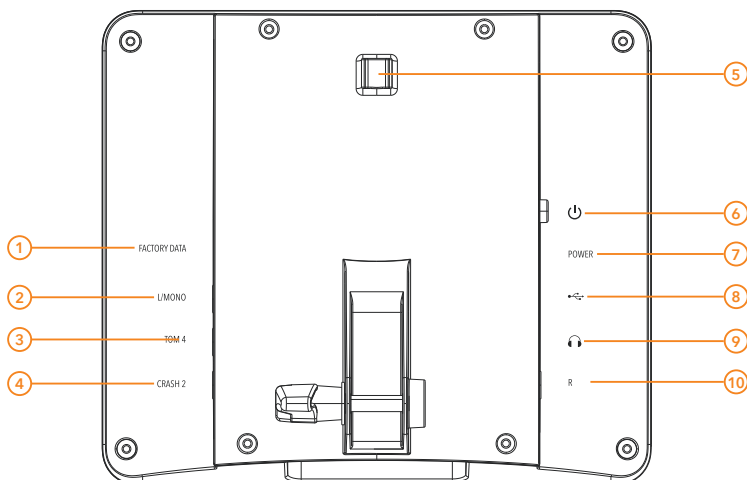

REAR PANEL


- 1. USB-A (SERVICE PORT)**
Reserved for service/maintenance. No user-serviceable functionality. Do not attempt device charging or media playback here.
- 2. L/MONO OUTPUT – 6.35 MM (1/4") TS, UNBALANCED LINE LEVEL**
Connect to an amp, powered speaker, mixer, or audio interface. Use L/MONO by itself for mono rigs. For stereo rigs, use both L/MONO and R.
- 3. R OUTPUT – 6.35 MM (1/4") TS, UNBALANCED LINE LEVEL**
Right channel for stereo operation. Use only if L/MONO is also connected. For mono PA/monitor setups, use L/MONO alone.
- 4. CRASH 2 TRIGGER INPUT**
Additional crash cymbal input. TOUCHBEAT Plus: this port is typically pre-allocated to the included extra cymbal.
- 5. DRUM KEY HOLDER**
Storage slot for the included drum key—handy for quick rack/tension adjustments.
- 6. POWER BUTTON**
Short press toggles system ON/OFF. Use proper shutdown (short press) rather than directly disconnecting the power supply from the unit.
- 7. DC POWER INPUT**
Use only the supplied PSU (correct voltage, current and polarity). Using an incorrect PSU may damage the unit.
- 8. USB (COMPUTER) – USB-MIDI DEVICE**
Connect to a computer/host to transmit MIDI from pads and controls to a DAW or virtual instrument. Use when playing software drums/samplers. (No user audio over this port).
- 9. HEADPHONES – 3.5 MM (1/8") TRS**
Stereo mini-jack for silent practice. Auto-mute: inserting a plug mutes both L/MONO and R outputs. Removing the plug restores the line outputs.
- 10. TOM 4 TRIGGER INPUT**
Additional tom pad input. TOUCHBEAT Plus: this port is typically pre-allocated to the included extra tom.

HOME PAGE

OVERVIEW

The Home page is your performance hub—a clean, at-a-glance view for loading kits, checking system status. Browse kits by swiping, tapping the on-screen arrows, or turning the Data Wheel; the kit title and artwork update instantly as selections load.

Contextual soft keys give one-touch access to Main Menu, Settings, and Edit, while Save is intentionally disabled here to prevent accidental overwrites (use it within edit/config pages).

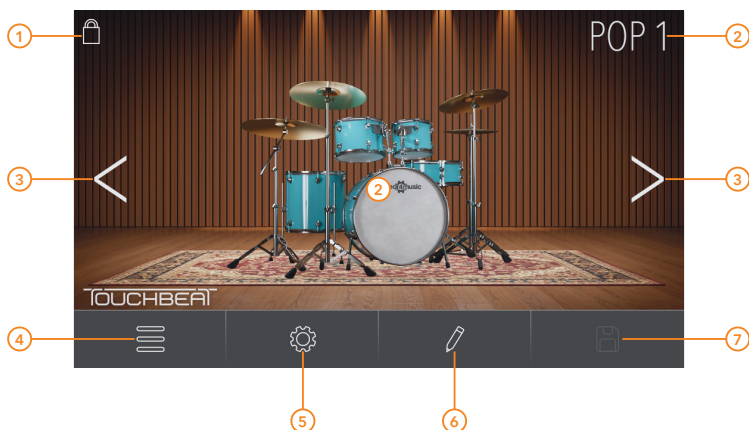

1. SCREEN LOCK

Locks the touchscreen (ignores touches) to prevent accidental changes mid-performance. Unlock with a repeat press.

2. KIT TITLE & IMAGE

Shows the currently loaded kit. Both update immediately during kit browsing.

3. KIT SELECTION

[Arrow] – tap left/right to step through kits.
[Swipe] – drag left/right across the kit area.
[Data Wheel] – rotate to scroll kits rapidly.

Note: Changes are instant; no confirmation required.

4. MAIN MENU

Opens Kits and Songs selection pages.

5. SETTINGS

Opens Utilities, Master EQ, Metronome, Reverb (system & global audio functions).

6. EDIT

Opens per-pad trigger and sound editing.


7. SAVE (CONTEXTUAL)

Inactive on Home. Appears on pages where settings can be stored.

MAIN MENU


OVERVIEW

The Main Menu is the launch point for selecting kits and play-along songs. Return to step back one level, and Home to exit without committing pending changes.

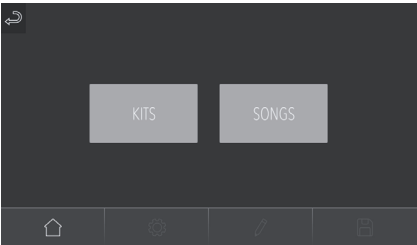

KITS (MAIN MENU → KITS)

Browse by Pop, Rock, Jazz, World, Electronic, User. Each genre contains six configurations.

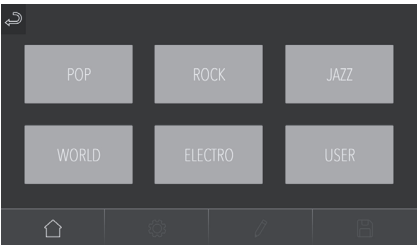

Tap a kit to load it, the module will then automatically return to the Home screen.




OVERVIEW

SONGS

(MAIN MENU → SONGS)

Choose a genre: Pop, Rock, Jazz, World, Electronic.
Each genre includes three songs.

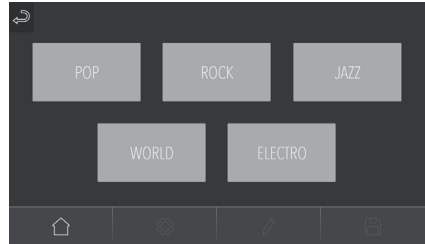


Tap a song to highlight it (orange), then tap Play.
The song loops continuously until Pause is pressed.

Drum Mute:

Toggles the embedded drum performance so you can play the drum part yourself.

Background Playback:

You may navigate to other pages (e.g., change kits, edit sounds); playback continues until paused.

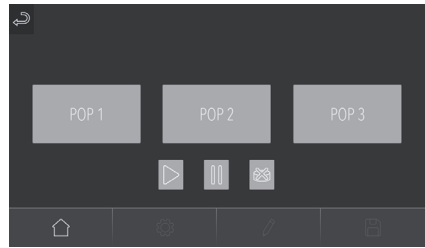

SETTINGS

Press the cog icon on the home screen to access the Settings menu and control Utilities, Master EQ, Metronome and Reverb settings.

Access the individual settings by pressing on their menu buttons.

Press the home icon to return to the home screen.




UTILITIES

(SETTINGS → UTILITIES)

Use this menu to control data resets, display brightness, hi-hat calibration and firmware information.

Access the individual settings by pressing on their menu buttons.

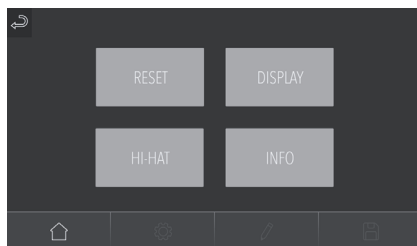

RESET

(SETTINGS → UTILITIES → RESET)

Three reset scopes are available:

All Data – Full factory reset. Restores all parameters and deletes all User kits.

Preset Data – Resets system preferences (Bluetooth pairing, brightness, hi-hat calibration, etc.) to defaults. User kits are preserved.

User Data – Deletes all User kits only; system preferences remain unchanged.

Note – Irreversible Action.

Once triggered, the chosen data is permanently deleted. The screen confirms with "Reset complete". Before resetting, note which User slots contain important kits so you can rebuild them if needed.



SETTINGS


DISPLAY BRIGHTNESS

(SETTINGS → UTILITIES → DISPLAY)

Range -10 ... 0 ... +10 (0 = default).

Use < / > to adjust. Tap Save to apply and return to Home.

Use case: dim for dark stages, brighten for daylight rehearsal rooms.

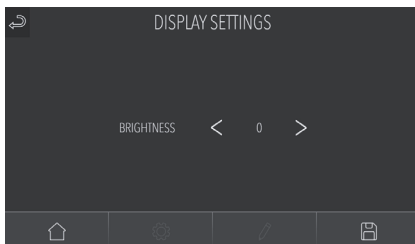

HI-HAT SETTINGS

(SETTINGS → UTILITIES → HI-HAT)

Tailor the hi-hat pedal response to your hardware and playing style.

Type:

PEDAL (foot-switch style controller), REMOTE (independent hi-hat).

Selecting a type loads appropriate internal curves and sensitivities.

Open

(0-10) – Pedal travel at which open sounds begin triggering.

Lower values (0-3): opens sooner (short pedal release).

Higher values (8-10): opens later (requires wider pedal release).

H Open


(0-10) – Threshold behavior for half-open articulation.

Adjust after OPEN.

N Close

(0-10) – Threshold for closed/closing detection (tight “chick” feel).

Increase if closed notes feel too loose; decrease if they choke too easily.

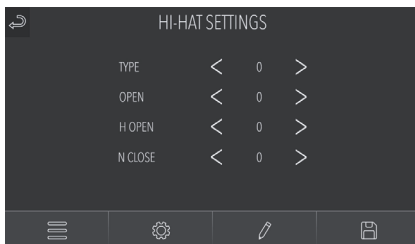

Recommended calibration workflow:

1. Set Type to match your hardware.
2. Start with OPEN = 5, H OPEN = 5, N CLOSE = 5.
3. Play slow openings/closings and eighth-note chicks; adjust OPEN until open timing feels natural.
4. Refine half-open bark with H OPEN.
5. Tighten up closed articulation with N CLOSE.
6. Tap Save.

SETTINGS

INFO

(SETTINGS → UTILITIES → INFO)

Displays the installed firmware version. Read-only; no user actions here.

MASTER EQ

(SETTINGS → MASTER EQ)


Applies to all module audio (kits, songs, Bluetooth).

Low, Mid, High:

Each -5...0...+5 (0 = flat). Use subtle adjustments (± 1 -2) to adapt to room acoustics or speakers. Tap Save to commit and auto-return to Home.

Start flat for FOH/recording

Use Edit → EQ for tone shaping within a kit before reaching for Master EQ.

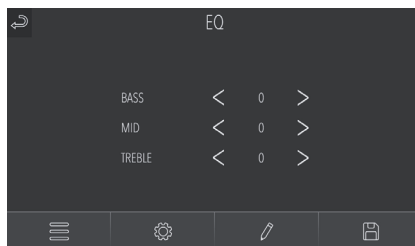

METRONOME

(SETTINGS → METRONOME)

Practice click with flexible sound, level, and meter.

Sound:

Choose from 5 click types (classic mechanical to modern beeps).

Volume:

0-10 relative to current kit level.

Tempo:

40-240 BPM in single-BPM increments. Note, tempo relates to crotchet (1/4 note) speed.

Time:



Selectable meters with accented beat 1: 1/1, 2/2, 1/4, 2/4, 3/4, 4/4, 6/4, 3/8, 6/8, 8/8, 9/8.

Transport:

Play starts; Pause stops. Tap Save to store your metronome configuration and return to Home. The metronome continues while you navigate other pages.

Quick Access:

For quick access, tap the metronome icon on Home to jump into the Metronome page.

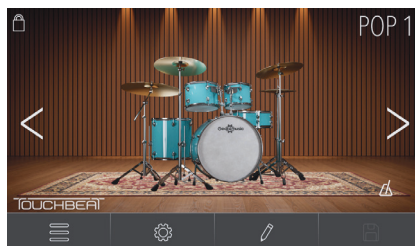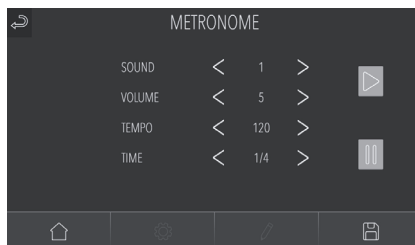

SETTINGS

REVERB

(SETTINGS → REVERB)

Each kit can carry its own ambience settings.

Type:

Choose from 8 algorithms (e.g., Room, Hall, Cathedral, Plate).

Level:

0–10 (send amount into the reverb).

Time:


0–10 (decay length).

Room:

5 selectable virtual room sizes.

Save Behavior:

Tap Save → choose a User slot. These settings will change the global reverb settings when the Save button is pressed. The module returns to Home and confirms saving.

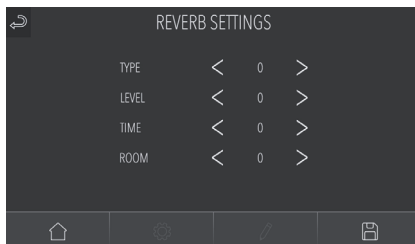

BLUETOOTH

(HOMESCREEN → BLUETOOTH ICON)

Streams external audio (e.g., songs from a phone) into the module for play-along.

Status symbols:

White Bluetooth icon with line through: Bluetooth if turned off.

White Bluetooth icon: Bluetooth is on, ready to pair.

Orange Bluetooth icon: The module has connected to your Bluetooth device.

Turn On:

By default, the Bluetooth will be engaged, displayed by a white Bluetooth icon on the homepage.

However, if a white Bluetooth icon with line through is present, press the icon. This will engage Bluetooth ready for pairing, and a white Bluetooth icon (no line) will appear.

Toggle On:

Utilities → Bluetooth. You are returned to Home upon pressing; a Bluetooth icon with a cross appears (enabled, not paired).

Auto-Reconnect:

Previously paired devices reconnect automatically, and the orange Bluetooth icon will appear on the module homepage.

First-Time Pairing:




Ensure that the Bluetooth is switched on. With your external device, select TOUCHBEAT in the Bluetooth list. Once connected, the Bluetooth icon on the module homepage will illuminate orange.

Toggle Off:

Utilities → Bluetooth. On the homepage, press the Bluetooth icon. A white Bluetooth icon with line through will appear.

Monitoring Note:

Bluetooth is intended for backing track playback. For monitoring your drums, use wired headphones/line outputs for the most immediate response.

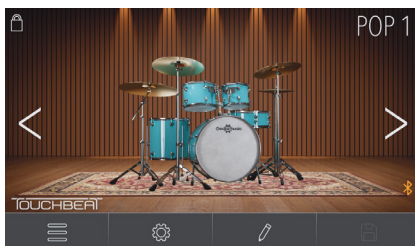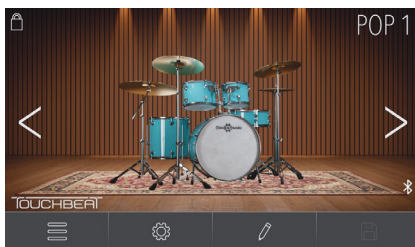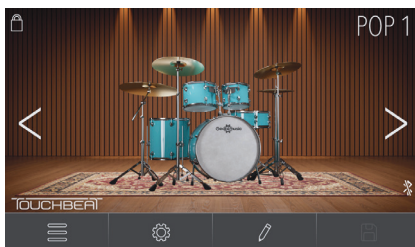


EDIT

EDIT MODE

Edit Mode is where you fine-tune the feel and mix of any of the pre-voiced kits at the per-pad level. Select a trigger first (tap the selector or simply strike the pad), then audition changes in real time as you assign any of the 950 internal sounds and adjust Sensitivity, Pitch, Volume, EQ (High/Low), and Pan to taste.



Edits are non-destructive until saved; when you tap Save, the entire kit state is written to a User slot (overwriting if occupied). Use Return to step back one level, or Home to exit without committing pending changes - handy when experimenting for different rooms, players, or monitoring setups.

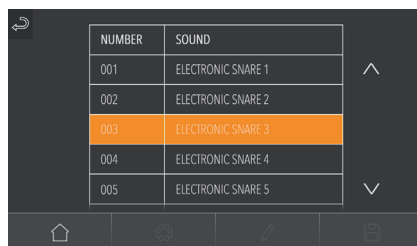

1. Trigger Select

Choose which pad you're editing first. Use the on-screen ←/→ trigger selector, or strike the desired pad/cymbal/pedal to auto-select it (fastest).

2. Sound Assignment

The module provides 950 internal sounds, assignable to any trigger. Tap ←/→ beside the sound name for small steps, or tap the sound name to open the sound bank; browse with ^ / v or Data Wheel; tap to select and return. (e.g., push kick +2, pull crash -1).

3. Sensitivity (0-10)

Sets how hard you must strike to reach maximum velocity. 0: very firm strike needed for loudest level. 10: light strike reaches the loudest level quickly. Use to match pad feel to your touch and stick choice.

4. Pitch

Tunes the selected sound up/down (like drum tuning on an acoustic kit). Useful for matching tom intervals or tightening a snare.

5. Volume (Per Trigger)

Balances each element against the rest of the kit (e.g., push kick +2, pull crash -1).

6. EQ – High / Low (Per Trigger)

Tone shaping for that trigger only. Example: If a floor tom is too boomy, reduce Low a step or two. Example: Add High to bring out snare crack.

7. Pan (0-10)

Stereo placement per trigger (0 = hard left, 10 = hard right). For mono rigs (L/MONO only), keep critical drums near the center (4-6).

8. Saving Edits

Tap Save → choose a User slot. This stores all current kit parameters (trigger settings, sound assignments, per-trigger EQ/vol/pan, and the kit's current Reverb page settings) into that slot. Confirmation appears on Home. Overwrite Reminder: Writing to an existing User kit replaces it.

PRESETS

SONGS LIST

NUMBER	NAME
1.	Pop 1
2.	Pop 2
3.	Rock 1
4.	Rock 2
5.	Jazz 1
6.	Jazz 2
7.	World 1
8.	World 2
9.	Electronic 1
10.	Electronic 2

KITS LIST

NUMBER	NAME
1.	Pop 1
2.	Pop 2
3.	Pop 3
4.	Pop 4
5.	Pop 5
6.	Rock 1
7.	Rock 2
8.	Rock 3
9.	Rock 4
10.	Rock 5
11.	Jazz 1
12.	Jazz 2
13.	Jazz 3
14.	Jazz 4
15.	Jazz 5
16.	World 1
17.	World 2
18.	World 3
19.	World 4
20.	World 5
21.	Electronic 1
22.	Electronic 2
23.	Electronic 3
24.	Electronic 4
25.	Electronic 5

PRESETS

VOICE LIST

NUMBER	NAME	NUMBER	NAME	NUMBER	NAME
KICK		44.	Kick Jungle 2 Comp Medium	TOM	
1.	Kick	45.	Kick Jungle 2 Comp XL	87.	Kick Argon 1
2.	Kick Rock	46.	Kick Jungle 2 Medium	88.	Kick Argon 2
3.	Kick Rock 1	47.	Kick Jungle 2 XL	89.	Kick Argon 3
4.	Kick Rock 2	48.	Kick Jungle 3 Bright	90.	Kick Argon 4
5.	Kick Pop 1 Bright	49.	Kick Jungle 3 Deep	91.	Kick Argon 5
6.	Kick Pop 1 Medium	50.	Kick Jungle 3 Medium	92.	Kick Argon 6
7.	Kick Pop 1 Soft	51.	Kick Jungle 3 XL	93.	Kick BottlePoppin 1
8.	Kick Pop 1 XL	E-KICK		94.	Kick BottlePoppin 3
9.	Kick Pop 2	52.	Kick Electro8 1	95.	Kick BottlePoppin 4
10.	Kick Pop 3 bright	53.	Kick Electro8 Long	96.	Kick BottlePoppin 5
11.	Kick Pop 3 Medium	54.	Kick Electro8 Long Soft	97.	Kick BottlePoppin 6
12.	Kick Pop 3 Soft	55.	Kick Electro8 2	98.	Kick BottlePoppin 7
13.	Kick Pop 3 XL	56.	Kick Electro8 Short	99.	Kick BottlePoppin 8
14.	Kick Pop 4 Bright	57.	Kick Electro9 1	100.	Kick Bouncin 1
15.	Kick Pop 4 Deep	58.	Kick Electro9 1L	101.	Kick Bouncin 2
16.	Kick Pop 4 Soft	59.	Kick Electro9 1V	102.	Kick Bouncin 3
17.	Kick Pop 4 XL	60.	Kick Electro9 2	103.	Kick Bouncin 4
18.	Kick Pop 5	61.	Kick Electro9 2L	104.	Kick Bouncin 5
19.	Kick Vintage 1 Long	62.	Kick Electro9 2V	105.	Kick Bouncin 6
20.	Kick Vintage 2 Released Bright	63.	Kick Electro5 1	106.	Kick Bouncin 7
21.	Kick Vintage 2 Released Medium	64.	Kick Electro5 Deep	107.	Kick Bouncin 8
22.	Kick Vintage 2 Released XL	65.	Kick Electro5 Short	108.	Kick Concrete 1
23.	Kick Vintage 3 Stuck Bright	66.	Kick Electro5 V	109.	Kick Concrete 2
24.	Kick Vintage 3 Stuck Bright Comp	67.	Alphabetical Pop Kick	110.	Kick Concrete 3
25.	Kick Vintage 3 Stuck Deep	68.	Kick Absynth 1	111.	Kick Concrete 4
26.	Kick Vintage 3 Stuck Medium	69.	Kick Absynth 2 V1	112.	Kick Concrete 5
27.	Kick Vintage 3 Stuck XL	70.	Kick Absynth 4	113.	Kick Concrete 6
28.	Kick Metal 1 Bright	71.	Kick Absynth 5	114.	Kick Concrete 7
29.	Kick Metal 1 Deep	72.	Kick Absynth 6	115.	Kick Jungle Electro 1
30.	Kick Metal 1 Medium	73.	Kick Absynth 7	116.	Kick Jungle Electro 2
31.	Kick Metal 1 XL	74.	Kick Absynth 8	117.	Kick Jungle Electro 3
32.	Kick Metal 2	75.	Kick Absynth 9	118.	Kick Jungle Electro 4 V1
33.	Kick Metal 2 Dry	76.	Kick Afrobeat 1	119.	Kick Jungle Electro 5
34.	Kick Metal 2 L	77.	Kick Afrobeat 2	120.	Kick Jungle Electro 6
35.	Kick Metal 2 XL	78.	Kick Afrobeat 3	121.	Kick Jungle Electro 7
36.	Kick Jazz 1 Bright	79.	Kick Arena 1	122.	Kick Jungle Electro 8
37.	Kick Jazz 1 Deep	80.	Kick Arena 2	123.	Kick World 1
38.	Kick Jazz 1 Soft	81.	Kick Arena 3	124.	Kick World 2
39.	Kick Jazz 1 XL	82.	Kick Arena 4	125.	Kick World 3
40.	Kick Jungle 1	83.	Kick Arena 5	126.	Kick World 4
41.	Kick Jungle 2 Bright	84.	Kick Arena 6	127.	Kick World 5
42.	Kick Jungle 2 Comp	85.	Kick Arena 7	128.	Kick World 6
43.	Kick Jungle 2 Comp Bright	86.	Kick Arena 8	129.	Kick World 7

PRESETS

VOICE LIST

NUMBER	NAME	NUMBER	NAME	NUMBER	NAME
130.	Kick Jack 1	176.	Snare Metal 1 Open	222.	Snare Jungle 2 Rimshot
131.	Kick Jack 2	177.	Snare Metal 2 Op Rimshot XL	223.	Snare Jungle 3
132.	Kick Jack 3	178.	Snare Metal 2 Open 2	224.	Snare Jungle 3 Rimshot
133.	Kick Jack 4	179.	Snare Metal 2 Open Rimshot	225.	Snare Jungle 2 Rimshot 2
134.	Kick Jack 5	180.	Snare Metal 3 Rods S	226.	Snare Jungle 1 Rimshot XL
SNARE		181.	Snare Metal 3 Rods Rimshot	227.	Snare Jungle 1 Rimshot 2
135.	Snare	182.	Snare Metal 4 XL	E-SNARE	
136.	Snare Rim	183.	Snare Metal 1 Open Rimshot		
137.	Snare Xst	184.	Snare Metal 1 rods z3 XL	228.	Snare Electro5 1
138.	Snare Rock	185.	Snare Metal 4 Rimshot	229.	Snare Electro5 2
139.	Snare Rock CS	186.	Snare Metal 1 Open Compact	230.	Snare Electro5 3
140.	Snare Rock Rim	187.	Snare Metal 2 Op Rimshot	231.	Snare Electro8 3
142.	Snare Rock 1 Rimshot	188.	Snare Metal 1 Op XL	232.	Snare Electro8 RS
143.	Snare Rock 1 Cross Stick	189.	Snare Metal 3 Open Rods	233.	Snare Electro9 1
144.	Snare Rock 2 S	190.	Snare Metal 3 Rods XL	234.	Snare Electro9 2
145.	Snare Rock 1 Rimshot 2	191.	Snare Metal 4 Open S	235.	Snare Electro9 RS
146.	Snare Rock 1 Cross Stick 2	192.	Snare Metal 4 S	236.	Alphabetical Pop Snare S
147.	Snare Rock 2 S snappy	193.	Snare Jazz 1	237.	Alphabetical Pop Snare R
148.	Snare Rock 1 Rimshot 3	194.	Snare Jazz 1 Rimshot Light	238.	Alphabetical Pop Snare Clap
149.	Snare Rock 1 Cross Stick 3	195.	Snare Jazz 1 Cross Stick	239.	Snare Absynth 1
150.	Snare Rock 2 S mezzo	196.	Snare Jazz 1 Snappy	240.	Snare Absynth 2
151.	Snare Rock 2 Rim Shot	197.	Snare Jazz 1 Rimshot Full XL	241.	Snare Absynth 3
152.	Snare Rock 2 Cross Stick	198.	Snare Jazz 1 Cross Stick XL	242.	Snare Absynth 4
153.	Snare Rock 3	199.	Snare Jazz-1 XL	243.	Snare Absynth 5
154.	Snare Rock 2 XL	200.	Snare Jazz 1 Rimshot Full2	244.	Snare Absynth 6
155.	Snare Rock 1 Rim Shot X	201.	Snare Jazz 1 Z2 XL	245.	Snare Absynth 7
156.	Snare Rock 1 Rim Shot 4	202.	Snare Jazz 1 Rimshot Light2	246.	Snare Absynth 8
157.	Snare Rock 2 Rim Shot X	203.	Snare Jazz 1 Rimshot Full	247.	Snare Absynth 9
158.	Snare Rock 2 Rim Shot 2 X	204.	Snare Jazz 1 Rimshot Light XL	248.	Snare Absynth 10
159.	Snare Rock 2 Rim Shot3 X	205.	Snare Brush 1	249.	Snare Absynth 11
160.	Snare Rock 3 Rim Shot	206.	Snare Brush 1 Open	250.	Snare Afrobeat 1
161.	Snare Pop 1	207.	Snare Brush 2	251.	Snare Afrobeat 2
162.	Snare Pop 1 Hi Rimshot	208.	Snare Brush 1 Rimshot	252.	Snare Afrobeat 3
163.	Snare Pop 2 Cross Stick	209.	Snare Brush 1 Open XL	253.	Snare Arena 1
164.	Snare Pop 3	210.	Snare Brush 1 XL	254.	Snare Arena 2
165.	Snare Pop 1 Hi Rimshot 2	211.	Snare Brush 2 XL	255.	Snare Arena 3
166.	Snare Pop 2 Cross Stick 2	212.	Snare Fiesta 1 Cross Stick	256.	Snare Arena 4
167.	Snare Pop 1 Lo Rimshot	213.	Snare Fiesta 1	257.	Snare Arena 5
168.	Snare Pop 1 Lo Rimshot 2	214.	Snare Fiesta 1 Rimshot	258.	Snare Arena 6
169.	Snare Pop 1 Lo Rimshot 3	215.	Snare Fiesta 2	259.	Snare Argon 1
170.	Snare Pop 1 Lo Rimshot X	216.	Snare Fiesta 2 Rimshot	260.	Snare Argon 2 V1
171.	Snare Vintage 1	217.	Snare Fiesta 2 Rimshot 2	261.	Snare Argon 3 V1
172.	Snare Vintage 1 Rimshot X	218.	Snare Fiesta 1 Rimshot 2	262.	Snare Argon 4
173.	Snare Vintage 1 Cross Stick	219.	Snare Jungle 1	263.	Snare Argon 5
174.	Snare Vintage 1 Z2	220.	Snare Jungle 1 Rimshot	264.	Snare Argon 6 V1
175.	Snare Vintage 1 Rimshot	221.	Snare Jungle 2	265.	Snare Argon 7

PRESETS

VOICE LIST

NUMBER	NAME	NUMBER	NAME	NUMBER	NAME
266.	Snare Argon 8	310.	Snare Jack 1	353.	Tom Pop1 1
267.	Snare Argon 9	311.	Snare Jack 2	354.	Tom Pop1 1 Rim RLS
268.	Snare Argon 10	312.	Snare Jack 3	355.	Tom Pop1 2
269.	Snare Argon 11	313.	Snare Jack 4	356.	Tom Pop1 2 Rim RLS
270.	Snare Argon 12	314.	Snare Jack 5	357.	Tom Pop1 3
271.	Noise Argon 1	315.	Snare Jack 6	358.	Tom Pop1 3 Rim RLS
272.	Noise Argon 2	316.	Snare Jack 7	359.	Tom Pop1 1 Rim
273.	Noise Argon 3	TOM		360.	Tom Pop1 2 Rim
274.	Rim Argon	317.	Tom JP 10	361.	Tom Pop1 3 Rim
275.	Rimshot Argon	318.	Tom JP 10 Rim	362.	Tom Vintage1 1
276.	Snare Bottle Poppin 1	319.	Tom JP 2	363.	Tom Vintage1 1 Rim RLS
277.	Snare Bottle Poppin 2	320.	Tom JP 12 Rim	364.	Tom Vintage1 2
278.	Snare Bottle Poppin 3	321.	Tom JP 16	365.	Tom Vintage1 2 Rim RLS
279.	Snare Bottle Poppin 4	322.	Tom JP 16 Rim	366.	Tom Vintage1 3
280.	Snare Bottle Poppin 5	323.	Tom1 Rock	367.	Tom Vintage1 3 Rim RLS
281.	Snare Bottle Poppin 6	324.	Tom1 Rock Rim	368.	Tom Vintage1 1 Rim
282.	Snare Bottle Poppin 7	325.	Tom2 Rock	369.	Tom Vintage1 2 Rim
283.	Snare Bottle Poppin 8	326.	Tom2 Rock Rim	370.	Tom Vintage1 3 Rim
284.	Snare Bouncin 1	327.	Tom3 Rock	371.	Tom Metal1 1 XL
285.	Snare Bouncin 2	328.	Tom3 Rock Rim	372.	Tom Metal1 1 Rim
286.	Snare Bouncin 3	329.	Tom Rock1 1	373.	Tom Metal1 2 XL
287.	Snare Bouncin 4	330.	Tom Rock1 1 Rim	374.	Tom Metal1 2 Rim
288.	Snare Bouncin 5	331.	Tom Rock1 2	375.	Tom Metal1 3 XL
289.	Snare Bouncin 6	332.	Tom Rock1 2 Rim	376.	Tom Metal1 3 Rim
290.	Snare Bouncin 7	333.	Tom Rock1 3	377.	Tom Metal2 1 XL
291.	Snare Bouncin 8	334.	Tom Rock1 3 Rim	378.	Tom Metal2 1 Rim
292.	Snare Jungle Electro 1	335.	Tom Rock1 1 XL	379.	Tom Metal2 2 XL
293.	Snare Jungle Electro 2	336.	Tom Rock1 1 Rim RLS	380.	Tom Metal2 2 Rim
294.	Snare Jungle Electro 3	337.	Tom Rock1 2 XL	381.	Tom Metal2 3 XL
295.	Snare Jungle Electro 4	338.	Tom Rock1 2 Rim RLS	382.	Tom Metal2 3 Rim
296.	Snare Jungle Electro 5	339.	Tom Rock1 3 XL	383.	Tom Metal2 4 XL
297.	Snare Jungle Electro 7	340.	Tom Rock1 3 Rim RLS	384.	Tom Metal2 4 Rim
298.	Snare Jungle Electro 8	341.	Tom Rock1 EQ 1	385.	Tom Metal1 1 Rim RLS
299.	Snare Jungle Electro 9	342.	Tom Rock1 EQ 1 Rim	386.	Tom Metal1 2 Rim RLS
300.	Snare Concrete 1	343.	Tom Rock1 EQ 2	387.	Tom Metal1 3 Rim RLS
301.	Snare Concrete 2	344.	Tom Rock1 EQ 2 Rim	388.	Tom Metal2 1 Rim RLS
302.	Snare Concrete 3	345.	Tom Rock1 EQ 3	389.	Tom Metal2 2 Rim RLS
303.	Snare Concrete 4	346.	Tom Rock1 EQ 3 Rim	390.	Tom Metal2 3 Rim RLS
304.	Snare Concrete 5	347.	Tom Rock1 EQ 1 XL	391.	Tom Metal2 4 Rim RLS
305.	Snare Concrete 6	348.	Tom Rock1 EQ 1 Rim RLS	392.	Tom Jazz1 1 XL
306.	Snare Concrete 7	349.	Tom Rock1 EQ 2 XL	393.	Tom Jazz1 1 Rim
307.	Snare Concrete 8	350.	Tom Rock1 EQ 2 Rim RLS	394.	Tom Jazz2 1 XL
308.	Snare Concrete 9	351.	Tom Rock1 EQ 3 XL	395.	Tom Jazz2 1 Rim
309.	Snare Concrete 10	352.	Tom Rock1 EQ 3 Rim RLS	396.	Tom Jazz1 1 Rim RLS

PRESETS

VOICE LIST

NUMBER	NAME	NUMBER	NAME	NUMBER	NAME
397.	Tom Jazz2 1 Rim RLS	441.	Tom Bottle Poppin 3	485.	Ride Brush 1 Top XL
398.	Tom Brush1 1 XL	442.	Tom Bottle Poppin 4	486.	Ride Brush 1 Bell XL
399.	Tom Bass Brush1 XL	443.	Tom Bottle Poppin 5	487.	Ride Brush 2 Top Hard
400.	Tom Fiesta 1	444.	Tom Bottle Poppin 6	488.	Ride Brush 2 Bell
401.	Tom Fiesta 1 Rim	445.	Tom Bottle Poppin 7	489.	Ride Brush 2 Edge
402.	Tom Fiesta 2	446.	Tom Bottle Poppin 8	490.	Ride Brush 2 Top Soft
403.	Tom Fiesta 2 Rim	447.	Tom Bouncin 1	491.	Ride Brush 2 Top XL
404.	Tom Fiesta 3	448.	Tom Bouncin 2	492.	Ride Fiesta 1 Top
405.	Tom Fiesta 3 Rim	449.	Tom Bouncin 3	493.	Ride Fiesta 2 Top
406.	Tom Fiesta 4	450.	Tom Bouncin 4	494.	Ride Jungle 1 Top
407.	Tom Fiesta 4 Rim	451.	Tom Jungle Electro 2	495.	Ride Jungle 1 Bell
408.	Tom Fiesta 1 Rim RLS	452.	Tom Jungle Electro 3	496.	Ride Jungle 2 Shoulder
409.	Tom Fiesta 2 Rim RLS	RIDE		497.	Ride Jungle 1 Bell EQ
410.	Tom Fiesta 3 Rim RLS	453.	Ride K20 Bell	498.	Alphabetical Pop Ride S
411.	Tom Fiesta 4 Rim RLS	454.	Ride K20 Eg	499.	Alphabetical Pop Ride R
412.	Tom Jungle1 1	455.	Ride K20	500.	Alphabetical Pop Ride BELL
413.	Tom Jungle1 1 Rim	456.	Ride Rock Ping24 Shoulder	501.	Ride Glowstix1
414.	Tom Jungle1 2	457.	Ride Rock Ping24 Bell	502.	Ride Glowstix2
415.	Tom Jungle1 2-Rim	458.	Ride Rock Ping24 Edge	503.	Ride Glowstix3
416.	Tom Jungle1 3	459.	Ride Dark 20 Shoulder	504.	Ride Glowstix4
417.	Tom Jungle1 3 Rim	460.	Ride Rock Ping24 Velo Bell	505.	Ride Gong V8
418.	Tom Jungle1 1 Rim RLS	461.	Ride Dark 20 Edge	506.	RideBell Gong V8
419.	Tom Jungle1 2 Rim RLS	462.	Ride Dark 20 Bell	507.	Bell Afrobeat 1
420.	Tom Jungle1 3 Rim RLS	463.	Ride Dark 20 Velo Bell	508.	Bell Afrobeat 2
E-TOM		464.	Ride Rock 1 Top	509.	Bell Afrobeat 3
421.	Tom Electro1 1	465.	Ride Rock 1 Bell XL	510.	Bell Afrobeat 4
422.	Tom Electro1 2	466.	Ride Rock 1 Bell L	511.	Ride Arena 1
423.	Tom Electro1 3	467.	Ride Rock 1 Bell	512.	Ride Arena 2
424.	Tom Electro2 1	468.	Ride Vintage 1 Shoulder	513.	Ride Arena 3
425.	Tom Electro2 2	469.	Ride Vintage 1 Bell	514.	Ride Neuron 1
426.	Tom Electro2 3	470.	Ride Metal 1 Shoulder	515.	Ride Neuron 2
427.	Tom Electro3	471.	Ride Metal 1 Bell	516.	Ride Bell Neuron
428.	Tom Electro Rim	472.	Ride Jazz 1 Top	517.	Bongo Bouncin
429.	Tom Electro3 Rim	473.	Ride Jazz 1 Bell	518.	Ride World
430.	Tom Absynth 1	474.	Ride Jazz 1 Top XL	519.	Ride Orgami
431.	Tom Absynth 2	475.	Ride Jazz 1 Bell XL	520.	Ride Overtime
432.	Tom Absynth 3	476.	Ride Jazz 2 Top	521.	Ride Rare 1
433.	Tom Absynth 4	477.	Ride Jazz 2 Bell	522.	Ride Rare 2
434.	Tom Absynth 5	478.	Ride Jazz 2 Top XL	523.	Ride Shooter
435.	Tom Absynth 6	479.	Ride Jazz 2 Bell XL	524.	Ride Sintheti
436.	Tom Absynth 7	480.	Ride Jazz 1 Top L	525.	Ride Alkaloid V1
437.	Tom Absynth 8	481.	Ride Jazz 2 Top2	526.	Ride Alkaloid V2
438.	Tom Absynth 9	482.	Ride Jazz 2 Top2 XL	527.	Ride Alkaloid V3
439.	Tom Bottle Poppin 1	483.	Ride Brush 1 Top	528.	Ride Alkaloid V4
440.	Tom Bottle Poppin 2	484.	Ride Brush 1 Bell	529.	Ride Alkaloid V5

PRESETS

VOICE LIST

NUMBER	NAME	NUMBER	NAME	NUMBER	NAME
532.	Ride Soulesque 2	576.	Alphabetical Pop CRASH1 R	621.	HH Rock Top Half1
533.	Ride X	577.	Alphabetical Pop CRASH1 S	622.	HH Rock Top Closed
CRASH		578.	Alphabetical Pop CRASH2 R	623.	HH Rock Edge Open XL
534.	Wind Chimes One Shot	579.	Alphabetical Pop CRASH2 S	624.	HH Rock Edge Half4
535.	Crash KDark 16	580.	Balafon Afrobeat 1	625.	HH Rock Edge Half3
536.	Crash KDark 18 Eg	581.	Balafon Afrobeat 2	626.	HH Rock Edge Half2
537.	Crash KDark 18	582.	Balafon Afrobeat 3	6267.	HH Rock Edge Half1
538.	Crash Rock V20 Shoulder	583.	Balafon Afrobeat 4	628.	HH Rock Edge Closed XL
539.	Crash Rock V20 Edge	584.	Crash Arena 1	629.	HH Rock Edge Closed
540.	Crash Dark C16 Shoulder	585.	Crash Arena 2	630.	HH Rock Chick
541.	Crash Dark C16 Edge	586.	Combo Argon	631.	HH Rock Splash
542.	Crash Dark B18 Shoulder	587.	Crash Argon	632.	HH Brush 1 Open XL
543.	Crash Dark B18 Edge	588.	Crash BottlePoppin 1	633.	HH Brush 1 Open X
544.	Crash Classic CHB H Shoulder	589.	Crash BottlePoppin 2	634.	HH Brush 1 Open
545.	Crash Classic CHB H Edge	590.	Crash BottlePoppin 3	635.	HH Brush 1 Half3
546.	Crash Rock 1 Edge	591.	Crash BottlePoppin 4	636.	HH Brush 1 Half2
547.	Crash Rock 1 Edge XL	592.	Crash Bouncin1	637.	HH Brush 1 Half1
548.	Crash Rock 2 Edge	593.	Crash Bouncin2	638.	HH Brush 1 Closed
549.	China Vintage 1	594.	Crash Bouncin3	639.	HH Brush 1 Chick
550.	Crash Vintage 1 Edge	595.	Crash Bouncin4	640.	HH Brush 1 Splash
551.	Crash Vintage 2 Edge	596.	RevCrash Concrete	641.	HH Fiesta 1 Open Rods
552.	Crash Vintage 3 Edge	HI-HAT		642.	HH Fiesta 1 Half3
553.	China Metal 1	597.	Hihat K14 Splash	643.	HH Fiesta 1 Half2
554.	Crash Metal 2 Edge	598.	Hihat K14 Close Eg	644.	HH Fiesta 1 Half1
555.	China Metal 1 XL	599.	Hihat K14 Close	645.	HH Fiesta 1 Closed Top Rods
556.	Crash Metal 2 Edge XL	600.	Hihat K14 Half Eg	646.	HH Fiesta 1 Closed Edge XL
557.	Crash Metal 2 Edge2	601.	Hihat K14 Half	647.	HH Fiesta 1 Closed Edge2 XL
558.	Crash Metal 3 Edge	602.	Hihat K14 Closeness Eg	648.	HH Fiesta 1 Chick
559.	Crash Metal 3 Edge XL	603.	Hihat K14 Closeness	649.	HH Fiesta 1 Splash
560.	Crash Metal 3 Edge2	604.	Hihat K14 Open Eg	650.	HH Vintage Top Open XL2
561.	Crash Metal 4 Edge	605.	Hihat K14 Open	651.	HH Vintage Top Open XL
562.	Crash Metal 4 Edge XL	606.	Hihat K14 Pedal	652.	HH Vintage Top Open L
563.	Crash Jazz 1 Edge	607.	HH Classic 14 Shoulder OpenX	653.	HH Vintage Top Open
564.	Crash Jazz 1 Edge XL	608.	HH Classic 14 Shoulder Half Op3X	654.	HH Vintage Top Half3
565.	Crash Jazz 1 Edge2	609.	HH Classic 14 Shoulder Half Op2X	655.	HH Vintage Top Half2
566.	Crash Jungle 1 Edge	610.	HH Classic 14 Shoulder Closed2X	656.	HH Vintage Top Half1
567.	Crash Jungle 2 Edge	611.	HH Classic 14 Edge OpenX	657.	HH Vintage Top Closed
568.	Crash Jungle 3 Edge	612.	HH Classic 14 Edge Half Op3X	658.	HH Vintage Chick
569.	Crash- Jungle 4 Splash Hi	613.	HH Classic 14 Edge Half Op1X	659.	HH Vintage Splash
570.	Crash Jungle 4 Splash Hi XL	614.	HH Classic 14 Edge Closed2X	HI-HAT	
571.	Crash Jungle 4 Splash Hi2	615.	HH Classic 14 TchickX	660.	HH Electro8 Open
572.	Crash Jungle 5 Splash Hi Muted	616.	HH Classic 14 SplashX	661.	HH Electro8 Half3
573.	Crash Jungle 5 Splash Hi Muted XL	617.	HH Rock Top Open	662.	HH Electro8 Half2
574.	Crash Jungle 6 Splash Side	618.	HH Rock Top Half4	663.	HH Electro8 Half1

PRESETS

VOICE LIST

NUMBER	NAME	NUMBER	NAME	NUMBER	NAME
664.	HH Electro8 Closed	708.	OpenHH Bouncin 2	751.	Perc Absynth 5
665.	HH Electro8 Chick	709.	OpenHH Bouncin 4	752.	Perc Absynth 6
666.	HH Electro8 Splash	710.	ClosedHH Bouncin 1	753.	Perc Absynth 7
667.	OpenHH Absynth 1	711.	ClosedHH Bouncin 3	754.	Djembe Afrobeat 1
668.	OpenHH Absynth 2	712.	ClosedHH Bouncin 4	755.	Djembe Afrobeat 2
669.	OpenHH Absynth 3	713.	ClosedHH Bouncin 2	756.	Djembe Afrobeat 3
670.	ClosedHH Absynth 1	714.	Splash GarageX V5	757.	Djembe Afrobeat 5
671.	ClosedHH Absynth 2	715.	OpenHH Concrete 1	758.	Djembe Afrobeat 6
672.	ClosedHH Absynth 3	716.	OpenHH Concrete 2	759.	Djembe Afrobeat 7
673.	ClosedHH Arena 1	717.	ClosedHH Concrete 1	760.	Djembe Afrobeat 8
674.	Splash Off V1	718.	ClosedHH Concrete 2	761.	Djembe Afrobeat 9
675.	OpenHH Afrobeat 2	719.	ClosedHH Concrete 3	762.	Dununba Afrobeat 1
676.	OpenHH Afrobeat 3	720.	OpenHH Concrete 4	763.	Dununba Afrobeat 2
677.	OpenHH Afrobeat 1	721.	ClosedHH Concrete 4	764.	Dununba Afrobeat 3
678.	ClosedHH Afrobeat 1	722.	Splash Neubauten V3	765.	Kenkeni Afrobeat
679.	ClosedHH Afrobeat 2	723.	OpenHH Jungle Electro	766.	Krin Afrobeat
680.	ClosedHH Afrobeat 3	724.	OpenHH BottlePoppin4	767.	Sangba Afrobeat 1
681.	Splash Sintheti	725.	ClosedHH Jungle Electro 1	768.	Sangba Afrobeat 3
682.	Splash TerrorCore	726.	ClosedHH Jungle Electro 2	769.	Shaker Arena 1
683.	OpenHH Arena 1	727.	ClosedHH Jungle Electro 3	770.	Shaker Arena 2
684.	OpenHH Arena 2	728.	ClosedHH Jungle Electro 4	771.	Shaker Arena 3
685.	ClosedHH Arena 2	729.	OpenHH Bouncin 3	772.	Shaker Arena 4
686.	ClosedHH Arena 3	730.	Splash Neubauten V1	773.	Perc Jack 1
687.	ClosedHH Arena 4	731.	OpenHH Jack 1	774.	Perc Jack 2
688.	ClosedHH Arena 5	732.	OpenHH Jack 2	775.	Perc Jack 3
689.	ClosedHH Arena 6	733.	OpenHH Jack 3	776.	Perc Jack 4
690.	Splash Synthgaze	734.	ClosedHH Jack 1	777.	Perc Jack 5
691.	OpenHH Argon 2	735.	ClosedHH Jack 2	778.	Perc Jack 6
692.	OpenHH Argon 1 V1	736.	ClosedHH Jack 3	779.	Perc Jack 7
693.	ClosedHH Argon 1 V2	737.	ClosedHH Jack 4	780.	Perc Jack 8
694.	ClosedHH Argon 2	738.	Splash Neubauten V2	781.	Perc Jack 9
695.	ClosedHH Argon 3	739.	OpenHH Alphabetical	782.	Perc Jack 10
696.	ClosedHH Argon 1 V1	740.	OpenHH Concrete 3	783.	Lofill Jack 1
697.	Shaker Argon	741.	ClosedHH Alphabetical 1	784.	Lofill Jack 2
698.	Splash Argon	742.	ClosedHH Alphabetical 2	785.	Perc Concrete 1
699.	OpenHH BottlePoppin1	743.	ClosedHH Alphabetical 3	786.	Perc Concrete 3
700.	OpenHH BottlePoppin2	744.	ClosedHH Alphabetical 4	787.	Shaker Concrete 1
701.	ClosedHH BottlePoppin 1	745.	Cabasa Argon	788.	Shaker Concrete 2
702.	ClosedHH BottlePoppin 2	746.	Splash Off V2	789.	Shaker Concrete 3
703.	ClosedHH BottlePoppin 3	CLAP		790.	Cymb 808L
704.	ClosedHH BottlePoppin 4	747.	Clap Electro8	791.	Shaker Electro8
705.	OpenHH BottlePoppin3	748.	Clap Electro9	792.	Cow Bell X
706.	Splash World	749.	Perc Absynth 2	793.	Clap Absynth
707.	OpenHH Bouncin 1	750.	Perc Absynth 3	794.	Clap Afrobeat 1

PRESETS

VOICE LIST

NUMBER	NAME	NUMBER	NAME	NUMBER	NAME
795.	Clap Afrobeat 2	838.	Machine Gun 1	882.	Blip Bouncin 1
796.	Clap Arena 1	839.	Machine Gun 2	883.	Blip Bouncin 2
797.	Clap Arena 2	840.	Horse Gallop	884.	Buzz Jungle Electro 1
798.	Clap Arena 3	841.	Birds Tweet	885.	Buzz Jungle Electro 3
799.	Clap Arena 4	842.	Rain	886.	Buzz Jungle Electro 4
800.	Clap Arena 5	843.	Thunder	887.	Crackle Jungle Electro 1
801.	Clap Arena 6	844.	Wind	888.	Crackle Jungle Electro 2
802.	Clap Argon 1	845.	Seashore	889.	Crackle Jungle Electro 3
803.	Clap Argon 2	846.	Stream 1	890.	Crackle Jungle Electro 4
804.	Clap BottlePoppin 1	847.	Stream 2	891.	Perc Jungle Electro 1
805.	Clap BottlePoppin 2	848.	Bubble	892.	Perc Jungle Electro 3
806.	Clap BottlePoppin 3	849.	Snap Absynth 1	893.	SFX Jungle Electro 2
807.	Clap BottlePoppin 4	850.	Snap Absynth 2	894.	SFX Jungle Electro 3 V1
808.	Clap Bouncin 1	851.	Shaker Absynth	895.	SFX Jungle Electro 3 V2
809.	Clap Bouncin 2	852.	SFX Absynth 1	896.	Vocal Jungle Electro 1
810.	Clap Bouncin 3	853.	SFX Absynth 2	897.	Vocal Jungle Electro 2
811.	Clap Bouncin 4	854.	Metal Absynth	898.	Vocal Jungle Electro 3
812.	Clap Concrete 1	855.	Chord Absynth 1	899.	Vocal Jungle Electro 4
813.	Clap Concrete 2	856.	Chord Absynth 2	900.	Vocal Jungle Electro 5
814.	Clap Funk 1	857.	Chord Absynth 3	901.	Vocal Jungle Electro 6
815.	Clap Funk 2	858.	Shaker Afrobeat	902.	Bass Concrete 1
816.	Clap Funk 3	859.	Calabash Afrobeat	903.	Bass Concrete 3
817.	Clap Funk 4	860.	Synth Arena 1	904.	Bass Concrete 5
SFX		861.	Synth Arena 3	905.	Bass Concrete 6
818.	Laughing	862.	Synth Arena 4	906.	Bass Concrete 10
819.	Screaming	863.	Synth Arena 5	907.	Bass Concrete 11
820.	Punch	864.	Bass Arena 4	908.	Stab Concrete
821.	Heart Beat	865.	SFX Argon 2	909.	Bass Jack 1
822.	Applause	866.	SFX Argon 3	910.	Bass Jack 2
823.	Door Closing	867.	Zap BottlePoppin	911.	Bass Jack 3
824.	Door Creaking	868.	Tamb BottlePoppin	912.	Bass Jack 4
825.	Wind Chimes 1	869.	Strike BottlePoppin	913.	Bass Jack 5
826.	Wind Chimes 2	870.	Shaker BottlePoppin 1	914.	Bass Jack 6
827.	Wind Chimes 3	871.	Shaker BottlePoppin 2	915.	Bass Jack 7
828.	Car Engine	872.	Shaker BottlePoppin 3	916.	Bass Jack 8
829.	Car Brakes	873.	Noise BottlePoppin	917.	Shaker Jack 1
830.	Car Crash	874.	Dist BottlePoppin	918.	Shaker Jack
831.	Car Passing	875.	Shaker Bouncin 1		
832.	Siren	876.	Shaker Bouncin 2		
833.	Train	877.	Shaker Bouncin 3		
834.	Jet Plane	878.	Shaker Bouncin 4		
835.	Helicopter	879.	SFX Bouncin 1		
836.	Starship	880.	Perc Bouncin		
837.	Gun Shot	881.	Impact Bouncin		

SPECIFICATIONS

TOUCHBEAT:

Kick	5" Pad Single Zone
Snare	10" Dual Zone
Tom 1 and 2	2x 8" Dual Zone
Tom 3	1x 10" Dual Zone
Hi-Hat	12" Dual Zone With Footswitch Pedal
Crash 1	12" Dual Zone
Ride	12" Dual Zone

TOUCHBEAT +:

Kick	8" Pad Single Zone
Snare	10" Dual Zone
Tom 1 and 2	2x 8" Dual Zone
Tom 3 and 4	2x 10" Dual Zone
Hi Hat	12" Dual Zone With Footswitch Pedal
Crash 1	12" Dual Zone
Crash 2	12" Dual Zone
Ride	14" Dual Zone

MODULE:

Kits	36 (30 Preset, 6 User)
Sounds	950
Songs	15
Bluetooth	5.0
Master EQ	3-Band
Metronome	40-240 beats per minute with subdivision
Reverb	8 Types, customisable
Screen Size	7"
Input Power	12V, 400mA
Power Consumption ...	5W Max
Module Dimensions (including clamp)	200 x 175 x 110mm

WWW.GEAR4MUSIC.COM

KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM
LAHNSTRAßE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **info@gear4music.com**