



H₂O – Sample Settings



SPEED WIDTH DEPTH DELAY REPEATS LEVEL

INTENSITY TONE CHOR-VIB SHORT/LONG

DETUNE

ON - OFF

GREAT START (CHORUS & ECHO)

DELAY REPEATS LEVEL

SHORT/LONG

YOU 2 (ECHO)

DELAY REPEATS LEVEL

SHORT/LONG

ROCKABILLY (ECHO)

SPEED WIDTH DEPTH

INTENSITY TONE CHOR-VIB

DETUNE

ON - OFF

LUSH (CHORUS)

SPEED WIDTH DEPTH

INTENSITY TONE CHOR-VIB

DETUNE

ON - OFF

LESLIE (CHORUS)



H₂O – Sample Settings (pg. 2)

SPEED WIDTH DEPTH

INTENSITY TONE CHOR-VIB

DETUNE

ON - OFF

MELLOW JAZZ (CHORUS)

SPEED WIDTH DEPTH

INTENSITY TONE CHOR-VIB

DETUNE

ON - OFF

SLOW PHASE (CHORUS)

SPEED WIDTH DEPTH

INTENSITY TONE CHOR-VIB

DETUNE

ON - OFF

LIGHT VIBRATO (CHORUS)

SPEED WIDTH DEPTH DELAY REPEATS LEVEL

INTENSITY TONE CHOR-VIB

DETUNE

ON - OFF

SHORT/LONG

DETUNING SPACE (CHORUS & ECHO)

Note: Turn CHOR-VIB knob to Chorus for vintage Sci-Fi movie sound effects.