

Jekyll & Hyde





Sample Settings


Distortion:

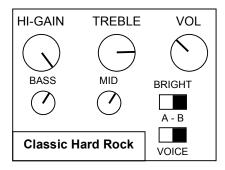


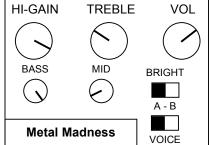

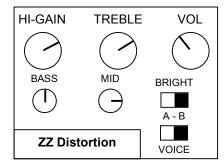


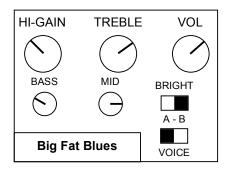


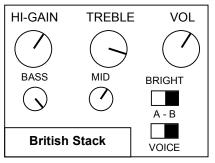


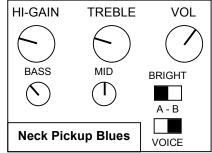


Overdrive:

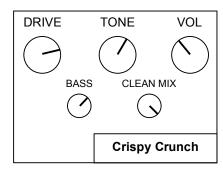

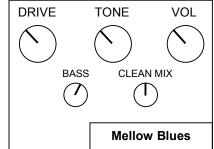

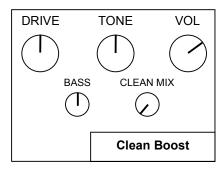


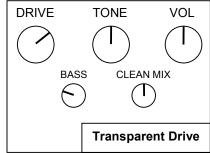



Jekyll & Hyde

Sample Settings - page 2

Combination Settings:

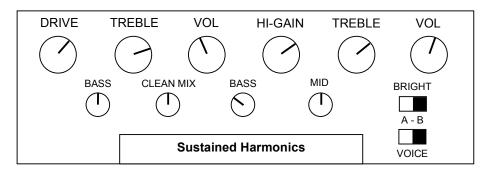

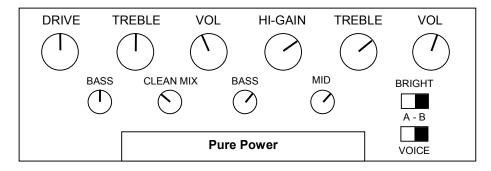

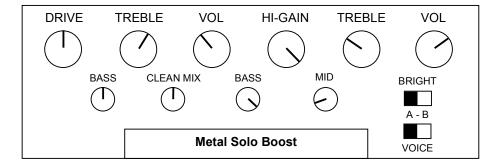

NOTES:

By removing the 4 screws and the bottom cover, you can see 2 slide switches. Use these to choose true bypass or our Pure Tone buffered bypass for each channel. There is also a mini slide switch to turn the Distortion channel noise gate on or off.

If you have a battery installed, make sure to unplug both Input and Output when not using, so you don't drain the battery. Then again, why are you using a battery? Get a 1 SPOT!

If you ever have any questions or problems with your Jekyll & Hyde, just go to the Truetone website and contact our customer service. We're here to help you!