



# Guitar Amplifier TBA 5

#### **★ CONTROL FUNCTIONS ★**

INPUT ----- Connection for instrument.

VOLUME ----- Setting from zero to full power.

TONE----- Bass to treble tone control.

PHONES ----- Used to connect stereo headphone.

Automatically turns off the amplifier speaker.

DC JACK----- DC 9V (ADAPTER: 300mA or More)

POWER SWITCH----- This is the ON/OFF switch for the power supply.

The LED lights when the power supply is turned on.

### **★ SPECIFICATIONS ★**

MAXIMUM LOADING POWER - 5 Watts

SPEAKER - 4 Inches, 8 Ohms BATTERY - 9V 6F22 TYPE

DIMENSIONS - 227(W)X254(H)X113(D)mm

### WARNING

Amplifier fails to function, please contact your local distributor. Under no circumstances remove the back panel of the amplifier while it is connected to main supply.

## IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or groundingtype plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
- 14) Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

(the lightning flash with arrowhead symbol within an equilateral triangle) is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons, and (the exclamation point within an equilateral triangle) is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the product.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

# WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.