

Drum Kit

400



The DD400 has a super compact frame, making it ideal for bedrooms, small studios or practice spaces. A headphone output and a quiet kick drum pedal means you can practice without disturbing the neighbours. USB and MIDI connections mean you can connect this kit to a computer for recording, composition or use as a MIDI controller.

420



The DD420 can accommodate any size player with its fully adjustable frame. The choke function on the crash cymbal gives players greater control over their cymbal sound and the ability to use more authentic drumming techniques. A quiet 'stealth' style bass drum set up gives you a more realistic playing experience while keeping the noise levels at an absolute minimum. USB and MIDI connections mean you can connect this kit to a computer for recording, composition or use as a MIDI controller.

430



The DD430 can accommodate any size player with its full wrap around drum frame. The choke function on both the crash and ride cymbals and the dual zone snare gives players greater control over their sound and the ability to use more authentic drumming techniques. The module offers slightly more voices, kits, patterns and effects than the DD400 and DD420. USB and MIDI connections mean you can connect this kit to a computer for recording, composition or use as a MIDI controller.

450



The DD450 drum module is a big step up - it comes with a teaching function, a metronome and reverb, as well as a whole host of realistic voices and kits. It's equally suitable for beginners and advanced drummers. The MIDI connectivity means you can record your playing on a sequencer or trigger software on your PC or Mac.

516-Pro



The WHD 516-Pro comes with a host of professional features, including a heavy duty mesh snare and velocity sensitive, dual zone white pads which really set it apart as a high value electronic drum kit. 400 impressive drum sounds are augmented by USB connectivity, and a variety of inputs and outputs offer the player near total control and flexibility with their drumming. It also comes with full USB and MIDI Connectivity.

517-DX Pro



This WHD 517-DX Pro Digital Drum Kit is an amazingly flexible kit, suitable for intermediate and experienced drummers. It combines superb build quality, sounds you would normally only find on much more expensive kits, and a full set of mesh drum heads, all at a ground-breaking price. It also comes with full USB and MIDI Connectivity.

Pads	400	420	430	450	516-Pro	517-DX
<b>Snare</b>	1x Snare Pad (single trigger)	1x Snare Pad (single trigger)	1x Snare Pad (dual trigger)	1x Snare Pad (dual trigger)	1x Mesh Snare Pad with Rim Shot (dual trigger)	1x Mesh Snare Pad with Rim Shot (dual trigger)
<b>Toms</b>	3x Tom Pads (single trigger)	3x Tom Pads (single trigger)	3x Tom Pads (single trigger)	3x Tom Pads (single trigger)	3x Tom Pads with Rim Shot (dual trigger)	3x Mesh Tom Pads with Rim Shot (dual trigger)
<b>Hi Hat</b>	1x Hi Hat Pad (single trigger)	1x Hi Hat Pad (single trigger)	1x Hi Hat Pad (single trigger)	1x Hi Hat Pad (single trigger)	1x Hi Hat Pad (single trigger)	1x Hi Hat Pad (single trigger)
<b>Crash</b>	1x Crash Pad (single trigger)	1x Crash Pad (single trigger) with Choke	1x Crash Pad (single trigger) with Choke	1x Crash Pad (single trigger) with Choke	1x Crash Pad (dual trigger) with Choke	1x Crash Pad (dual trigger) with Choke
<b>Ride</b>	1x Ride Pad (single trigger)	1x Ride Pad (single trigger)	1x Ride Pad (single trigger) with Choke	1x Ride Pad (dual trigger) with Choke	1x Ride Pad (dual trigger) with Choke	1x Ride Pad (triple trigger) with Choke
<b>Bass Drum Pedal</b>	Quiet Bass Drum Control Pedal	Stealth Bass Drum Pedal & Pad	Bass Drum Pedal & Pad	Bass Drum Pedal & Pad	Bass Drum Pedal & Pad	Bass Drum Pedal & Pad
<b>Hi Hat Pedal</b>	Hi Hat Control Pedal	Hi Hat Control Pedal	Hi Hat Control Pedal	Hi Hat Control Pedal	Hi Hat Control Pedal with Half Open Feature	Hi Hat Control Pedal with Half Open Feature
Module	400	420	430	450	516-Pro	517-DX
<b>Voices</b>	108	108	120	310	400	678 +18 Hi Hat
<b>Preset Kits</b>	10	10	12	24	29	40
<b>Editable User Kits</b>	-	-	-	11	16	59
<b>Song Patterns</b>	40	40	42	60	80	120
<b>Effects</b>	-	-	Reverb	Reverb	Reverb	Reverb
<b>Equaliser</b>	-	-	-	-	3 Band	4 Band
<b>Metronome</b>	Yes	Yes	Yes	Yes	Yes	Yes
<b>Display</b>	3 Digit LED	3 Digit LED	3 Digit LED	3 Digit LED	Full LED	Full LED
<b>Polyphony</b>	64	64	64	64	64	64
<b>Record Function</b>	-	-	-	-	Yes	Yes
<b>Controls</b>	Power Switch, Master Volume Knob, Start/Stop, Click/Demo, Mode/Tempo Increase, Page/Tempo Decrease, +/- Buttons	Power Switch, Master Volume Knob, Start/Stop, Click/Demo, Mode/Tempo Increase, Page/Tempo Decrease, +/- Buttons	Power Switch, Master Volume Knob, Start/Stop, Click/Demo, Mode/Tempo Increase, Page/Tempo Decrease, +/- Buttons	Power switch, Start/Stop, Save Kit, Voice/Volume, Song/Volume, Drum off, Click, Hi-hat, Crash ride, Hi-hat control, Snare, Tom 1, Tom 2, Tom 3, Kick, Volume, Tempo	Power Switch, Volume, Start/Stop, Save Song, Kit, Voice, Page/Select, Click, Drum off, Record, Tempo, Play/Practice	Power Switch, Volume: Master - Phones - Auxiliary, Start/Stop, Save, Song, Kit, Voice, Page/Select, Click, Drum off, Record, Tempo
<b>Connections</b>	Headphones, Aux In, Stereo Out, USB, MIDI Out, 9V DC Power	Headphones, Aux In, Stereo Out, USB, MIDI Out, 9V DC Power	Headphones, Aux In, Stereo Out, USB	Headphones, Aux In, Stereo Out, Midi Out, 9x Pad Inputs, 9V DC Power	Headphones, Aux In, Stereo Out, USB, MIDI In/Out, 2x Spare Pad Inputs, 9V DC Power	Headphones, Aux In, Stereo Out, USB, MIDI In/Out, SD Card Slot, 12x Pad Inputs (3x spare), 9V DC Power