

Torpedo Studio

User's Manual

V 1.0- 10/05/2014



Two notes
AUDIO ENGINEERING

Torpedo *Studio* User's Manual

Manual Version V 1.0- 10/05/2014.

The complete electronic version of this manual, as well as the Two Notes Audio Engineering software and hardware products, are subject to updates. You can download the most recent versions of the products on the following website: <http://www.two-notes.com>.

This manual describes the Torpedo *Studio* and provides instructions for its operation. It is highly recommended that you read this document before using the product. The contents of this manual have been thoroughly verified and it is believed, unless stated otherwise, to accurately describe the product at the time of shipment from the factory or download from our website.

Two Notes Audio Engineering is a registered trademark of:

OROSYS SAS

145 rue de la Marbrerie, BAL n°6

34740 Vendargues

France

Tel: +33 (0)484 250 910

Fax: +33 (0)467 595 703

Contact and support: <http://support.two-notes.com/>

Website: <http://www.two-notes.com>

This document is the exclusive property of OROSYS SAS. In the interest of product development, OROSYS SAS reserves the right to change technical specifications, modify and/or cease production without prior notice. OROSYS SAS cannot be held responsible for any damage, accidental or otherwise, that results from an inappropriate use of the Torpedo *Studio*. Please refer to the safety instructions included in this manual. The reproduction of any part of this document is strictly forbidden without the written authorization of OROSYS SAS.

All product names and trademarks are the property of their respective owners. Product names and trademarks found in this document were used during the development of the Torpedo *Studio* product but are in no way associated or affiliated with OROSYS SAS.

Special thanks to Carlos Alvarez and Dave Brons for their help during the redaction of that document.

Contents

1 Foreword	7
1 Safety instructions	7
1.1 Risk of electric shock	7
1.2 Reader warning	7
1.3 Mains power	8
1.4 Ground connection	8
1.5 Safety use conditions	8
1.6 Cleaning	8
2 Contents of the package	8
2.1 Maintenance	9
3 Declaration of conformity	9
4 Disposal of Waste Equipment by Users in Private Household in the European Union	9
5 Warranty	10
2 Recommendation on the proper use of a loadbox with a tube amplifier	11
1 What is a loadbox?	11
2 Which output volume for my amplifier?	12
3 Is the use of a loadbox totally silent?	12
3 Quick start guide	15
1 Introducing the <i>Torpedo Studio</i>	15
2 Front panel	16
3 Rear panel	16
4 Only a speaker simulator?	16
4.1 Tube Stage Output	17
4.2 The <i>Torpedo</i> technology, convolution and Impulse Responses	17
4.3 Dual Processing	18
4.4 Post FX section	18
4.5 Third-party impulse responses	18
4.6 Create your own IRs	18
5 <i>Torpedo Studio</i> quick start	18
4 Connecting the <i>Torpedo Studio</i>	21
1 Routing the Inputs/Outputs	21
1.1 Inputs	21
1.2 Outputs	22
1.3 Routing diagrams	22
2 In the studio	23
3 On stage with an amplifier	24

4	On stage with a preamplifier	25
5	Mixing a real cabinet miking and the Torpedo <i>Studio</i>	25
5.1	"“Why am I hearing phase cancellation effects?” or fixing the latency-related issues when using the analog I/Os on the Torpedo	26
5.2	"“What if I am using the digital I/Os on my Torpedo?” or how to figure out the latency of the full digital system	27
6	A note on external effects placement	28
7	Dry recording and re-miking	28
7.1	Step one: recording the dry signal	29
7.2	Step two: re-miking the signal	29
8	Stay connected	29
5	Configuring and using Torpedo <i>Studio</i>	31
1	The Torpedo <i>Studio</i> ’s interface	31
2	Speaker input gain control	32
3	Main control panel	32
4	SETUP	33
4.1	Audio	33
4.2	Sync	34
4.3	Midi	34
4.4	System	34
4.5	Device ID	35
5	PROGRAM	35
5.1	Save	35
5.2	Name	35
6	COMPARE	35
7	SPKR/MIC	36
7.1	Power Amp	36
7.2	Speaker and Mic	37
7.3	User	37
8	MIKING	38
8.1	Distance	38
8.2	Center	38
8.3	Position	38
8.4	Variphi	39
8.5	Overload	39
8.6	Dry / Wet	39
9	BYPASS	39
10	POST FX	39
10.1	Low Cut	39
10.2	EQ	40
10.3	Exciter	41
10.4	Comp	41
11	Output volume control and headphones output	41
12	Torpedo Remote	42
13	Want more cabs?	43

6	MIDI Implementation	45
1	PROGRAM CHANGE (PC)	45
2	CONTROL CHANGE (CC)	45
7	Specifications	47
1	List of Power Amplifiers	47
2	List of Microphones	47
3	List of Cabinets	48
4	Technical data	50
8	Technical support	53

Part 1

Foreword

1 Safety instructions

Before using the product, it is necessary to carefully read and bear in mind the following information. **Keep this document in a safe place as it is essential for the safety of the user and of the product.** In the event that you suspect any malfunction of the unit, you should always seek the assistance of a qualified technician.

1.1 Risk of electric shock



The warning panel located at the back of the unit lists all the messages related to your safety. All the internal parts of the unit **must be serviced by a qualified technician only.**



The triangle symbol with a lightning symbol means that some parts of the product, even when the power is turned off or unplugged, can retain voltages high enough to lead to serious electric shock. Any operation that requires opening the unit should be left to a qualified technician.

1.2 Reader warning



The triangle symbol with an exclamation mark is an indication for important messages concerning the correct operation of the device.

1.3 Mains power

Please verify that the voltage required by the device matches the voltage of your country. If it doesn't or if you are unsure, do not plug the device to the wall outlet as this could result in damage to the device and injuries to the user. This product must not be used during lightning storms. In case of severe weather with a risk of lightning, unplug the mains power supply to reduce the risk of electric shock and fire. The mains power cable provided with the unit complies with the standards of the country where you purchased the product. If replacement is needed, please use a standard compliant cable.

1.4 Ground connection

For safety reasons, the unit needs to be plugged into a wall outlet with a ground connection. If your electric installation does not provide a ground connection or if you are unsure, please ask a qualified electrician for help. If your mains power cable does not match your wall outlet, ask a qualified electrician for help. In order to prevent risks of electric shock or fire, never remove the outer or inner ground connection of the unit.

1.5 Safety use conditions

The Torpedo *Studio* must never be used:

- near a heat source,
- near a flame,
- in the rain,
- in damp areas,
- near any kinds of liquids.

The unit is designed to be rackmounted into a 19" rack unit with 4 screws (not provided). When transporting the unit, care needs to be taken to avoid any shocks that might cause damage and therefore require the assistance of a qualified technician. Never cover or restrict the ventilation openings. Never unplug or deactivate the heat control monitoring system, or you will be exposed to risks of electric shock and fire.

1.6 Cleaning

Always use a dry and soft cloth with no alcohol or solvent for cleaning. Please keep the unit clean and free from dust.

2 Contents of the package

The shipped package contains:

1. One Torpedo *Studio* unit in a protective sleeve,
2. One mains power cable,
3. One USB cable,

4. One user's manual.

The complete electronic version of this manual, as well as the TORPEDO Remote and TORPEDO Capture software programs are subject to updates. You can download the most recent versions of those products from the following website: <http://www.two-notes.com>.

2.1 Maintenance

Any and all maintenance tasks must be performed by service centers approved by OROSYS SAS or by qualified technicians. Never try to repair the unit by yourself.

3 Declaration of conformity

Manufacturer: OROSYS SAS

Category of product: Digital Audio Signal Processor

Product: Torpedo *Studio*

Test Manager: Guillaume Pille

The Two Notes Torpedo *Studio* is certified to be compliant to the CE and FCC standards:

- EN 55103-1 : 1996 and EN 55103-2 : 1996.
- EN 60065 05/2002 + A1 05/2006.
- EMC directive 89/336/EEC and Low Voltage Directive 73/23/EEC.
- FCC Part 15 : 2008.
- ICES-003 : 2004.
- AS/NZS 3548 class B for Australia and New Zealand.
- IEC : 2008 - CISPR 22 class B.



4 Disposal of Waste Equipment by Users in Private Household in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

5 Warranty

OROSYS SARL warrants that this TWO NOTES AUDIO ENGINEERING product shall be free of defects in parts and workmanship when used under normal operating conditions for a period of two (2) years from the date of purchase. This warranty shall apply to the original purchaser when purchased from an Authorized TWO NOTES AUDIO ENGINEERING dealer.

IMPORTANT: PLEASE RETAIN YOUR SALES RECEIPT, AS IT IS YOUR PROOF OF PURCHASE COVERING YOUR LIMITED WARRANTY. THIS LIMITED WARRANTY IS VOID WITHOUT YOUR SALES RECEIPT.

Defective products that qualify for coverage under this warranty will be repaired or replaced, (at OROSYS SAS's sole discretion) with a like or comparable product, without charge. In the event that warranty service be required, Please contact your authorized TWO NOTES AUDIO ENGINEERING dealer in order to obtain an RMA to return the complete product to the Authorized TWO NOTES AUDIO ENGINEERING Service Center closest to you, with proof of purchase, during the applicable warranty period.

Transportation costs to the service center ARE NOT INCLUDED in this limited warranty. OROSYS SAS will cover the cost of standard ground return transportation for repairs performed under this warranty.

This limited warranty becomes void if the serial number on the product is defaced or removed, or if the product has been damaged by alteration, misuse including connection to faulty or unsuitable ancillary equipment, accident including lightning, water, fire, or neglect; or if repair has been attempted by persons not authorized by OROSYS SAS.

Any implied warranties, including without limitation, any implied warranties of merchantability or fitness for any particular purpose, imposed under state or provincial law are limited to the duration of this limited warranty. Some states or provinces do not allow limitations on how long an implied warranty lasts, so the above limitations may not be applicable.

OROSYS SAS ASSUMES NO LIABILITY FOR PROPERTY DAMAGE RESULTING FROM ANY FAILURE OF THIS PRODUCT NOR ANY LOSS OF INCOME, SATISFACTION, OR DAMAGES ARISING FROM THE LOSS OF USE OF SAME DUE TO DEFECTS OR AVAILABILITY OF IT DURING SERVICE.

In case you must absolutely send your TWO NOTES AUDIO ENGINEERING product to any other location, it is of vital importance that you keep the original packing material. It is very difficult to avoid damage when shipping the product without that material. OROSYS SAS is not responsible for damages caused to the product by improper packaging and reserves the right to charge a reboxing fee for any unit returned for service without the original packing material.

THE FOREGOING CONSTITUTES THE ONLY WARRANTY MADE BY OROSYS SAS WITH RESPECT TO THE PRODUCTS AND IS MADE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED.

Part 2

Recommendation on the proper use of a loadbox with a tube amplifier

1 What is a loadbox?

In the normal use of a tube amplifier, it is highly recommended that you always connect its power output to a speaker cabinet prior to powering it up. The speaker cabinet (4, 8 or 16 Ohms) must always be connected to the corresponding speaker output of your amplifier. Not doing so can lead to partial or complete destruction of the output stage of the tube amplifier.

Most tube amplifier makers protect their products with fuses or other protection systems, but some amplifiers still remain not (or insufficiently) protected. It is impossible to predict the behavior of *all* the amplifiers on the market in case of use without a load (a speaker cabinet or a loadbox).

The electronic term that describes the speaker cabinet with respect to the amplifier is the "load": we say the cabinet "loads" the amplifier. The term "loadbox" is used to describe any product that provides a load to the amplifier. The main parameter of the loadbox is its impedance, expressed in Ohms. An 8-Ohm loadbox must be plugged to the 8-Ohm speaker output of the amplifier.

The power sent to the load is turned into heat, so please follow the cooling recommendation in the manual — otherwise overheating may cause damage, both to the loadbox and to the amplifier.

The *Torpedo Studio* is a digital loadbox. This term indicates that the *Torpedo Studio* is a load which can electrically replace the speaker cabinet while dissipating (transforming into heat) the power coming out of the amplifier.

The embedded load in the *Torpedo Studio* is a selectable reactive or resistive one:

- **Reactive** means that the load is designed to mimic the complex impedance of a real speaker. The result on the sound is usually a brighter tone and more natural sounding.
- **Resistive** means that the load is a simple resistance, or a network of resistances, which has a fixed impedance value (4, 8 or 16 Ohms) over the whole audio spectrum. This kind of system is widely used in the industry to silently test amplifiers. The result on the sound is usually a warmer tone, with your amp going into saturation a little sooner on the output volume (this actually depends on your amplifier's internal design).



Always connect the speaker out of your tube amplifier to an appropriate load (speaker cabinet or loadbox). *Torpedo Studio*, once powered up, is such a load. Please note that you should always power up the *Torpedo Studio* before your amplifier.

2 Which output volume for my amplifier?

The correct use of your amplifier with a loadbox requires some precautions. Because the loadbox can lower the perceived volume of your amplifier to down to a "whisper", it is much easier to accidentally run your amplifier beyond the reasonable limits set by the manufacturer, than when using a real speaker cabinet with it. This can lead to faster tube wear and, in some cases, to more serious inconveniences.



When first testing the amplifier at high volume, monitor the color of the tubes and the general state of the amplifier. Red-glowing tubes or any appearance of smoke are signs of a problem that may result in partial or complete destruction of the amplifier.

Keep in mind that the "sweet spot" - the perfect running point of the amplifier, the one that will give you the tone you're looking for - is rarely obtained at maximum volume. In addition, the volume control of the amplifier is usually logarithmic, which means the volume goes up quickly on the first half of the potentiometer rotation, reaches its maximum at 12 o'clock, and doesn't change much beyond this point. Therefore, you can reach the maximum volume of your amplifier even if the volume potentiometer is not set at maximum.

By reaching the maximum output power of your amplifier, you will hear a lot of distortion, which may not sound as good as you would hope. In fact, most amplifiers sound rather poor at maximum volume. Always keep in mind that your amplifier may not have been designed to be used at maximum volume for a long period of time. Running an amplifier at high volume will cause premature wear of the tubes and possible malfunction or damage to the output stage.



The fact that the volume control of your amplifier is not set at maximum doesn't mean your amplifier is not running at maximum volume. A good habit is to keep the usual volume setup you would use in rehearsal or on stage, rather than just following what the volume potentiometer indicates.

3 Is the use of a loadbox totally silent?

We usually talk about "silent recording" when a loadbox is involved. If we compare the loadbox solution to a traditional cabinet miking solution, it is obviously A LOT quieter. Noises that you may have not been able to hear before due to the volume of the speaker cabinet will now be more apparent. Here are a few of those sounds that you might have to take into account:

- Your guitar or bass strings can be heard. If you are not used to this, it could be initially distracting, depending on your environment.
- You may hear some noise coming out of your *Torpedo Studio* when playing, like there is a tiny speaker inside the box. This is perfectly normal and there is no reason to worry. The sound is produced when power goes through the coil of the reactive load embedded on the *Torpedo Studio*. The vibration is related to what power comes out of the amplifier connected to the *Torpedo Studio* and to the signal's frequency content (notes played are heard). Your amplifier, specifically the output transformer of your amplifier, may also produce similar noise. Such noise is usually not heard, simply because it is normally obscured by the sound coming from the loudspeaker.

- The *Torpedo Studio* has a built in fan, as there is quite a lot of power dissipated into heat inside the box. We selected a so called "silent fan", but as it is running fast, it is never entirely silent. This said, you can consider that, in normal use (hearing your guitar through monitors, or headphones), you can barely hear the fan.

Part 3

Quick start guide

1 Introducing the Torpedo *Studio*

Two Notes Audio Engineering is proud to introduce the Torpedo *Studio*. This product has been developed through several years of technical development, with great attention paid to the needs of guitarists, bassists and sound technicians faced with the challenges posed by the miking of instrument amplifiers, on stage or in the studio. The Two Notes team has taken extreme care to design the high-end, professional Torpedo *Studio* rack unit. Our goal is to provide ease of use, reliability, versatility and above all, perfect audio quality.

The Torpedo technology was created as an answer to the high pressure musicians have to deal with: lack of time, limited gear availability, loud amplifiers that cannot be played at desired volume, as well as bulky and heavy cabinets to carry. In addition, many musicians are more comfortable with their analog amplifier and effect pedals, and feel reluctant to perform using digital modeling systems that might compromise their playing style and sound.

For them, the Torpedo *Studio* offers a "virtual" alternative to traditional miking, using a technology derived from convolution reverberation, to achieve a degree of realism never experienced with simulators before. The musicians simply plug into the Torpedo *Studio* in place of their cabinet by connecting it to the speaker output of their amplifier, without modifying their usual settings (or connected effect pedals, depending on the case).

The Torpedo *Studio* comes with a large library of 50 cabinets and 8 microphones among the most commonly used models in the world. You can also upgrade and add many other cabinets through "La Boutique", our online virtual cabinet store. The virtual miking is done by choosing one cabinet and one microphone, then fine-tuning the position of the microphone in front of the cabinet. The Torpedo thus enables the user to assume the role of the sound engineer in a professional studio.

The TORPEDO Technology: for unsurpassed realism and playing comfort, Two Notes has developed a unique technology based on an adaptation of convolution techniques. Starting with the measurement of an actual cabinet + microphone setup, the Torpedo *Studio* can accurately **reproduce the system as it was measured**, as well as **the microphone's position in space**.

In order to take full advantage of these digital algorithms, the highest quality audio design guarantees perfect analog-to-digital conversion and a wide dynamic range to provide the ultimate playing experience.

This product has been thoroughly tested in professional studio and stage environments and is the alternative many musicians have been waiting for to professionally capture the sounds of their amplified instruments. The Torpedo *Studio* will bring you the elusive sound of the greatest recording studios and producers, anytime, anywhere.

2 Front panel



Figure 3.1: Front view of the Torpedo Studio

- | | | | | | |
|---|------------------|---|---------------------|---|-------------------|
| 1 | Ventilation slit | 4 | Main screen | 7 | Output volume |
| 2 | Input gain | 5 | Menu switches | 8 | Headphones output |
| 3 | Presets screen | 6 | Navigation switches | 9 | Mains switch |

3 Rear panel



Figure 3.2: Rear view of the Torpedo Studio

- | | | | | | | | | | |
|---|-----------------|---|------------------|---|----------------------------|----|-------------------------------------|----|--------------------|
| 1 | Mains power | 4 | Wordclock Input | 7 | S/PDIF In/Out | 10 | Analog Line Inputs (Bal. or Unbal.) | 13 | Impedance selector |
| 2 | Warning notices | 5 | MIDI In/Out/Thru | 8 | AES/EBU In/Out | 11 | Speaker THRU (Output) | 14 | Fan |
| 3 | Serial number | 6 | USB | 9 | Analog Line Outputs (Bal.) | 12 | Speaker Input | | |

4 Only a speaker simulator?

The Torpedo Studio is a standalone unit you can bring with you in any situation, whenever silent playing is needed.

The role of the Torpedo Studio is to replace the following elements of the traditional guitar or bass setup:

- the guitar/bass power amplifier
- the speaker cabinet

- the microphone
- the microphone preamplifier

In order to provide a signal that is the closest possible to a traditional guitar/bass miking in a professional studio environment.

The miking is achieved in 3 steps with the Torpedo Studio:

1. Choose a power amplifier (or switch it off if you are using a loadbox), a speaker cabinet and a microphone (Power Amp, Speaker, and Microphone sections);
2. Position the microphone inside the virtual studio (Miking window and parameters);
3. Shape the signal (Low Cut, EQ, Exciter and Comp sections).

At each step, Two Notes Audio Engineering implements its know-how to offer the most advanced simulations on the market and ensure absolutely realistic quality both for the musician (in terms of playing sensation) and for the listener (in terms of sound quality).

You can load up to 50 Two Notes cabinets in the Torpedo Studio. Download the free TORPEDO Remote software (Mac OS X and Windows PC) from [the Two Notes website](#), and you will be able to add or remove the stored cabinets. There are currently more than 80 Two Notes cabinets available in La Boutique and the Two Notes Store that you can try in real time and purchase with Torpedo Remote (requires a working Internet connection).

4.1 Tube Stage Output

When using guitar/bass preamplifiers with some other speaker emulators, the musician may feel they miss a power amplifier's contribution to the overall sonic texture. Many musicians get their sound from a particular use of that element and the Torpedo Studio gives you the possibility to use it too.

To that effect, Two Notes Audio Engineering has developed an original tube-stage modeling that gives you a choice of 4 different tube models (6L6, EL34, EL84 and KT88) in Push-Pull (PP) in AB class, or Single Ended (SE) in A class configurations. You can push this tube stage like a conventional amplifier and look for that subtle yet particular distortion.

The Torpedo Studio can be used as a super-DI for keyboards. The tube-amp simulation feature, developed for guitarists and bassists, can also be a very interesting device to warm up the sound of a synthesizer, an organ, or a digital piano.

4.2 The Torpedo technology, convolution and Impulse Responses

The Impulse Response (IR) of a given system consists in the description of that system's behavior in the form of a very detailed filter. The convolution technique uses IRs to simulate the behavior of specific systems such as reverbs, speakers, EQ, and so on.

This is the most accurate method to simulate sound signatures that are linear (i.e. without distortion) and time-invariant (i.e. with no effect such as modulation, compression, hysteresis, etc.). It is particularly well suited for speaker miking simulation.

Two Notes has developed a unique technology based on an adaptation of convolution techniques. Starting with a measure of a real cabinet + microphone setup, the Torpedo Studio can accurately reproduce the system as it was measured, including its distortion, as well as the microphone's position in space by using IR synthesis. Control the amount of distortion produced in the loudspeakers (Overload) and fix any phase issue with the Variphi — exclusive Two Notes Virtual Cabinets Responses functions.

4.3 Dual Processing

With a mono (a tube amplifier) or a stereo source (a multi-effects, two different preamplifiers...) the *Torpedo Studio* offers you what every sound engineer wants: the possibility of carefully placing two microphones before the same cabinet, or of selecting two different cabinets and microphones and mixing them.

You will discover the unlimited possibilities of **dual miking**, with **two simultaneous A and B processing channels**: add up to **two microphone and cabinet configurations** and mix them in the stereo field or keep them isolated on each channel, in real time.

The IDLE display screen will show the **A** and **B** configurations. In the GEAR, MIKING and Post FX sections, you will choose the configurations and adjust the parameters. **Simply click on these buttons to select the A or B channel.**

The *Torpedo Studio* features a loadbox which is mono, but can handle either two Analog Line or Digital inputs, or a combination of the amp and Line inputs. Please refer the the Setup/Audio/Input menu for more information.

4.4 Post FX section

When recording guitars or basses, it is common to apply a few effects to shape the sound before it is sent to a PA or a recorder. In the *Torpedo Studio* you will find the mandatory Low Cut filter, a simple but highly effective **EQ filter** with two modes, GUITAR or BASS, a **1-band Exciter**, and a **studio Compressor**.

4.5 Third-party impulse responses

The *Torpedo Studio* is capable of delivering the best guitar and bass tones by using the TORPEDO technology, but you can also embed impulse responses that you have purchased or downloaded for free from 3rd-party developers, in WAV or AIFF formats.


You can upload third-party IRs in the *Torpedo Studio*, by way of the free *Torpedo Remote* software.

4.6 Create your own IRs

Download the free TORPEDO BlendIR software from [the Two Notes website](#). With this software you will be able to capture your own cabinet + microphone setup and embed its sound signature into the *Torpedo Studio*.

5 *Torpedo Studio* quick start

The *Torpedo Studio* is set up to be connected, right out of the box, to a guitar or a bass amplifier, and used with headphones. You will just need **a guitar or bass amplifier with a 4, 8 or 16 Ohm Speaker Output** and **headphones**.

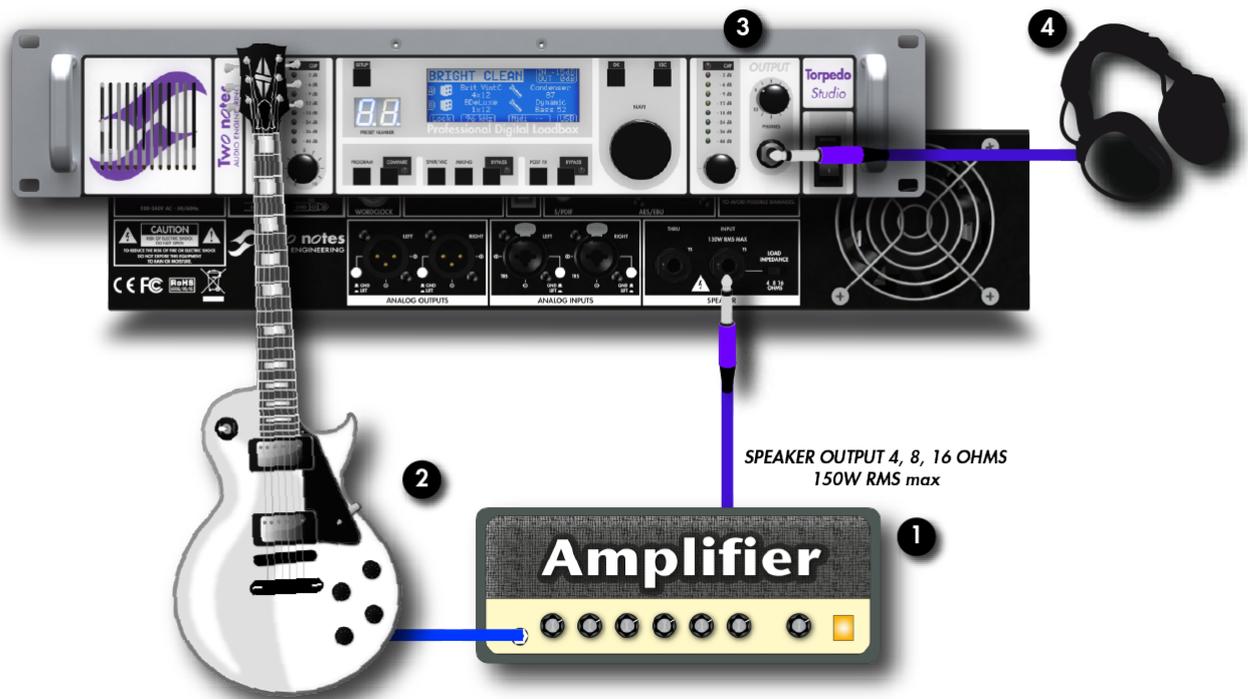

- | | | | |
|---|--------------------------|---|----------------|
| 1 | Electric guitar or bass | 3 | Torpedo Studio |
| 2 | Guitar or bass amplifier | 4 | Headphones |

In this first simple configuration, you will be creating a line-level professional "studio" quality output for your amp, which will allow you to familiarize yourself with the machine within minutes.



First plug a cable (jack or speakon) into one of the Speaker Outputs of your amp.



Remember to always set the Torpedo *Studio* to the same impedance rating as the one indicated above the socket you are plugged into on the back of your amplifier. If you are using a speaker cabinet connected to the THRU output, the impedance on the amplifier must match the cabinet's impedance, regardless of the value indicated on the Torpedo *Studio*



Always use a standard speaker cable (a pair of insulated conductors with no shielding) to connect your amplifier to the Torpedo *Studio*. Using an instrument cable instead of a speaker cable can cause significant damage to your amplifier, requiring service by a technician.



Then, plug that cable into the "SPEAKER INPUT" jack input of the *Torpedo Studio* (number 12 in figure 3.2).

Finally, plug your headphones into the stereo jack output of the *Torpedo Studio* (number 8 in figure 3.1).

Plug your amplifier and the *Torpedo Studio* into a wall outlet. You can now power-on the *Torpedo Studio*, and then your amplifier.



When powering-on the *Torpedo Studio*, you will hear the sound of a relay (a brief click). This corresponds to the activation of the load-box of the *Torpedo Studio*, which allows your amplifier to run without a speaker cabinet. It is very important to always power-on the *Torpedo Studio* before powering-on your amplifier.

The *Torpedo Studio* starts on preset 00. Now the input gain and output volume must be set up.

1. Turn off the volume of the Phones output, as well as that of any devices connected to the analog or digital outputs of the *Torpedo Studio*.
2. Turn up the volume of your amplifier to the level you want and play for a few seconds: turn the input gain until you stay in the top green/yellow area on the input bargraph.
3. Turn the output volume gain until you stay in the top green/yellow area on the output bargraph.
4. Adjust up the Headphones output volume to your taste.

You can now browse the presets with the navigation knobs (number 6 in figure 3.1). Use the **NAVI** knob to change the preset number and press **OK** to select a preset.

For more flexibility, the values of the output volume is stored within each preset. Therefore, you may have to adjust those parameters depending on the presets.

Within a few minutes, you have prepared your system for silent performance with headphones, but also for stage sound pick-up (through the analog outputs) or for digital studio recording (through the AES/EBU or S/PDIF outputs).

We will expand upon the numerous creative options and convenient features offered by the *Torpedo Studio* further down in this manual.

Part 4


Connecting the Torpedo *Studio*

The Torpedo *Studio* offers a solution for silent and quality sound capture in many situations. The following illustrations show the most common situations the Torpedo *Studio* has been created for, starting with the various routing options.

1 Routing the Inputs/Outputs

The Torpedo *Studio* is a dual channel processor accepting mono or stereo input signals that can be treated as independent or linked. The following illustration presents the various elements and how there are configured.

- Inputs are illustrated by **1** or **2**, they can be either the Amp, the Line L&R or digital inputs, depending on the selected Input Mode
- The simulation channels are illustrated by **A** or **B**
- Outputs are illustrated by **L** or **R**

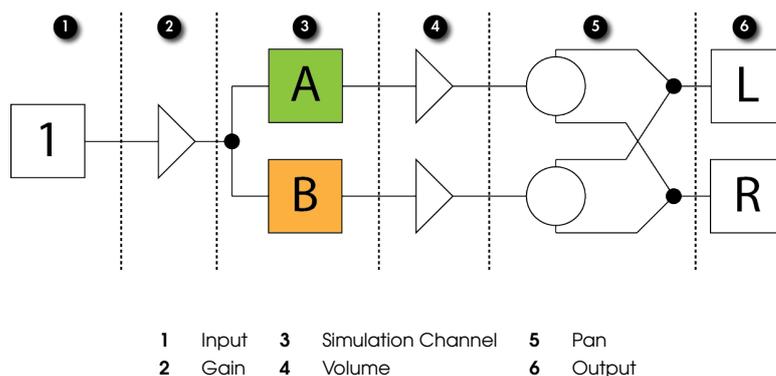

1.1 Inputs

The Input potentiometer only controls the gain of the SPEAKER input (in other words, the loadbox gain). The Line and digital inputs does not have an analog gain control, but we provide an **Input Boost** to increase the signal when it's needed. If you experience overloading of those inputs, please lower the volume of the source instrument or computer. If is possible to boost the Speaker Input as well.

Inputs routing	
"Amp"	Input 1 is the mono amplifier Input and will feed both A&B channels.
"Line L + Amp"	Input 1 is the Line Left input that will feed A, and the Speaker Input will feed the channel B. Use this configuration if you want to use an amp and a line level instrument simultaneously.
"Line", "S/PDIF", "AES/EBU"	Inputs 1 and 2 are the selected stereo inputs, use this option with a stereo line level instrument, or a digital processor/soundcard.
"Line L", "Line R", "S/PDIF L", "S/PDIF R", "AES/EBU L", "AES/EBU R"	Input 1 is the selected mono input, and feed both A & B channels.

1.2 Outputs

We have incorporated a useful function inherited from the Torpedo VB-101: the **Dual Miking/Dry** output mode. When selecting that option, both A&B channel will be mixed in mono, either on the right or left output, and the respectively left or right output will send the dry, unprocessed signal. It is a very interesting function that allows you for example to record the dry signal on one track and the wet signal, a mix of A and B processing channels, on another mono track.

Outputs routing	
"Stereo"	A & B channels are respectively sent to the outputs L & R.
"Dry/Dual Miking"	A dry, unprocessed signal is sent to output L and A & B are mixed in mono and sent to the output R.
"Dual Miking/Dry"	A dry, unprocessed signal is sent to output R and A & B are mixed in mono and sent to the output L.


1.3 Routing diagrams

To modify the routing configuration, please refer to part 5. 4.1, **the default routing mode is Amp to Stereo.**

Input / Output	Stereo	Dry/Dual Miking	Dual Miking/Dry
"Amp"			
"Input L", "S/PDIF L", "AES/EBU L"			
"Input R", "S/PDIF R", "AES/EBU R"			
"Line L+Amp"		Not compatible	Not compatible
"AES/EBU", "S/PDIF", "Line"		Not compatible	Not compatible

2 In the studio

The Torpedo Studio can be used in the studio for analog or digital recording. We shall concentrate here on digital recording, but you can use the Line Outputs, for example to feed a microphone preamplifier and add an extra "color" to your tone.

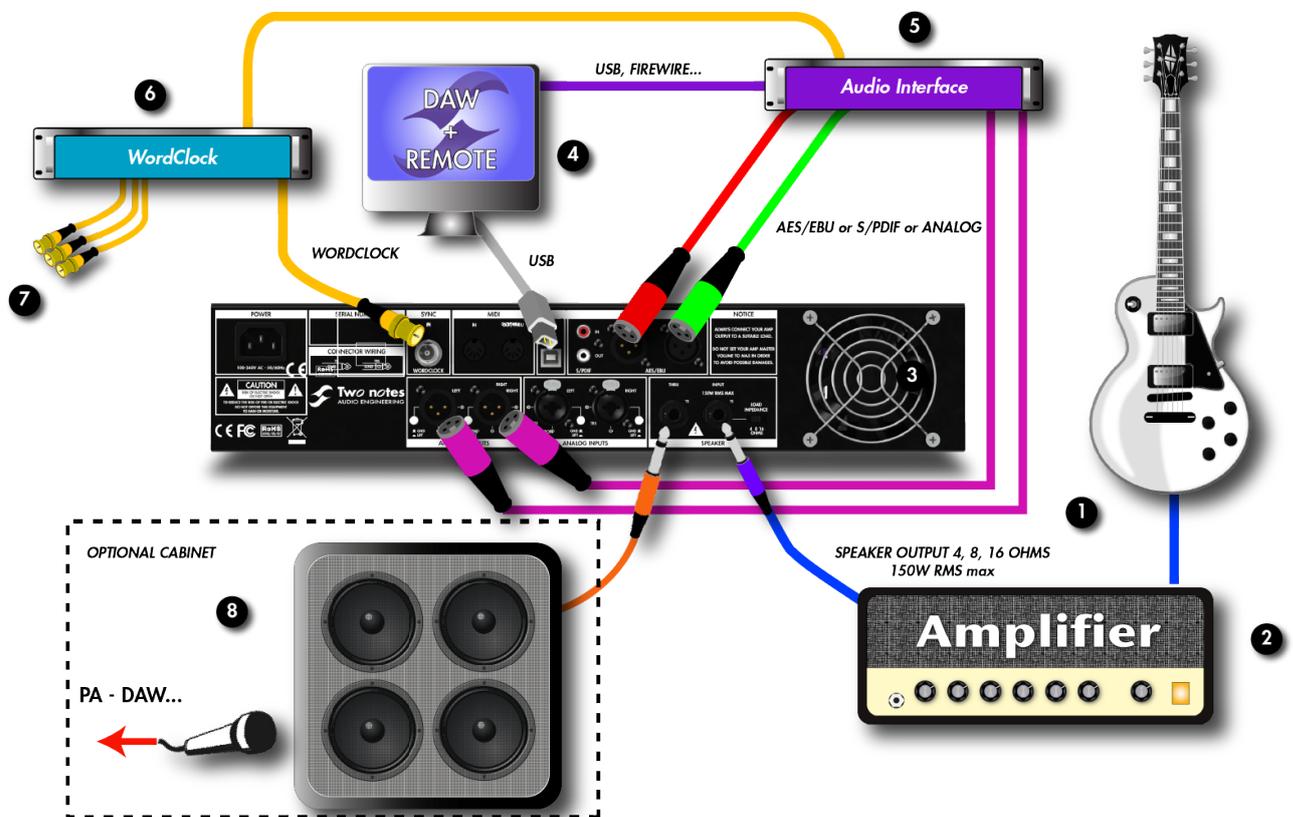

- | | | | | | | | |
|---|--------------------------|---|---------------------------|---|-----------------|---|--------------------------|
| 1 | Electric guitar or bass | 3 | Torpedo Studio, rear view | 5 | Audio Interface | 7 | To other digital devices |
| 2 | Guitar or bass amplifier | 4 | DAW with TORPEDO Remote | 6 | Master clock | 8 | Optional cabinet |

The Torpedo Studio acts here as an analog-to-digital converter, clocked by a wordclock and connected to a DAW with the AES/EBU connection.

The USB connection gives you instant control over all the parameters of the Torpedo Studio. It is also useful for uploading firmware updates, for preset backups, and for loading new simulations. The standalone **Torpedo Remote** software allows you to address all of those functions.




For a working S/PDIF or AES/EBU connection, your audio interface must be in slave mode, while the Torpedo Studio is in master mode. We would recommend having the Torpedo Studio in slave mode if you wish to control the digital sync from your DAW or a master clock. For more information on your audio interface, please refer to its user's manual.

An interesting option is to use the THRU output to feed a real speaker cabinet and do a miking of that cabinet while recording with the Torpedo Studio, meaning having three different microphone and cabinet combinations recorded at the same time.

3 On stage with an amplifier

The analog I/O of the Torpedo Studio offers great options on stage. For example, the analog outputs (number 10 in figure 3.2) can be connected at the same time both to the front mixing console and to a monitoring system (not shown here).

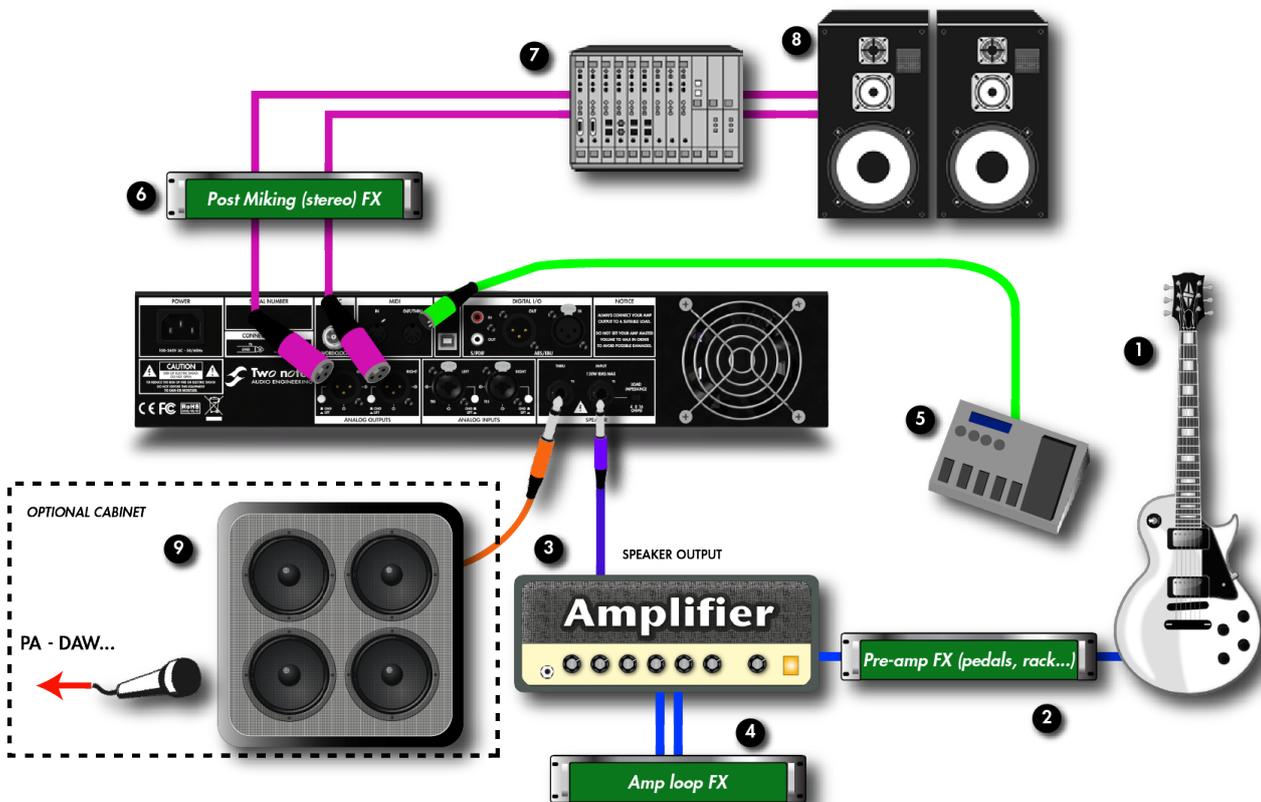

- | | | | | | | | | | |
|---|-------------------------|---|--------------------------|---|--------------------------|---|-------|---|------------------|
| 1 | Electric guitar or bass | 3 | Guitar or bass amplifier | 5 | MIDI controller | 7 | Mixer | 9 | Optional cabinet |
| 2 | FX unit or pedals | 4 | FX unit or pedals | 6 | Stereo FX unit or pedals | 8 | PA | | |

Note that the musician can, with a MIDI floorboard, control the parameters (CONTROL CHANGE) and/or the presets (PROGRAM CHANGE) of the Torpedo Studio.

Playing in silence is a great feature, but at some point you do need to listen to what you play! Here are a few options for use at home, in the studio, or on stage:


1. Listening through the Headphones output,
2. Listening via a guitar/bass cabinet plugged into the Torpedo Studio THRU output,
3. Having a local monitoring system on stage, by duplicating the LINE output with a mixer,
4. Having in-ear monitors or wedge speakers controlled by a sound engineer.



The THRU, S/PDIF and LINE outputs can be used simultaneously.

4 On stage with a preamplifier

The Torpedo Studio offers two Line inputs to connect any kind of bass or guitar preamplifier, or any other Line level instrument, including keyboards.

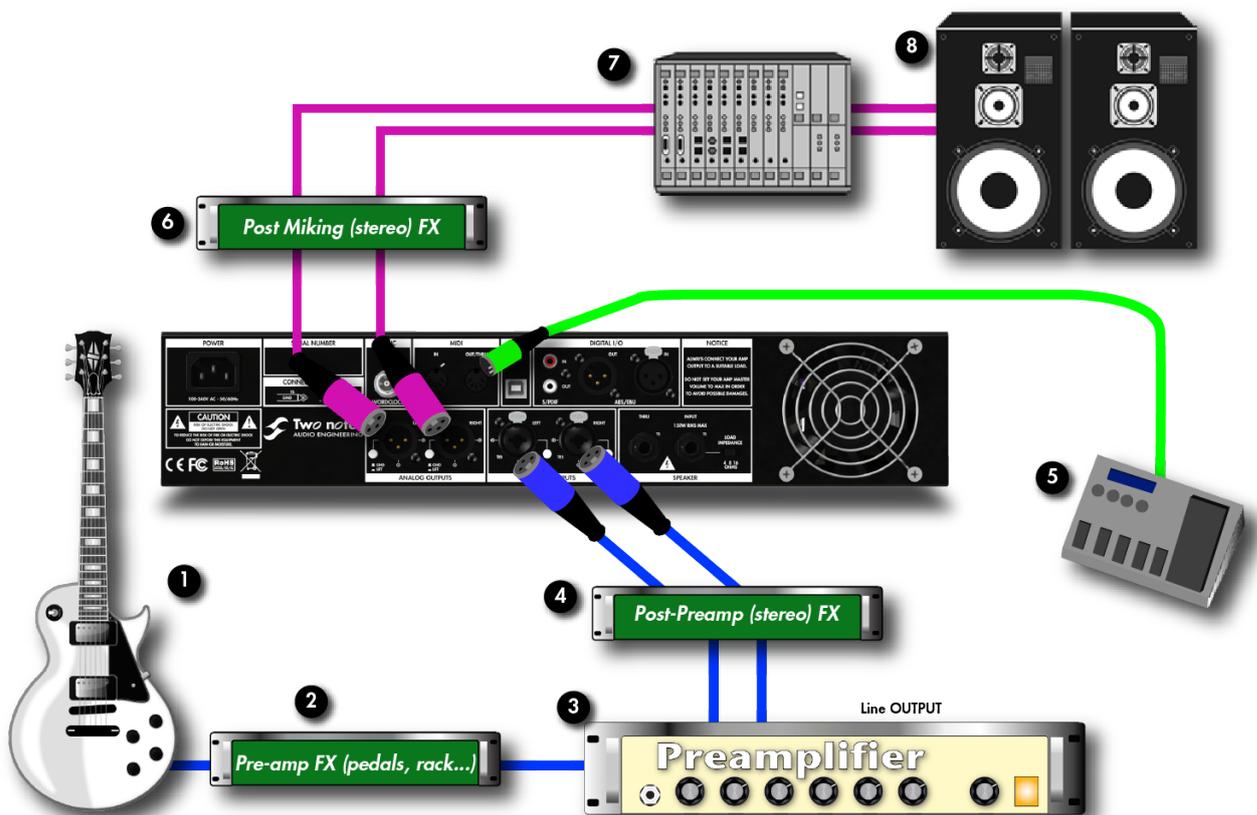


- | | | | | |
|---------------------------|----------------------------|----------------------------|---------|--------------------|
| 1 Electric guitar or bass | 3 Guitar or bass amplifier | 5 MIDI controller | 7 Mixer | 9 Optional cabinet |
| 2 FX unit or pedals | 4 FX unit or pedals | 6 Stereo FX unit or pedals | 8 PA | |

5 Mixing a real cabinet miking and the Torpedo Studio

On stage or in the studio, you may need to *feel* the sound coming out of a cabinet. You can simply connect a cabinet to the **THRU** output on the Torpedo Studio. You will be able to hear the

sound coming from the amp as usual, without any simulation or effect from the *Torpedo Studio*. Once you plug a cabinet into the **THRU** output:

1. The amplifier is directly connected to the cabinet,
2. The internal loadbox of the *Torpedo Studio* is disconnected.

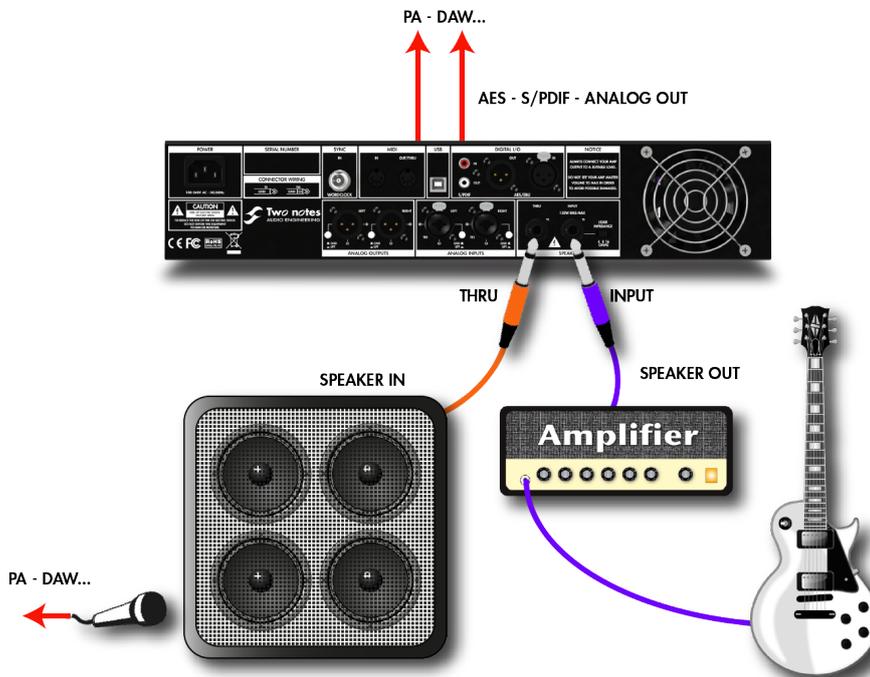

On this figure, we have added an optional microphone to take the sound directly from the cabinet. That way you can then get at the same time, in one take:

1. A traditional track with a real cabinet and a microphone;
2. A simulated track using the *Torpedo Studio* library of speakers and microphones;
3. If needed, a dry digital track with no simulation, for later re-miking (see the re-miking section below).

This gives you a wide range of sonic possibilities, for you to make sure you get the tone you are looking for!



When you plug a cabinet into the THRU output, the impedance of that cabinet is the one that your amplifier sees. In other words, with a 4-Ohm cabinet, you need to connect to the 4-Ohm output of your amplifier. In this configuration, the loadbox inside the *Torpedo Studio* will be disconnected.

5.1 "Why am I hearing phase cancellation effects?" or fixing the latency-related issues when using the analog I/Os on the Torpedo

The *Torpedo Studio* is a digital product. Digital means that the analog signal at the input will be converted into digital, processed, then converted back to analog.

The whole process takes a certain amount of time, referred to as **latency**. This can be described as the time that it takes for the signal to go from one input to one output. In the *Torpedo Studio* or

VB-101, you can choose between two different latency modes (normal - 5.063ms or Low - 3.064ms). Please note that when switching to Low, the Overload parameter is no longer accessible, to save some CPU processing.

Mixing the output signal of the Torpedo Studio and a real cabinet miking will cause some issues and possibly a comb filter effect if you do not compensate for the latency. To fix that, you will need to add a delay of the latency value on the microphone track (as the microphone sound will arrive "earlier" than the Torpedo sound), **in the DAW or on the mixer**, either in (milli)seconds or in samples.

In the following table we give the rounded number of samples corresponding to the Normal or Low latency, in function of the sampling frequency of your project or digital mixer:

Latency / Delay value (ms)	32KHz	44.1KHz	48KHz	88.2KHz	96KHz	176.4KHz	192KHz
Normal - 5,063	162	223	243	447	486	893	972
Low - 3,064	98	135	147	270	294	540	588

For alternative frequencies, please use the following formula: $n_{sample} = latency \times f_s$, where n_{sample} is the number of samples and f_s is the sampling frequency. A sampling frequency of 44.1KHz means that you are recording (or playing) 44100 samples per second.

As the number of samples is an Integer, you will never match the exact latency value in milliseconds. Here is how we recommend you proceed to minimize the phase cancellation effect:

- Set a time length/number of samples as close as possible from the Torpedo Studio latency value (with the help of the table);
- mix the microphone and the Torpedo signals in mono;
- play around the value you set to **find the maximum energy**, the loudest signal.
- An alternative way to find the best value is to inverse the phase of one of the signals and **search for the maximum attenuation**. When you find it, put the track back in phase and confirm that you actually found the best value.

5.2 "What if I am using the digital I/Os on my Torpedo?" or how to figure out the latency of the full digital system

It is not possible to determine the exact latency of your system as soon as you use the digital I/Os of the Torpedo. Why is that? Because the digital product sending and/or receiving the signal to/from the Torpedo have a latency at its I/Os too. It is not really the problem however. The issue is that the processing time of the analog to digital converted on your soundcard will never be the same as the processing time of its digital inputs.

In other words, the processing time on the audio interface will introduce another delay between the signal coming from the analog and digital inputs, and we do not know that extra delay.

Can anything be done to remedy this? YES

1. The most common way to compensate for the latency when you don't know its value is to zoom on the waveforms and move the Torpedo record so it will be time-aligned with the microphone record. To improve the precision, you can just "slap" your guitar or bass to produce a kind of a square waveform. The shorter the slap (in time) and stronger, the more precise you will be and it will be easier to find where you should focus your attention for the alignment. If you can't be as precise as you would want (because the DAW won't allow sub-sample positioning), just add a delay on the microphone track and play around to find the right value.
2. Some DAWs (such as Pro Tools) are able to measure and compensate for the outboard latency. Please refer to your DAW's manual to find out if this option is provided.

6 A note on external effects placement

The location of your effects (pedals or multi-FX) is very important. You can follow the usual rules concerning the effects layout, with the ones that should be placed before a preamp (OD, fuzz, compressor...), or in the amp loop (time-based effects like chorus, delay, reverb...).

An interesting option with the Torpedo Studio is the possibility to place some effects AFTER the loadbox. This is what we call the "studio setup": in a studio, most of the time, the time-based effects will be placed in auxiliary, meaning AFTER the miking, or directly in the DAW. This will lead to a cleaner sound of said effects, that will not be touched by any potential modification like when they are in an FX loop (distortion and compression from the power amp stage for example).


7 Dry recording and re-miking

Here is a particular configuration that makes the most of the Torpedo Studio's great flexibility. When recording, connecting the unit in this manner will allow you to rework a given recording *after* it has been made. **The purpose is to work on the miking when you have sufficient time to do it perfectly — while mixing with all the other instruments, for example — and to multiply the tracks with various miking settings if needed.**

The reamping techniques (*i.e.*, recording a guitar or bass through a DI and sending that signal into an amplifier) are well known. What we are going to talk about here is something we call "re-miking".

This is done in two steps :

1. Dry recording the amplifier (*i.e.*, recording the sound of the amplifier at the speaker output with the Torpedo Studio but without a speaker simulation);
2. Using the Torpedo Studio as an external processing unit inside a digital or analog loop by using the AES/EBU, the S/PDIF or the Line I/Os.

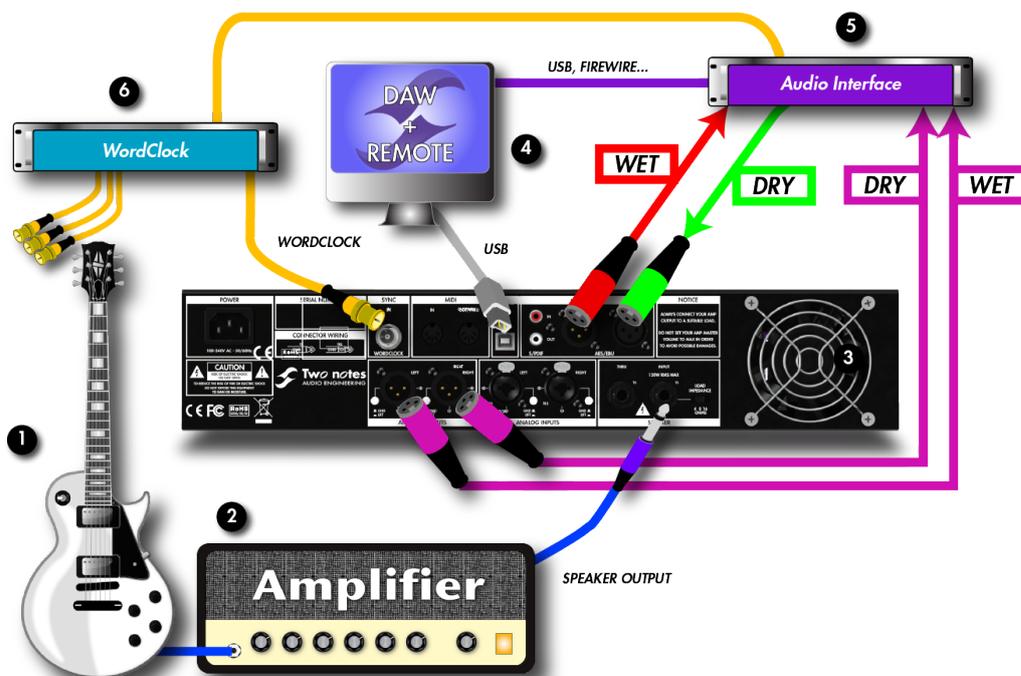

- | | | | | | |
|---|--------------------------|---|---------------------------|---|-----------------|
| 1 | Electric guitar or bass | 3 | Torpedo Studio, rear view | 5 | Audio interface |
| 2 | Guitar or bass amplifier | 4 | DAW with TORPEDO Remote | 5 | Master clock |

7.1 Step one: recording the dry signal


First of all you will need to get a DRY signal from the Torpedo Studio. On the following table we have listed the various options you have with the Torpedo Studio. It is very off-putting trying to play with a completely dry sound so we have indicated on which channel you can get a wet signal (*i.e.*, with the speaker simulation on). You can choose to record the Wet signal or not, depending on your DAW configuration and capability.

Dry channel	Wet channel	Output mode
Analog or Digital Out LEFT	Analog or digital I/Os RIGHT	Dry/Dual Miking
Analog or Digital Out RIGHT	Analog or digital I/Os LEFT	Dual Miking/dry

7.2 Step two: re-miking the signal

You need to create a loop between the Torpedo Studio and your DAW. You can create either a digital or an analog loop. To create a loop, connect both input and output of the Torpedo Studio to the DAW:

1. The dry signal is sent from the DAW to the Torpedo Studio. On most sequencers, that track must be routed to a dedicated output, not the master output track.
2. Choose the appropriate miking parameters on the Torpedo Studio; the dry signal is processed.
3. The wet, processed signal is sent to a new track on the DAW. That track can be routed to the master track and activated for real-time listening.

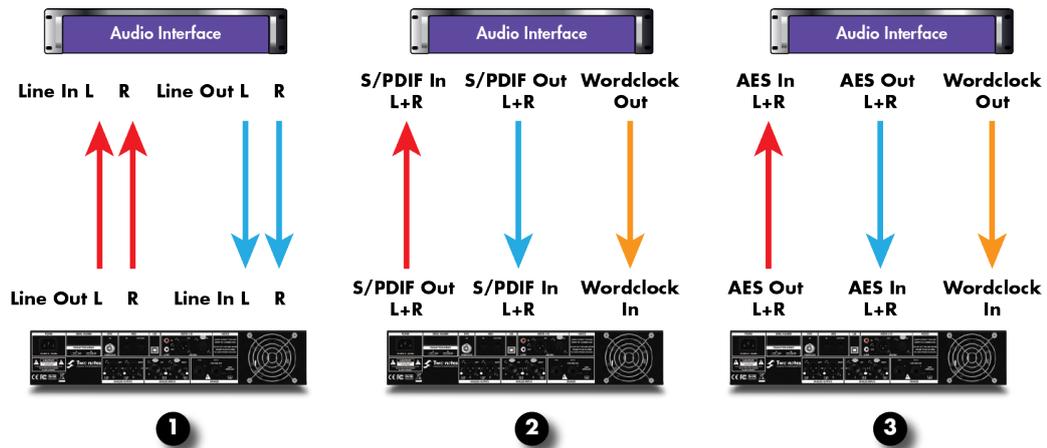

	Dry send (DAW to TORPEDO)	Wet return (TORPEDO to DAW)	Dry track status (DAW)	Wet track status (DAW)
1	Line Out to Line In	Line Out to Line In	Routed to Line out (not Master)	Routed to Master
2	S/PDIF Out to S/PDIF In	S/PDIF Out to S/PDIF In	Routed to S/PDIF Out (not Master)	Routed to Master
3	AES Out to AES In	AES Out to AES In	Routed to AES Out (not Master)	Routed to Master

Note: Wordclock is optional in a digital loop. Use it if you have several digital products that need to be synchronized to your DAW.

8 Stay connected

You may have discovered an idea to use the device in some innovative way. Do not hesitate to come and share your experience on the Two Notes Audio Engineering Forum or social networks. Please go to [the Two Notes Audio Engineering website](#) and click on the "Community" section.

Two Notes is also on the social networks [Facebook](#), [Soundcloud](#) and [Youtube](#) — so do not wait and come share your creative work!

Part 5

Configuring and using Torpedo *Studio*

1 The Torpedo *Studio*'s interface

The Torpedo *Studio* parameters are organized in menus that can be accessed with various switches and knobs.

You will find three types of controllers:

- Two rotary encoders: output volume, navigation (NAVI);
- ten switches: SETUP, PROGRAM, COMPARE, SPKR/MIC, MIKING, POST FX, OK, ESC, two BYPASS;
- Two potentiometers: to control the SPEAKER Input gain, and headphones output volume.

Every action performed appears on the main screen of the unit (number 4 in figure 3.1). The two-digit display (number 3 in figure 3.1) lets you know what preset number you are currently on.

Here is a representation of the screen displayed in PERFORM mode. The PERFORM screen is the default screen you will see when first using the Torpedo *Studio*. This is the mode you will be on when you are playing without editing or changing any parameter. From that mode you can navigate the presets.



Figure 5.1: Torpedo *Studio* default screen

- | | | | | | |
|---|-------------------------------|---|---------------------|---|--------------------------|
| 1 | A and B speakers | 4 | A and B microphones | 7 | Digital output frequency |
| 2 | Preset name | 5 | USB connected | 8 | SPEAKER Input impedance |
| 3 | Input Boost and Output volume | 6 | MIDI signal | | |

In the following paragraphs, we will illustrate all the commands and menus available from the left to the right of the unit.

2 Speaker input gain control



This potentiometer controls the SPEAKER input gain of the unit. The *Torpedo Studio* being a digital product, it is absolutely critical that you avoid any saturation of the input signal, or you may considerably reduce the sound quality. To get the best sound, try to have the same volume (or close) on all different sounds coming to the *Torpedo Studio*. This way you won't have to change the input gain when switching the channels on your amplifier. If you don't have individual volume settings on your amplifier channels, always do the gain setting with the loudest channel.

The input gain adjustment must be done with input signal present at the SPEAKER input. The input bargraph gives you a visual indication of the input signal amplitude. The upper red led is on when there is saturation in the input stage: lower the volume of your amplifier output and/or lower the input gain.



For optimum sound quality, we recommend keeping the peak levels of the input signal at a maximum of -12dB to -6dB on the bargraph.

3 Main control panel



Figure 5.2: *Torpedo Studio* main control Panel

- | | | | | | | | |
|---|------------------------|---|--------------------|----|-------------------------------------|----|--------------|
| 1 | Preset number | 5 | Escape switch | 9 | Simulation bypass | 13 | Program menu |
| 2 | Global settings | 6 | Navigation encoder | 10 | Virtual miking menu | | |
| 3 | 192X64 graphic display | 7 | POST FX bypass | 11 | Speaker & microphone selection menu | | |
| 4 | Validation switch | 8 | POST FX menu | 12 | Compare switch | | |

The *Torpedo Studio* control panel includes the various knob and switch controllers that give access to the machine and/or sound parameters.

You can access any menu by pressing the corresponding switch. By pressing once you will access the last channel you edited, either **A** or **B**. Pressing a second time will give you the other channel, and **A** and **B** will alternate every time you click.

The last channel you edited is stored in memory. In other words, if after editing the channel **B** MIKING you click once on Post FX, you will stay in channel **B**, and you will have to click twice to get the channel **A**.

The navigation encoder has various functions:

- browsing the presets if you are on the PERFORM screen,
- browsing the parameters if you are on a menu screen,
- modifying the parameter that you have selected.

To access any given parameter setting or to validate it, press the "OK" switch. To cancel any change made to the parameter setting, or to go back to selecting parameters, press the "ESC" switch.

4 SETUP

The SETUP menu is where you will configure the unit. The parameters that are set up here will apply to all the presets and be retained when the Torpedo *Studio* is turned off.

4.1 Audio

SETUP \	AUDIO \	
Audio	Input	Amp
Sync	Output	Stereo
Midi	S.G.A.	Output
System	Loadbox Mode	Reactive
Device ID	Load Compensation	--
	Latency Mode	Normal

- **Input Select:** Select the input you want to activate for processing. The various routing options are detailed in part 4.

- **SGA:** The Safe Gain Adjustment is an automatic gain-reduction functionality developed by Two Notes Audio Engineering, This parameter can be either Off, Out or Out Link. When set to Out, the Torpedo will detect any saturation at the output stage, either on the A or B channel, and lower the volume of the corresponding output. In Out Link mode, both channels will see their volume decreased as soon as one is overloading. Use that mode if you process a stereo input, to maintain the stereo image.
- **Output mode:** You can here choose to send either a processed (Stereo) or a combination of processed and non processed ("Dual Miking/Dry" or "Dry/Dual Miking") to the analog and digital outputs. In "Stereo" mode, a wet signal is sent to both channels (left and right). In "Dry/Dual Miking" mode, a dry signal is sent to the left channel and a mono mix of both A and B channels is sent to the right channel. In "Dual Miking/Dry" mode, the mono mix goes to Left and Dry to right. This function is useful for recording a dry signal for later re-miking while monitoring (and/or recording) a processed signal.
- **Loadbox Mode:** The Torpedo *Studio* features a loadbox that can be either Reactive or Resistive. that is a unique function that let you choose either the warm sounding Resistive mode, or the brighter and closer to real speaker impedance Resistive mode.
- **Load Compensation:** Only in Resistive mode, this option activates a filter that corrects the dynamic reactions of the amplifier when it is used with a loadbox (see section 2. 1). To get the most realistic sound possible, you should activate it when you are using the integrated loadbox of the Torpedo *Studio*, and deactivate it when using a speaker cabinet plugged into the "Speaker Thru" output (number 13 in figure 3.2). You can choose to let it Off to get a softer and warmer tone.

- **Latency Mode:** In every digital audio system, there is a time delay between the input and output sound. This time delay is generally called "latency" and it needs to be as low as possible: above a certain value, which is different for every person, the latency between a played string and the output sound becomes noticeable, and will be distracting for the musician. The noticeable threshold for guitar is usually considered to be around 10ms. The inner latency of the *Torpedo Studio* is close to 5ms. In some cases (e.g., when chaining several digital audio devices), it can be beneficial to reduce the latency of the *Torpedo Studio*, by turning the Latency Mode to "Low". This decreases the latency to 3ms by suppressing the Overload parameter in the *Torpedo Studio*'s speaker simulation and thus reducing the CPU load to accelerate the processing.

4.2 Sync



- **Sync:** The *Torpedo Studio* can be synchronized with an external clock ("Wordclock") or with input digital signals ("S/PDIF" or "AES/EBU"). If you select an external clock sync, the detected frequency ("Output Freq.") will be in the Sync menu when the *Torpedo Studio* is actually locked to the external signal.

- **Output Freq.:** Indicates the frequency of the *Torpedo Studio* digital outputs. Analog outputs always run at 192 kHz.

4.3 Midi



- **Channel:** Select here the MIDI Channel you want the *Torpedo Studio* to respond to. When "All" is selected, the *Torpedo Studio* responds to all the channels (omni mode). All the signals received at the MIDI input are sent back through the "MIDI OUT/THRU" output.
- **Control Change:** Select whether or not the *Torpedo Studio* should respond to CONTROL CHANGE messages.


- **Program Change:** Select whether or not the *Torpedo Studio* should respond to PROGRAM CHANGE messages.

4.4 System



- **Brightness:** Set the brightness level of the display screen.
- **Fan Control:** Control the behavior of the cooling fan. We recommend using the "Auto" mode, in which the fan's speed is controlled by the internal temperature.

4.5 Device ID

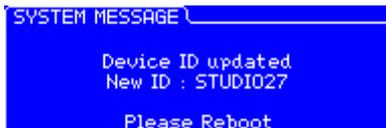

- **Device ID:** This menu lets you give an identifying name to your machine. If you wish to use the **Torpedo Remote** software to control several different machines simultaneously USB-connected to the same computer, you will have to give each machine a different Device ID. Move through the alphabet using the "NAVI" knob and select the letters with "OK".
- **Device ID - reboot:** After changing the Device ID, you will need to reboot the *Torpedo Studio*.

5 PROGRAM

In this menu you can save and move the *Torpedo Studio* presets around.

5.1 Save



- **Save:** Press "OK" to display the saving screen for the current preset. Choose the saving destination from the 100 at your disposal, using the "NAVI" knob. Press "OK" again to save the preset.

5.2 Name



- **Name:** Here you can give a name (10 characters maximum) to your preset. Move through the alphabet using the "NAVI" knob and select the letters with "OK".

6 COMPARE

With the "COMPARE" switch, you have access to an advanced comparison functionality developed by Two Notes Audio Engineering. Think about it as a temporary set of parameters that re-initialized after each startup of the unit. It can be used to quickly and easily compare two sets of parameters. This can be compared to the "Clipboard" that is filled by the "Copy" function on our personal computers.

- At startup, the normal set of parameters and the temporary one are the same.
- You can switch between the temporary set ("COMPARE" LED on) and the normal one ("COMPARE" LED off) by briefly pressing the "COMPARE" switch.

- Any modification of either normal or temporary set will be saved respectively in the normal or temporary set, without affecting the other one. You have two separate sets of parameters at hand.
- You can copy the normal set into the temporary one by pressing the "COMPARE" switch for about 2 seconds. The "COMPARE" LED flashes to indicate that the copy has been performed. You cannot copy the temporary set into the normal one.

Let us look at an example:

1. Make sure the "COMPARE" LED is off. Select a preset, make some changes as you desire: you have now adjusted the unit with a new, specific set of parameters.
2. Save that new current (i.e., "normal") set of parameters into the temporary one (see above). The two sets are now similar.
3. Make some more changes — for example, change the speaker model. Now the two sets are different, and you can hear the difference by switching back and forth between the two (see above).

Another interesting way of using that functionality is this: the temporary set of parameters is not dependent on any particular preset. If you load a preset when on the normal set of parameters, the content of the temporary set will not be affected. Thus, you can copy a preset into the temporary set, then load a second one and compare the two together.

This constitutes a simple yet powerful way of comparing either a full preset to another, a modified preset to the original one, or just preview a change made to a single parameter.

7 SPKR/MIC

In the "SPKR/MIC" menu, you can choose which power amp, speaker cabinet and microphone you want to use. On **A** and **B**, you have 8 microphones and 50 speaker cabinets available. As you are surely used to choosing your guitar/bass and amp to get a specific type of sound, you will notice here how much the choice of speaker cabinet and microphone will impact the final sound.


Furthermore, the "User" parameter gives you access to your own impulse responses (.tur files, measured with *Torpedo BlendIR*), to impulse responses shared by other *Torpedo Studio* users, or to "standard" third-party impulse responses (.wav or .aiff files), either downloaded or purchased.

This feature expands the sonic and creative possibilities to infinity. Do not hesitate to use audio files with no direct link to speaker measuring and you can experiment with totally new sonic textures.

To add such impulse responses (IRs) to your *Torpedo Studio*, please report to the *Torpedo Remote* user's manual.

7.1 Power Amp

When using the *Torpedo Studio* with any kind of guitar/bass preamplifier, or even with an electric piano or a synthesizer, you will need the sonic color that the final stage of a traditional amplifier brings — that is, the power amplifier. Plug your device into the LINE input of the *Torpedo Studio* and enjoy the typical sound of the Two Notes electrically accurate virtual tube power amplifier.

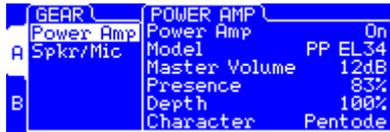

- **Power Amp:** Activate the power amplifier simulation by turning this parameter "On".
- **Model:** Choose the circuit topology (Push Pull or Single Ended) and the tube type (6L6, EL34, EL84, KT88).

- **Volume:** Set up the output volume of your virtual power amplifier.
- **Presence:** This setting affects the tube-stage frequency as regards loudness. From 0% (medium boost) to 100% (low and high boost), this parameter can be seen a loudness setting.
- **Depth:** This setting affects the bandwidth of the tube-stage. 0% means full bandwidth, and decreasing that value will venter around the medium frequencies. As Depth is placed after Presence, you may not notice its effect if Presence is set to a value close to 0%.
- **Pentode/Triode:** Select how the tube is used, either in triode or in pentode mode. Pentode mode has more headroom and volume than Triode, meaning that Triode tends to saturate earlier and with a softer sound.

7.2 Speaker and Mic

You have access to 50 different cabinets, and each cabinet can be miked with 1 of the 8 available microphones. **Please refer to Part 7 to discover the microphone and cabinet library.**



- **Speaker:** Determine which speaker cabinet model to use for the simulation.
- **Mic:** Determine which microphone model to use for the simulation.

Click on the SPKR/MIC button to select your **A** then **B** cabinet and microphone combination. The microphones and cabinets on **A** and **B** can be different or identical.

7.3 User



- **User:** Determine which impulse response (IR) file to use for the simulation. The "U" label indicates that the impulse has been measured (with **Torpedo BlendIR**) by the user.


The "W" label indicates that the impulse has been converted from a wave (or aiff) file. **You do not have access to the microphone positioning options when using the User impulses (both "U" and "W"). You have access to the "Overload" parameters only for the "U" impulse responses.**

8 MIKING



In the "MIKING" menu, you take the place of the sound engineer. This is where you will find the "sweet spot", the perfect microphone position. You will also be able to control speaker saturation and balance between simulated and non-simulated tones. The first two parameters determine the microphone's position. You can move the microphone around inside a trapezoidal plane that the **Torpedo Remote** software lets you visualize.

8.1 Distance

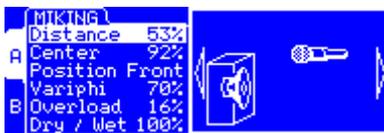

- Determine the distance between the simulated cabinet and microphone. Placing a microphone close to the cabinet will result in a precise sound with a large amount of proximity effect (dependent on the chosen model of microphone).

When you move the microphone away from the cabinet, you increase the part of the studio's acoustic (early reflections) in the sound.

Furthermore, depending on the cabinet model you use and especially with the ones including multiple speakers, moving the microphone away can bring some higher frequencies back. This is simply due to the directivity of the loudspeakers. At maximum positioning (100%), the microphone is placed 3 meters (10 feet) away from the cabinet.

8.2 Center


Determine the distance between the axis of the loudspeaker and the microphone (placed at a right angle). The in-axis position (0%) allows for a maximum amount of trebles, which are highly directives.

Moving the microphone away from the axis decreases the trebles to the benefit of the basses. At maximum position (100%), the microphone is placed at the edge of the speaker when Distance is 0%, and 1 meter (3 feet) away from the axis when Distance is 100%.

8.3 Position

In standard sound pick-up, the microphone is usually placed in front of the cabinet. However, placing the microphone behind the cabinet can be quite interesting. The tone you get then will usually be softer and darker. This is particularly noticeable with closed cabinet, less with open ones.

8.4 Variphi

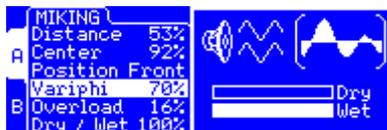

- The Variphi function allows you to play with the phase of the signal. When recording with two microphones you will often experience the phase cancellation effects. A slight difference in the placement of the microphones plus the microphones own specifications can lead to that effect, which can be either a problem (for example when all the bass frequencies disappear...) or a way to shape your tone.

When use with a single microphone, you will not notice the effect of Variphi, but as soon as you add another microphone (for example two different microphones and cabinet combinations on A & B), the Variphi parameter will give you a way to explore the tonal possibility of phase cancellation.

8.5 Overload

A loudspeaker is essentially a system designed to faithfully reproduce the sound transmitted by the amplifier. Nonetheless, a loudspeaker is determined by certain particular audio properties depending on the power that is applied to it.

The "Overload" parameter reproduces the natural saturation occurring when the loudspeaker is driven too hard. At maximum value, you get the sound of a loudspeaker close to destruction. A good start would be to select a value between 0% and 20%, then increasing it if you want to create a special effect.

8.6 Dry / Wet

Combine the dry, unprocessed sound, with the your A or B channel sound. This parameter is particularly interesting on clean sounds for bass and guitar, or when searching for new and original sounds.

9 BYPASS

There are two "BYPASS" switches, each associated to a red LED. The left one switches off the Torpedo simulation, the right one switches off the "POST FX" module.

10 POST FX

You carefully prepared your guitar/bass sound in the previous section, it is now time to tailor your guitar sound for mixing, whether for recording or on stage.

The "POST FX" section brings you some essential tools to quickly get a studio-quality ready-to-mix sound.

10.1 Low Cut

It is usual to apply a low-cut filter on the guitar to make some room for the bass and bass drum in the lower frequencies. The low-cut filter can also be used to remove extreme low frequencies that can lead to an imprecise sound on the bass.



- **Low Cut:** Switches the low-cut filter ON or OFF.
- **Frequency:** Controls the cutoff frequency of the filter.

10.2 EQ

The Torpedo *Studio* includes an equalizer, which is a central tool for mixing. With a few adjustments, it is possible to cut down an excess of low or high frequencies, to boost a frequency band for more presence, or to apply the classic V-shape tone onto a distorted guitar.

The range of the EQ is wide: you can either use it lightly, to simply correct a particular aspect of your sound, or in an extreme way, to produce some whole new sound character.



- **EQ Mode:** each of the two modes ("Guitar" and "Bass") offers settings adapted to the instrument. When in "Off" mode, the EQ is bypassed.

- **Low:** It is common to cut off the low frequencies on the guitar track to free up room for the bass and bass drum. You can also use this parameter to remove extreme low frequencies on the bass that can lead to an imprecise sound.
- **LMid:** With this frequency band, you can control the body of the instrument, its presence in the lower range. It is probably the most important control for the bass.
- **Mid:** The central frequency band is the one you have to cut to obtain the V-shape EQ. On the contrary, boosting it will lead to a more vintage type of sound.
- **HMid:** On a guitar, this frequency band is often useful to go through the mix. Generally speaking, you can get your sound more or less aggressive, especially if it is a clean one.
- **High:** Adding trebles brings brilliance and brightness to your sound. By cutting them, you can obtain a darker sound, which is useful on a bass, for example.

Band	Guitar Mode	Bass Mode
Low (shelf)	120Hz	50Hz
LMid (peak)	360Hz	120Hz
Mid (peak)	800Hz	360Hz
HMid (peak)	2000Hz	800Hz
High (shelf)	6000Hz	4000Hz

10.3 Exciter

An exciter is very useful to give a tone a certain character, or to add presence, or "air", to the sound.



- **Exciter:** Switch the exciter ON or OFF.
- **Gain:** Control the quantity of effect applied to the sound.
- **Freq:** Control the center frequency of the exciter. For example, presence for guitar is usually found at 2 or 3 kHz. Air can be added by placing this frequency at 6 or 8 kHz.


10.4 Comp

Using a compressor will reduce the dynamics of your sound, but can also be used to create special effects, such as pumping. The parameters of the Torpedo compressor are the same as for a standard studio compressor.



- **Compression:** Turn the compressor ON or OFF — and when ON, see the level of compression applied to the signal, in dB scale.
- **Threshold:** Control the signal level above which the compression occurs.
- **Ratio:** Control the ratio of the compression.
- **Attack:** Control the attack time, in milliseconds.
- **Release:** Control the release time, in milliseconds.
- **Make-up Gain:** Control the gain added at the output of the compressor.

11 Output volume control and headphones output

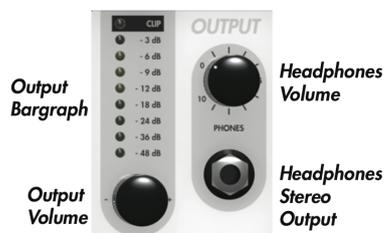

This encoder controls the output volume of the unit. The *Torpedo Studio* being a digital product, it is absolutely critical that you avoid all saturation of the input signal, or you may considerably reduce sound quality. The output volume consists in digital data, just like all the parameters in the *Torpedo Studio*, and it is saved together with the preset. You will need to adjust the output volume for each preset. Please note that the output volume depends on which speaker cabinet and microphone are being used for the simulation, as well as on microphone positioning. You may need to readjust the output volume when modifying those parameters.

The output volume must be adjusted based on the input signal at the selected input (analog or digital). The "OUT" label in the upper right corner of the main screen indicates the current output

volume value. The output bargraph gives you a visual indication of the amplitude of the output signal.

LEVELS	
Input Boost A	7dB
Input Boost B	7dB
Output Volume A	-3dB
Output Volume B	-12dB
Output Pan A	-C-
Output Pan B	-C-

This encoder has another function: letting you display all the input Boost levels, output volumes, and pan of **A** and **B** channels. Simply turn the Output potentiometer and get an overview of all your levels setting. You can navigate and change the values directly from that menu.

For optimum quality, we recommend keeping the peak levels of the output signal at a maximum of -6dB on the bargraph.

If you need to apply a high level of output volume gain, it is probably because your input signal is too low. Excessive output volume will reduce the signal-to-noise ratio and degrade the Torpedo Studio's overall performance. If you notice a drop in sound volume and the screen says "Gain Reduction" while you are playing, it probably means that the "Safe Gain Adjustment" function is activated. Report to section 4 for more information.

The "HEADPHONES" potentiometer controls the headphones volume on the 1/4" jack headphones output. This control is placed after the output volume control. Too low of an output volume setting, compensated for by a high headphones volume setting, will reduce the signal-to-noise ratio and degrade the Torpedo Studio's overall performance.



The power delivered by the headphones output is high enough to remain efficient even when using high-impedance headphones. Therefore, it is possible to get very high audio levels with that output. **We strongly advise against the use of headphones with high audio levels. The improper use of headphones can lead to irreversible damage to your hearing.**

12 Torpedo Remote

You can add new cabinets or IR files to your Torpedo Studio by using the standalone application **Torpedo Remote** for Windows™ and MAC OSX™. Download the software from the Two Notes website: <http://www.two-notes.com>. Take control of the machine via USB, change the parameters, arrange or add/delete cabinets and IR files, and apply updates. Torpedo Remote will detect any new update or new Two Notes cabinets (it requires a working Internet connection). With Torpedo Remote you will be able to:

- Control the Torpedo Studio with a USB link,
- Update the Torpedo Studio's firmware,
- Manage and upload new Two Notes TSR files or any third-party file,
- Manage, upload and download the presets.



The installation process of the Torpedo Remote software creates two default folders where the Impulses are stored:

- "Program Files\Two Notes Audio Engineering\Impulses" on Windows™.
- "/Library/Application Support/Two Notes Audio Engineering/Impulses" on MAC OSX™.

All the cabinet files must be stored inside that folder, without any subfolders. Torpedo Remote will automatically save the downloaded cabinets in that folder.

13 Want more cabs?

- **Two Notes cabinets:**




Torpedo Remote features the new Two Notes *Boutique*. This is an online store that gives you access to all of the Two Notes virtual cabinets, captured with a set of 8 microphones. Make sure you have a working Internet connection and click on **La Boutique**:

On the bottom left you find all of the cabinet collections, which are simple filters: selecting a collection lets you see only the cabinets you may have an interest in. For example only bass or vintage cabinets.

On the center panel you can:

- browse the cabinets,
- launch a real-time preview of the cabinet by pressing the "play" button,
- get a closer look at the cabinet.

When previewing a cabinet, you can move the microphone while playing any track so as to listen to the tone of that particular cabinet.

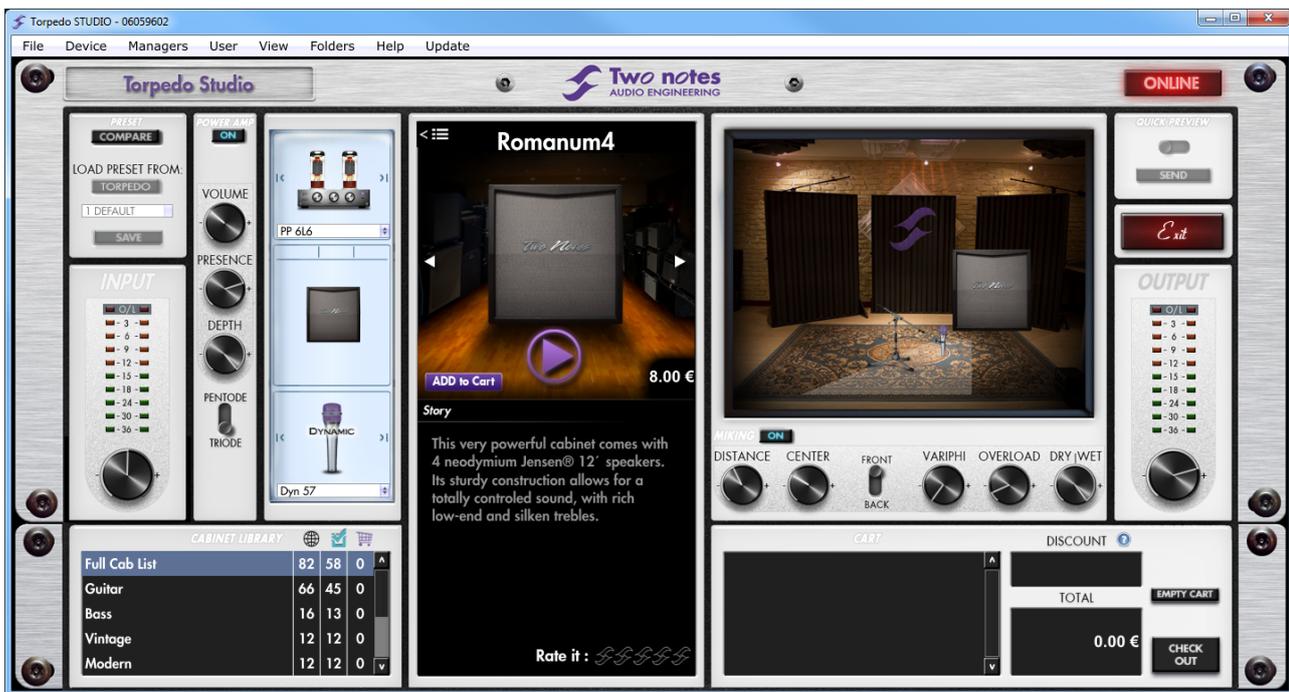

On the bottom right side of the Boutique interface you will find the cart. By pressing the "ADD" button on the cabinet panel, you will see the selected cabinet(s) appear on that panel. Depending on how many cabinets you wish to buy, you can get a discount. E.g., with more than 50 cabinets at a time, you get the biggest -65% "PROFESSIONAL" discount.

Once you have put all the cabinets you need in you basket, simply click on "Check out" to be redirected to the Two Notes Store. The secured payment process uses your Internet Browser. No billing or information on the payment method is stored on the plug-in, so as to ensure maximum security.

- **.tur files:**

.tur are proprietary files created with the Two Notes Audio Engineering **Torpedo BlendIR** software. The software is available for download from the Two Notes website. With Torpedo BlendIR you are able to use the Torpedo technology to capture the sound signature of your own cabinet and microphone in the deepest details.

To add a .tur file to your list, simply move the file to the root of the default Impulses directory, or select another folder that will be saved with the current session of your plug-in host. Please note that the files must reside at the root of that folder, without any subfolders. The cabinet list in the plug-in will be automatically refreshed.

Please note that with .tur files you do not have access to the microphone positioning parameter.

- **3rd-party IR files in .wav or .aiff format:**

Torpedo Studio complies with third-party Impulse Responses (IRs) in .wav or .aiff format.

To add a .wav or .aiff file to your list, simply move the file to the root of the default Impulses directory or select another folder (see part 5.4) which will be saved with the current session of your plug-in host. Please note that the files must reside at the root of that folder, without any subfolders. The cabinet list in the plug-in will be automatically refreshed.

Note: with 3rd-party files you do not have access to neither microphone positioning nor over-load parameters.

Part 6

MIDI Implementation

Your *Torpedo Studio* can be controlled by MIDI messages (PROGRAM CHANGE and CONTROL CHANGE) sent by a device connected to the "MIDI IN" input (number 6 in figure 3.2). The controlling device can be a foot controller, a keyboard, or a personal computer.

To learn how to send MIDI messages, please refer to the manual of your controller.



The MIDI messages are transmitted to every linked machine. To filter MIDI data received by the machine, you should configure the *Torpedo Studio* to either be on a single (1-16) channel, or on "ALL" channels. Please refer to section 4.3.

If you have several products communicating with a MIDI connection, you can use the "MIDI OUT/THRU" output of the *Torpedo Studio*, which mirrors every MIDI message coming in through the "MIDI IN" input.

1 PROGRAM CHANGE (PC)

Every preset in the *Torpedo Studio* is identified by a corresponding program number. Preset 00 of the *Torpedo Studio* corresponds to the MIDI PC 01. You can address the 100 presets (from 00 to 99), with MIDI PC 01 to MIDI PC 100. So you can access every preset by sending a PROGRAM CHANGE message with the appropriate number.

2 CONTROL CHANGE (CC)

The following table indicates the CONTROL CHANGE numbers for every *Torpedo Studio* parameter, as well as their range and behavior.

Parameter name	CC#-A	CC#-B	Range	Behavior
GENERAL				
Sim Bypass		0	0 - 1	0 = Off (Bypass) ; 1 = On
POWER AMP				
Bypass	1	64	0 - 2	0 = On ; 1 = Bypass (Ch B: 2 = Link)
Model	2	65	0 - 7	0 = Model #0 ; 1 = Model #1...
Volume	3	66	0 - 30	0 = 0dB% ; 30 = 30dB
Presence	4	67	0 - 127	0 = 0% ; 63 = 50% ; 127 = 100%
Depth	5	68	0 - 127	0 = 0% ; 63 = 50% ; 127 = 100%
Character	6	69	0 - 1	0 = Triode ; 1 = Pentode
SPKR/MIC				
Mode	7	70	0 - 3	0 = Off ; 1 = Cab ; 2 = User (Ch B : 3 = Link)
Speaker	8	71	0 - #Cab -1	0 = Speaker #0 ; 1 = Speaker #1 ...
User	9	72	0 - Nb User IR-1	0 = User #0 ; 1 = User #1 ...
Mic	10	73	0 - 7	0 = Mic #0 ; 1 = Mic #1 ...
MIKING				
Distance	11	74	0 - 127	0 = 0% ; 63 = 50% ; 127 = 100%
Center	12	75	0 - 127	0 = 0% ; 63 = 50% ; 127 = 100%
Position	13	76	0 - 1	0 = Back ; 1 = Front
Varipty	14	77	0 - 127	0 = 0% ; 63 = 50% ; 127 = 100%
Overload	15	78	0 - 127	0 = 0% ; 63 = 50% ; 127 = 100%
Dry/wet	16	79	0 - 127	0 = 0% ; 63 = 50% ; 127 = 100%
POST FX				
FX Bypass		17	0 - 1	0 = On ; 1 = On
Low Cut - Bypass	18	80	0 - 2	0 = On ; 1 = Bypass (Ch B : 2 = Link)
Low Cut - Freq	19	81	0 - 127	Specific mapping to Hz
EQ - Mode	20	82	0 - 3	0 = Off ; 1 = Guitar ; 2 = Bass (Ch B : 3 = Link)
EQ - Low	21	83	0 - 40	0 = -20dB ; 20 = 0dB ; 40 = 20dB
EQ - Low Mid	22	84	0 - 40	0 = -20dB ; 20 = 0dB ; 40 = 20dB
EQ - Mid	23	85	0 - 40	0 = -20dB ; 20 = 0dB ; 40 = 20dB
EQ - High Mid	24	86	0 - 40	0 = -20dB ; 20 = 0dB ; 40 = 20dB
EQ - High	25	87	0 - 40	0 = -20dB ; 20 = 0dB ; 40 = 20dB
Exciter - Bypass	26	88	0 - 2	0 = On ; 1 = Bypass (Ch B : 2 = Link)
Exciter - Gain	27	89	0 - 127	0 = 0% ; 63 = 50% ; 127 = 100%
Exciter - Freq	28	90	0 - 127	Specific mapping to Hz
Comp - Bypass	29	91	0 - 2	0 = On ; 1 = Bypass (Ch B : 2 = Link)
Comp - Threshold	30	92	0 - 63	0 = 0% ; 63 = 50% ; 127 = 100%
Comp - Ratio	31	93	0 - 127	Specific mapping to ratios
Comp - Attack	32	94	0 - 127	Specific mapping to ms
Comp - Release	33	95	0 - 127	Specific mapping to ms
Comp - Make Up Gain	34	96	0 - 63	0 = 0dB ; 63 = 63dB
IN/OUT GAIN				
Input Boost	35	97	0 - 20	0 = 0dB ; 20 = 20dB
Output Volume	36	98	0 - 127	0 = Mute ; 95 = 0dB ; 107 = 12dB
Output Pan	37	99	0 - 127	0 = 100%L ; 63=C ; 127 = 100%R
Mute	38	100	0 - 1	0 = Unmute ; 1 = Mute
Input Boost - Link		39	0 - 20	0 = 0dB ; 20 = 20dB
Output Volume - Link		40	0 - 127	0 = Mute ; 95 = 0dB ; 107 = 12dB
Output Pan - Link		41	0 - 127	0 = 100%L ChA, 100%R ChB ; 63=C ; 127 = 100%L ChB, 100%R ChA
Mute - Link		42	0 - 1	0 = Unmute ; 1 = Mute

Table 6.1: Torpedo Studio MIDI Implementation

Part 7

Specifications

1 List of Power Amplifiers

Designation	Characteristics
SE 6L6	Configuration Single Ended - Class A with 6L6
SE EL34	Configuration Single Ended - Class A with EL34
SE EL84	Configuration Single Ended - Class A with EL84
SE KT88	Configuration Single Ended - Class A with KT88
PP 6L6	Configuration Push-Pull - Class AB with 6L6
PP EL34	Configuration Push-Pull - Class AB with EL34
PP EL84	Configuration Push-Pull - Class AB with EL84
PP KT88	Configuration Push-Pull - Class AB with KT88

2 List of Microphones

Designation	Inspired by
Dynamic 57	Dynamic microphone Shure™ SM57
Dynamic 421	Dynamic microphone Sennheiser™ MD421
Knightfall	Condenser microphone Blue™ Dragonfly
Condenser 87	Condenser microphone Neumann™ U87
Ribbon 160	Ribbon microphone Beyerdynamic™ M160N
Ribbon 121	Ribbon microphone Royer™ R121
Bass 20	Dynamic microphone Electrovoice™ RE20
Bass 5	Dynamic microphone Shure™ Beta52

3 List of Cabinets

Designation	Inspired by
GUITAR cabinets	
2Notes CSG	Two Notes Custom 1x12" ElectroVoice® EVM12L
Alichino	Cornford® Harlequin 1x12" OB Celestion® Vintage 30 UK
Angl VintC	Engl® 4x12" Celestion® V30
Bayou	Jenkins® Sound Lab 2x12" OB Eminence® Patriot Swamp Thang
BDeLuxe	Fender® Blues Deluxe 1x12"
Blonde 63	Fender® Bassman '63 Blonde Tolex Piggy Back 2x12"
Brit 65C	Marshall® 1965A 4x10" Celestion® G10L-35 close back
Brit 65O	Marshall® 1965A 4x10" Celestion® G10L-35 open back
Brit Std	Marshall® JCM900 2x12" Celestion® G12T
Brit VintC	Marshall® Slash Signature 4x12" Celestion® V30 close back
Brit VintO	Marshall® Slash Signature 4x12" Celestion® V30 open back
Calif C90	Mesa/Boogie® 1x12" Celestion® C90 (Black Shadow)
Calif StdC	Mesa/Boogie® Rectifier® Standard 4x12" Celestion® V30 close back
Calif StdO	Mesa/Boogie® Rectifier® Standard 4x12" Celestion® open back
Eddie	Peavey® 5150 2x12" Sheffield 1200
Forest	Elmwood® 2x12" Celestion® V30
Free Rock	VHT® Deliverance 4x12" Eminence® P50E
Free Rock2	VHT® Deliverance 2x12" Eminence® P50E
Green Tri	Hughes&Kettner® Triamp 4x12" Celestion® Greenback
Jazz 120	Vintage Roland® JC120 2x12"
JubilGreen	Marshall® 2550 2x12" Celestion® Greenback
JubilV30	Marshall® 2550 2x12" Celestion® V30
Kerozen	Diezel® 4x12" Celestion® V30
R2D2	Musicman® 112 RD 1x12" Electro-Voice® EVM12L
Silver77	Vintage Fender® Twin Reverb® 2x12" orange JBL®
SilverJen	Vintage Fender® Twin Reverb® 2x12" Jensen® C12K
StrongBack	VHT® Fat Bottom 4x12" Eminence® P50E
The One	Brunetti® Neo1512 1x15" + 1x12"
Twill 15	Clark® Tweed Replica 1x15" OB Jensen® 1959
Vibro Utah	Vintage 1961 Fender® Vibrolux® 1x12" original Utah speaker
Vibro V30	Vintage 1961 Fender® Vibrolux® 1x12" Celestion® V30
Voice 30	Original Vox® AC30 JMI 2x12" Celestion® « Silver Bell »
Voice 65	1965 Vox® 2x12"
VoiceModrn	Vox® V212H, 2x12" Celestion® Alnico Blue
Watt FanC	Hiwatt® 2x12" Fane close back
Watt FanO	Hiwatt® 2x12" Fane open back
XTCab	Bogner® 4x12" Celestion® V30

Designation	Inspired by
BASS cabinets	
2Notes CSB	Two Notes Custom 1x15"
Alu XL	Hartke® XL 4x12"
AZ Ben	SWR® Big Ben 1x18"
AZ Work	SWR® WorkingMan 4x10"
Calif Low	Mesa/Boogie® 2x10"
Fridge	Ampeg® 8x10"
Heaven Bot	David Eden® 1x15"
Heaven Top	David Eden® 4x10"
Marco	Markbass® 2x10"
New York	Markbass® 4x6"
Rea One	AER® Cab One 2x10"
Voice V125	Vox® V125 2x12"
WGrandBlvd	Ampeg® B15N 1x15" CB Jensen® C15N, Vintage Ceramic

4 Technical data

Designation	Characteristics
Speaker Input	<p>Jack 6.35 mm (1/4") unbalanced (TS, Tip/Sleeve)</p> <p>Maximum input voltage: 280 V AC (51 dBu)</p> <p>Security load: 200 Ohms / 10 Watts</p>
ANALOG Inputs	<p>2 X Combo XLR - Jack 6.35 mm (1/4") balanced (TRS)/unbalanced (TS)</p> <p>Maximum input level: 8.70 dBu</p> <p>Input impedance: 20 kOhms balanced, 10 kOhms unbalanced</p>
Loadbox	<p>Reactive or Resistive load (relay), nominal impedance: 4 or 8 or 16 Ohms (switch)</p> <p>Maximum admissible power: 150 W (assuming proper ventilation)</p> <p>Maximum temporary admissible power : 200 W (assuming proper ventilation)</p> <p>Cooled by temperature-controlled fan</p> <p>High Impedance mode if a cabinet is connected to the THRU output (loadbox is disconnected).</p>
Speaker Thru	Jack 6.35mm (1/4") unbalanced (TS)
ANALOG Outputs	<p>2 x XLR balanced</p> <p>Impedance: 600 Ohms balanced, 300 Ohms unbalanced</p> <p>Maximum output level:</p> <ul style="list-style-type: none"> • (no load, balanced): 11.2 dBu • (10 kOhm load, balanced): 10.7 dBu • (no load, unbalanced): 5.1 dBu • (10 kOhm load, unbalanced): 4.9 dBu
Headphones Output	MONO out, Jack 6.35mm (1/4") balanced (TRS)

Designation	Characteristics
S/PDIF	Sampling frequency: 44.1 kHz to 96 kHz Master or slave configuration
AES/EBU	Sampling frequency: 44.1 kHz to 96 kHz Master or slave configuration
ADC	Sampling frequency: 192 kHz Resolution: 24 bits Noise level: -111 dB (A-weighted) THD: 0.0026% Stereo crosstalk: -109 dB
DAC	Sampling frequency: 96 kHz Resolution: 24 bits Noise level: -109 dB (A-weighted) THD: 0.0008% Stereo crosstalk: -106 dB
Frequency response (-1db)	13 Hz - 45 kHz
Latency	(Normal latency mode) 5.063 ms, (Low Latency mode) 3.064 ms (Line Input to Line Output)
Thermal security	Temperature-controlled fan At 115°C, a visual warning is displayed and the output signal is muted. At 125°C, the loadbox is disconnected, the amplifier sees a 200-Ohm security load to help lowering the temperature by taming the amplifier
Power supply	IEC60320 C14 power connector Input voltage: 185-264 V AC, 47-63 Hz Power: approx. 10 W
Dimensions	Width: 440 mm, 483 mm including rack-mounting edges Depth: 180 mm, 230 mm including connectors and knobs Height: 88 mm Weight: 4 kg

Part 8

Technical support

Should you encounter a problem with your *Torpedo Studio* or need help regarding any technical aspects, please note that Two Notes Audio Engineering has developed on-line services to provide you with fast and efficient technical support, the **Two Notes Help Desk** which you will find at this address:

<http://support.two-notes.com/>

Two Notes Website

On the <http://www.two-notes.com> website, you will find:

- news about the company and the products (news on the homepage),
- comprehensive information about the *Torpedo Studio* and its many applications (FAQ),
- firmware and software updates to download (*products/Torpedo Studio/downloads*),
- access to the Two Notes Store where you can buy new cabinets,
- the *Torpedo BlendIR* software (*products/Torpedo Studio/downloads*),
- an official forum where you can share tips and advice with other *Torpedo* users (forum).