




USER MANUAL

REAR PANEL

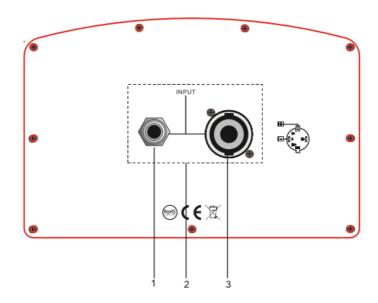

- 1.1/4" TRS jack
- 2.Only one jack is available at a time
- 3.XLR input jack

INSTALLATION INSTRUCTION



INSTRUCTIONS

- Place a speaker (or multiple speakers) where you need, pole mounted recommended, used for stage monitor.
- 2 Install all devices correctly.