

| Operating Instruction                                   |                               | WALLY   |
|---|-------------------------------|---|
| operating instruction                                   |                               | LOOPER  |
| OPERATION   | FUNC./STATUS                  | LED DISPLAY                                       |
| Power on (no data)                                      | Empty                         | None  |
| Power on (with data)                                    | Stop                          | Green LEDs flash                                  |
| Tap footswitch (no data)                                | Record                        | Red LEDs light up                                 |
| Tap footswitch when recording/overdubbing               | Play                          | Green LEDs light up                               |
| Tap footswitch when playing                             | Overdub                       | Red LEDs light up                                 |
| Hold footswitch when playing                            | Undo/Redo<br>(last recording) | Green LEDs flash fast                             |
| Tap footswitch twice when playing/recording/overdubbing | Stop                          | Green LEDs flash                                  |
| Hold footswitch when stopped                            | Delete                        | Green LEDs flash fast                             |
| Turn up the TEMPO when playing                          | Speed up                      | Green/Red LEDs flash successively at higher speed |
| Turn down the TEMPO when playing                        | Slow down                     | Green/Red LEDs flash successively at lower speed  |
| Recording (around 30 minutes)                           | Memory nearly full            | Red LEDs flash                                    |



 ★ LEDs will flash once at the loop end. X Overdub cannot be operated during tempo variation. You must turn the tempo back to the original speed (TEMPO knob at center position) to resume overdubbing. \* Red LEDs will flash for a while when memory space is going to run out. When the loop time reaches the limit, recording will stop and return to playback. ※ Recorded phrases will be temporarily saved after you power off. You can store a phrase by saving it in the current phrase bank. ★ Changes (undo/redo) in phrase banks cannot be made once saved. ★ SAVED PHRASES CAN BE DELETED while holding the footswitch. You can export your saved phrases via PC/Mac software. Factory Reset If you accidentally formatted the Wally+ internal storage on your computer or experienced a malfunction while recording/playing, you can perform a factory reset to bring your Wally+ back to normal. To perform factory reset: Press and hold the SAVE button and footswitch for at least 5 seconds when Wally+ is in STOP status. The LEDs will flash red and green. When the lights go out, your looper will be reset. Note: THIS OPERATION CANNOT BE UNDONE AND ALL USER DATA WILL BE LOST--PLEASE BACKUP YOUR DATA FIRST.

www.hotoneaudio.com