

For U.S. customers only:

If you purchased a Gesture Spot 300 with a serial number **earlier than #(21)D81510183500002**, the sequence of colors in the color wheel is different than what was published in the manual. The correct sequence of colors is shown below. The sequence is identical for both **Channel 8** in 13-channel operation and **Channel 4** in 7-channel operation.

Channel	Function	Value	Description
8 (in 13-channel operation) 4 (in 7-channel operation)	Color Wheel	000–006	White
		007–013	Red
		014–020	Green
		021–027	Blue
		028–034	Yellow
		035–041	Purple
		042–048	Cyan/light blue
		049–055	Orange
		056–063	Pink
		064–127	Color indexing
		128–189	Clockwise, fast ( <b>128</b> ) to slow ( <b>189</b> )
		190–193	Stop
		194–255	Counterclockwise, slow ( <b>194</b> ) to fast ( <b>255</b> )

If you experience other issues or have further questions, please contact us at:

[marqlighting.com/support](https://marqlighting.com/support)