

PROFESSIONAL LED PIX BAR

DMX CONTROL TABLE



2-CH MODE CLPIXBAR200PRO - CLPIXBAR300PRO - CLPIXBAR400PRO					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Colour Macro	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
		129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12
193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12		

3-CH MODE 1 CLPIXBAR200PRO					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	250	Strobe slow -> fast 0Hz - 20Hz
		251	-	255	Strobe open
CH3	Colour Macro	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
126	-	128	Colour Jumping Stop		
129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12		
193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12		

3-CH MODE 2 CLPIXBAR200PRO					
CH1	Red	000	-	255	red dimmer
CH2	Green	000	-	255	green dimmer
CH3	Blue	000	-	255	blue dimmer

5-CH MODE CLPIXBAR200PRO					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (Very Short Flash)
		128	-	250	Strobe slow -> fast 0Hz - 20Hz
		251	-	255	Strobe open
CH3	Red	000	-	255	red dimmer
CH4	Green	000	-	255	green dimmer
CH5	Blue	000	-	255	blue dimmer

9-CH MODE CLPIXBAR200PRO					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (Very Short Flash)
		128	-	250	Strobe slow -> fast 0Hz - 20Hz
		251	-	255	Strobe open
CH3	Red	000	-	255	red dimmer (override from Colour Macro)
CH4	Green	000	-	255	green dimmer (override from Colour Macro)
CH5	Blue	000	-	255	blue dimmer (override from Colour Macro)
CH6	Colour Macro (override RGB)	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12		
193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12		
CH7	Colour Temperature Correction (add to RGB and Colour Macro)	000	-	005	off
		006	-	255	cold to warm

CH8	Auto Mode (Override RGB, Colour Macro, CT)	000	-	005	no function
		006	-	023	Dream
		024	-	041	Meteor
		042	-	059	Fade
		060	-	077	Jump
		078	-	095	Flow1
		096	-	113	Flow2
		114	-	131	Flow3
		132	-	149	Flow4
		150	-	167	Flow5
		168	-	185	Flow6
		186	-	203	Flow7
		204	-	221	Flow8
		222	-	239	Flow9
240	-	255	Flow10		
CH9	Sound	000	-	005	Sound Control OFF (Sensitivity)
		006	-	255	Sound Control ON Low -> High (Sensitivity)

38-CH MODE CLPIXBAR200PRO					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (Very Short Flash)
		128	-	250	Strobe slow -> fast 0Hz - 20Hz
251	-	255	Strobe open		
CH3	Pixel 1	000	-	255	red dimmer
CH4		000	-	255	green dimmer
CH5		000	-	255	blue dimmer
CH6	Pixel 2	000	-	255	red dimmer
CH7		000	-	255	green dimmer
CH8		000	-	255	blue dimmer
CH9	Pixel 3	000	-	255	red dimmer
CH10		000	-	255	green dimmer
CH11		000	-	255	blue dimmer
CH12	Pixel 4	000	-	255	red dimmer
CH13		000	-	255	green dimmer
CH14		000	-	255	blue dimmer
CH15	Pixel 5	000	-	255	red dimmer
CH16		000	-	255	green dimmer
CH17		000	-	255	blue dimmer

CH18	Pixel 6	000	-	255	red dimmer
CH19		000	-	255	green dimmer
CH20		000	-	255	blue dimmer
CH21	Pixel 7	000	-	255	red dimmer
CH22		000	-	255	green dimmer
CH23		000	-	255	blue dimmer
CH24	Pixel 8	000	-	255	red dimmer
CH25		000	-	255	green dimmer
CH26		000	-	255	blue dimmer
CH27	Pixel 9	000	-	255	red dimmer
CH28		000	-	255	green dimmer
CH29		000	-	255	blue dimmer
CH30	Pixel 10	000	-	255	red dimmer
CH31		000	-	255	green dimmer
CH32		000	-	255	blue dimmer
CH33	Pixel 11	000	-	255	red dimmer
CH34		000	-	255	green dimmer
CH35		000	-	255	blue dimmer
CH36	Pixel 12	000	-	255	red dimmer
CH37		000	-	255	green dimmer
CH38		000	-	255	blue dimmer

42-CH MODE CLPIXBAR200PRO					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (Very Short Flash)
		128	-	250	Strobe slow -> fast 0Hz - 20Hz
		251	-	255	Strobe open
CH3	Pixel 1	000	-	255	red dimmer
CH4		000	-	255	green dimmer
CH5		000	-	255	blue dimmer
CH6	Pixel 2	000	-	255	red dimmer
CH7		000	-	255	green dimmer
CH8		000	-	255	blue dimmer
CH9	Pixel 3	000	-	255	red dimmer
CH10		000	-	255	green dimmer
CH11		000	-	255	blue dimmer
CH12	Pixel 4	000	-	255	red dimmer
CH13		000	-	255	green dimmer
CH14		000	-	255	blue dimmer

CH15	Pixel 5	000	-	255	red dimmer
CH16		000	-	255	green dimmer
CH17		000	-	255	blue dimmer
CH18	Pixel 6	000	-	255	red dimmer
CH19		000	-	255	green dimmer
CH20		000	-	255	blue dimmer
CH21	Pixel 7	000	-	255	red dimmer
CH22		000	-	255	green dimmer
CH23		000	-	255	blue dimmer
CH24	Pixel 8	000	-	255	red dimmer
CH25		000	-	255	green dimmer
CH26		000	-	255	blue dimmer
CH27	Pixel 9	000	-	255	red dimmer
CH28		000	-	255	green dimmer
CH29		000	-	255	blue dimmer
CH30	Pixel 10	000	-	255	red dimmer
CH31		000	-	255	green dimmer
CH32		000	-	255	blue dimmer
CH33	Pixel 11	000	-	255	red dimmer
CH34		000	-	255	green dimmer
CH35		000	-	255	blue dimmer
CH36	Pixel 12	000	-	255	red dimmer
CH37		000	-	255	green dimmer
CH38		000	-	255	blue dimmer
CH39	Colour Macro (override RGB)	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
126	-	128	Colour Jumping Stop		
129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12		
193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12		

CH40	Colour Temperature Correction (add to RGB and Colour Macro)	000	-	005	off
		006	-	255	cold to warm
CH41	Auto Mode (Override RGB, Colour Macro, CT)	000	-	005	no function
		006	-	023	Dream
		024	-	041	Meteor
		042	-	059	Fade
		060	-	077	Jump
		078	-	095	Flow1
		096	-	113	Flow2
		114	-	131	Flow3
		132	-	149	Flow4
		150	-	167	Flow5
		168	-	185	Flow6
		186	-	203	Flow7
		204	-	221	Flow8
		222	-	239	Flow9
240	-	255	Flow10		
CH42	Sound	000	-	005	Sound Control OFF (Sensitivity)
		006	-	255	Sound Control ON Low -> High (Sensitivity)

4-CH MODE 1 CLPIXBAR300PRO - CLPIXBAR400PRO					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	250	Strobe slow -> fast 0Hz - 20Hz
		251	-	255	Strobe open
CH3	Colour Macro	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
126	-	128	Colour Jumping Stop		
129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12		
193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12		
CH4	White (add to Colour Macro)	000	-	255	Master Dimmer 0-100% (can add to Colour Macro)

4-CH Mode 2 CLPIXBAR300PRO - CLPIXBAR400PRO					
CH1	Red	000	-	255	red dimmer
CH2	Green	000	-	255	green dimmer
CH3	Blue	000	-	255	blue dimmer
CH4	White	000	-	255	white dimmer

6-CH Mode CLPIXBAR300PRO - CLPIXBAR400PRO					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.1s (Very Short Flash)
		128	-	250	Strobe slow -> fast 0Hz - 20Hz
		251	-	255	Strobe open
CH3	Red	000	-	255	red dimmer
CH4	Green	000	-	255	green dimmer
CH5	Blue	000	-	255	blue dimmer
CH6	White	000	-	255	white dimmer

10-CH Mode CLPIXBAR300PRO - CLPIXBAR400PRO					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.1s (Very Short Flash)
		128	-	250	Strobe slow -> fast 0Hz - 20Hz
		251	-	255	Strobe open
CH3	Red	000	-	255	red dimmer (override from Colour Macro)
CH4	Green	000	-	255	green dimmer (override from Colour Macro)
CH5	Blue	000	-	255	blue dimmer (override from Colour Macro)
CH6	White	000	-	255	white dimmer (can add to Colour Macro)

CH7	Colour Macro (override RGB)	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		CH8	Colour Temperature Correction (add to RGB and Colour Macro)	126	-
129	-			192	Colour Jumping Speed slow -> fast / Colour 1 -> 12
193	-			255	Colour Fading Speed slow -> fast / Colour 1 -> 12
000	-			005	off
CH9	Auto Mode (Override RGBW, Colour Macro, CT)	006	-	255	cold to warm
		000	-	005	no function
		006	-	023	Dream
		024	-	041	Meteor
		042	-	059	Fade
		060	-	077	Jump
		078	-	095	Flow1
		096	-	113	Flow2
		114	-	131	Flow3
		132	-	149	Flow4
		150	-	167	Flow5
		168	-	185	Flow6
		186	-	203	Flow7
		204	-	221	Flow8
		222	-	239	Flow9
CH10	Sound	240	-	255	Flow10
		000	-	005	Sound Control OFF (Sensitivity)
		006	-	255	Sound Control ON Low -> High (Sensitivity)

26-CH Mode CLPIXBAR300PRO					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (Very Short Flash)
		128	-	250	Strobe slow -> fast 0Hz - 20Hz
		251	-	255	Strobe open
CH3	Pixel 1	000	-	255	red dimmer
CH4		000	-	255	green dimmer
CH5		000	-	255	blue dimmer
CH6		000	-	255	white dimmer
CH7	Pixel 2	000	-	255	red dimmer
CH8		000	-	255	green dimmer
CH9		000	-	255	blue dimmer
CH10		000	-	255	white dimmer
CH11	Pixel 3	000	-	255	red dimmer
CH12		000	-	255	green dimmer
CH13		000	-	255	blue dimmer
CH14		000	-	255	white dimmer
CH15	Pixel 4	000	-	255	red dimmer
CH16		000	-	255	green dimmer
CH17		000	-	255	blue dimmer
CH18		000	-	255	white dimmer
CH19	Pixel 5	000	-	255	red dimmer
CH20		000	-	255	green dimmer
CH21		000	-	255	blue dimmer
CH22		000	-	255	white dimmer
CH23	Pixel 6	000	-	255	red dimmer
CH24		000	-	255	green dimmer
CH25		000	-	255	blue dimmer
CH26		000	-	255	white dimmer

30-CH Mode CLPIXBAR300PRO					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (Very Short Flash)
		128	-	250	Strobe slow -> fast 0Hz - 20Hz
		251	-	255	Strobe open
CH3	Pixel 1	000	-	255	red dimmer
CH4		000	-	255	green dimmer
CH5		000	-	255	blue dimmer
CH6		000	-	255	white dimmer
CH7	Pixel 2	000	-	255	red dimmer
CH8		000	-	255	green dimmer
CH9		000	-	255	blue dimmer
CH10		000	-	255	white dimmer
CH11	Pixel 3	000	-	255	red dimmer
CH12		000	-	255	green dimmer
CH13		000	-	255	blue dimmer
CH14		000	-	255	white dimmer
CH15	Pixel 4	000	-	255	red dimmer
CH16		000	-	255	green dimmer
CH17		000	-	255	blue dimmer
CH18		000	-	255	white dimmer
CH19	Pixel 5	000	-	255	red dimmer
CH20		000	-	255	green dimmer
CH21		000	-	255	blue dimmer
CH22		000	-	255	white dimmer
CH23	Pixel 6	000	-	255	red dimmer
CH24		000	-	255	green dimmer
CH25		000	-	255	blue dimmer
CH26		000	-	255	white dimmer

CH27	Colour Macro (override RGB)	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		CH28	Colour Temperature Correction (add to RGB and Colour Macro)	000	-
006	-			255	cold to warm
000	-			005	no function
006	-			023	Dream
CH29	Auto Mode (Override RGBW, Colour Macro, CT)	024	-	041	Meteor
		042	-	059	Fade
		060	-	077	Jump
		078	-	095	Flow1
		096	-	113	Flow2
		114	-	131	Flow3
		132	-	149	Flow4
		150	-	167	Flow5
		168	-	185	Flow6
		186	-	203	Flow7
		204	-	221	Flow8
		222	-	239	Flow9
		240	-	255	Flow10
		CH30	Sound	000	-
006	-			255	Sound Control ON Low -> High (Sensitivity)

50-CH Mode CLPIXBAR400PRO					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (Very Short Flash)
		128	-	250	Strobe slow -> fast 0Hz - 20Hz
		251	-	255	Strobe open
CH3	Pixel 1	000	-	255	red dimmer
CH4		000	-	255	green dimmer
CH5		000	-	255	blue dimmer
CH6		000	-	255	white dimmer
CH7	Pixel 2	000	-	255	red dimmer
CH8		000	-	255	green dimmer
CH9		000	-	255	blue dimmer
CH10		000	-	255	white dimmer
CH11	Pixel 3	000	-	255	red dimmer
CH12		000	-	255	green dimmer
CH13		000	-	255	blue dimmer
CH14		000	-	255	white dimmer
CH15	Pixel 4	000	-	255	red dimmer
CH16		000	-	255	green dimmer
CH17		000	-	255	blue dimmer
CH18		000	-	255	white dimmer
CH19	Pixel 5	000	-	255	red dimmer
CH20		000	-	255	green dimmer
CH21		000	-	255	blue dimmer
CH22		000	-	255	white dimmer
CH23	Pixel 6	000	-	255	red dimmer
CH24		000	-	255	green dimmer
CH25		000	-	255	blue dimmer
CH26		000	-	255	white dimmer
CH27	Pixel 7	000	-	255	red dimmer
CH28		000	-	255	green dimmer
CH29		000	-	255	blue dimmer
CH30		000	-	255	white dimmer
CH31	Pixel 8	000	-	255	red dimmer
CH32		000	-	255	green dimmer
CH33		000	-	255	blue dimmer
CH34		000	-	255	white dimmer

CH35	Pixel 9	000	-	255	red dimmer
CH36		000	-	255	green dimmer
CH37		000	-	255	blue dimmer
CH38		000	-	255	white dimmer
CH39	Pixel 10	000	-	255	red dimmer
CH40		000	-	255	green dimmer
CH41		000	-	255	blue dimmer
CH42		000	-	255	white dimmer
CH43	Pixel 11	000	-	255	red dimmer
CH44		000	-	255	green dimmer
CH45		000	-	255	blue dimmer
CH46		000	-	255	white dimmer
CH47	Pixel 12	000	-	255	red dimmer
CH48		000	-	255	green dimmer
CH49		000	-	255	blue dimmer
CH50		000	-	255	white dimmer

54-CH Mode CLPIXBAR400PRO					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Puls Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow fast
		103	-	127	Strobe Break Effekt, 5s.....1s (Very Short Flash)
		128	-	250	Strobe slow -> fast 0Hz - 20Hz
		251	-	255	Strobe open
CH3	Pixel 1	000	-	255	red dimmer
CH4		000	-	255	green dimmer
CH5		000	-	255	blue dimmer
CH6		000	-	255	white dimmer
CH7	Pixel 2	000	-	255	red dimmer
CH8		000	-	255	green dimmer
CH9		000	-	255	blue dimmer
CH10		000	-	255	white dimmer
CH11	Pixel 3	000	-	255	red dimmer
CH12		000	-	255	green dimmer
CH13		000	-	255	blue dimmer
CH14		000	-	255	white dimmer
CH15	Pixel 4	000	-	255	red dimmer
CH16		000	-	255	green dimmer
CH17		000	-	255	blue dimmer
CH18		000	-	255	white dimmer

CH19	Pixel 5	000	-	255	red dimmer
CH20		000	-	255	green dimmer
CH21		000	-	255	blue dimmer
CH22		000	-	255	white dimmer
CH23	Pixel 6	000	-	255	red dimmer
CH24		000	-	255	green dimmer
CH25		000	-	255	blue dimmer
CH26		000	-	255	white dimmer
CH27	Pixel 7	000	-	255	red dimmer
CH28		000	-	255	green dimmer
CH29		000	-	255	blue dimmer
CH30		000	-	255	white dimmer
CH31	Pixel 8	000	-	255	red dimmer
CH32		000	-	255	green dimmer
CH33		000	-	255	blue dimmer
CH34		000	-	255	white dimmer
CH35	Pixel 9	000	-	255	red dimmer
CH36		000	-	255	green dimmer
CH37		000	-	255	blue dimmer
CH38		000	-	255	white dimmer
CH39	Pixel 10	000	-	255	red dimmer
CH40		000	-	255	green dimmer
CH41		000	-	255	blue dimmer
CH42		000	-	255	white dimmer
CH43	Pixel 11	000	-	255	red dimmer
CH44		000	-	255	green dimmer
CH45		000	-	255	blue dimmer
CH46		000	-	255	white dimmer
CH47	Pixel 12	000	-	255	red dimmer
CH48		000	-	255	green dimmer
CH49		000	-	255	blue dimmer
CH50		000	-	255	white dimmer

CH51	Colour Macro (override RGB)	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		CH52	Colour Temperature Correction (add to RGB and Colour Macro)	126	-
129	-			192	Colour Jumping Speed slow -> fast / Colour 1 -> 12
193	-			255	Colour Fading Speed slow -> fast / Colour 1 -> 12
CH53	Auto Mode (Override RGBW, Colour Macro, CT)	000	-	005	no function
		006	-	023	Dream
		024	-	041	Meteor
		042	-	059	Fade
		060	-	077	Jump
		078	-	095	Flow1
		096	-	113	Flow2
		114	-	131	Flow3
		132	-	149	Flow4
		150	-	167	Flow5
		168	-	185	Flow6
		186	-	203	Flow7
		204	-	221	Flow8
		222	-	239	Flow9
		240	-	255	Flow10
CH54	Sound	000	-	005	Sound Control OFF (Sensitivity)
		006	-	255	Sound Control ON Low -> High (Sensitivity)