

Hercules DJ Console 4-Mx

Powerful DJ control surface

Number of controls

2-deck mode

Transport commands: 66 commands

Transport buttons + combo commands: 52 buttons

Shifted commands: 12

Pitch reset: 2

Knobs: 14

Faders: 5

Jog wheels: 4 commands

Rotation commands: 2

Touch commands: 2

Total: 89 commands

4-deck mode

Transport commands: 124 commands

Transport buttons + combo commands: 96 buttons

Shifted commands: 24

Pitch reset: 4

Knobs: 24

Faders: 9

Jog wheels: 8 commands

Rotation commands: 4

Touch commands: 4

Total: 165 commands

2-deck and 4-deck DJ mixing controller

2-deck control

DJ Console 4-Mx controls 2 decks in the same way as DJ Console Rmx.

4-deck control

DJ Console 4-Mx controls both 2 decks and 4 decks, with 2 buttons switching the decks:

- a deck switch button on the left deck converts deck A into C / deck C into A.
- a deck switch button on the right deck converts deck B into D / deck D into B.

Once a deck is switched:

- all of the commands that the deck's controls send to the DJ software are changed.
- the letter of the active deck is highlighted in the center of the mixer.

Audio for mobile and club DJs

2 stereo outputs

2 independent stereo outputs on the rear panel:

- 4 RCA connectors to connect to a stereo system, a recorder...
- 4 mono connectors in ¼" jack format, to connect to a public address amplifier or speakers.

A ground lift switch on jack outputs 1-2, to protect the sound in the event of a ground loop.

1 headphones ¼" jack stereo output, located both on the top panel and on the front panel.

The headphones play the same channels as outputs 3-4 on the rear panel.

The 2 ways of using DJ Console 4-Mx's audio outputs are:

For a mix inside DJ Console 4-Mx:

- connect the speakers/amplifier to outputs 1-2, to play the mix for your audience.
- connect headphones to one of the 2 headphone outputs (front or top), to preview tracks.

For an external mix (using an external mixer - VirtualDJ Pro (not included) or other DJ software required):

- connect DJ Console 4-Mx outputs 1-2 to inputs 1-2 on the external mixer.
- connect DJ Console 4-Mx outputs 3-4 to inputs 3-4 on the external mixer.
- mix on the external mixer, and connect headphones to the external mixer.
- use DJ Console 4-Mx to control the virtual decks.

2 stereo inputs

2 independent stereo inputs via 4 RCA connectors:

- Select the audio source type in the DJ Console 4-Mx control panel: phono/consumer line/pro line/boost.
- Boost mode supports +8dBu signal level (for use with Pioneer CDJ players, for example).
- If the audio sources are vinyl turntables at phono level, connect the turntables' ground cables to the DJ Console 4-Mx's grounding screw.

1 microphone ¼" jack mono input, located on both the top panel and the front panel.

The microphone input can be set:

- as a talk-over source (default mode): the microphone is played on outputs 1-2 over the music in the background, using the music attenuation level set in the DJ Console 4-Mx control panel (0dB, -3dB, -6dB or -9dB).
- or as a standard source, replacing inputs 1-2.

DJ Console 4-Mx pre-amplifies the microphone input by up to +34dB