

Cameo ZENIT® W600

DMX CONTROL TABLE



2 CH Mode						
Ch.	Function	Values				Sub-Group
1	Dimmer	000	-	255	0% to 100%	Dimmer
2	Full White RGBW	000	-	255	8500K - 3200K	

3 CH Mode						
Ch.	Function	Values				Sub-Group
1	Dimmer	000	-	255	0% to 100%	Dimmer
2	Strobe functions	000	-	005	Strobe open	multifunctional-strobe
		006	-	010	Strobe closed	
		011	-	033	Puls Random, slow -> fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effekt, 5s.1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 20Hz	
3	Colour Macro	251	-	255	Strobe open	Colour Macro
		000	-	005	Colour off	
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow warm	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
126	-	127	Colour Jumping Stop			
128	-	191	Colour Jumping Speed slow -> fast / Colour 1 -> 12			
192	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12			

4 CH Mode						
Ch.	Function	Values				Sub-Group
1	Red	000	-	255	0% to 100%	Red
2	Green	000	-	255	0% to 100%	Green
3	Blue	000	-	255	0% to 100%	Blue
4	White	000	-	255	0% to 100%	White

8 CH Mode 1						
Ch.	Function	Values				Sub-Group
1	Red	000	-	255	0% to 100%	Red
2	Red fine	000	-	255	0% to 100%	
3	Green	000	-	255	0% to 100%	Green
4	Green fine	000	-	255	0% to 100%	
5	Blue	000	-	255	0% to 100%	Blue
6	Blue fine	000	-	255	0% to 100%	
7	White	000	-	255	0% to 100%	White
8	White fine	000	-	255	0% to 100%	

8 CH Mode 2						
Ch.	Function	Values				Sub-Group
1	Dimmer	000	-	255	0% to 100%	Dimmer
2	Strobe functions	000	-	005	Strobe open	multifunctional-strobe
		006	-	010	Strobe closed	
		011	-	033	Puls Random, slow -> fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effekt, 5s.....1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 20Hz	
251	-	255	Strobe open			
3	Red	000	-	255	0% to 100%	Red
4	Green	000	-	255	0% to 100%	Green
5	Blue	000	-	255	0% to 100%	Blue
6	White	000	-	255	0% to 100%	White
7	Colour Macro (override RGBW)	000	-	005	Colour off	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow warm	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
126	-	127	Colour Jumping Stop			
128	-	191	Colour Jumping Speed slow -> fast / Colour 1 -> 12			
192	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12			

8	Device Settings	000	-	005	no function	Control
		006	-	127	Dimmer Response LED (hold 5s)	
		128	-	191	Dimmer Response Halogen (hold 5s)	
		192	-	200	Fan Auto (hold 5s)	
		201	-	209	Fan Max (hold 5s)	
		210	-	218	Fan Silent (hold 5s)	
		219	-	223	LED Frequency 800Hz (hold 5s)	
		224	-	228	LED Frequency 1200Hz (hold 5s)	
		229	-	233	LED Frequency 2000Hz (hold 5s)	
		234	-	238	LED Frequency 3600Hz (hold 5s)	
		239	-	243	LED Frequency 12kHz (hold 5s)	
		244	-	249	LED Frequency 25kHz (hold 5s)	
		250	-	255	No function	

10 CH Mode						
Ch.	Function	Values			Sub-Group	
1	Dimmer	000	-	255	0% to 100%	Dimmer
2	Strobe functions	000	-	005	Strobe open	multifunctional-strobe
		006	-	010	Strobe closed	
		011	-	033	Puls Random, slow -> fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effekt, 5s.....1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 20Hz	
		251	-	255	Strobe open	
3	Red	000	-	255	0% to 100%	Red
4	Green	000	-	255	0% to 100%	Green
5	Blue	000	-	255	0% to 100%	Blue
6	White	000	-	255	0% to 100%	White

7	Colour Macro (override RGBW)	000	-	005	Colour off	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow warm	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
126	-	127	Colour Jumping Stop			
128	-	191	Colour Jumping Speed slow -> fast / Colour 1 -> 12			
192	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12			
8	Colour Temperature (affects RGBW and Colour Macros)	000	-	005	off	Colour Temperature Correction
		006	-	255	7200K - 3200K @ Full on affects colours too	
9	Set dimmer curve	000	-	005	no function	Set dimmer curve
		006	-	063	Linear Dimmer Curve	
		064	-	127	Exponential Dimmer Curve	
		128	-	191	Logarithmic Dimmer Curve	
		192	-	255	S-Curve Dimmer Curve	
10	Device Settings	000	-	005	no function	Control
		006	-	127	Dimmer Response LED (hold 5s)	
		128	-	191	Dimmer Response Halogen (hold 5s)	
		192	-	200	Fan Auto (hold 5s)	
		201	-	209	Fan Max (hold 5s)	
		210	-	218	Fan Silent (hold 5s)	
		219	-	223	LED Frequency 800Hz (hold 5s)	
		224	-	228	LED Frequency 1200Hz (hold 5s)	
		229	-	233	LED Frequency 2000Hz (hold 5s)	
		234	-	238	LED Frequency 3600Hz (hold 5s)	
		239	-	243	LED Frequency 12kHz (hold 5s)	
		244	-	249	LED Frequency 25kHz (hold 5s)	
250	-	255	No function			

15 CH Mode						
Ch.	Function	Values				Sub-Group
1	Dimmer	000	-	255	0% to 100%	Dimmer
2	Dimmer fine	000	-	255	0% to 100%	
3	Strobe functions	000	-	005	Strobe open	multifunctional-strobe
		006	-	010	Strobe closed	
		011	-	033	Puls Random, slow -> fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effekt, 5s.....1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 20Hz	
		251	-	255	Strobe open	
4	Red	000	-	255	0% to 100%	Red
5	Red fine	000	-	255	0% to 100%	Green
6	Green	000	-	255	0% to 100%	
7	Green fine	000	-	255	0% to 100%	Blue
8	Blue	000	-	255	0% to 100%	
9	Blue fine	000	-	255	0% to 100%	White
10	White	000	-	255	0% to 100%	
11	White fine	000	-	255	0% to 100%	
12	Colour Macro (override RGBW)	000	-	005	Colour off	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow warm	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
126	-	127	Colour Jumping Stop			
128	-	191	Colour Jumping Speed slow -> fast / Colour 1 -> 12			
192	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12			
13	Colour Temperature (affects RGBW and Colour Macros)	000	-	005	off	Colour Temperature Correction
		006	-	255	7200K - 3200K @ Full on affects colours too	

14	Set dimmer curve	000		005	no function	Set dimmer curve
		006	-	063	Linear Dimmer Curve	
		064	-	127	Exponential Dimmer Curve	
		128	-	191	Logarithmic Dimmer Curve	
		192	-	255	S-Curve Dimmer Curve	
15	Device Settings	000	-	005	no function	Control
		006	-	127	Dimmer Response LED (hold 5s)	
		128	-	191	Dimmer Response Halogen (hold 5s)	
		192	-	200	Fan Auto (hold 5s)	
		201	-	209	Fan Max (hold 5s)	
		210	-	218	Fan Silent (hold 5s)	
		219	-	223	LED Frequency 800Hz (hold 5s)	
		224	-	228	LED Frequency 1200Hz (hold 5s)	
		229	-	233	LED Frequency 2000Hz (hold 5s)	
		234	-	238	LED Frequency 3600Hz (hold 5s)	
		239	-	243	LED Frequency 12kHz (hold 5s)	
		244	-	249	LED Frequency 25kHz (hold 5s)	
		250	-	255	No function	