

| 2 CH Mode | | | | | | |
|-----------|-----------------|--------|---|-----|---------------|--------|
| Ch. | Function | Values | | | Sub-Group | |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Full White RGBW | 000 | - | 255 | 8500K - 3200K | |

| 3 CH Mode | | | | | | |
|-----------|------------------|--------|--|-----|---|------------------------|
| Ch. | Function | Values | | | Sub-Group | |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Strobe functions | 000 | - | 005 | Strobe open | Multifunctional strobe |
| | | 006 | - | 010 | Strobe closed | |
| | | 011 | - | 033 | Pulse Random, slow -> fast | |
| | | 034 | - | 056 | Ramp up Random, slow -> fast | |
| | | 057 | - | 079 | Ramp down Random, slow -> fast | |
| | | 080 | - | 102 | Random Strobe Effect, slow -> fast | |
| | | 103 | - | 127 | Strobe Break Effect, 5s.....1s (Short burst with break) | |
| | | 128 | - | 250 | Strobe slow -> fast <1Hz - 20Hz | |
| 3 | Colour Macro | 251 | - | 255 | Strobe open | Colour Macro |
| | | 000 | - | 005 | Colour off | |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| | | 126 | - | 127 | Colour Jumping Stop | |
| 128 | - | 191 | Colour Jumping Speed slow -> fast / Colour 1 -> 12 | | | |
| 192 | - | 255 | Colour Fading Speed slow -> fast / Colour 1 -> 12 | | | |

| 4 CH Mode | | | | | | |
|-----------|----------|--------|---|-----|------------|-----------|
| Ch. | Function | Values | | | | Sub-Group |
| 1 | Red | 000 | - | 255 | 0% to 100% | Red |
| 2 | Green | 000 | - | 255 | 0% to 100% | Green |
| 3 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 4 | White | 000 | - | 255 | 0% to 100% | White |

| 8 CH Mode 1 | | | | | | |
|-------------|------------|--------|---|-----|------------|-----------|
| Ch. | Function | Values | | | | Sub-Group |
| 1 | Red | 000 | - | 255 | 0% to 100% | Red |
| 2 | Red fine | 000 | - | 255 | 0% to 100% | |
| 3 | Green | 000 | - | 255 | 0% to 100% | Green |
| 4 | Green fine | 000 | - | 255 | 0% to 100% | |
| 5 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 6 | Blue fine | 000 | - | 255 | 0% to 100% | |
| 7 | White | 000 | - | 255 | 0% to 100% | White |
| 8 | White fine | 000 | - | 255 | 0% to 100% | |

| 8 CH Mode 2 | | | | | | |
|-------------|------------------|--------|---|-----|---|------------------------|
| Ch. | Function | Values | | | | Sub-Group |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Strobe functions | 000 | - | 005 | Strobe open | Multifunctional strobe |
| | | 006 | - | 010 | Strobe closed | |
| | | 011 | - | 033 | Pulse Random, slow -> fast | |
| | | 034 | - | 056 | Ramp up Random, slow -> fast | |
| | | 057 | - | 079 | Ramp down Random, slow -> fast | |
| | | 080 | - | 102 | Random Strobe Effect, slow -> fast | |
| | | 103 | - | 127 | Strobe Break Effect, 5s.....1s (Short burst with break) | |
| | | 128 | - | 250 | Strobe slow -> fast <1Hz - 20Hz | |
| | | 251 | - | 255 | Strobe open | |
| 3 | Red | 000 | - | 255 | 0% to 100% | Red |
| 4 | Green | 000 | - | 255 | 0% to 100% | Green |
| 5 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 6 | White | 000 | - | 255 | 0% to 100% | White |

| | | | | | | |
|-----|---------------------------------|-----|--|-----|-----------------------------------|--------------|
| 7 | Colour Macro (override RGBW) | 000 | - | 005 | Colour off | Colour Macro |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| 126 | - | 127 | Colour Jumping Stop | | | |
| 128 | - | 191 | Colour Jumping Speed slow -> fast / Colour 1 -> 12 | | | |
| 192 | - | 255 | Colour Fading Speed slow -> fast / Colour 1 -> 12 | | | |
| 8 | Device Settings | 000 | - | 005 | no function | Control |
| | | 006 | - | 127 | Dimmer Response LED (hold 5s) | |
| | | 128 | - | 191 | Dimmer Response Halogen (hold 5s) | |
| | | 192 | - | 200 | Fan Auto (hold 5s) | |
| | | 201 | - | 209 | Fan Max (hold 5s) | |
| | | 210 | - | 218 | Fan Silent (hold 5s) | |
| | | 219 | - | 223 | LED Frequency 800Hz (hold 5s) | |
| | | 224 | - | 228 | LED Frequency 1200Hz (hold 5s) | |
| | | 229 | - | 233 | LED Frequency 2000Hz (hold 5s) | |
| | | 234 | - | 238 | LED Frequency 3600Hz (hold 5s) | |
| | | 239 | - | 243 | LED Frequency 12kHz (hold 5s) | |
| | | 244 | - | 248 | LED Frequency 25kHz (hold 5s) | |
| | | 249 | - | 255 | No function | |

| 10 CH Mode | | | | | | |
|------------|---|--------|---------------------|-----|---|-------------------------------|
| Ch. | Function | Values | | | Sub-Group | |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Strobe functions | 000 | - | 005 | Strobe open | Multifunctional strobe |
| | | 006 | - | 010 | Strobe closed | |
| | | 011 | - | 033 | Pulse Random, slow -> fast | |
| | | 034 | - | 056 | Ramp up Random, slow -> fast | |
| | | 057 | - | 079 | Ramp down Random, slow -> fast | |
| | | 080 | - | 102 | Random Strobe Effect, slow -> fast | |
| | | 103 | - | 127 | Strobe Break Effect, 5s.....1s (Short burst with break) | |
| | | 128 | - | 250 | Strobe slow -> fast <1Hz - 20Hz | |
| | | 251 | - | 255 | Strobe open | |
| 3 | Red | 000 | - | 255 | 0% to 100% | Red |
| 4 | Green | 000 | - | 255 | 0% to 100% | Green |
| 5 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 6 | White | 000 | - | 255 | 0% to 100% | White |
| 7 | Colour Macro (override RGBW) | 000 | - | 005 | Colour off | Colour Macro |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| 126 | - | 127 | Colour Jumping Stop | | | |
| | | 128 | - | 191 | Colour Jumping Speed slow -> fast / Colour 1 -> 12 | |
| | | 192 | - | 255 | Colour Fading Speed slow -> fast / Colour 1 -> 12 | |
| 8 | Colour Temperature (affects RGBW and Colour Macros) | 000 | - | 005 | off | Colour Temperature Correction |
| | | 006 | - | 255 | cold to warm | |
| 9 | Set dimmer curve | 000 | | 005 | no function | Set dimmer curve |
| | | 006 | - | 063 | Linear Dimmer Curve | |
| | | 064 | - | 127 | Exponential Dimmer Curve | |
| | | 128 | - | 191 | Logarithmic Dimmer Curve | |
| | | 192 | - | 255 | S-Curve Dimmer Curve | |

| | | | | | | |
|----|-----------------|-----|---|-----|-----------------------------------|---------|
| 10 | Device Settings | 000 | - | 005 | no function | Control |
| | | 006 | - | 127 | Dimmer Response LED (hold 5s) | |
| | | 128 | - | 191 | Dimmer Response Halogen (hold 5s) | |
| | | 192 | - | 200 | Fan Auto (hold 5s) | |
| | | 201 | - | 209 | Fan Max (hold 5s) | |
| | | 210 | - | 218 | Fan Silent (hold 5s) | |
| | | 219 | - | 223 | LED Frequency 800Hz (hold 5s) | |
| | | 224 | - | 228 | LED Frequency 1200Hz (hold 5s) | |
| | | 229 | - | 233 | LED Frequency 2000Hz (hold 5s) | |
| | | 234 | - | 238 | LED Frequency 3600Hz (hold 5s) | |
| | | 239 | - | 243 | LED Frequency 12kHz (hold 5s) | |
| | | 244 | - | 248 | LED Frequency 25kHz (hold 5s) | |
| | | 249 | - | 255 | No function | |

| 15 CH Mode | | | | | | |
|------------|------------------|--------|---------------------------------|-----|---|------------------------|
| Ch. | Function | Values | | | Sub-Group | |
| 1 | Dimmer | 000 | - | 255 | 0% to 100% | Dimmer |
| 2 | Dimmer fine | 000 | - | 255 | 0% to 100% | |
| 3 | Strobe functions | 000 | - | 005 | Strobe open | Multifunctional strobe |
| | | 006 | - | 010 | Strobe closed | |
| | | 011 | - | 033 | Pulse Random, slow -> fast | |
| | | 034 | - | 056 | Ramp up Random, slow -> fast | |
| | | 057 | - | 079 | Ramp down Random, slow -> fast | |
| | | 080 | - | 102 | Random Strobe Effect, slow -> fast | |
| | | 103 | - | 127 | Strobe Break Effect, 5s.....1s (Short burst with break) | |
| 128 | - | 250 | Strobe slow -> fast <1Hz - 20Hz | | | |
| | | 251 | - | 255 | Strobe open | |
| 4 | Red | 000 | - | 255 | 0% to 100% | Red |
| 5 | Red fine | 000 | - | 255 | 0% to 100% | |
| 6 | Green | 000 | - | 255 | 0% to 100% | Green |
| 7 | Green fine | 000 | - | 255 | 0% to 100% | |
| 8 | Blue | 000 | - | 255 | 0% to 100% | Blue |
| 9 | Blue fine | 000 | - | 255 | 0% to 100% | |
| 10 | White | 000 | - | 255 | 0% to 100% | White |
| 11 | White fine | 000 | - | 255 | 0% to 100% | |

| | | | | | | |
|-----|---|-----|---------------------|-----|--|----------------------------------|
| 12 | Colour Macro (override RGBW) | 000 | - | 005 | Colour off | Colour Macro |
| | | 006 | - | 013 | Red | |
| | | 014 | - | 021 | Amber | |
| | | 022 | - | 029 | Yellow warm | |
| | | 030 | - | 037 | Yellow | |
| | | 038 | - | 045 | Green | |
| | | 046 | - | 053 | Turquoise | |
| | | 054 | - | 061 | Cyan | |
| | | 062 | - | 069 | Blue | |
| | | 070 | - | 077 | Lavender | |
| | | 078 | - | 085 | Mauve | |
| | | 086 | - | 093 | Magenta | |
| | | 094 | - | 101 | Pink | |
| | | 102 | - | 109 | Warm White | |
| | | 110 | - | 117 | White | |
| | | 118 | - | 125 | Cold White | |
| 126 | - | 127 | Colour Jumping Stop | | | |
| | | 128 | - | 191 | Colour Jumping Speed slow -> fast / Colour 1 -> 12 | |
| | | 192 | - | 255 | Colour Fading Speed slow -> fast / Colour 1 -> 12 | |
| 13 | Colour Temperature (affects RGBW and Colour Macros) | 000 | - | 005 | off | Colour Temperature Correction |
| | | 006 | - | 255 | cold to warm | |
| 14 | Set dimmer curve | 000 | | 005 | no function | Set dimmer curve |
| | | 006 | - | 063 | Linear Dimmer Curve | |
| | | 064 | - | 127 | Exponential Dimmer Curve | |
| | | 128 | - | 191 | Logarithmic Dimmer Curve | |
| | | 192 | - | 255 | S-Curve Dimmer Curve | |
| 15 | Device Settings | 000 | - | 005 | no function | Control |
| | | 006 | - | 127 | Dimmer Response LED (hold 5s) | |
| | | 128 | - | 191 | Dimmer Response Halogen (hold 5s) | |
| | | 192 | - | 200 | Fan Auto (hold 5s) | |
| | | 201 | - | 209 | Fan Max (hold 5s) | |
| | | 210 | - | 218 | Fan Silent (hold 5s) | |
| | | 219 | - | 223 | LED Frequency 800Hz (hold 5s) | |
| | | 224 | - | 228 | LED Frequency 1200Hz (hold 5s) | |
| | | 229 | - | 233 | LED Frequency 2000Hz (hold 5s) | |
| | | 234 | - | 238 | LED Frequency 3600Hz (hold 5s) | |
| | | 239 | - | 243 | LED Frequency 12kHz (hold 5s) | |
| | | 244 | - | 248 | LED Frequency 25kHz (hold 5s) | |
| | | 249 | - | 255 | No function | |