

ZENIT® B200

LED BATTERY OUTDOOR WASHLIGHT
WITH W-DMX™ DMX CONTROL TABLE



2 CH Mode						
Ch.	Function	Values				Sub-Group
1	Dimmer	000	-	255	0% to 100%	Dimmer
2	Full White RGBW	000	-	255	8500K - 3200K	

3 CH Mode						
Ch.	Function	Values				Sub-Group
1	Dimmer	000	-	255	0% to 100%	Dimmer
2	Strobe functions	000	-	005	Strobe open	Multifunctional strobe
		006	-	010	Strobe closed	
		011	-	033	Pulse Random, slow -> fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effect, 5s.....1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 20Hz	
		251	-	255	Strobe open	
3	Colour Macro	000	-	005	Colour off	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow warm	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
		126	-	127	Colour Jumping Stop	
		128	-	191	Colour Jumping Speed slow -> fast / Colour 1 -> 12	
		192	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12	

4 CH Mode						
Ch.	Function	Values				Sub-Group
1	Red	000	-	255	0% to 100%	Red
2	Green	000	-	255	0% to 100%	Green
3	Blue	000	-	255	0% to 100%	Blue
4	White	000	-	255	0% to 100%	White

8 CH Mode 1						
Ch.	Function	Values				Sub-Group
1	Red	000	-	255	0% to 100%	Red
2	Red fine	000	-	255	0% to 100%	
3	Green	000	-	255	0% to 100%	Green
4	Green fine	000	-	255	0% to 100%	
5	Blue	000	-	255	0% to 100%	Blue
6	Blue fine	000	-	255	0% to 100%	
7	White	000	-	255	0% to 100%	White
8	White fine	000	-	255	0% to 100%	

8 CH Mode 2						
Ch.	Function	Values				Sub-Group
1	Dimmer	000	-	255	0% to 100%	Dimmer
2	Strobe functions	000	-	005	Strobe open	Multifunctional strobe
		006	-	010	Strobe closed	
		011	-	033	Pulse Random, slow -> fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effect, 5s.....1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 20Hz	
		251	-	255	Strobe open	
3	Red	000	-	255	0% to 100%	Red
4	Green	000	-	255	0% to 100%	Green
5	Blue	000	-	255	0% to 100%	Blue
6	White	000	-	255	0% to 100%	White

7	Colour Macro (override RGBW)	000	-	005	Colour off	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow warm	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
		126	-	127	Colour Jumping Stop	
		128	-	191	Colour Jumping Speed slow -> fast / Colour 1 -> 12	
		192	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12	
8	Device Settings	000	-	005	no function	Control
		006	-	127	Dimmer Response LED (hold 5s)	
		128	-	191	Dimmer Response Halogen (hold 5s)	
		192	-	197	No Runtime/Full LED Power (hold 5s)	
		198	-	202	Set Runtime 8h (hold 5s)	
		203	-	207	Set Runtime 12h (hold 5s)	
		208	-	212	Set Runtime 16h (hold 5s)	
		213	-	218	Set Runtime 20h (hold 5s)	
		219	-	223	LED Frequency 800Hz (hold 5s)	
		224	-	228	LED Frequency 1200Hz (hold 5s)	
		229	-	233	LED Frequency 2000Hz (hold 5s)	
		234	-	238	LED Frequency 3600Hz (hold 5s)	
		239	-	243	LED Frequency 12kHz (hold 5s)	
		244	-	248	LED Frequency 25kHz (hold 5s)	
		249	-	255	No function	

10 CH Mode						
Ch.	Function	Values				Sub-Group
1	Dimmer	000	-	255	0% to 100%	Dimmer
2	Strobe functions	000	-	005	Strobe open	Multifunctional strobe
		006	-	010	Strobe closed	
		011	-	033	Pulse Random, slow -> fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effect, 5s.....1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 20Hz	
		251	-	255	Strobe open	
3	Red	000	-	255	0% to 100%	Red
4	Green	000	-	255	0% to 100%	Green
5	Blue	000	-	255	0% to 100%	Blue
6	White	000	-	255	0% to 100%	White
7	Colour Macro (override RGBW)	000	-	005	Colour off	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow warm	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
		126	-	127	Colour Jumping Stop	
128	-	191	Colour Jumping Speed slow -> fast / Colour 1 -> 12			
192	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12			
8	Colour Temperature (affects RGBW and Colour Macros)	000	-	005	off	Colour Temperature Correction
		006	-	255	cold to warm	
9	Set dimmer curve	000		005	no function	Set dimmer curve
		006	-	063	Linear Dimmer Curve	
		064	-	127	Exponential Dimmer Curve	
		128	-	191	Logarithmic Dimmer Curve	
		192	-	255	S-Curve Dimmer Curve	

10	Device Settings	000	-	005	no function	Control
		006	-	127	Dimmer Response LED (hold 5s)	
		128	-	191	Dimmer Response Halogen (hold 5s)	
		192	-	197	No Runtime/Full LED Power (hold 5s)	
		198	-	202	Set Runtime 8h (hold 5s)	
		203	-	207	Set Runtime 12h (hold 5s)	
		208	-	212	Set Runtime 16h (hold 5s)	
		213	-	218	Set Runtime 20h (hold 5s)	
		219	-	223	LED Frequency 800Hz (hold 5s)	
		224	-	228	LED Frequency 1200Hz (hold 5s)	
		229	-	233	LED Frequency 2000Hz (hold 5s)	
		234	-	238	LED Frequency 3600Hz (hold 5s)	
		239	-	243	LED Frequency 12kHz (hold 5s)	
		244	-	248	LED Frequency 25kHz (hold 5s)	
		249	-	255	No function	

15 CH Mode						
Ch.	Function	Values				Sub-Group
1	Dimmer	000	-	255	0% to 100%	Dimmer
2	Dimmer fine	000	-	255	0% to 100%	
3	Strobe functions	000	-	005	Strobe open	Multifunctional strobe
		006	-	010	Strobe closed	
		011	-	033	Pulse Random, slow -> fast	
		034	-	056	Ramp up Random, slow -> fast	
		057	-	079	Ramp down Random, slow -> fast	
		080	-	102	Random Strobe Effect, slow -> fast	
		103	-	127	Strobe Break Effect, 5s.....1s (Short burst with break)	
		128	-	250	Strobe slow -> fast <1Hz - 20Hz	
		251	-	255	Strobe open	
4	Red	000	-	255	0% to 100%	Red
5	Red fine	000	-	255	0% to 100%	
6	Green	000	-	255	0% to 100%	Green
7	Green fine	000	-	255	0% to 100%	
8	Blue	000	-	255	0% to 100%	Blue
9	Blue fine	000	-	255	0% to 100%	
10	White	000	-	255	0% to 100%	White
11	White fine	000	-	255	0% to 100%	

12	Colour Macro (override RGBW)	000	-	005	Colour off	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow warm	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
		126	-	127	Colour Jumping Stop	
13	Colour Temperature (affects RGBW and Colour Macros)	128	-	191	Colour Jumping Speed slow -> fast / Colour 1 -> 12	Colour Temperature Correction
		192	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12	
		000	-	005	off	
14	Set dimmer curve	006	-	255	cold to warm	Set dimmer curve
		000	-	005	no function	
		006	-	063	Linear Dimmer Curve	
		064	-	127	Exponential Dimmer Curve	
		128	-	191	Logarithmic Dimmer Curve	
15	Device Settings	192	-	255	S-Curve Dimmer Curve	Control
		000	-	005	no function	
		006	-	127	Dimmer Response LED (hold 5s)	
		128	-	191	Dimmer Response Halogen (hold 5s)	
		192	-	197	No Runtime/Full LED Power (hold 5s)	
		198	-	202	Set Runtime 8h (hold 5s)	
		203	-	207	Set Runtime 12h (hold 5s)	
		208	-	212	Set Runtime 16h (hold 5s)	
		213	-	218	Set Runtime 20h (hold 5s)	
		219	-	223	LED Frequency 800Hz (hold 5s)	
		224	-	228	LED Frequency 1200Hz (hold 5s)	
		229	-	233	LED Frequency 2000Hz (hold 5s)	
		234	-	238	LED Frequency 3600Hz (hold 5s)	
		239	-	243	LED Frequency 12kHz (hold 5s)	
		244	-	248	LED Frequency 25kHz (hold 5s)	
		249	-	255	No function	