

G-PG-88 SLIM Sizing Chart

Alesis	FUSION 8HD	QS7.1	QS8.2	VI61						
Arturia	KeyLab 88									
Casio	WK-225	WK-245								
Clavia	NORD STAGE 73	NORD STAGE 76								
CME	UF7	UF70	VX 7							
Evolution	EKEYS 37									
Hammond	XK-1									
Ketron	Solton SD-1									
Korg	Krome 73	Kronos 73	M3-73	M50-73	Pa2XPRO	Pa3X 76	Pa3XLe	Pa4X-76	SP-250	SP-500
Korg	SV-1 73	TR76	TRITON LE 76							
Kurzweil	Artis SE	Forte SE 88-key Stage Piano	PC1SE	PC3	PC3A7	PC3K7	PC3LE7	SP2	SP-76	
Nord	ELECTRO 3 73	Electro 4 SW73	Piano 2 HA88	Piano 4	Piano 88	Stage 2 EX 88	Stage 2 HA76	Stage 2 HA88	Stage 3 88	STAGE 73
	STAGE 76	STAGE 88								
Roland	AX-Synth	BK-9	E60	EXR-7	FA-07	FANTOM X7	FP-2	FP-2C	FP-30	FP-5
	FP-5C	JUNO STAGE	Jupiter-50	VK-7	VK8	XP80				
StudioLogic	Acuna88	Numa Nano	VMK-176+							
Yamaha	MOTIF XF7	MOTIF XS7	NP30	NP-31	NP-32	NP-V80	Piaggero NP-32	PSR-EW300		