

G-PG-61 Size Chart

Access	VIRUS TI 61									
Akai	MPK261									
Alesis	A6	ANDROMEDA	VI49	VX49 - 49-key USB MIDI Controller						
Arturia	Origin									
Benjamin Adams	CK62									
Casio	AT3	CTK-2000	CTK-2100	CTK-2400	CTK-2550	CTK-3000	CTK-3200	CTK-3500	CTK-4000	CTK-4200
	CTK-4400	CTK-496	CTK-5000	CTK-6000	CTK-691	CTK-700	CTK-7000	CTK-710	CTK-800	CTK-810
	CTK-900	CT-X700	LK-165	LK-175	LK-2005	LK-220	LK-230	LK250	LK-260	LK-270
	LK-280	LK-300TV	LK94	XW-G1	XW-P1					
CME	UF6	UF60	VX 6							
Dave Smith	POLY EVOLVER KEYBOARD	Prophet 12								
Ketron	Audya 5									
Korg	KINGKORG	KORG M1	Krome 61	Kronos 61	Kronos X 61	M3-61	O1WFD 61	Pa1000	Pa300	Pa3X 61
	Pa4X-61	Pa50SD	Pa600	Pa700	Pa700 ORIENTAL	Pa900	X3			
Kurzweil	Artis7	K2661	PC361	PC3A6	PC3K6	PC3LE6				
Nord	C2	C2 Combo Organ	C2D Combo Organ	Electro 4 HP	Electro 5 HP	NC1				
Novation	Impulse61									
Roland	BK-3	BK-5	E09	E-A7	EXR-3	EXR46-OR	EXR-5	FANTOM G6	FANTOM X6	FANTOM XA 61
	GW-7	GW-8	JP-8000	JV30	Prelude	V SYNTH	V SYNTH GT	XP-50		
Sequential	Prophet X									
Studiologic	SL73	Sledge	VMK-161+	VMK-161+ORGAN						
Suzuki	SP-37	SP-67								
Waldorf	Quantum 8-Voice Synth									
Yamaha	DJX 203	EZ150	EZ200	EZ220	EZ250I	KX61	MM6	MO6	Montage6	MOTIF ES6
	MOTIF XF6	MOTIF XS6	MOTIF6	MOX6	MOXF6	PSR 175	PSR E423	PSR-1500	PSR-172	PSR-273
	PSR-293	PSR-3000	PSR-450	PSR-950	PSR-A2000	PSR-A3000	PSR-E203	PSR-E213	PSR-E223	PSR-E233
	PSR-E253	PSR-E263	PSR-E303	PSR-E313	PSR-E323	PSR-E333	PSR-E353	PSR-E363	PSR-E403	PSR-E413
	PSR-E423	PSR-E433	PSR-E463	PSR-F51	PSR-OR700	PSR-S500	PSR-S550BK	PSR-S650	PSR-S670	PSR-S700
	PSR-S710	PSR-S750	PSR-S770	PSR-S775	PSR-S900	PSR-S910	PSR-S970	PSR-S975	SY77	YPT-200
	YPT-220	YPT-255	YPT-310	YPT-400						