

G-PG-88 SLIMXL Size Chart

Casio	140	140S	CDP-100	P70	P70S	Privia PX-160	PX-100	PX-120	PX-130	PX-150
	PX-3	PX-300	PX-310	PX-320	PX-330	PX-350	PX-400R	PX-575R	PX-5S	
CME	UF8	UF80	VX 8							
Kawai	EP3Kawai	ES6								
Korg	Kronos 88	Kronos Platinum 88	M50-88	Pa1X PRO	Pa1X PRO ELITE	SP-200	SV-1 88	TR88	TRITON LE 88	
Kurzweil	PC-1X	PC-1XL	PC2X	PC3A8	PC3K8	PC3LE8	PC3X	PC88	SP2X	SP3X
	SP4-8	SP5-8	SP-88	SP-88X						
M-Audio	PRO88									
Native Instruments	Komplete Kontrol S88									
Nektar	Impact LX88									
Roland	A-88	FA-08	FP-4	FP4BK	FP4C-BK	FP4C-WT	FP-4F	FP4WH	FP-50	FP-7
	FP-7F	FP-80	JUNO-DS88	RD150	RD-170	RD-300GX	RD300NX	RD-300SX	RD-700GX	RD-700GXF
	RD-700NX	RD-700SX	RD-800							
StudioLogic	SL 990XP	SL-990PRO	VMK188	VMK-88+						
Williams	ENCORE									
Yamaha	CP4 Stage	CP-50	P-105	P-115	P-120	P-120S	P-140	P-255	P-45	P-60
	P-60S	P-85	P-95							