

**GTSA-KEY61 Size Chart**

|             |                       |                   |                 |                                   |                   |                    |                  |              |                 |                |
|-------------|-----------------------|-------------------|-----------------|-----------------------------------|-------------------|--------------------|------------------|--------------|-----------------|----------------|
| Access      | VIRUS TI 61           |                   |                 |                                   |                   |                    |                  |              |                 |                |
| Alesis      | A6                    | ANDROMEDA         | VI49            | VX49 - 49-key USB MIDI Controller |                   |                    |                  |              |                 |                |
| Casio       | AT3                   | CTK-2000          | CTK-2100        | CTK-2400                          | CTK-2550          | CTK-3000           | CTK-3200         | CTK-3500     | CTK-4000        | CTK-4200       |
|             | CTK-4400              | CTK-496           | CTK-5000        | CTK-6000                          | CTK-691           | CTK-7000           | CTK-710          | CTK-800      | CTK-810         | CTK-900        |
|             | CT-X700               | LK-100            | LK-165          | LK-175                            | LK-2005           | LK-220             | LK-230           | LK250        | LK-260          | LK-270         |
|             | LK-280                | LK-300TV          | LK94            | XW-G1                             | XW-P1             |                    |                  |              |                 |                |
| Clavia      | G2X                   | NORD ELECTRO 2 73 | NORD ELECTRO 73 | NORD MODULAR G2X                  |                   |                    |                  |              |                 |                |
| CME         | UF6                   | UF60              | VX 6            |                                   |                   |                    |                  |              |                 |                |
| Dave Smith  | POLY EVOLVER KEYBOARD | Prophet 12        |                 |                                   |                   |                    |                  |              |                 |                |
| E-MU        | LONGboard 61          |                   |                 |                                   |                   |                    |                  |              |                 |                |
| Ketron      | Audya 5               |                   |                 |                                   |                   |                    |                  |              |                 |                |
| Korg        | CX3                   | i30               | KARMA           | KINGKORG                          | KORG M1           | Krome 61           | Kronos 61        | Kronos X 61  | Kross 2 61      | Kross 2 61-Key |
|             | Kross 61              | M3-61             | M50-61          | O1WFD 61                          | Pa1000            | Pa300              | Pa3X 61          | Pa4X-61      | Pa50SD          | Pa600          |
|             | Pa700                 | Pa700 ORIENTAL    | Pa900           | TR61                              | TRITON EXTREME 61 | TRITON LE 61       | TRITON STUDIO 61 | X3           |                 |                |
| Kurzweil    | Artis7                | Forte 7           | K2661           | PC161                             | PC361             | PC3A6              | PC3K6            | PC3LE6       | SP4-7           |                |
| M-Audio     | AXIOM 61              | Axiom Pro61       | KEYSTATION 61ES |                                   |                   |                    |                  |              |                 |                |
| Nektar      | Impact LX61           |                   |                 |                                   |                   |                    |                  |              |                 |                |
| Nord        | ELECTRO 2 73          | Electro 4 HP      | Electro 5 HP    | Electro 5D 73                     | Piano 2 HP        | Stage 2 EX Compact | Stage 2 EX HP76  | Stage 2 SW73 | Stage 3 Compact | Stage 3 HP76   |
| Novation    | 61 SL Mk II           | Impulse61         | Launchkey 61    | REMOTE61                          |                   |                    |                  |              |                 |                |
| Roland      | BK-3                  | BK-5              | E09             | E-A7                              | EXR-3             | EXR46-OR           | EXR-5            | FA-06        | FANTOM G6       | FANTOM X6      |
|             | FANTOM XA 61          | GW-7              | GW-8            | JUNO D 61                         | Juno Di           | Juno Gi            | JUNO-D           | JUNO-DS61    | JUNO-G          | JV30           |
|             | Prelude               | RD-64             | RS-50           | RS-70                             | V SYNTH           | V SYNTH GT         | V-Combo VR-09    | VR-09        | XP30            | XP-50          |
| Sequential  | Prophet X             |                   |                 |                                   |                   |                    |                  |              |                 |                |
| StudioLogic | Numa Organ            | SL73              | Sledge          | VMK-161+                          | VMK-161+ORGAN     |                    |                  |              |                 |                |
| Suzuki      | SP-37                 | SP-67             |                 |                                   |                   |                    |                  |              |                 |                |
| Waldorf     | Quantum 8-Voice Synth |                   |                 |                                   |                   |                    |                  |              |                 |                |
| Yamaha      | CSX1                  | EZ150             | EZ200           | EZ220                             | EZ250I            | KX61               | MM6              | MO6          | Montage6        | MOTIF ES6      |
|             | MOTIF XF6             | MOTIF XS6         | MOTIF6          | MOX6                              | MOXF6             | MX61               | NP-11            | NP-12        | Piaggero NP-12  | PSR 175        |
|             | PSR E423              | PSR-172           | PSR-293         | PSR-950                           | PSR-A2000         | PSR-A3000          | PSR-E203         | PSR-E213     | PSR-E223        | PSR-E233       |
|             | PSR-E253              | PSR-E263          | PSR-E303        | PSR-E323                          | PSR-E333          | PSR-E353           | PSR-E363         | PSR-E403     | PSR-E413        | PSR-E423       |
|             | PSR-E433              | PSR-E463          | PSR-F51         | PSR-OR700                         | PSR-S500          | PSR-S550BK         | PSR-S650         | PSR-S670     | PSR-S700        | PSR-S710       |
|             | PSR-S750              | PSR-S770          | PSR-S775        | PSR-S900                          | PSR-S910          | PSR-S970           | PSR-S975         | S03          | SY77            | YPT-200        |
|             | YPT-220               | YPT-255           | YPT-310         | YPT-400                           |                   |                    |                  |              |                 |                |