



DP-10X

DIGITAL PIANO

OWNER'S MANUAL

Precaution

Thank you for purchasing this digital instrument. For perfect operation and security, please read the manual carefully and keep it for future reference.

Safety Precautions



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Important Safety Instructions



(Figure 1)

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the manufacturer’s instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety, if the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over (Figure 1).
- 13) Unplug this apparatus during lightning storms or when unused for a long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

CAUTION: Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Thank you for choosing the Digital Piano

Your piano is a high quality digital piano featuring an 88 note hammer action, touch sensitive keyboard and the most advanced PCM tone generation technology that combined will provide you with a rich performing and playing experience. You can also record your own performances or record your own accompaniment to play along to. The piano is more than great technology, your digital piano is also a stylish piece of furniture that will look great anywhere in your home. To get the most out of your instrument, please read this manual thoroughly and try out the various functions as we take you through them. We hope your new instrument will continue to entertain you for many years to come.

Contents

Assembly Instructions	1
Panel Control	5
Setup	7
Basic Operation	8
Standby/On	8
AutoStandby	8
Deactivate Auto standby Function	8
Adjusting Volume & Start Playing	8
Piano Pedals	8
Piano Reset	9
Playing Demo Songs	10
The Connector Box	12
Headphones	12
MIDI OUT	12
Line Out	12
Using USB MIDI/USB Audio	13
Aux In	13
Voice/Function	14
Function Mode	14
Resetting the Data Control Knob to Voice Select	14
Using the Voice Select Keys	15
Split Mode	16
Layer Mode	19
Twin Mode	22
Erp On/Off	23
Octave	24
Transpose	25
Master Tuning	26
Touch(F3,F#3,Ab3,Bb3)	27
Reverb	28
Chorus	30
Metronome	32
Song Recording	35
To Record a Track	35
Manually Select a Track to Record	36
Clearing a Single Track in the Song Recorder	37
Playing Back Your Song Recorder Tracks	37
To Stop Playback and Exit Song PlayMode	38
Learning Function	39
Selecting a song	39
Listening to the entire song	39
Practicing the right hand of the selected song	40
Practicing the left hand of the selected song	40
Turn off the Learning Mode	41
MIDI functions	42
Local On/Off	42
Appendix	44
MIDI Implementation Chart	44
Defaults	45
Advanced Functions Keyboard Chart	47
Piano Reset	48
Specifications	49

Assembly Instructions

What's Included



Cylindrical Nuts (A) x 4



Foot Bolts (B) x 4



Piano Body Bolts (C) x 4



Back Panel Bolts (D) x 2



Back Panel Bolts (E) x 3




Pedal Board Bolts (F) x 4




Headphone Bolts (G) x 4




Headphones holder

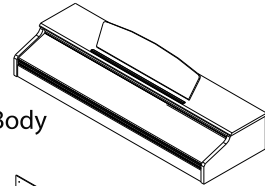


Piano Body

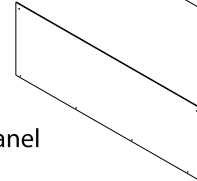

Back Panel

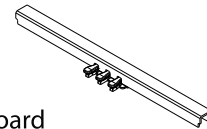

Pedal Board


 


Legs (2)



Feet(2)


1. Assembling the Stand Legs

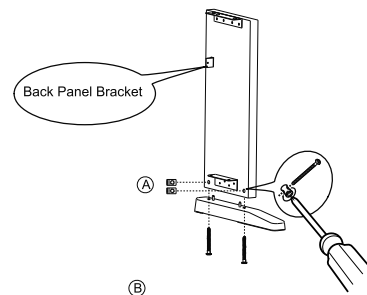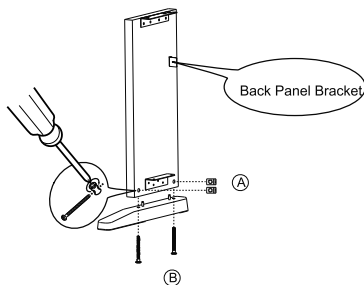

Place the four Cylindrical Nuts (A) into the holes in the Stand Legs, with the slot facing out. Use a screw driver to align the threads in the nuts with the openings on the bottom of the Stand Legs.

Place the do wells in the feet into the appropriate holes in the bottom of the Stand Legs. Make sure that the feet are facing away from the back panel bracket as shown below. Threaded two Foot Bolts(B) through the foot and into the cylindrical washers, rotating the washer to align if needed. Firmly tighten and repeat for the other side.


2. Attaching the Pedal Board

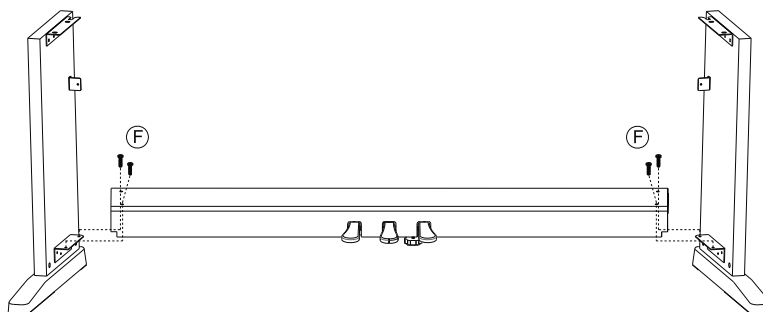


Starting with the right Stand Leg, align the holes in the Pedal Board with the holes in the Pedal Board Bracket as shown. Make sure that the pedals are facing towards the front of the Stand Legs.

Thread two Pedal Board Bolts (F) through the Pedal Board and into the bracket. Repeat with the left Stand Leg and tighten all bolts fully.

3. Attaching the Back Panel and Piano Body

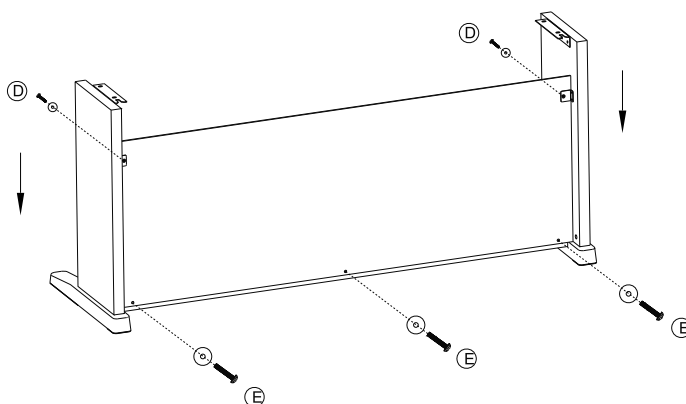


Using two Back Panel Bolts (D) with washers, and three Back Panel Bolts (E) with washers, attach the Back Panel to the stand. Please note that the pedal board is not predrilled for the Back Panel Screws, and they must be driven in manually.

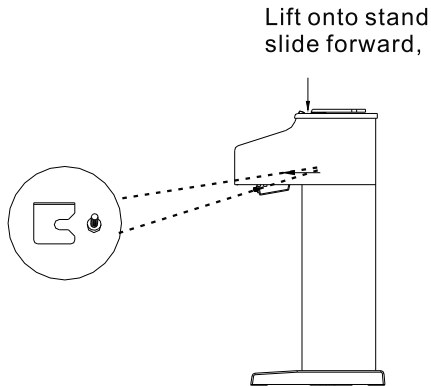

With help from another person, lift the piano onto the stand and slide forwards, pushing the guide rods on the bottom of the piano into the slots on the Stand Legs, as shown below.


When lifting the piano onto its stand, be careful not to catch/trap hands or fingers.

4. Securing the Piano Body

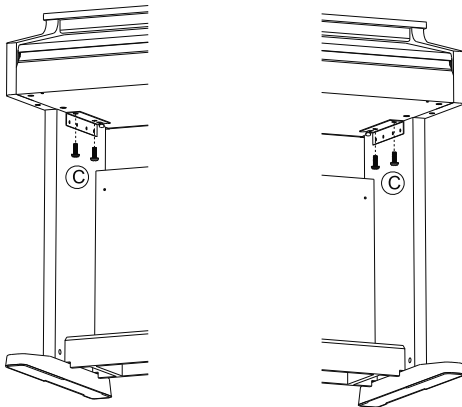

Finish attaching the piano to the stand by using the two Piano Body Bolts (C) to attach the bottom of the piano to its stand.


5. Connecting the Pedal Cable and Power Supply

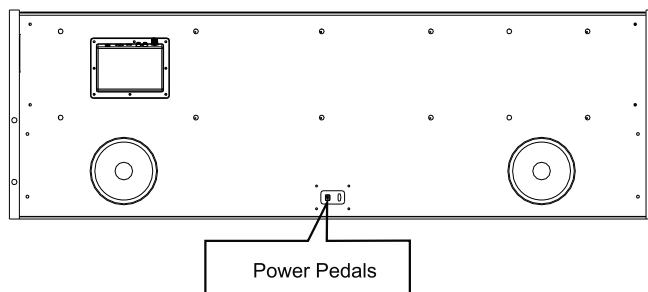

Bottom Rear of the Piano



Attach the DC Adaptor and Pedal Cable into their connectors on the bottom of the piano as shown.

6. Installing the Headphone Holder

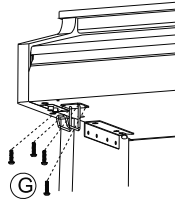


Headphone Holder Installation: Attach the headphone holder to the bottom left of the piano with the four Headphone Bolts(G).

Panel Control

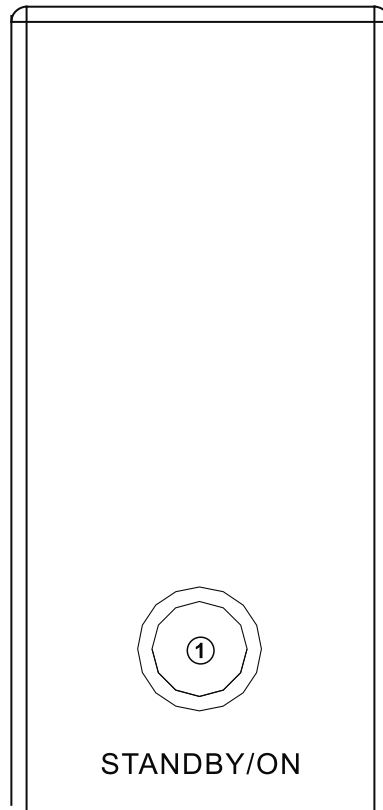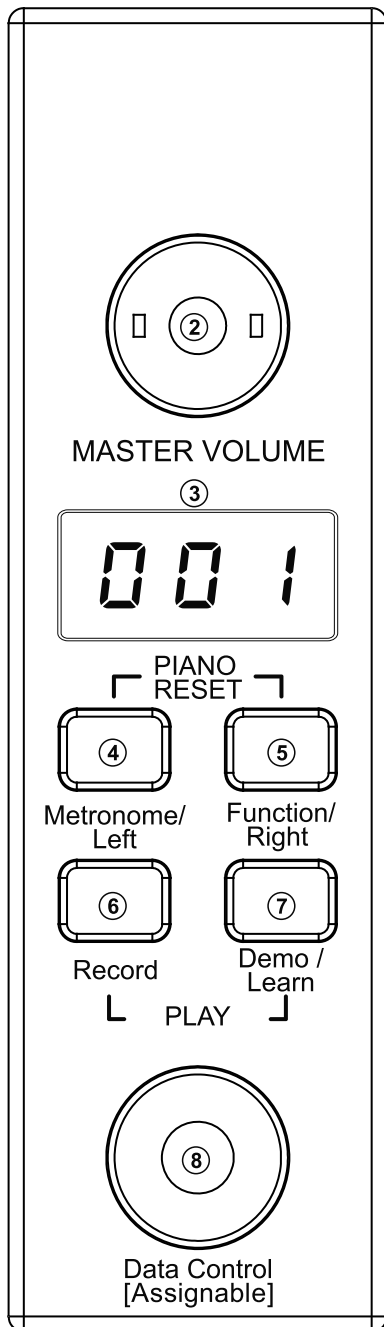

1. STANDBY/ON
2. MASTER VOLUME
3. LED DISPLAY
4. Metronome/Left Button
5. Function/Right Button
6. Record Button
7. Demo/Learn Button
8. Data Control Knob


Rear Panel

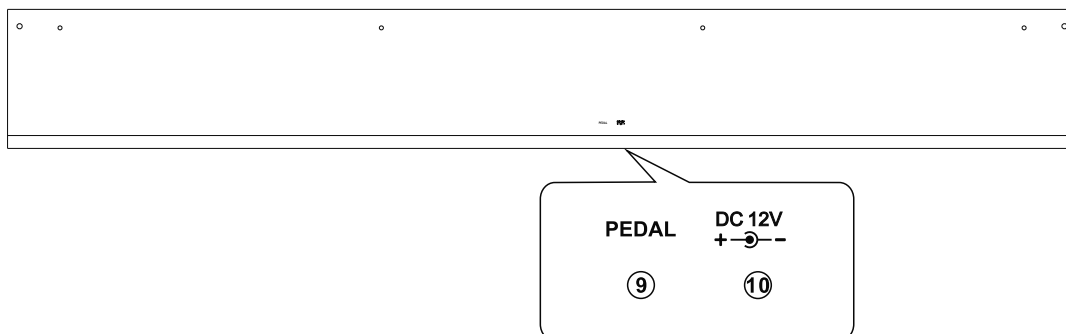

9. Pedal Connector

10. DC 12V

Connections Panel

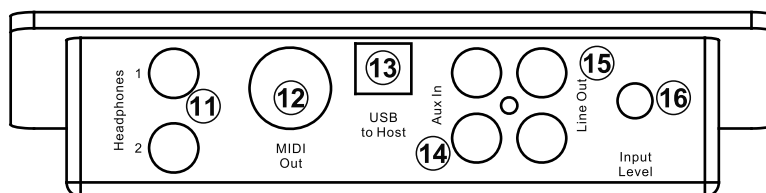

11. Headphones 1 / 2

12. MIDI Out

13. USB to Host Connector

14. Aux Line In


15. Line Out

16. Aux Input Level

Setup

You are no doubt eager to play your new piano instrument, but first please make sure you have completed the following basic setup steps:

- 1) Follow the assembly instructions as outlined on page 1 of this manual.
- 2) Once the piano is securely assembled, connect the plug of the foot pedal unit to the pedal jack on the rear panel.

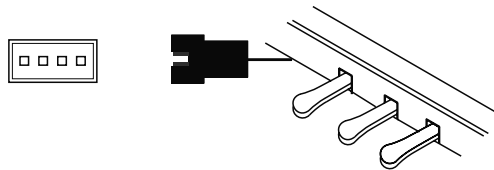

- 3) Plug the other end of the power cable into the power outlet.

NOTE

1. Ensure the piano is turned off when connecting and disconnecting the power.
2. Turn the volume knob to its minimum level before turning on the power.

Basic Operation

Standby/On

Press the [STANDBY/ON] button to turn on the power and the LCD display will light.




Auto Standby

Your piano automatically will switch off after 30 minutes of non-operation. In this case, press the [STANDBY/ON] button again to turn on the power.

Deactivate Auto Standby Function

Hold the first white key and first black key on the left side of the keyboard at the same time and then press the [STANDBY/ON] button to deactivate the Auto Standby function.

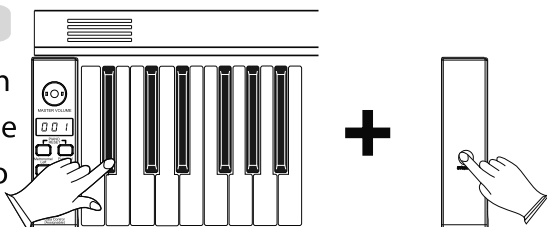

Adjusting Volume & Start Playing

The speaker system in the piano is very powerful and can be overpowering in some rooms. Adjust the [MASTER VOLUME] control to a 12 o'clock position as a safe starting point. You can adjust the volume at any time even while you are playing .




Now play the keyboard. You should hear the rich tone of the default Grand Piano sound.

Piano Pedals

Just like a regular grand piano, your piano feature 3 foot pedals:


Damper Pedal (Right)

The damper pedal performs the same function as the damper pedal on an actual acoustic piano, letting you sustain the sound of the voices even after releasing your fingers from the keys.

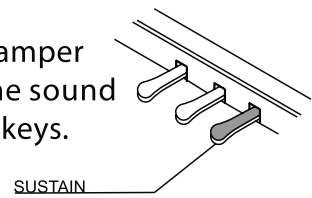


Sostenuto Pedal (Center)

The sostenuto pedal also allows you to sustain notes, but it works a little different from the damper pedal. If you play a note or chord on the keyboard and press the sostenuto pedal while the notes are held, those notes will be sustained as long as the pedal is held. All subsequently played notes will not be sustained.

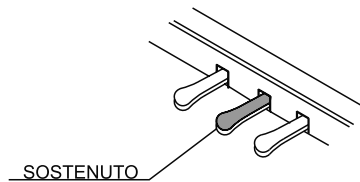

Soft Pedal (Left)


The soft pedal on an acoustic piano changes the character of the sound, making it softer and quieter. The soft pedal on your piano does exactly the same. Press the soft pedal when you need to play passages that require extreme pianissimo.

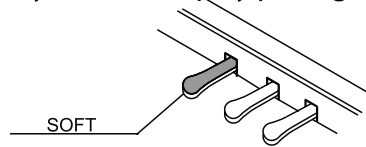

Piano Reset

The Piano Reset Function resets selected aspects of the piano voices back to their default factory state. These elements are carefully selected to give you a quick and easy way to restore back to being a simple Grand Piano once more, with the Data Control knob assigned for selecting voices.

Press the [Metronome/Left] button and the [Function/Right] button at the same time. When both buttons are pressed the display will immediately change to show: 001

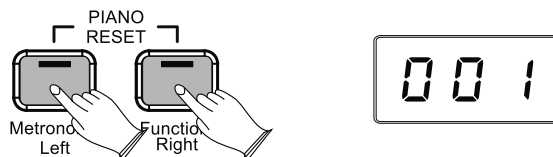

Now the piano is back in Performance Mode, with the Grand Piano voice selected, and the Data Control knob ready to choose other voices. For a more detailed explanation of the Piano Reset function please check the appendix.

Playing Demo Songs

There are 55 preset piano songs that you can play individually. Here's how you can select and play the demo songs.

Listening to the Demo Song

Press the [DEMO/LEARN] button to enter Demo Play Mode and the button will flash.




Press the button to hear Demo Song 1. While the demo is playing, the [DEMO/LEARN] button will flash, and the LED display will show: 001



If you allow playback to continue past the end of Demo Song 1, Demo Song 2 will begin to play, and after that, each of the remaining demos will continue to play in sequence until you press the [DEMO/LEARN] button. If the [DEMO/LEARN] button is not pressed to stop demo playback, after the end of the 55 demo songs, demo playback will continue from the beginning of Demo Song 1 until the Song button is pressed.

Selecting the Demo Song

In Demo Song Playback mode, you can turn the [Data Control] knob to the right until you see the desired Demo Song number appear in the LED display.

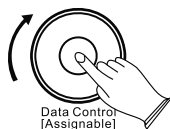

Stopping Playing


Press the [DEMO/LEARN] button again to stop playing.



The Connector Box

Headphones

The piano is equipped with two sets of standard stereo headphone jacks to accommodate private practice or late-night playing. The internal speaker system is automatically shut off when a pair of headphones is plugged into the 1. Headphone jack.

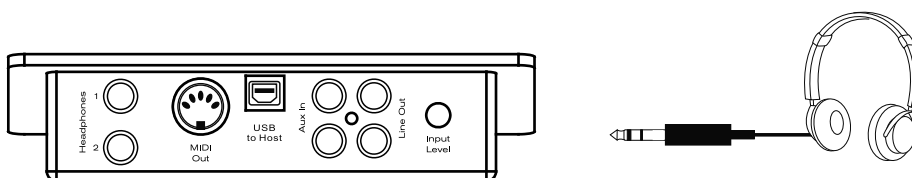

MIDI OUT

MIDI (Musical Instrument Digital Interface) is a world-standard communication interface which allows electronic musical instruments to communicate with each other, by sending and receiving compatible note, program change and other types of MIDI data. You should only plug the MIDI out in to another device featuring a MIDI input.




NOTE

MIDI OUT Transmits MIDI data to another MIDI device.

Line OUT

The piano's stereo RCA line output can be used to deliver the output of the piano to a keyboard amplifier, stereo sound system, mixing console or tape recorder. The piano's internal sound system will remain on unless headphones


are plugged in to the 1. Headphone jack.

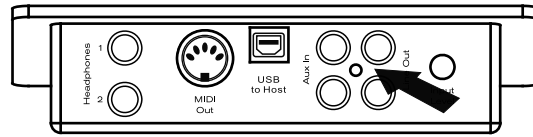

Using USB-MIDI/USB Audio


This product allows the transfer of MIDI information over USB to a computer. As complicated this might sound, it's actually pretty straight forward. Because your piano is USB Class Compliant, there is no need to install a driver to enable it to work with compute. Simply just plug it in and the OS will do the rest. The piano will work with all standard MIDI based computer software.

USB AUDIO interface is a digital audio interface. By USB cable, you can digitally transfer intact audio signals of PC to this instrument, and enjoy it on this instrument or use it for accompany when you play this instrument; likewise, you can transfer intact audio signals of the instrument to PC to record and edit music.

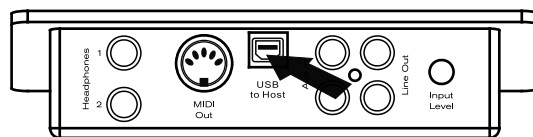


Aux In

The Aux In stereo RCA connectors allow you to mix an external sound source (such as a CD player, MP3 player or computer output) with the piano's internal sounds, for playback through the piano's built-in speakers or headphone outputs.

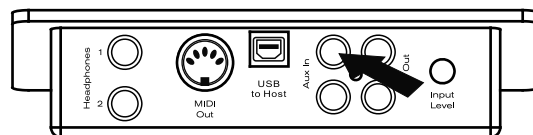

The Aux In signal level can be adjusted using the Input Level knob.

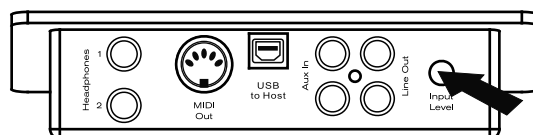

Using the Voice Select Keys


The Voice Select keys offer an alternative method of selecting voices.

To Select Different Voices Using Voice Select Keys:

Press the [Function/Right] button to enter Edit Mode. The LED in the [Function/Right] button will light.

Press and release one of the Voice Select keys on the keyboard.

The LED display will change to show the newly selected voice according to the following table:

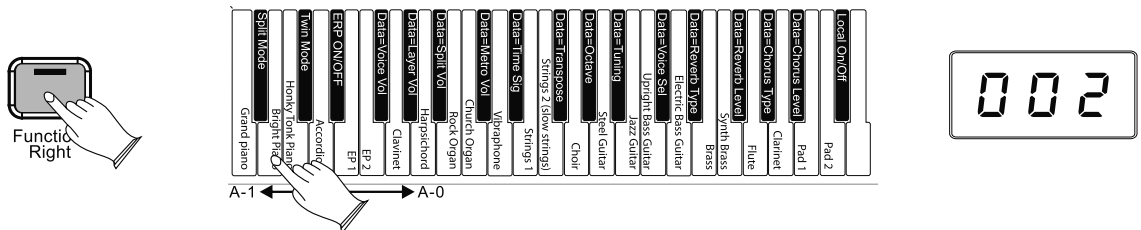

Key	Sound Name	LED Display
A-1	Grand piano	001
B-1	Bright Piano	002
C0	Honky Tonk Piano	003
D0	Accordion	004
E0	EP 1	005
F0	EP 2	006
G0	Clavinet	007
A0	Harpsichord	008
B0	Rock Organ	009
C1	Church Organ	010
D1	Vibraphone	011
E1	Strings 1	012
F1	Strings 2 (slow strings)	013
G1	Choir	014
A1	Steel Guitar	015
B1	Jazz Guitar	016
C2	Upright Bass Guitar	017
D2	Electric Bass Guitar	018
E2	Brass	019
F2	Synth Brass	020
G2	Flute	021
A2	Clarinet	022
B2	Pad 1	023
C3	Pad 2	024


Split Mode

In SPLIT mode, your keyboard will be split into two sections which means different voices can be played with the left and right hands at the same time.

Use Split Mode

Press the [Function/Right] button to enter Edit Mode.

Press the Bb-1 key to enter Split Mode. The LED display will show: 0 7

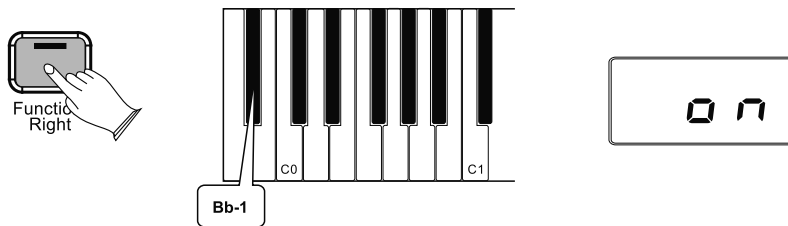


This will be displayed for 3 seconds. You can select the split voice by turning the Data Control knob or reference to voice selection (P10-P11) in 3 seconds. After 3 seconds, it will change to show the currently main voice.

Change the Split Point


Press and hold on the [Function/Right] button t.



 The LED display will show "SPL" for 3 seconds, then you can turn the Data Control knob or play any of keys on the keyboard to select the Split Point in 3 seconds, after 3 seconds the LED will display the currently selected voice.




 
The LED will show the value you selected.
Range: 00-87.



To Independently Control Volume Levels of Left Hand and Right Hand Voices:



1. Left Hand Voice Volume:

  Press the [Function/Right] button to enter Edit Mode.




Press the Bb-0 key to assign the Data Control knob to control the Split Voice (Left Hand Voice) volume.

 The LED display will show: 127


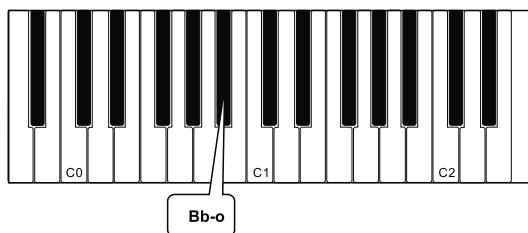


 Use the Data Control knob to select a Split Voice volume level between 0 (minimum) and 127 (maximum). You can play as you do this to hear the volume change.





2.Right Hand Voice Volume:

  Press the [Function/Right] button to enter Edit Mode.




Press the F#-0 key to assign the Data Control knob to control the Right Hand Voice volume.

 The LED display will show: 127

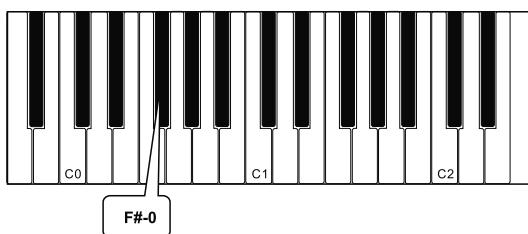


 Use the [Data Control] knob to select a Right Hand Voice volume level between 0 (minimum) and 127 (maximum). You can play as you do this to hear the volume change.



To turn off Split Mode:


 
Press the [Function/Right] button.



Press the Split Mode key (Bb-1) to turn off Split Mode.

The display will show “off” for 3 seconds.

 Then the LED display will return to showing the number of the currently selected Voice.

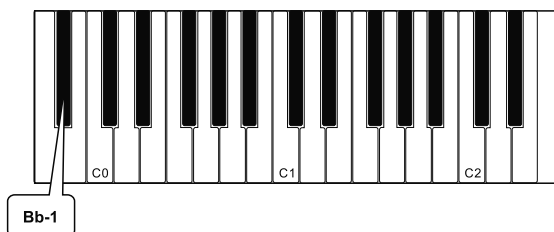


Layer Mode

In Layer Mode, this piano will play two voices simultaneously on each key.

To use Layer Mode:

 
Press the [Function/Right] button to enter Edit Mode.



Press and hold down a Voice Select key (any white key in the lowest octave of the piano). This will select the Main Voice. (See the section on Using the Voice Select Keys at the beginning of the Edit Mode Functions section for more information on selecting voices in this manner.)

While continuing to hold the first Voice Select key, press a second Voice Select key. This will select the Layer Voice.

While both keys are held down the display will show the Layer Voice number.

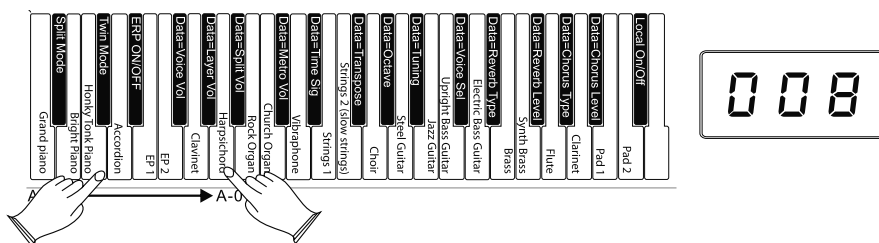


This piano is now in Layer Mode. Both the Main and Layer Voices will sound when keys are pressed. (In the example illustration, Bright Piano is the Main Voice (because it is selected first), and Rock Organ is the Layer Voice (because it is selected second).)

If the Data Control knob is used to change voices while in Layer Mode, it will affect the main Voice only. The Layer Voice will stay the same until Layer Mode is turned off again.


Please note that polyphony may be reduced while Layer Mode is in use.

To Adjust the Volume of the Layer Voice:

 Press the [Function/Right] button to enter Edit Mode.



Press the Layer Volume key (Ab-0).

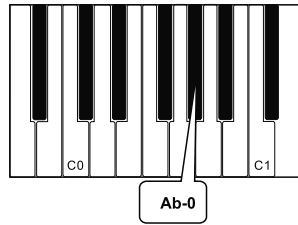


Use the Data Control knob to select a Layer Voice volume level between 0 (minimum) and 127 (maximum). You can play as you do this to hear the volume change.





To Adjust the Volume of the Main Voice:

 
Press the [Function/Right] button to enter Edit Mode.



Press the Voice Volume key (F#-0).

 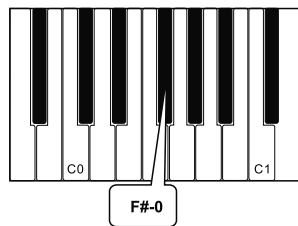

 Use the Data Control knob to adjust the Voice volume.




NOTE


If Split Mode is engaged and Layer Mode is selected, the Layer Voice will only be applied to the keys to the right of the split point. The Left Hand Voice will remain the same as was specified for Split Mode.

To Turn Off Layer Mode:

 Press the [Function/Right] button to enter Edit Mode.



Select a single Voice by pressing a single Voice Select Key.

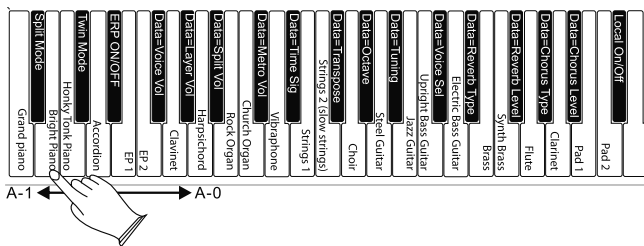

Twin Mode

In Twin mode, the keyboard will be separated into two play areas.

 

 
Use Twin Mode

Press the [Function/Right] button to enter Edit Mode.

Press the C#-0 key to enter Twin Mode. The LED display will show: 


Right: from \sharp C3 to C7

Left: from A-1 to C3

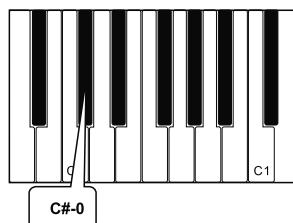


To turn off the Twin Mode:

 Press the [Function/Right] button.



Press the Twin Mode key (C#-0) to turn off the Twin Mode.

The display will show “off” for 3 seconds.

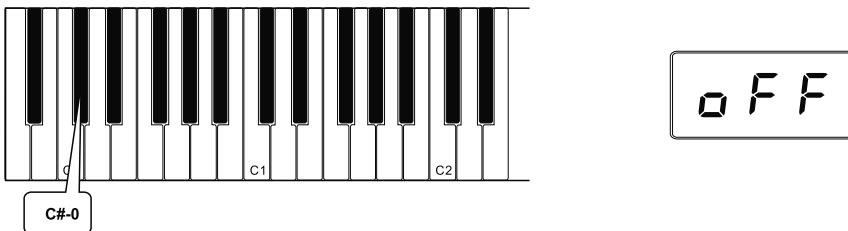



Erp On /Off

Your piano automatically will switch off after 30 minutes of non-operation. In this case, press the [STANDBY/ON] button again to turn on the power.

Use Erp On


Press the [Function/Right] button to enter Edit Mode.

 Press the Eb-0 key to enter the Erp On Mode. The LED display will show: on

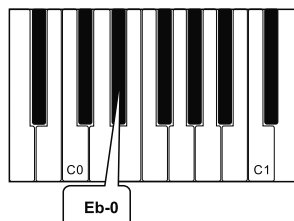


To turn off the Erp Mode:

 Press the [Function/Right] button.




Press the Erp On/Off key (Eb-0) to turn off the Erp Mode.
The display will show “off” for 3 seconds.

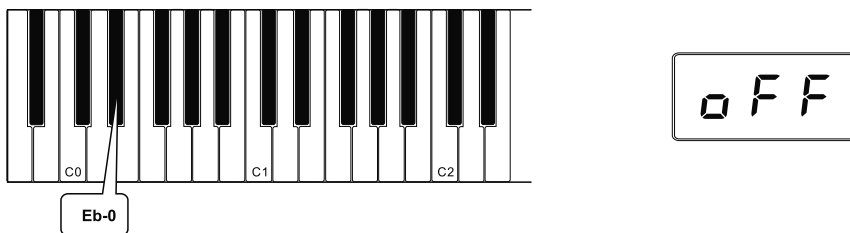

Octave


Pressing this key will set the Data Control knob to increase or decrease the octave setting.

 Press the [Function/Right] button to enter Edit Mode.



Press the Octave Key (Ab-1).

The LED display will momentarily show: 000

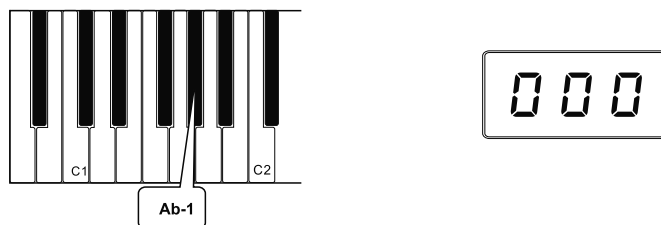

Use the Data Control knob to select the desired Octave.

Turning the Data Control knob clockwise will raise the keyboard's pitch in octave increments, and turning it counter-clockwise will lower it in octave increments.

 
Value:-02~002.



Transpose


Pressing this key will set the Data Control knob to increase or decrease the keyboard's transpose value.

Press the [Function/Right] button to enter Edit Mode.



Press the Transpose key (F#-1).

The LED display will momentarily show: 000

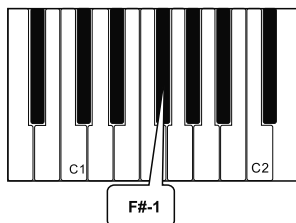


Use the Data Control knob to select the desired Transpose Value.
Turning the Data Control knob clockwise will raise the keyboard's pitch in semitone increments, and turning it counter-clockwise will lower it in semitone increments. Value:-12~012.



Master Tuning


Pressing this key will set the Data Control knob to raise or lower (“fine-tune”) the Master Tune setting of the piano.

 Press the [Function/Right] button to enter Edit Mode.




Press the Master Tuning key (Bb-1).

The LED display will momentarily show: 000

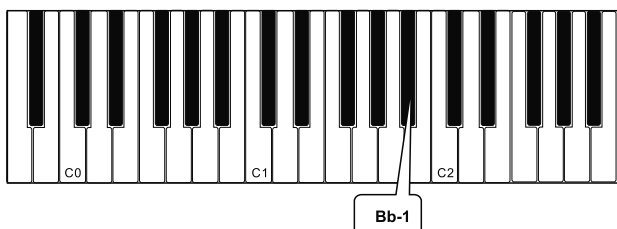

 Use the Data Control knob to select the Master Tuning. The LED display will show a positive, negative, or zero value between -64 and 063. Of course, this piano never actually “goes out of tune,” but the Master Tuning feature can be useful when you are playing along with another instrument or recording that may be slightly above or below standard pitch.



Touch

The Touch Select control, sometimes referred to as Velocity Curve, lets you decide how the pressure with which you hit the keys determines the volume at which the notes play. This piano provides you with four different keyboard sensitivity options:

Normal (Ab-3 key) is the default setting, and is designed to be useful for most players with an “average” touch (i.e.: people who play with an average amount of force). When selecting this option (explained further below), the LED display shows: $\square \square \square$

 
Low (F#-3 key) is a sensitivity setting that generates lower velocity values for the same force. This setting is useful for playing more quietly, even if you have a “heavy” touch. When selecting this option (explained further below), the LED display shows: $\square \square$

High (Bb-3 key) is a sensitivity setting that generates higher velocity values for the same force. This setting is useful for playing more loudly, even if you have a naturally “light” touch. When selecting this option explained further below), the LED display shows: $\square \square \square \square$

Fixed (F-3 key) is a setting that effectively disables sensitivity, meaning the keyboard will generate a fixed velocity value of 100 regardless of how hard or soft you play. When selecting this option (explained further below), the LED display shows: $\square \square$



To Set the Keyboard Sensitivity:

Press the [Function/Right] button to enter Edit Mode.



Press the desired Touch Select key (F-3, F#-3, Ab-3, Bb-3).

The LED display will show the selected Touch setting. Please note that these keys are in the middle of the keyboard. If you need help locating them, please refer to the included laminated Special Function Key chart.

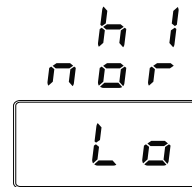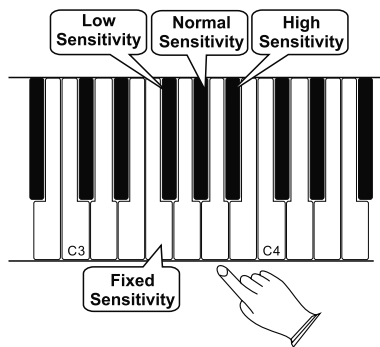

Reverb

In Reverb mode, you can select a number of digital reverb effects that you can use for extra depth and expressive power.


To Select Reverb Type:

Press the [Function/Right] button to enter Edit Mode.



Press the Reverb Type key (Eb-2).

The LED display will momentarily show: 004

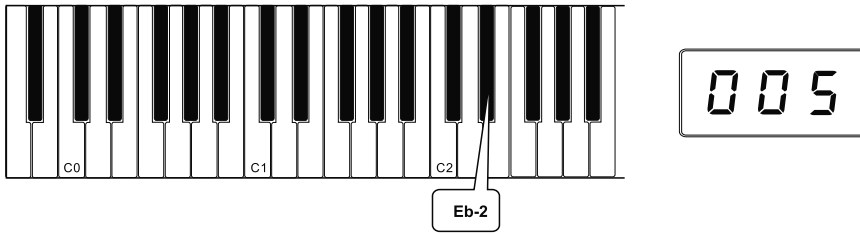

Use the Data Control knob to select the desired Reverb Type.
 Turning the Data Control knob select the desired Reverb Type. Value:001-010(
 001: Hall 1; 002: Hall 2; 003: Room 1; 004: Room 2; 005:Room 3; 006: Stage 1;
 007: Stage 2; 008: Plate; 009: Delay ; 010: Echo.(Default: 005)

 


To Turn Off the Reverb type:


Turn the Data Control knob until the LED show “000” to turn off the Reverb type.

To Adjust the Reverb Level :

Press the [Function/Right] button.



Press the Reverb Level key (F#-2).
 The LED display will momentarily show: 0 18

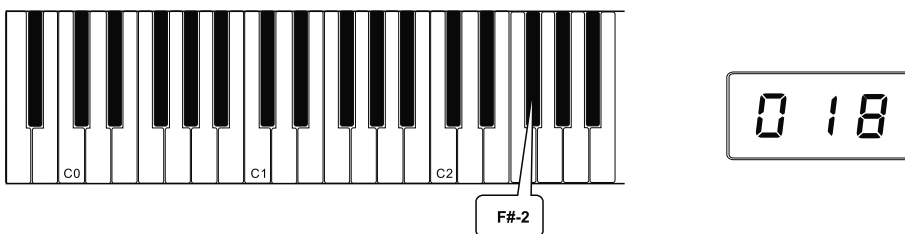


Turn the Data Controller knob to adjust the reverb level setting. The minimum setting is 000, and the maximum setting is 127.



Chorus



To Select the Chorus Type:

 Press the [Function/Right] button to enter Edit Mode.



Press the Chorus Type key (Ab-2).

 The LED display will momentarily show: 000

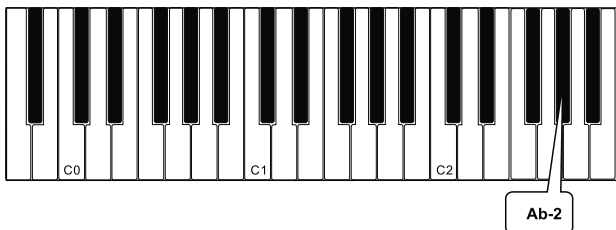

Use the Data Control knob to select the desired Chorus Type.

Turning the Data Control knob select the desired Chorus Type. Value:000-013(
000: Off; 001: Chorus 1; 002: Chorus 2; 003: Chorus 3; 004: Chorus 4; 005:
Feedback; 006: Flanger 1; 007: ShrtDelay ; 008 ShrtdIFb; 009: Flanger 2; 010:
Flanger 3; 011Celeste 1; 012:Celeste 2; 013:Celeste 3. (Default: 000)

 


To Turn Off the Chorus type:

Turn the Data Control knob until the LED show “000” to turn off the Chorus type.



To Adjust the Chorus Level :

Press the [Function/Right] button.




Press the Chorus Level key (Bb-2).

 The LED display will momentarily show: 036

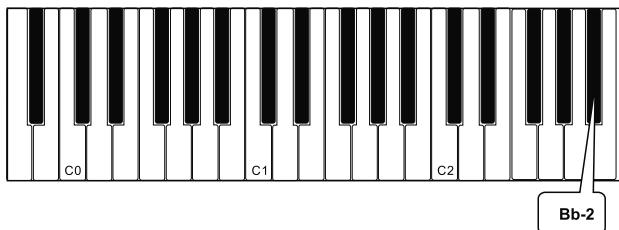

 Turn the Data Controller knob to adjust the chorus level setting. The minimum setting is 000, and the maximum setting is 127.





Metronome

Our piano features a built-in metronome which can be used for practicing to a set tempo, and is also helpful when recording tracks in the Song Recorder.

To Activate the Metronome:

  The metronome sound is alternately turned on and turned off by pressing [Metronome/Left] button. The Metronome button's LED will also flash in time.




Metronome Volume

The metronome volume can be raised or lowered to a level that is comfortable for you.


Change the Metronome's Volume

 Press the [Function/Right] button on the left hand panel.





Press the Metronome Volume key (C#-1) on the keyboard.

The LED display will momentarily show: 100

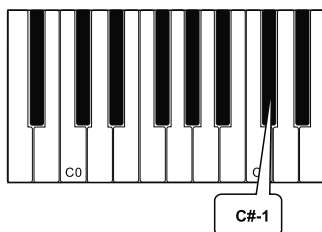

 Turn the Data Control knob clockwise to increase the metronome volume, or counter-clockwise to decrease the metronome volume.
The metronome volume level will be indicated as a value from 0-127 in the LED display window.

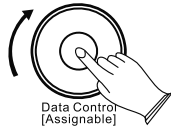

Time Signature


 
The metronome can support the following time signatures: 2/2, 1/4, 2/4, 3/4, 4/4, 5/4, 6/4, 3/8, 6/8, 7/8, 9/8, 12/8

Change the Metronome's Time Signature



Press the Voice/Function button on the left hand panel.

Press the Eb-1 key on the keyboard.

The display will show: 005

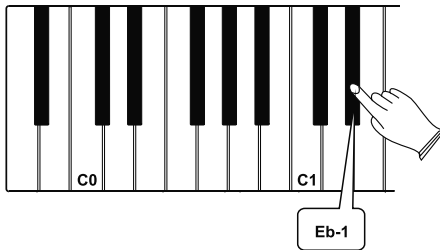

 Turn the Data Control knob to step through the available time signatures.
The available time signatures will be shown on the LED display as they appear below: 0.0.1, 0.0.2, 0.0.3, 0.0.4, 0.0.5, 0.0.6, 0.0.7, 0.0.8, 0.0.9, 0.1.0, 0.1.1, 0.1.2

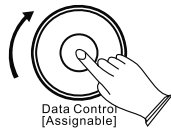


Please note that time signature and Tempo cannot be changed while recording a song in Song Record Mode.

NOTE

Now the Data Control knob is assigned to control time signature instead of Voice Selection. To reassign the Data Control knob for Voice Selection, press the Voice / Function button and then press the bE2 key. (This procedure is illustrated at the beginning of the “Edit Mode” section.) Also, keep in mind that no matter how the Data Controller knob is assigned, you can always select sounds (in Performance Mode) by holding down the Voice /Function button while turning the Data Control knob.

Tempo

 Hold down the [Metronome/Left] button and the LED display will show “120”, then you can turn the Data Control knob to set the tempo. Range: 20~280.





Song Recording

The Song Recorder built into the piano can record two individual tracks, allowing you to record one part and then record a second complementary part while the first part is played back.

To Record a Track

Press the [Record] button to enter Record Wait Mode. The Record button LED will light, and the Demo/Learn button will flash.

  The LED display will show: 0 1 1



This piano is now in Record Wait Mode.

 
To start recording, begin playing the keyboard. Recording starts automatically as soon as you start playing.



NOTE


When Record Wait Mode is active, you can also start recording by pressing the Demo/Learn button. In that case, the Song Recorder will record silence until you start playing the keyboard. (The first one measures are tempo only. It cannot record any data.)

Press the [Record] button again to stop the recording.



Manually Select a Track to Record:

 Press the [Record] button to enter Record Wait Mode.



Turn the Data Control knob to select between Only Track 1, Only Track 2, Track 1, Track 2 .

The display will show : 0 t 1, 0 t 2, t r 1. t r 2.



You will also see options for “Clear 1” (abbreviated “cl1”) and “Clear 2” (abbreviated “cl2”), which you can ignore for the moment. These will be discussed later in this section.

0 t 1 In this case, you can record the song in Track 1, if the Track 2 has data, it will not play.

0 t 2 In this case, you can record the song in Track 2, if the Track 1 has data, it will not play.


t r 1 In this case, you can record the song in Track 1, if the Track 2 has data, it will play automatically.

t r 2 In this case, you can record the song in Track 2, if the Track 1 has data, it will play automatically.

[L 1 In this case, you can clear the record data of Track 1.



[L 2 In this case, you can clear the record data of Track 2.

When the LED display shows the track you wish to record to, you may begin playing whenever you are ready, and recording will automatically begin as soon as you play the first note.

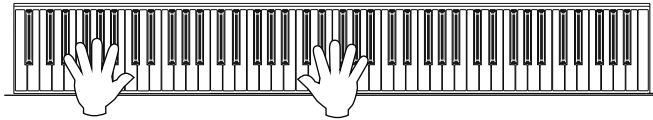


Clearing a Single Track in the Song Recorder:

  Press the [Record] button enter Song Recording Mode.





 Use the [Data Control] knob to select the track you wish to clear.




Press the [Record] button, the track will be erased, and this piano will be back in Performance Mode.

 The LED will then display the currently selected Voice.

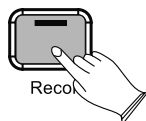

Playing Back Your Song Recorder Tracks:

Press the [Record] button and the [Demo/Learn] button at the same time to enter Song Play Mode.

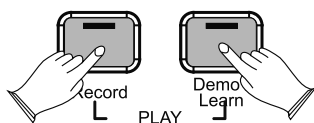

Use the [Data Control] knob to select one of the following:




5 n 9 Playback of both of the Song Recorder tracks simultaneously.

Err 1 Playback of Song Recorder Track 1.

Err 2 Playback of Song Recorder Track 2.

Press the [Demo/Learn] button to start playback.

While the Song is playing the LED display will show: 00 1

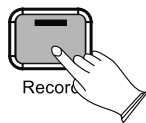


NOTE

If there is nothing recorded on either of the tracks (1 or 2), then the Song will not play. Rather, the LED will show “Err” quickly, and this piano will exit Song Play Mode and resume Performance Mode, with the LED display showing the currently selected voice.

To Stop Playback and Exit Song Play Mode:

 Press the [Demo/Learn] button. Song playback will stop, and this piano will exit Song Play Mode and resume Performance Mode with the LED display showing the currently selected voice.




Learning Function


There are several songs built into this Piano for your musical enjoyment. These songs have separate left and right-hand parts that can be turned on and off as required so you can practice the corresponding part on the piano.

1. Selecting A Song

 Press and hold down the [Demo/Learn] button to enter the Learning Mode. The song number will appear on the LED display. Both Right and Left indicator are light.




Use the [Data Control] knob to select a song. Press the [Record] button to start playing the song.

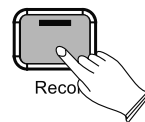

2. Listening To The Entire Song

1). With the play along song mode engaged, press the [Record] button to hear both hand parts playing the entire song.


 
2). Press the [Record] button again to stop. Otherwise, playback will stop automatically at the end of the song.




3. Practicing The Right Hand Of The Selected Song

1). Press and hold down the [Demo/Learn] button to enter the Learning Mode.

  Both Right and Left button are light. Press the [Function/Right] to mute the right hand part.



 2). Press the [Record] button. Then you will hear the song. You will only hear the left-hand part.



3). Play the right-hand part of your selected song while the left-hand part plays.

4). Press the [Record] button again to stop. Otherwise, playback will stop automatically at the end of the song.

4. Practicing The Left Hand Of The Selected Song

Follow steps 1-4 listed above, substituting the [Metronome/Left] button whenever the [Function/Right] button is mentioned. You will hear the right-hand part of your selected song. Play the left-hand part of your selected song while the right-hand part plays.

5. Turn off the Learning mode

Press the [Demo/Learn] again to turn off the learning mode.

NOTE

After you finish learning one song, your piano may automatically score 0~100 on your performance.

MIDI Functions

If you are an advanced MIDI user, this section will help you to access the MIDI controller capabilities of the piano. If you already know that you need this specialized functionality, then this section is for you. However, this information is not necessary in order to enjoy playing the piano. A good rule to keep in mind is: If you don't know what a function described in this section is, then you probably don't need it.

MIDI, or Musical Instrument Digital Interface, is the way most electronic keyboards communicate with computers and with each other. Through a series of MIDI messages a computer or keyboard can tell an instrument what note to play, how loud to play it, when to stop playing it, and a host of other information.

 
The piano can send MIDI information to a computer or another MIDI-capable instrument, via its MIDI or USB output.

Local On/Off (C#-3)

Turning the Local On/Off function to Off will disconnect the keyboard from the internal sound engine of the piano. This means you can use the piano as a MIDI controller to control other MIDI devices (or virtual instrument software running on your computer) without playing the internal sounds of the piano. You may also find other occasions (such as when you are using MIDI sequencing software on your computer) where it is useful to turn Local off.

To turn Local On/Off to Off:

Press the [Function/Right] button to enter Function Mode.




Press the Local On/Off key (C#-3)

The LED display will show: $\square F F$

To turn Local On/Off back on, follow the above procedure again.

The LED display will show: $\square \square$

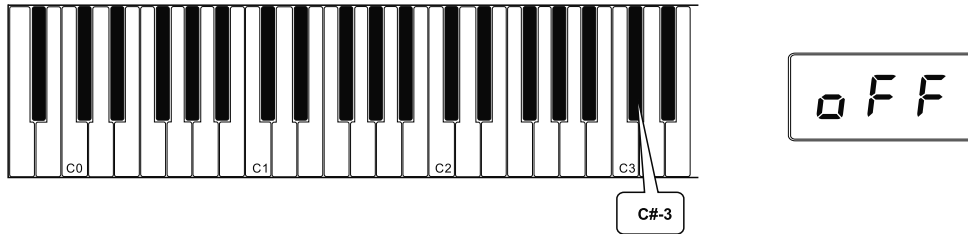

Appendix

MIDI Implementation Chart

Function		Transmitted	Recognized	Remarks
Basic Channel	Default	1-16	1-16	
	Changed	1-16	1-16	
Mode	Default	Mode 3	Mode 3	
	Messages	O	X	
	Altered	*****	X	
Note Number	True voice	0~127 *****	0~127	
Velocity	ON	O	O	
Note	OFF	O	O	
After Touch	Key's	X	X	
Touch	Touch Channel	X	X	
Pitch Bend		X	X	
Control Change		0-127	0,1,5,6,7,10,11, 32,64,65,66,67, 80,81,91,93,100, 101,121	
Program Change	True #	0-127 *****	0-23	
System Exclusive		O*	O*	*The controller will recognize and respond to GM Device inquiries. Master Tune supported. Master Volume supported.
System Common	Song Position Pointer	X	X	
	Song Select	X	X	
	Tune Request	X	X	
System Real Time	Clock	X	X	
	Commands	X	X	
Aux Messages	All Sounds Off*	O	O	
	Reset All Controllers	O	O	
	Local ON/OFF*	O	O	
	ALL Notes OFF	O	O	
	Active Sensing	X	O	
	System Reset	X	O	
Notes				

Mode1:OMNI ON,POLY Mode2:OMNI ON,MONO O: Yes
 Mode3:OMNI OFF,POLY Mode4:OMNI OFF,MONO X: NO

Defaults

Default Settings

The table below shows the piano factory default settings and whether or not user changes to these settings are retained after a power-cycle (turning the device off and on):

Parameter	Factory Default	Retained on Power-Down
Program Number & Voice Selected	000 - Grand Piano	No
Octave shift	0	No
Transpose	0	No
Local	On	No
Data Control Assignment	Data = Voice Select	No
Reverb On/Off	Reverb On	Yes
Reverb Depth	18	Yes
Chorus On/Off	Chorus Off	Yes
Chorus Depth	36	Yes
Velocity Curve Selected	“NORMAL”	No
Split Point	#F2	No
Voice Volume	127	Yes
Layer Volume	75	Yes
Split Volume	127	Yes
Metronome Volume	100	Yes
Master Tune	0	No
Tempo	120	No
Layer Mode Voice	n/a	n/a
Split Mode Voice	16 - Jazz Guitar	No
Layer Mode On/Off	Off	No
Split Mode On/Off	Off	No

Additional Default Information

1.Defaults

Parameter	Default	Value Range
Octave Shift	0	-2 to +2
Transpose	0	-12 to +12
Voice Vol	127	0 to 127
Layer Vol	75	0 to 127
Split Vol	127	0 to 127
Metronome Vol	100	0 to 127
Voice Select	1 (Grand Piano)	1 to 24(display shows Voice nunmbers)
Tuning	440 Hz (display shows "0")	-64 (-50 cents) to 63 (+50 cents) in 128 MIDI steps

1 tone = 100 cents, therefore -50 to +50 cents = -1 to +1 semi-tone.

Note this is shown in MIDI steps -64 to 63.

Advanced Functions Keyboard Chart

The chart displays a piano keyboard with the following function assignments:

- Octave C3 (C7-C4):** Touch=High, Touch=Normal, Touch=Low, Touch=Fixed, Local On/Off, Pad 2, Pad 1, Data=Chorus Level, Clarinet, Data=Chorus Type, Flute, Data=Reverb Level, Synth Brass, Brass, Data=Reverb Type, Electric Bass Guitar, Data=Voice Sel, Upright Bass Guitar, Jazz Guitar.
- Octave C2 (C3-C0):** Data=Tuning, Steel Guitar, Data=Octave, Choir, Data=Transpose, Strings 2 (slow strings), Strings 1, Data=Time Sig, Vibraphone, Data=Metro Vol, Church Organ, Rock Organ, Data=Split Vol, Harpsichord, Data=Layer Vol, Clavinet, Data=Voice Vol, EP 2, EP 1, ERP ON/OFF, Accordion, Twin Mode, Honky Tonk Piano, Bright Piano, Split Mode, Grand piano.

 
 

The control panel at the bottom includes:

- Knobs: MASTER VOLUME, PIANO, CHORUS.
- Buttons: ERP ON/OFF, TWIN MODE, SPLIT MODE, and instrument selection buttons (Clavinet, Harpsichord, Rock Organ, Church Organ, Vibraphone, Strings 1, Strings 2, Electric Bass Guitar, Synth Brass, Flute, Clarinet, Pad 1, Pad 2, Upright Bass Guitar, Jazz Guitar, Steel Guitar, Choir, Grand piano, Bright Piano, Honky Tonk Piano, Accordion).

Piano Reset

Turn the power off.

Hold down the [Metronome/Left] button and the [Function/Right] button at the same time while powering the piano.

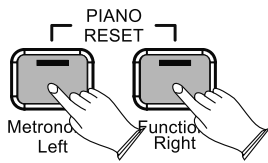

Specifications

Keyboard	88 Keys With Touch Sensitivity
Display	LED Display
Voice	24
Polyphony	64
Voice Control	Layer, Touch, Trans, Split, Metro
Pedals	Soft, Sostenuto, Sustain
Effect	Reverb, Chorus
Demo Song	55
Song Recording	Record two individual tracks
Midi	Transmit Settings, Local Control
Connectors	MIDI Out, Pedal,
Speakers	YD158-7/4 Ω 15W
Dimensions(W x D x H)	1490mm × 520mm × 415mm
Weight	44Kg
Supplied Accessories:	Owner's Manual

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

