

# THUNDER WASH 600 RGBW

3 IN 1 STROBE, BLINDER AND WASH LIGHT  
WITH W-DMX™DMX CONTROL TABLE



1-CH Mode					
CH1	Strobe (RGBW Full On)	000	-	010	Strobe closed
		011	-	255	Strobe slow -> fast 1Hz - 30Hz

2-CH Mode 1					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Colour Macro	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
118	-	125	Cold White		
126	-	128	Colour Jumping Stop		
129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12		
193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12		

2-CH Mode 2					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe (RGBW)	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	250	Strobe slow -> fast 1Hz - 30Hz
		251	-	255	Strobe open

3-CH Mode 1					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe (RGBW)	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	250	Strobe slow -> fast 1Hz - 30Hz
		251	-	255	Strobe open
CH3	Duration	000	-	255	Flash duration (1ms to 510ms)

# THUNDER WASH 600 RGBW

3 IN 1 STROBE, BLINDER AND WASH LIGHT  
WITH W-DMX™DMX CONTROL TABLE



3-CH Mode 2					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Strobe (Colour CH3)	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	250	Strobe slow -> fast 1Hz - 30Hz
		251	-	255	Strobe open
CH3	Colour Macro	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
126	-	128	Colour Jumping Stop		
129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12		
193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12		

4-CH Mode 1					
CH1	Red	000	-	255	0% to 100%
CH2	Green	000	-	255	0% to 100%
CH3	Blue	000	-	255	0% to 100%
CH4	White	000	-	255	0% to 100%

4-CH Mode 2					
CH1	Master Dimmer	000	-	255	Master Dimmer
CH2	Strobe (Colour CH3)	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Pulse Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow -> fast
		103	-	127	Strobe Break Effect, 5s.....1s (Very Short Flash) Random
		128	-	250	Strobe slow -> fast 1Hz - 30Hz
		251	-	255	Strobe open

# THUNDER WASH 600 RGBW

3 IN 1 STROBE, BLINDER AND WASH LIGHT  
WITH W-DMX™DMX CONTROL TABLE



CH3	Colour Macro	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
126	-	128	Colour Jumping Stop		
129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12		
193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12		
CH4	Sound (Colour CH3, set CH2 Strobe to value 000)	000	-	005	Sound Control Off
		006	-	255	Sound Control On Low -> High (Mic Sensitivity)

7-CH Mode_1					
CH1	Master Dimmer	000	-	255	Master Dimmer
CH2	Strobe (Colour CH3 - CH6)	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	033	Pulse Random, slow -> fast
		034	-	056	Ramp up Random, slow -> fast
		057	-	079	Ramp down Random, slow -> fast
		080	-	102	Random Strobe Effect, slow -> fast
		103	-	127	Strobe Break Effect, 5s....1s (Very Short Flash) Random
		128	-	250	Strobe slow -> fast 1Hz - 30Hz
251	-	255	Strobe open		
CH3	Red	000	-	255	0% to 100%
CH4	Green	000	-	255	0% to 100%
CH5	Blue	000	-	255	0% to 100%
CH6	White	000	-	255	0% to 100%
CH7	Sound (Colour CH3 - CH6, set CH2 Strobe to value 000)	000	-	005	Sound Control Off
		006	-	255	Sound Control On Low -> High (Mic Sensitivity)

# THUNDER WASH 600 RGBW

3 IN 1 STROBE, BLINDER AND WASH LIGHT  
WITH W-DMX™DMX CONTROL TABLE



7-CH Mode 2					
CH1	Dimmer	000	-	255	Master Dimmer
CH2	Strobe (Colour CH4 - CH7)	000	-	005	Strobe open
		006	-	010	Strobe closed
		011	-	250	Strobe slow -> fast 1Hz - 30Hz
		251	-	255	Strobe open
CH3	Duration	000	-	255	Flash duration (1ms to 510ms)
CH4	Red	000	-	255	0% to 100%
CH5	Green	000	-	255	0% to 100%
CH6	Blue	000	-	255	0% to 100%
CH7	White	000	-	255	0% to 100%