

SZ-WGS-PT WIRELESS GUITAR PEDAL SYSTEM USER MANUAL

PRECAUTIONS

Power Supply

Be sure to turn the power OFF when the unit is not in use.

Warning: do not dismantle, impact or remove the Li battery. No use after water immersion.

Handling

To avoid breakage, do not apply excessive force to the switches or controls.

Care

If the exterior becomes dirty, wipe it with a clean, dry cloth. Do not use liquid cleaners, cleaning compounds, or polishes.

 
MAIN FEATURES

Wireless audio transmission system consists of two parts including Transmitter and Receiver, using 5.8G frequency.

1. Suitable for guitar, bass and all instruments with 6.35mm audio jack.
2. Four built-in channels.
3. Low latency - less than 5.6 ms.
4. Mute function.
5. Tuner function.
6. 9v Power output for pedals.
7. Transmitter and Receiver have large capacity built-in lithium batteries.

PARTS NAMES AND FUNCTION


Transmitter

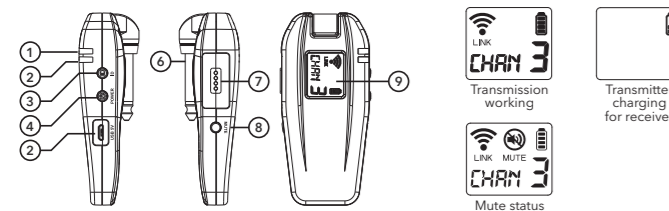

1. Pairing indicator (orange). The orange indicator flashes when not paired, and turns off when paired successfully.
2. Channel indicator (red, green, blue, purple)
3. Channel switch button. Press the button to switch different channels of wireless transmission.

4. Power button.
5. Charging port via USB.
6. Audio plug to instruments.
7. Magnetic connector. Charge port connecting the transmitter with the receiver.
8. Mute button. Press and hold for 2 seconds to mute. Press and hold again to unmute.
9. Screen. Contains information on units battery level, channel, etc. The screen turns off in 10 seconds when successfully paired.

 Receiver

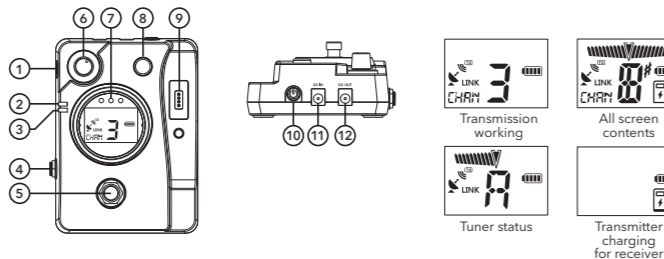


1. Charging port via USB cable.
2. Pairing indicator (orange). The orange indicator flashes when not paired, and turns off when paired successfully.
3. Channel indicator (red, green, blue, purple).
4. Audio plug for instruments.
5. Tuner switch: Press to enter tuner mode. The tuner works only when that the transmitter and the receiver are successfully paired.
6. Cable Tone knob: To adjust tone, turn counterclockwise to raise bass, turn clockwise to raise treble.
7. Tuning indicators.
8. LINK button: press to pair.
9. Magnet connector. Charge power connecting the transmitter with the receiver.
10. Power button.
11. 9V power charging port.
12. 9V power output. To power up other pedals via 9V DC OUT.

HOW TO USE

Transmitter

 1. Press and hold the "POWER" buttons of Transmitter and Receiver to turn power on.
2. If both Channel indicators shown a same colour and channel ID on the screens are the same, pairing is successfully and ready to use.
3. If pairing indicators (orange) are flashing, no matter what colour the Channel indicators are, the Transmitter and Receiver are not successfully paired. Press and hold the Channel button on the Transmitter and LINK button of Receiver for 5 to 7 seconds, until Transmitter and Receiver Channel indicator colours are the same, and Channel ID numbers are the same. Both orange colour pairing indicators will then turn off when pairing is successful.
4. If switching to another Channel, only press the transmitter Channel button to switch. The receiver Channel will change to the same channel automatically.
5. Connect Transmitter and Receiver to your instrument and amp, and start to play.

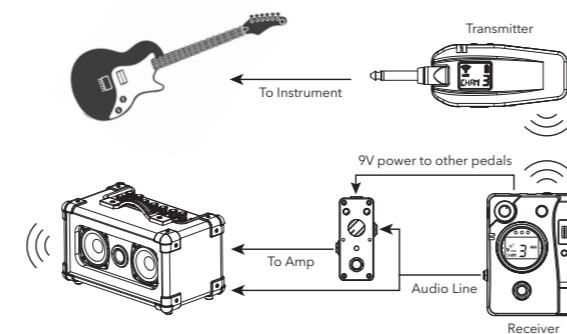

Remind:

The frequency 5.8GHz might be also used by other wireless devices like WiFi. We suggest that using the wireless at a distance of 2 meters away from other wireless devices to avoid interference. Below circumstances may interfere wireless transmission quality.

 
1. Circumstance where other 5.8GHz wireless devices also using.
2. Where very strong WiFi signal such as public hotspots exist, or complex wireless transmission environments.

Solution:


1. If pairing is unsuccessful, press and hold the Channel button of Transmitter and LINK button of Receiver for 5 to 7 seconds, until the Transmitter and Receiver Channel indicator colours are the same, and channel digits are the same. Both orange colour pairing indicators should then turn off, meaning pairing was successful.
2. If audio interference happens, press the Transmitter Channel button to switch to other channels.

TUNER FUNCTION

Press the switch to enter tuner mode when Transmitter and Receiver are paired. The diagrams below show how to tune. Another press on the switch to get back to transmission mode. When the tuner is on, the transmission is automatically muted.

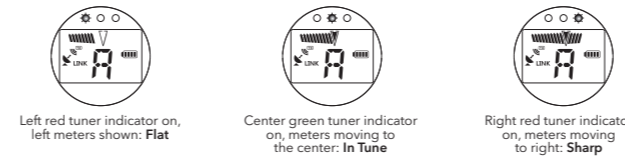

CHARGING

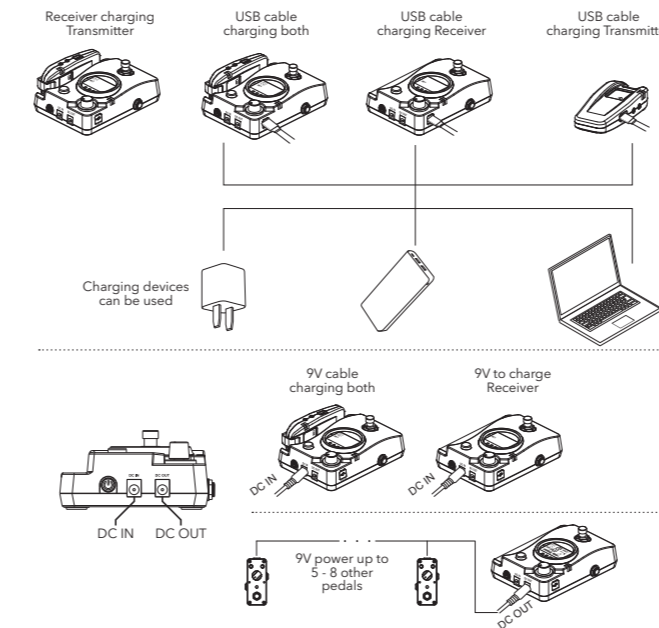 

Remind:

1. When using the Receiver to charge the Transmitter, both will power off automatically in 5 minutes. It takes approximately 3.5 hours to be fully charged when using a 5V / 1A power source.
2. Neither Receiver nor Transmitter will engage when charging.
3. If the Receiver gets no signal from the Transmitter for 30 minutes, the Receiver will power off automatically.

WORK STATUS

STATUS	TRANSMITTER	RECEIVER
	25% Power → 100% Power	
Unpaired	Orange light flashing, "LINK" flashing	Orange light flashing, "LINK" flashing
Paired	Orange lights Off	
	After successful pairing, both ID indicators show a same color, and the ID channel digits are the same number.	

SPECIFICATIONS

	TRANSMITTER	RECEIVER
Power	Rechargeable 3.7V/600 mAH Li battery	Rechargeable 3.7V/2500 mAH Li battery
Audio interface	6.35mm gauge mono audio plug	6.35mm gauge mono audio socket
Channel	4GHF channels	
Frequency	5.729~5.820GHz	
Transmission power	7dBm	--
Receiver sensitivity	--	-81dBm
Signal noise ratio	140dB	
Sound quality	24bt 48KHz	
Delay	5.6ms	
Distortion	-100dB	
Max input signal amplitude	500mV	--
Max transmission distance	35m (no obstacles)	
Work hour after full recharged	5H	
Recharging time	<3.5H	

OTHER SPECS

Weight & Dimension

Transmitter
Weight: 56.4g
Dimension: 43.4x28.7x92mm

Receiver
Weight: 263g
Dimension: 130x98.9x50.3mm

Package List

Transmitter x1, Receiver x 1, Manual x 1, USB cable x 1

FAQ

QUESTIONS	SOLUTIONS
No sound after pairing	Check transmitter connection in your instrument. Unplug the transmitter from your instrument, then plug back in again.
	Check the Receiver is in the correct input in your amp/pedal/audio interphase
	Is the distance between the Transmitter and Receiver too far? Is there a solid obstacle between the units? Shorten distance of Transmitter and Receiver, and remain in line-of-sight with both devices.
	Is the unit charging? Do not use the Transmitter when charging.
	Low power or power off? Check power level and try charging first.
Crosstalk	Transmitter might be connected to another Receiver? Try switching to other ID channels.
Stuttering	Might be 5.8GHz interfering with other devices? Try switching to other Channels.
Not charging	Change to another power source Micro USB charging cable could be damaged/broken?

SubZero



MADE IN CHINA

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: +44 (0) 330 365 4444 or info@gear4music.com

WARNING! EN

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel
Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock

The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product
No naked flame sources, such as lighted candles, should be placed on the product

VAROVÁNÍ! CZ

Nezakrývejte. Uvnitř nejsou žádné součásti opravitelné uživatelem. S požadavkem na servis se odkažte na kvalifikované servisní oddělení. Neumísťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným prašením, mechanickými vibracemi nebo šokem. Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt. Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt.

DVARSEL! DK

Dækslet må ikke åbnes. Ingen bruger-udskeftelige dele indeni. Overlad service til kvalificeret service personale
Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støv, mekaniske vibrationer eller stød
Produktet må ikke udsættes for vand eller stænk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet
Må ikke placeres nær åben ild, tændte stearinlys må ikke placeres på produktet

WAARSCHUWING! NL

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhoud over aan bevoegd onderhoudspersoneel.
Plaats het product niet in de buurt van een hittebron zoals een radiator of in direct zonlicht of in een stofrijke omgeving, mechanische vibratie of schok.
Plaats het product niet in de buurt van spattende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas.
Er mogen geen open vlammen zoals aangestoken kaarsen op de apparatuur worden geplaatst.

VAROITUS! FI

Älä avaa kantta. Ei sisällä käyttäjä-huollettavia osia. Huollot saa suorittaa vain pätevä huoltomies.
Älä säilytä tuotetta minkään kuuman lähellä kuten patteri tai suorassa auringonpaisteessa, pölyisessä, mekaanisessa värinässä tai iskussa
Tuotetta ei saa altistaa tippuvalle tai loiskeelle tai nesteitä sisältäviä tuotteita kuten maljakko eivät saa olla tuotteen lähetyvillä
Avotulia kuten sytytetty kynttilä ei saa olla tuotteen päällä.

ATTENTION! FR

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation a du personnel de réparation qualifié
Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques
L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé dessus
Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil

WARNUNG! DE

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile. Überlassen Sie Wartungsarbeiten qualifiziertem Fachpersonal.
Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Vibrationen oder Stößen.
Schützen Sie das Produkt vor tropfenden oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt.
Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden.

AVVERTIMENTO! IT

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto.
Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock.
Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto.
Non esporre il prodotto a fuoco, candele o oggetti simili.

ADVARSEL! NO

Ikke åpne dekselet. Inneholder ingen deler som kan brukes. Overlat reparasjon til kvalifisert servicepersonell.
Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støv, mekanisk vibrasjon eller støt.
Produktet må ikke utsettes for drypping eller spruting, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet.
Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet.

OSTRZEŻENIE! PL

Nie otwierać pokryw. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla wyszkolonego personelu.
Nie umieszczać produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym wibracjom.
Produkt ten nie może być ekspozowany na kapanie lub chlapanie, a przedmioty wypełnione płynami, takie jak wazy, nie powinny być na nim umieszczone.
Źródła otwartego ognia, takie jak np. świece, nie powinny być umiejscowiane na produkcie.

ATENÇÃO! PT

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado
Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque
Não mantenha o produto num local húmido ou perto líquidos como vasos, etc.
Não aproxime o produto a fontes de fogo vivo, como velas

VÝSTRAHA! SK

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko.
Nevystavujte produkt do blízkosti akéhokoľvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so slnečným žiarením, nadmerným prašným prostredím, mechanickým vibráciám alebo šokom.
Produkt nesmie prísť do kontaktu s vodou a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt.
Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkt.

OPOZORILO! SI

Ne odpirajte pokrova. V notranjosti ni nobenih delov, ki jih uporabnik lahko sam popravlja. Popravilo prepustite usposobljenemu osobju
Ne postavljajte izdelka na lokacijo v bližini vira toplote, kot je radiator, ali na območje, ki je izpostavljeno neposredni sončni svetlobi, pretiranem prahu, mehanskim tresljajem ali udarcem
Izdelek ne sme biti izpostavljen kapljanju ali brizganju in nobeni predmeti, napolnjeni z vodo, kot so vaze, se ne smejo postaviti na izdelek
Nobenega od virov odprtega ognja, kot so vžgane sveče, se ne sme postavljati na izdelek

¡ADVERTENCIA! ES

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado.
No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo.
Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato.
No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato.

VARNING! SE

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal
Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock.
Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten.
Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten.