

KORG KAossilator

DYNAMIC PHRASE SYNTHESIZER

PROGRAM CATEGORY LIST

LEAD	L00-L19	SE	560-579
ACOUSTIC	320-329	DRUM	d80-d89
BASS	b30-b49	DRUM PATTERN	P90-P99
CHORD	c50-c59	※ For details on the programs, refer to the owner's manual.	

SCALE LIST

No.	DISPLAY	SCALE [KEY C]	SCALE NAME
	OFF	OFF	
1	Chr	CHR C D ^b D E ^b E F G ^b G A ^b A B ^b B C	Chromatic
2	Ion	ION C D E F G A B C	Ionian
3	Dor	DOR C D E ^b F G A B ^b C	Dorian
4	Phr	PHR C D ^b E ^b F G A ^b B ^b C	Phrygian
5	Lyd	LYD C D E F [#] G A B C	Lydian
6	Mix	MXL C D E F G A B ^b C	Mixolydian
7	Aeo	AEO C D E ^b F G A ^b B ^b C	Aeolian
8	Loc	LOC C D ^b E ^b F G ^b A ^b B ^b C	Locrian
9	MAB	MAB C E ^b E G A B ^b C	Major Blues
10	MIB	MIB C E ^b F G ^b G B ^b C	minor Blues
11	Dim	DIM C D E ^b F F [#] G [#] A B C	Diminish
12	CDM	CDM C D ^b E ^b E F [#] G A B ^b C	Combination Diminish
13	MAP	MAP C D E G A C	Major Pentatonic
14	MIP	MIP C E ^b F G B ^b C	minor Pentatonic
15	RG1	RG1 C D ^b E F G A ^b B C	Raga Bhairav
16	RG2	RG2 C D ^b E F [#] G A B C	Raga Gamanasrama
17	RG3	RG3 C D ^b E ^b F [#] G A ^b B C	Raga Todi
18	SPN	SPN C D ^b E ^b E F G A ^b B ^b C	Spanish Scale
19	GYP	GYP C D E ^b F [#] G A ^b B C	Gypsy Scale
20	ARB	ARB C D E F G ^b A ^b B ^b C	Arabian Scale
21	EGY	EGY C D F G B ^b C	Egyptian Scale
22	HWI	HWI C D E ^b G A C	Hawaiian Scale
23	PLG	PLG C D ^b E ^b G A ^b C	Bali Island Pelog
24	JPN	JPN C D ^b F G A ^b C	Japanese Miyakobushi
25	RKY	RKY C E F G B C	Ryukyu Scale
26	WHL	WHL C D E G ^b A ^b B ^b C	Wholetone
27	Mi3	Mi3 C E ^b G ^b A C	minor 3rd Interval
28	3rd	3rd C E A C	3rd Interval
29	4th	4th C F B C	4th Interval
30	5th	5th C G C	5th Interval
31	OCT	OCT C C	Octave Interval

KORG KAossilator

DYNAMIC PHRASE SYNTHESIZER

GATE ARPEGGIATOR PATTERN LIST

