
PRODUCT FEATURES

The WHD-MPP-10 is a practice pad with an in-built digital metronome ideal for practice at home or at school. The silica gel reduces the rebound of your drum sticks which helps improve your technique and control, helping you perform for longer when playing a real drum kit.

CHARGING INSTRUCTION

Recharge your WHD-MPP-10 using the micro USB cable input. An icon on the screen flashes when battery is low, make sure you charge it. Note: To ensure the battery life and safety, please use the attached USB cable to recharge the unit. The charging voltage is +5V (voltage error range $\pm 5\%$). The output current of the power supply should be greater than 500mA.

SPECIFICATIONS


The metronome feature can be adjusted from Single to 8th notes. The tempo can be adjusted from 20 to 240 bpm. There are 7 rhythm styles and 8 metronome sounds.

Dimensions Diameter: 275mm
Thickness: 27mm
Weight 1.12KG

WHD

METRONOME PRACTICE PAD

USER MANUAL

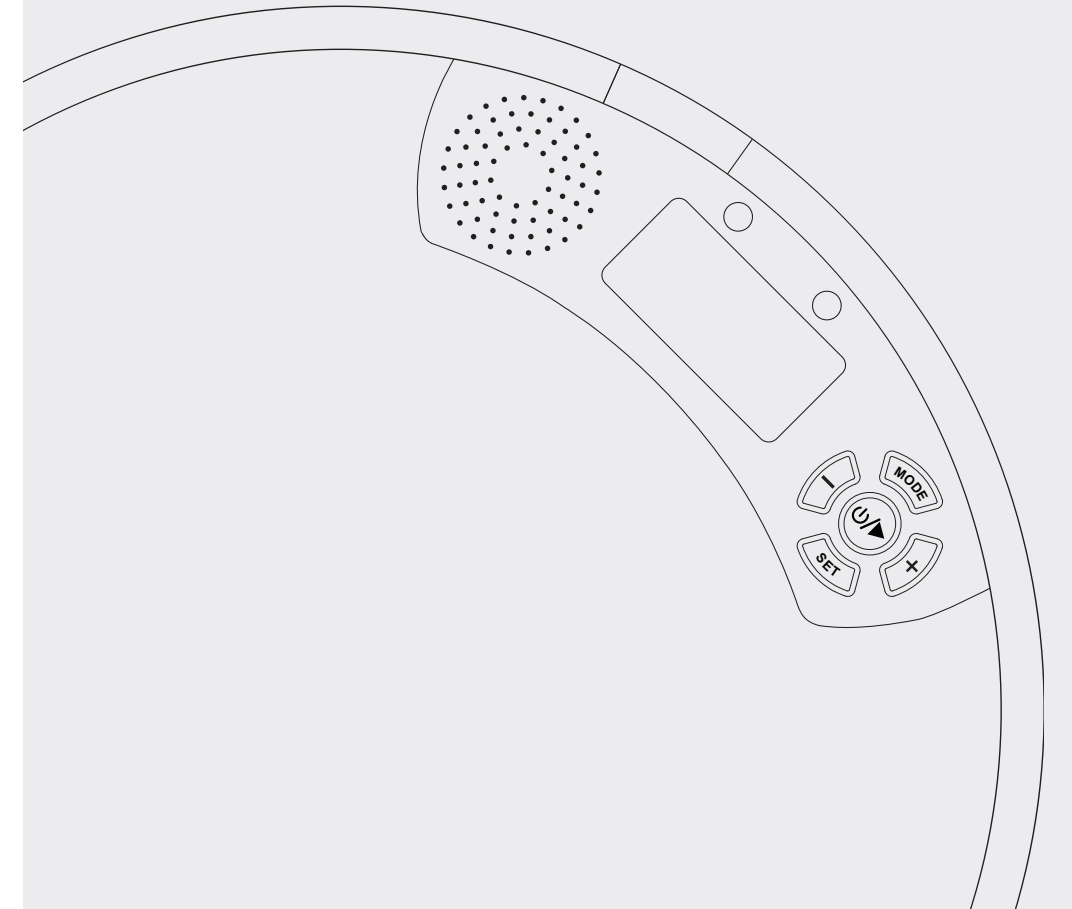


If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **info@gear4music.com**

IMPORTANT NOTICE

1. The product is powered by lithium polymer battery. Please charge the product for the first time.
2. Please make hit practice in the blue area, and do not hit the black part to prevent the damage of the electronic part.
3. If the product is not used for a long time, the battery inside the product will discharge slowly. Please charge it every 3 months in order to prevent battery damage caused by over-discharge.
4. The working temperature of this product is 0-40°C. Please do not use it in high temperature, sub-zero, and over humid environment to prevent partial damage of the circuit.
5. This product contains lithium battery, please properly place and handle when using and discarding.

PRODUCT DESCRIPTION

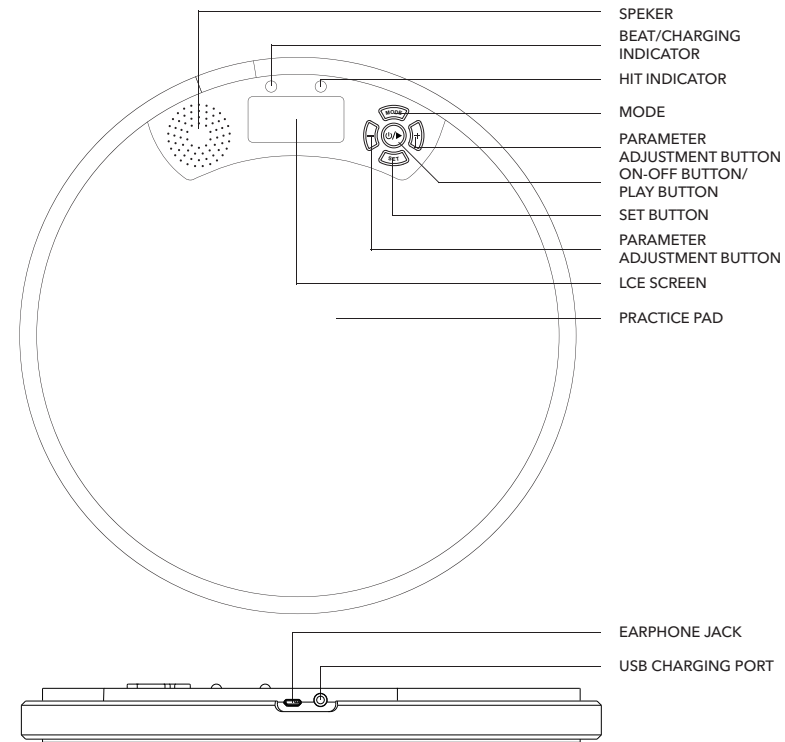

USB CHARGING PORT

Connect to charge the WHD-MPP-10

HEADPHONE JACK

Plug for connecting 1/8" headphones to your practice pad.

ON-OFF BUTTON/PLAY BUTTON

A long press will turn the unit on/off. A short press will activate the metronome.

MODE

Press this button to cycle through different modes including 'metronome mode', 'TAP tempo mode' and counting mode.

SET BUTTON

The Rhythm, Tempo, Sound, and Beat of the metronome can be adjusted by this button.

PARAMETER ADJUSTMENT BUTTON

Adjust parameters after pressing the SET button. Press the two buttons to adjust tempo directly.

OPERATION INSTRUCTION

POWER ON/OFF

Long press ON-OFF button to power on or power off. DD102 will turn off automatically if there is no action in 5 minutes.

MODE

1. SWITCHING WHD-MPP-10 MODES

Power on the unit, the display will show METRONOME mode. Short press the MODE button to switch to TAP tempo mode and then switch to COUNTING mode.



Metronome Mode



TAP Tempo Mode



Counting Mode

2. OPERATION IN EACH MODE

2.1 METRONOME Mode

Press ON-OFF button to open/close metronome.

2.1.1 Setting TEMPO/RHYTHM/OUTPUT Volume

Press Parameter Adjustment buttons to adjust Tempo. Short press the SET button until the number of TEMPO/RHYTHM/OUTPUT Volume flashes, then press the Parameter Adjustment buttons to adjust. Press the ON/OFF button to confirm.

2.1.2 Setting SOUND/BEAT/VOLUME of METRONOME(V1)/VOLUME of CLICK(V2)

Long press the SET button the number of SOUND flashes, and then short press SET button, till the number of until BEAT/V2/V1 flashes. Press the Parameter Adjustment buttons to adjust. Press the ON/OFF button to confirm.

2.2 TAP TEMPO MODE

In TAP mode, hit the practice pad, the corresponding tempo value of the last 2 hits will be displayed. When you switch back to metronome mode, the metronome will work at this Tempo value.

2.3 COUNTING MODE

When in Counting mode, the number of times the practice pad is hit (maximum 999) can be calculated. The amount of time in this mode is selectable. Short press the SET button to choose h>m>s (hours, minutes, seconds), and then press Parameter Adjustment buttons to select. Confirm with the ON/OFF button.