



VISION  
KEY-30

# 61 KEY ELECTRONIC KEYBOARD

VISION KEY-30

USER MANUAL

## WARNING!

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel  
Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock  
The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product  
No naked flame sources, such as lighted candles, should be placed on the product  
Allow adequate air circulation and avoid obstructing vents (if present) to prevent internal heat build-up.  
The ventilation must not be impeded by covering the appliance with items such as newspapers, tablecloths, curtains etc.  
The mains plug is used to disconnect the appliance from the mains supply. Ensure that the mains outlet is easily-accessible and remove the plug from the mains outlet if you notice any abnormality with the appliance.  
If used improperly, batteries may explode or leak and cause damage or injury. In the interest of safety:  
Make sure you observe the correct polarity when replacing batteries  
Avoid new batteries together with used ones  
Avoid mixing different types of batteries  
Remove batteries if the appliance is to remain unused for an extended period of time  
Never keep batteries together with metallic objects such as ballpoint pens, necklaces, hairpins, etc.  
Used batteries must be disposed of in compliance with whatever regulations for their safe disposal that may be observed in the region in which you live.  
Batteries must not be exposed to excessive heat such as sunshine, fire or the like.  
Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

## VAROVÁNÍ!

Nezakrývejte. Uvnitř nejsou žádné součásti opravitelné uživatelem. S požadavkem na servis se odkažte na kvalifikované servisní oddělení.  
Neumísťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným prášením, mechanickými vibracemi nebo šokem.  
Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt.  
Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt.  
Umožňte dostatečnou cirkulaci vzduchu a vyhněte se obstrukci ventilátorů (pokud jsemu příjemné) pro předejiti interního přehřívání. Ventilace nesmí být narušena překrytím zařízení výrobky jako např. novinky, kuchyňské utěrky, záclony apod.  
Hlavní kabel umožňuje odpojit zařízení od elektrického zdroje. Ujistěte se, že hlavní napájecí výstup je snadno dostupný a odpojte kabel pokud zaznamenáte jakoukoliv abnormitu na zařízení.  
Pokud je zařízení používáno nesprávně, baterie mohou explodovat nebo prosakovat a způsobit škodu nebo zranění. Vzájemnou bezpečnost postupujte následovně:  
Uistite se, že baterie jsou v správné poláritě při jejich výměně  
Vyhýbejte se používání nových baterií se starými  
Vyhýbejte se používání různých typů baterií  
Baterie vyměňte za zařízení, pokud není používáno po delší dobu  
Nikdy nedrážte baterii v blízkosti železných objektů jako kuličkové pero, náhrdelník, sponky a pod.  
Použité baterie musí být likvidovány v souladu s regulacemi toho daného území na kterém žijete.  
Baterie nesmí být vystaveny nadměrnému teplu, jako například slunečnímu záření, ohni a podobně.  
Nebezpečí exploze pokud je baterie nesprávně vyměněna. Nahrádte pouze stejným, anebo ekvivalentním typem.

## DVARSEL!

Dækslet må ikke åbnes. Ingen bruger-udsiftelige dele indeni. Overlad service til kvalificeret service personale  
Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støv, mekaniske vibrationer eller stød  
Produktet må ikke udsættes for vand eller stæk, og ingen genstande fyldt med væske, f.eks. vaser, mā anbringes på produktet  
Må ikke placeres nær et højt id, da dette kan være farligt  
Vær sikker på at der er tilstrækkelig luftcirkulation og undgå at dække ventilator (hvis der er nogen) for at undgå at produktet bliver varmt. Ventilationen må ikke blokeres med overdekning af apparatet med genstande som viser, dag, gardiner osv.  
Stikket bruges til at afbryde apparatet fra strømmen. Sikre at stikkontakten er let tilgængelige, og fjern stikket fra stikkontakten, hvis du bemærker noget unormalt med apparatet.  
Hvis denne bruges forkert så kan batterierne eksplodere eller løkke og forårsage skader. Af hensyn til sikkerheden:  
Sørg for at overholde den korrekte polaritet, når du udskifter batterierne  
Undgå at bruge nye batterier sammen med brugte batterier  
Undgå at blande forskellige typer af batterier  
Fjern batteriene, hvis apparatet ikke bliver brugt i en længere periode  
Opbevar aldrig batterier sammen med metalgenstande såsom kuglepenne, halskæder, hårnåle osv.  
Brugte batterier skal bortsættes i overensstemmelse med reglerne for sikker bortsættelse i det område hvor du bor  
Batterier må ikke udsættes for stærk varme som direkte sollys, id eller lignende.  
Eksplosionsfare hvis batteriet udskiftet med en forkert type. Udskift det kun med samme eller tilsvarende type.

## WAARSCHUWING!

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhoud over aan bevoegd onderhoudspersoneel.  
Plaats het product niet in de buurt van een hittebron zoals een radiator of in direkt zonlicht of in een stofrijke omgeving, mechanische vibratie of schok.  
Plaats het product niet in de buurt van spattende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas.  
Er mogen geen open vlammen zoals aangestoken kaarsen op de apparatuur worden geplaatst.  
Zorg om overheating voorkomen voor voldoende ventilatie en bellenmerk ventilatiestoesters niet.  
Bedenk het produkt niet met dingen zoals kranten, tafellakens, gordijnen etc.  
De stekker van dit apparaat wordt gebruikt om het apparaat aan en uit te zetten. Zorg ervoor dat het stopcontact gemakkelijk bereikbaar is en haal de stekker uit het stopcontact als u enige onregelmatigheid ondervindt.  
Bij onjuist gebruik kunnen de batterijen exploderen of lekken en zo schade of verwondingen aanbrengen, in het belang van de  
Zorg dat u de juiste batterijen gebruikt  
Vermijd nieuwe met oude batterijen samen te gebruiken.  
Vermijd verschillende soorten batterijen samen te gebruiken.  
Verwijder batterijen als het apparaat een lange tijd niet gebruikt wordt.  
Bewaar batterijen nooit met metalen voorwerpen zoals ballpoint pennen, kettingen, haarspeld.  
Verwijder de lege batterijen overeenkomstig de reglementen die in uw land in effect zijn.  
Batterijen mogen niet vrijgesteld worden aan extreme hitte zoals zonneschijn of vuur.  
Gevaar van explosie als de batterij niet goed geplaatst is. Vervang alleen met de geschikte of zelfde soort batterij.

## EN

## VAROITUS!

Älä avaa kantta. Ei sisällä käyttäjiä-huollettavia osia. Huollet saa suorittaa vain pätevä huoltomies.  
Älä säälytä tuotetta minikään kuuman läheillä kuten patteri tai suorassa auringonpaisteessa, pölyisessä, mekaanisessa värinässä tai ikussa  
Tuotetta ei saa alistaippuvalle tai loiskeelle tai nesteitä sisältäviä tuotteita kuten maljakko eivät saa olla tuotteen lähettyvillä  
Avotulia kuten sytytetty kynttilä ei saa olla tuotteen päällä.  
Salli riittävän ilmanterio ja välitä tuuletusaukkojen tukkiminen (jos sellaisia on olemassa) estämään sisäisen lammon muodostumisen. Tuuletusta ei saa estää peittämällä laite esineillä, kuten sanomalehdillä, pöytälinjoilla, verhoilla jne.  
Verkkovirtapistoketta käytetään irrottaamaan laite verkkoirrastta. Varmista, että pistorasia on helposti saatavilla ja irrota pistotulppa pistorasiasta, jos havaitset joain epänormaalia laitteessa.  
Jos laitetta käytetään väärin, akut voivat räjähtää tai vuota ja aiheuttaa vaurioita tai vammoja.  
Turvallisuuden vuoksi:  
Varmista, että pariston on valittu oikein  
Älä käytä uusia paristoja yhdessä vanhojen kanssa  
Vältä erilaisten paristojen sekoittamista  
Poista pariston, jos laitetta ei käytetä pitkään aikaan  
Älä koskaan pidä akkuja yhdessä metallisten esineiden kanssa, kuten kuulakärkynät, kaulakorut, hiusneulat jne.  
Käytetyn pariston on hävitettävä vähintään turvallisuus käsittelyn koskevia määräyksiä alueella.  
Paristoja ei saa alista lämmöölle kuten auringonpaiste tai tulit tai vastaava.  
Räjähdysvaara, jos akku on valhedittu väärin. Korvaa vain samalla tai vastaan tyypillisellä.

## FI

## ATTENTION!

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation à du personnel de réparation qualifié.  
Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé dessus  
Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil  
Assurer une circulation d'air suffisante et éviter d'obstruer les fentes (le cas échéant) afin d'éviter une surchauffe interne. La ventilation ne doit pas être bloquée en couvrant l'appareil avec des objets tels que des journaux, des nappes, des rideaux, etc.  
La prise secteur est utilisée comme dispositif de débranchement. La prise murale doit être facile d'accès, et en cas d'anomalie de l'appareil, débrancher la prise de courant au niveau de la prise murale. Si elles ne sont pas manipulées correctement, les piles risquent de couler ou d'exploser, et occasionner des dégâts matériels ou des blessures. Par mesure de sécurité :  
Respecter la polarité lors du changement des piles  
Évitez d'utiliser des piles neuves et des piles usagées en même temps  
Évitez d'utiliser des types de piles différents en même temps  
Si l'appareil doit rester inutilisé pendant une longue période, retirer les piles  
Ne jamais mettre les piles en contact avec des objets métalliques tels que des stylos à bille, des colliers, épingle à cheveux, etc.  
Les piles usagées doivent être éliminées conformément aux réglementations nationales spécifiques.  
Les piles ne doivent pas être exposées à des sources de chaleur excessive telle que les rayons du soleil, le feu, etc.  
Risque d'explosion si la pile est remplacée de manière incorrecte. Remplacer uniquement avec le même type ou équivalent.

## FR

## WARNUNG!

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile.  
Überlassen Sie Wartungsarbeiten qualifiziertem Fachpersonal.  
Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Schwingungen oder Stößen.  
Schützen Sie das Produkt vor tropfenden oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt.  
Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden.  
Sorgen Sie für eine ausreichende Luftzirkulation und vermeiden Sie, dass die Lüftungsschlüsse (falls vorhanden) abgedeckt werden, um einen internen Wärmeastau zu verhindern. Die Belüftung darf nicht durch Abdecken des Gerätes mit Gegenständen wie Zeitungen, Tischdecken, Vorhängen usw. blockiert werden.  
Der Netzstecker dient zum Trennen des Gerätes vom Netz. Vergewissern Sie sich, dass die Steckdose leicht zugänglich ist, und ziehen Sie den Stecker aus der Steckdose, wenn Sie eine Anomalie mit dem Gerät bemerken.  
Bei unsachgemäßer Verwendung können Batterien explodieren oder auslaufen und Schäden oder Verletzungen verursachen. Im Interesse der Sicherheit:  
Achten Sie beim Austausch der Batterien auf die richtige Polarität.  
Vermeiden Sie es, neue Batterien zusammen mit gebrauchten Batterien zu verwenden.  
Vermeiden Sie es, verschiedene Batterietypen zu mischen.  
Entfernen Sie die Batterien, wenn das Gerät über einen längeren Zeitraum nicht benutzt wird.  
Bewahren Sie niemals Batterien zusammen mit metallischen Objekten wie Kugelschreiber, Halsketten, Haarnadeln usw. auf.  
Gebrachte Batterien müssen entsprechend den in Ihrer Region geltenden gesetzlichen Vorschriften entsorgt werden.  
Batterien dürfen nicht bei extremer Hitze wie Sonnenschein, Feuer oder dergleichen ausgesetzt werden. Wird die Batterie unsachgemäß ausgewechselt, besteht Explosionsgefahr. Austausch nur durch identischen oder funktionsgleichen Batterietyp.

## DE

## AVVERTIMENTO!

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto.  
Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock.  
Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto.  
Non esporre il prodotto a fuoco, candele o oggetti simili.  
Assicurarsi la circolazione dell'aria e non ostruire le ventole, se presenti, per evitare il surriscaldamento. La ventilazione non deve subire impedimenti dovuti a giornali, tovagliette, tende, ecc.  
La spina principale viene utilizzata per disconnettere il prodotto dalla principale fonte di energia.  
Assicurarsi che la spina sia facilmente accessibile e disconnettere l'unità nel caso si notassero dei difetti di funzionamento.  
Se utilizzate in modo improprio, le batterie possono esplodere o perdere liquido e causare danni o ingiurie. Per la vostra sicurezza:  
Fate in modo di rispettare la polarità quando le batterie vengono sostituite  
Evitate di combinare batterie vecchie e nuove  
Evitate di combinare differenti modelli di batterie  
Rimuovere le batterie se il prodotto rimane inutilizzato per lunghi periodi di tempo  
Non avvicinare mai le batterie a oggetti metallici quali penne a sfera, collane, spille, ecc.  
E' necessario disporre delle batterie usate secondo le regole stabilito nel paese in cui vivete.  
Le batterie non devono essere esposte a fonti di calore eccessive come fuoco, luce del sole, ecc.  
Pericolo di esplosione nel caso in cui la batteria non venga inserita correttamente. Rimpiazzare la batteria usata con un modello uguale.

## IT

## ADVARSEL!

Ikke åpne deksellet. Innholder ingen deler som kan brukes. Overlat reparasjon til kvalifisert servicepersonell.  
Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støv, mekanisk vibrasjoner eller støt.  
Produktet må ikke utsettes for dripping eller spraying, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet.  
Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet.  
Tillat tilstrekkelig luftsirkulasjon og unngå å blokkere ventilør (hvis tilstede) for å forhindre intern varmeoppsamling. Pass på at ventilasjon ikke hindres ved å unngå å dekke apparatet med ting som aviser, bordduker, gardiner osv.  
Stikkontakten brukes til å koble apparatet fra strømforsyningen. Forsikre deg om at stikkontakten er lett tilgjengelig og ta stoppselet ut av stikkontakten hvis du oppdager uregelmessigheter under bruk av apparatet.  
Hvis feilaktig bruk kan batteriene eksplodere, lekke, og forårsake skade. For sikkerhets skyld:  
Pass på at du følger riktig polaritet når du bytter batterier  
Unngå å bruke nye batterier sammen med brukte  
Unngå å blande forskjellige typer batterier  
Fjern batteriene hvis apparatet skal forblie ubrukt over en lengre periode  
Ikke oppbevar batteriene sammen med metalliske gjenstander som for eksempel kulepenner, halskjeder, hårnåler osv.  
Brukte batterier må kastes i samsvar med gjeldende regelverk for trygg kastning i regionen du bor i.  
Batterier må ikke utsettes for høy varme som f.eks. solskinns, brann eller lignende.  
Fare for eksplosjon dersom batteriet ikke er erstattet på riktig måte. Erstatt kun med samme eller tilsvarende type.

## NO

## OPOZORILO!

## SI

Ne odpirajte pokrova. V notranjosti ni nobeni delov, ki jih uporabnik lahko sati popravlja. Popravilo prepustite usposobljenemu osebu  
Ne postavljajte izdelek na lokacijo v bližini vira toploote, kot je radiotor, ali na območje, ki je izpostavljen neposredni sončni svetlobi, pretiranem prahu, mehanskim tresljajem ali udarcem  
Izdelek ne sme biti izpostavljen kapljjanju ali brizganju in nobeni predmeti, napoljeni z vodo, kot so vase, se ne smejo postaviti na izdelek  
Nobenega od virov odprega ognja, kot so vžgane sveče, se ne sme postavljati na izdelek  
Zagotoviti zadostno krojenje zraka in umaknite ovire na odpričnah (če obstajajo), zaradi preprečevanja kopicanja notranje toplice. Ventilacijo se ne sme ovrati s prekrivanjem naprave s predmeti, kot so časopisi, prti, zavesne itn.  
Omrežni vtic se uporablja za izklop naprave iz električnega omrežja. Poskrbite, da je omrežna vticnica zlahka dostopna in izvlečite vticak iz vticnice, če opazite kakršno koli nepravilnost pri napravi.  
V primeru nepravilne uporabe, baterije lahko eksplodirajo ali puščajo in povzročijo škodo ali poškodbe. V interesu varnosti:  
Poskrbite, da pazite na pravilno polarnost ob zamenjavi baterij  
Izogibajte se uporabi novih baterij skupaj z rabljenimi  
Izogibajte se mešanju različnih vrst baterij  
Odstranite baterije, če se naprava ne bo uporabljala za daljše časovno obdobje  
Nikoli ne hranite baterije skupaj s kovinskimi predmeti, kot so kemični svinčniki, verižice, lasnice, itn.  
Rabljenje baterije je potrereno odstraniti v skladu s katerimi koli predpisi za njihovo varno odlaganje, ki veljajo v regiji v kateri živite.  
Baterije ne smejo biti izpostavljenje prekomerni vročini, kot je sonce, ogjeni ali podobno.  
Nevarnost eksplozije, če so baterije nepravilno zamenjane. Zamenjajte samo z enako ali enakovredno vrsto.

## OSTRZEŻENIE!

## PL

Nie otwierać pokrywy. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla wyszkolonego personelu.  
Nie umieszczać produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym振动em.  
Produkt ten nie może być eksponowany na kapanie lub chłapanie, a przedmioty wypełnione płynami, takie jak wazy, nie powinny być na nim umieszczane.  
Źródło otwartego ognia, takie jak np. świece, nie powinny być umiejscowiane na produkcji.  
Należy zapewnić odpowiednią wentylację i uniikać blokowania otworów wentylacyjnych, aby uniknąć wewnętrznego wzrostu temperatury. Wentylacja nie powinna być utrudniana poprzez nakrywanie urządzenia gazetami, obrusami czy zasłonami.  
Wtyczka sieciowa służą do odłączenia urządzenia od zasilania sieciowego. Należy upewnić się, że gniazdo sieciowe jest łatwo dostępne, a w razie wystąpienia nieprawidłości w funkcjonowaniu urządzenia odłączyc je od zasilania sieciowego.  
Jeżeli produkt jest używany nieprawidłowo, baterie mogą eksplodować lub przeciekać. W celu zachowania bezpieczeństwa należy:  
Upewnić się, że wymieniane baterie mają odpowiednią polarność.  
Unikać jednociennego używania nowych i używanych baterii.  
Unikać mieszania różnych typów baterii.  
Usunąć baterię, jeżeli urządzenie nie będzie używane przez długi okres czasu.  
Nigdy nie przechowywać baterii razem z metalowymi obiekty, takimi jak długopisy kulkowe, naszyjniki, spinki do włosów itd.  
Zużytych baterii należy położyć się zgodnie z przepisami o bezpiecznym usuwaniu obowiązujących w zamieszkuje regionie.  
Baterie nie mogą być wyeksploatowane na nadmierne gorąco, jak np. słońce czy ogień.  
jeżeli bateria zostanie wymieniona nieprawidłowo, istnieje niebezpieczeństwo eksplozji.

## ATENÇÃO!

## PT

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a um pessoal qualificado  
Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque  
Não mantenha o produto num local húmido ou perto líquidos como vasos, etc.  
Não aproxime o produto a fontes de fogo vivo, como velas  
Manter o produto num espaço suficientemente arejado de forma a evitar sobre-aquecimento. Não bloquee a ventilação do instrumento, cobrindo-o com artigos como cortinas, toalhas de mesa ou jornais  
O transformador é utilizado para conectar e desconectar o artigo da principal fonte de energia. Certifique-se que a ficha é facilmente acessível e que o artigo está devidamente ligado à corrente se detectar alguma anomalia com o funcionamento.  
O uso indevido das pilhas poderá levar a explosões ou fugas resultando em graves acidentes. Para sua segurança, por favor:  
Verifique se a polaridade das pilhas está correcta  
Evite utilizar pilhas novas e antigas ao mesmo tempo  
Evite utilizar diferentes tipos de pilhas ao mesmo tempo  
Retire as pilhas do equipamento na eventualidade de inactividade por longo período de tempo  
Nunca aproxime as pilhas de objectos metálicos como pinos de cabelo, colares, brincos ou canetas, etc.  
Pilhas usadas deverão ser descartadas de acordo com os regulamentos de reciclagem aplicáveis no seu local de residência.  
Não exponha as baterias a calor excessivo como luz solar directa ou fogo vivo.  
Perigo de explosão no caso de colocação incorrecta da bateria. Substitua apenas por bateria igual ou equivalente.

## VÝSTRAHA!

## SK

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko.  
Nevystavujte produkt do blízkosti akéhokoľvek tepelného zdroja ako napr. radiátora, alebo do kontaktu slnčným žiareniom, nadmembránym präsným prostredím, mechanickým vibráciám alebo sôkom.  
Produkt nesmie prísť do kontaktu s vodom a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkte.  
Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkto.  
Umožnite dosťatočnú cirkuláciu vzduchu a zabráňte obstrukcii ventiláčnych otvorov (ak sú prítomné) kvôli prevenčii vnútorného prehrevania. Ventilácia nesmie byť narušená prekrytím zariadenia výrobkami ako napr. noviny, kuchynské utierky, záclony a pod.  
Hlavný kábel umožňuje odpojiť zariadenie od elektriny. Uistite sa, že hlavný napájací výstup je ľahko dostupný a odpojte kábel ak zaznamenáte akúkoľvek abnormálitu na zariadení.  
Ak je zariadenie používané nesprávne, batérie môžu explodovať, alebo vytiečť a spôsobiť škodu alebo zranenie. V záujme bezpečnosti postupujte následovne:  
Uistite sa, že batérie sú v správnej polarite pri ich vymene  
Vyhýbajte sa používaniu nových batérií so starými  
Vyhýbajte sa používaniu rôznych typov batérií  
Batérie vyberie zo zariadenia v prípade ak nie je používaný po dlhšiu dobu  
Nikdy nedrážte batérie v blízkosti železnych objektov ako guličkové pero, náhrdelník, sponky a pod.  
Použité batérie musia byť likvidované v súlade s regulačiami toho daného územia na ktorom žijete.  
Batérie nesmú byť vystavené nadmernému teplu, ako napríklad slnčnému žiareniu, ohňu a podobne.  
Hrozí nebezpečenstvo výbuchu ak je batéria nesprávne vymenená. Batériu nahradte iba rovnakým alebo ekvivalentným typom.

## ¡ADVERTENCIA!

## ES

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado. No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo.  
Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato.  
No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato.  
Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstruya o tape las aberturas con objetos como periódicos, manteles, cortinas, etc.  
El enchufe se utiliza para desconectar el producto de la corriente. Si nota algún defecto, desconectelo de la toma de corriente.  
El uso inadecuado de las pilas puede causar explosión o fugas y resultar en daños o lesiones. Para su seguridad, por favor:  
Compruebe la polaridad al reemplazar las pilas  
Evite utilizar pilas nuevas y antiguas al mismo tiempo  
Evite utilizar diferentes tipos de pilas al mismo tiempo  
Saque las pilas del aparato si no va a ser utilizado durante un largo periodo de tiempo.  
Nunca deje las pilas junto a objetos metálicos como bolígrafos, collares u horquillas.  
Para deshacerse de las pilas usadas, debe seguir la normativa de su región o área.  
No exponga las pilas a fuentes de calor excesivo como luz solar directa o llamas.  
Peligro de explosión si la pila es reemplazada incorrectamente. Reemplace sólo con el mismo tipo o equivalente.

## WARNING!

## SE

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal  
Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock.  
Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten.  
Ingen källa till öppna flammer som t.ex tända ljus bör placeras på produkten.  
Tillåt tillräcklig luftcirculation och blockera ej eventuella ventiler för att undvika intern överhettning.  
Ventiler bör ej täckas av föremål såsom tidningar, dukar, gardiner etc.  
Nätkontakten används för att koppla bort apparaten från eluttaget. Se till att eluttaget är lättåtkomligt och avlägsna kontakten från eluttaget om du uppträcker något abnormalt med produkten.  
Om produkten används felaktigt kan batterierna explodera eller börja läcka och orsaka skada. Förr att behålla säkerhet:  
Se till att batterierna sätts in i förhållande till rätt polaritet  
Undvik att använda nya batterier med gamla  
Undvik att blanda olika sorters batteri  
Avlägsna batterierna om produkten kommer att vara oanvänd under en längre tid  
Förvara aldrig batterier tillsammans med andra metallobjekt såsom pennor, halsband, hårlärar, etc  
Använda batterier bör kastas enligt lokala säkerhetsregulationer.  
Batterier bör ej utsättas för hög värme såsom solljus, eld eller liknande.  
Risk för explosion om batterierna har sätts in felaktigt. Ersätt endast med samma batterior.

---

# CONTENTS

<b>INTRODUCTION .....</b>	5	<b>DSP.....</b>	23
<b>PANEL &amp; DISPLAY DESCRIPTION</b>		<b>EQ.....</b>	24
Front Panel.....	6-7	<b>MIXER .....</b>	24
Rear Panel .....	8	<b>PEDAL FUNCTIONS .....</b>	25
Display.....	9	<b>FUNCTION MENU.....</b>	26
<b>POWER .....</b>	10	<b>RESTORE FACTORY SETTINGS.....</b>	26
<b>SETTING UP MIC STAND .....</b>	10	<b>MEMORY SETTINGS.....</b>	27
<b>CONNECTIONS .....</b>	11	<b>ALBUM SONGS .....</b>	27
Connecting an MP3/CD Player .....	11	<b>RECORDING.....</b>	28-29
Connecting an Audio Output.....	11	<b>SONGS.....</b>	30
Connecting a Pair of Headphones .....	11	<b>INTELLIGENT LEARNING SYSTEM.....</b>	31-32
Connecting a Microphone .....	11	<b>CHORD DICTIONARY.....</b>	33
Connecting a Sustain Pedal .....	11	<b>VOICE LIST .....</b>	34-39
Connecting a Computer.....	11	<b>STYLE LIST.....</b>	40-41
<b>POWER SWITCH .....</b>	12	<b>STYLE LIST.....</b>	42-43
<b>MASTER VOLUME .....</b>	12	<b>ALBUM LIST .....</b>	44-46
<b>PLAYING DEMO SONGS .....</b>	12	<b>SPECIFICATIONS.....</b>	47
<b>VOICES .....</b>	13		
<b>STYLES .....</b>	14		
<b>PLAYING SONGS.....</b>	14		
<b>EFFECTS .....</b>	15-17		
RECORD .....	15		
TOUCH.....	15		
SUSTAIN.....	16		
PITCH BEND .....	16		
MODULATION .....	16		
TRANSPOSE .....	16		
OCTAVE.....	17		
PIANO MODE.....	17		
METRONOME.....	17		
<b>AUTO ACCOMPANIMENT .....</b>	18-20		
Accompaniment Sections.....	19		
Playing Different Accompaniment sections.....	19		
Fade .....	20		
One Touch Setting .....	20		
<b>HARMONY .....</b>	21		
<b>PERFORMANCE ASSISTANT .....</b>	22-23		
Guitar Key Mode .....	22		
Piano Key Mode .....	23		

---

# INTRODUCTION

Thank you for purchasing the VISION KEY-30. To get the most out of your product, please read this manual carefully.


## CONTENTS

- VISION KEY-30 61-Key Electronic Keyboard
- PSU
- Music Rest

## FEATURES

- 61-Key Electronic Keyboard
- Touch Sensitive Keys
- 618 Voices and 200 Rhythm Styles
- 150 Built-In Songs
- Intelligent Learning System
- 128 Note Polyphony

# FRONT PANEL

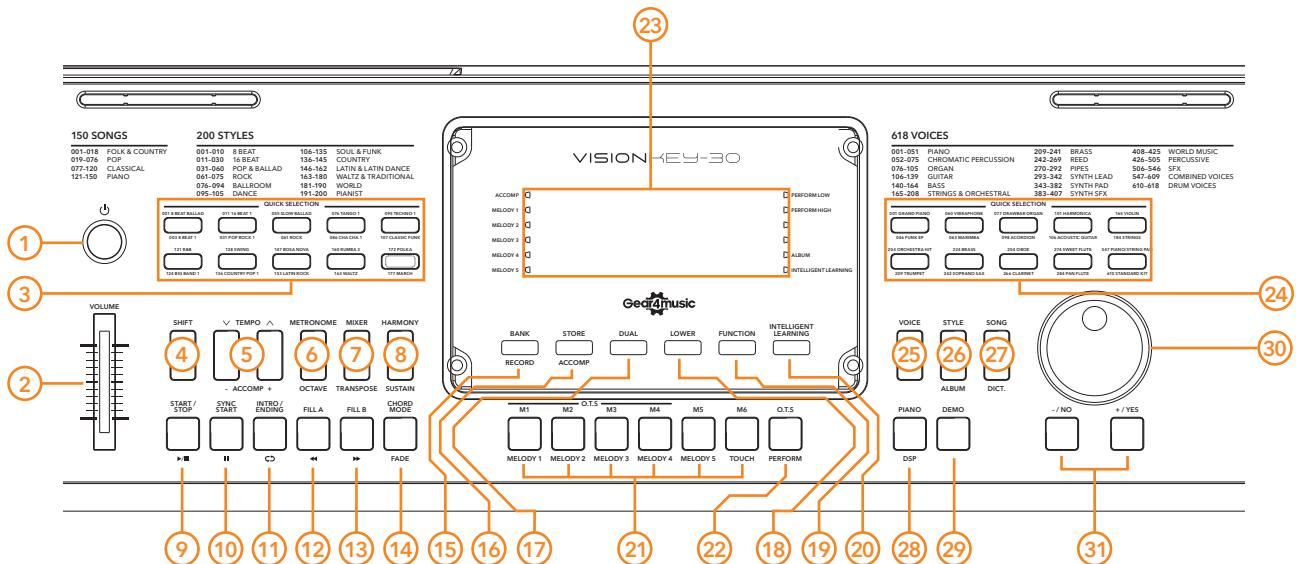

## 1. POWER SWITCH

Turns the power on or off.

## 2. VOLUME SLIDER

Adjusts the master volume.

## 3. QUICK SELECTION BUTTONS (STYLES)

Allows popular rhythm styles to be easily selected. Each button scrolls between two options.

## 4. SHIFT

Hold down to access secondary functions of other buttons.

## 5. TEMPO+ & TEMPO- / ACCOMP+ & ACCOMP-

Adjusts the current tempo.

With [Shift] pressed adjusts the accompaniment volume.

## 6. METRONOME / OCTAVE

Turns the metronome on or off.

With [Shift] pressed adjusts the octave settings.

## 7. MIXER / TRANSPOSE

Enters the mixer menu.

With [Shift] pressed, adjusts the transpose settings.

## 8. HARMONY / SUSTAIN

Turns the harmony effect on or off.

With [Shift] pressed, turns the sustain effect on or off.

## 9. START / STOP

In Song Mode = Starts or stops playing the song.

In Style Mode = Starts or stops playing the style.

## 10. PAUSE / SYNCH START

In Song Mode = Pauses or continues playing the song.

In Style Mode = Turns the Sync/Start function on or off.

## 11. LOOP / INTRO/ENDING

In Song Mode = Sets the beginning and end of a song loop section.

In Style Mode = Plays the intro or ending pattern.

## 12. REWIND / FILL A

In Song Mode = Starts or stops playing the song.

In Style Mode = Starts or stops playing the style.

## 13. FAST FORWARD / FILL B

In Song Mode = Fast Forward the song.


In Style Mode = Plays fill pattern B.

## 14. CHORD MODE / FADE

Enters the Chord mode.


With [Shift] pressed, turns the Fade In/Out function on or off.

- 15. BANK / RECORD**  
Switches between Memory Banks.  
With [Shift] pressed, selects the accompaniment track to record.
- 16. STORE / ACCOMP**  
Saves the current panel settings.  
With [Shift] pressed, selects the accompaniment track to record.
- 17. DUAL**  
Turns the Dual function on or off.
- 18. LOWER**  
Turns the lower function on or off.
- 19. FUNCTION**  
Enters the Function menu.
- 20. INTELLIGENT LEARNING**  
Turns the intelligent learning function on or off.
- 21. M1 - M6 / MELODY 1- MELODY 5**  
Recalls the saved panel settings  
(When using One Touch Setting mode, only M1-M4 are available)  
With [Shift] pressed, selects from melody tracks 1-5 when recording. M6 with [Shift] pressed sets the desired touch sensitivity level.
- 22. OTS / PERFORM**  
Turns the One Touch Setting function on or off  
With [Shift] button pressed, Turns the Performance Assistant function on or off.
- 23. LCD DISPLAY**  
Displays all information related to current operation.
- 24. QUICK SELECTION BUTTONS (VOICES)**  
Allows popular voices to be easily selected.  
Each button scrolls between two options.
- 25. VOICE**  
Enables voice select mode.
- 26. STYLE / ALBUM**  
Enables style select mode.  
With [Shift] pressed, turns the album function on or off.
- 27. SONG / DICT.**  
Enables style song mode.  
With [Shift] pressed, turns the chord dictionary function on or off.
- 28. PIANO / DSP**  
Turns the piano mode on or off.  
With [Shift] pressed, turns the DSP (digital signal processing) effects on or off.
- 29. DEMO**  
Enables the keyboard demo mode.
- 30. DATA WHEEL**  
Turn the wheel to adjust the parameter values on the display
- 31. [-/NO] [+/YES]**  
Press to adjust the parameter values on the display.

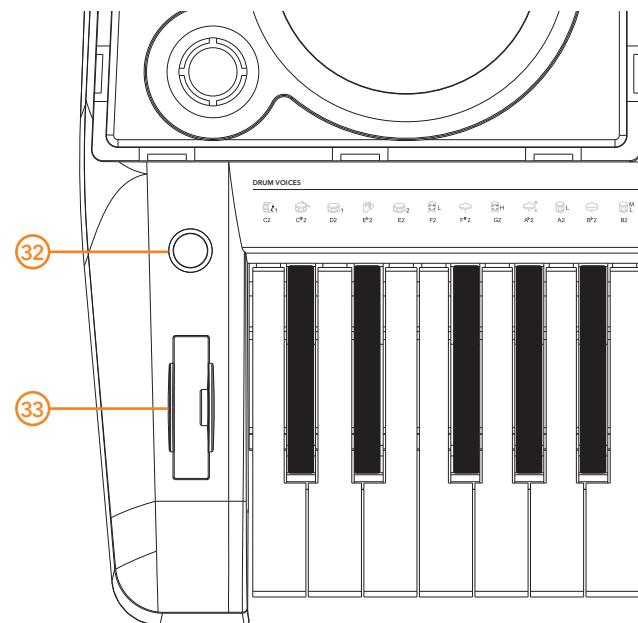

- 32. MODULATION**  
Press and hold to add a vibrato effect when playing.
- 33. PITCH BEND WHEEL**  
Raises or lowers the pitch of the notes being played.

## REAR PANEL

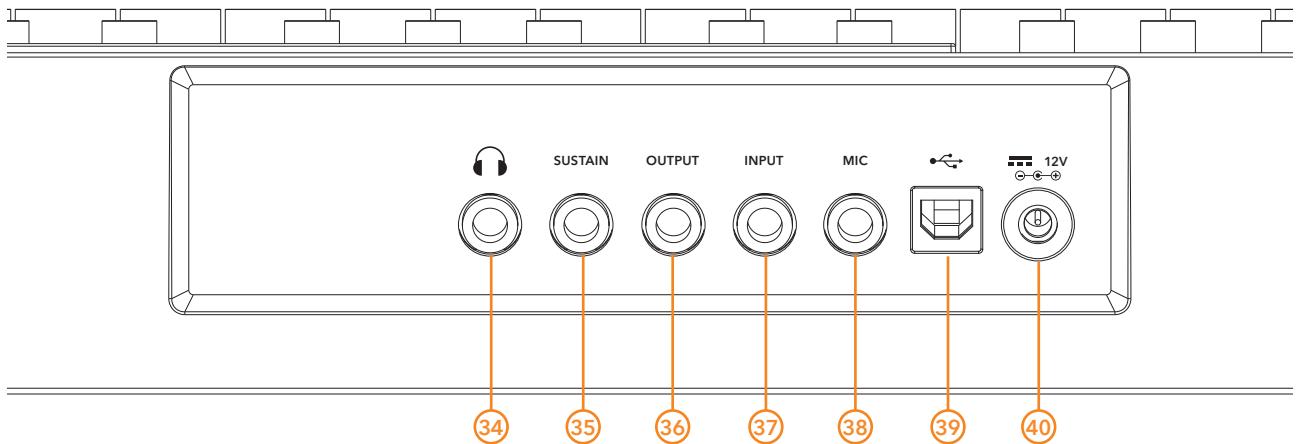

### 34. HEADPHONES

1/4" jack output to connect headphones.

### 35. SUSTAIN PEDAL

1/4" jack input for connecting a sustain pedal (not supplied).

### 36. OUTPUT

1/4" jack output to connect to audio equipment such as a mixer, interface or amplifier.

### 37. INPUT

1/4" jack input to connect an external audio source, such as an MP3 or CD player.

### 38. MIC

1/4" jack input to connect a microphone (not supplied).


### 39. USB

USB port used for connecting to a computer for USB MIDI.

### 40. DC 12V POWER

Connect the supplied power supply.

# DISPLAY

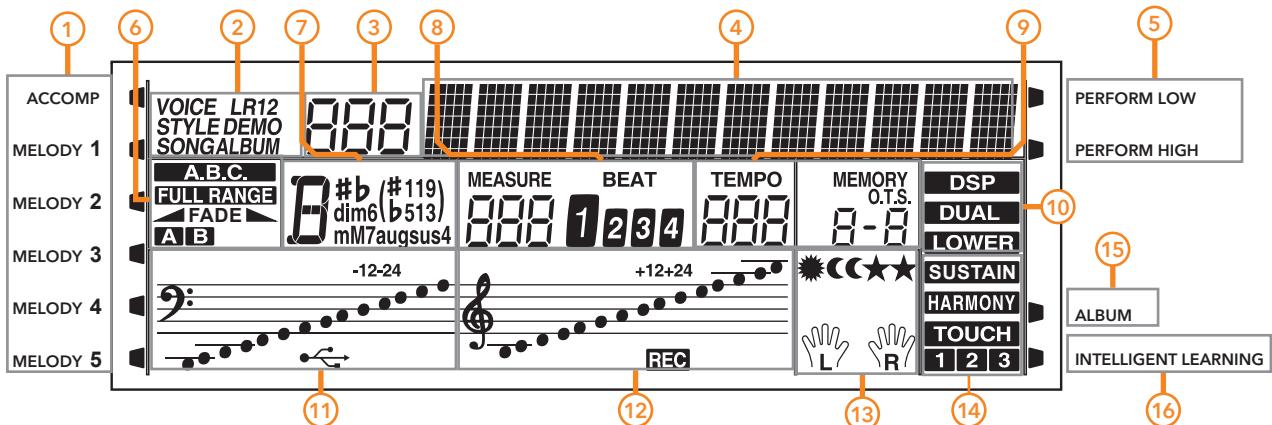





1. ACCOMPANIMENT/MELODY 1-5
2. VOICE/STYLE/DEMO/SONG/ALBUM
3. NUMBER DISPLAY
4. INFORMATION, MENUS AND CURRENT PARAMETERS
5. PERFORMANCE ASSISTANT LOW/ PERFORMANCE ASSISTANT HIGH
6. AUTO BASS CHORD (A.B.C.)/FULL RANGE/ FADE/ACCOMPANIMENT SECTION A OR B
7. CHORD
8. MEASURE/BEAT
9. TEMPO/MEMORY/ONE TOUCH SYSTEM (O.T.S.)/BANK
10. DSP/DUAL/LOWER
11. BASS CLEF/USB
12. TREBLE CLEF/RECORD
13. LEARNING GRADE LEVEL/LEFT-HAND/RIGHT-HAND
14. SUSTAIN/HARMONY/TOUCH 1-3
15. ALBUM
16. INTELLIGENT LEARNING

## POWER

The keyboard can be powered using the included 12V power supply, or with 6 x AA batteries (not included.) Please pay attention to the correct polarity indicators when installing batteries and change them as soon as they get low. Remove the batteries if the instrument will not be used for a long period.

To power using the power supply, connect the included PSU to the DC input on the keyboard, then connect the plug to mains power. This will automatically cut off the battery power. Ensure the volume is turned down before powering on the instrument.

Please note: In standby mode, the instrument will automatically shut down after 30 minutes if not used. Refer to "Auto Power Off" for details.

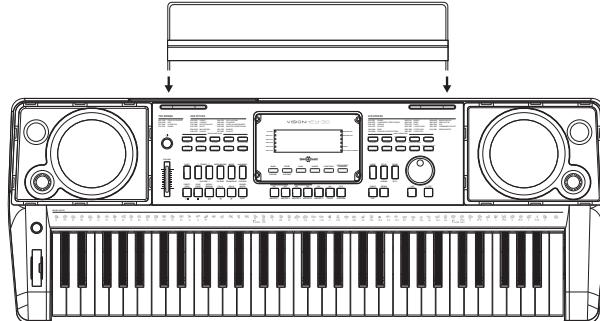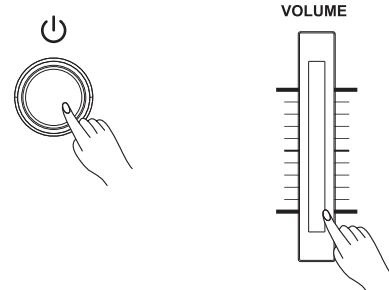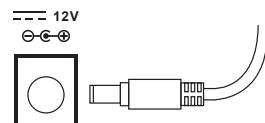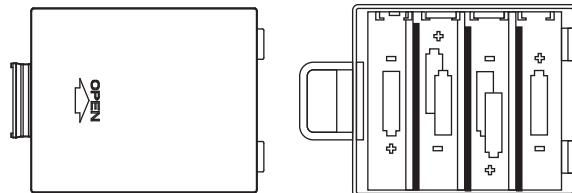


## SETTING UP A MUSIC STAND

A music stand is supplied with the keyboard and can be easily attached by inserting it into the slots on the front panel as shown.

## RESTORE FACTORY SETTINGS


Press and hold the [-/NO] and [+/YES] buttons simultaneously when turning on the keyboard to restore the factory settings. This process will delete all user data, user styles and user songs, along with any memory bank settings. During the reset, the display will show "Loading!" and, once complete, the keyboard will start normally.

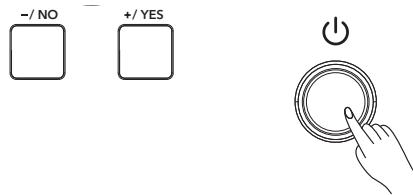

# CONNECTIONS


## SUSTAIN PEDAL

An optional foot pedal (not supplied) can be connected to the SUSTAIN PEDAL jack and, when pressed, will cause the key sounds to decay slowly, as if they were being held down.

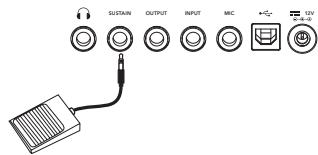


## HEADPHONES

A standard pair of stereo headphones can be connected to the HEADPHONES input for private practice. The internal speakers are automatically muted when headphones are connected.

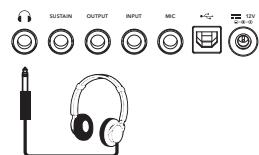

## AUDIO OUTPUT


The OUTPUT jack connects the output of the instrument to external audio equipment such as a keyboard amplifier, stereo sound system or mixing console.

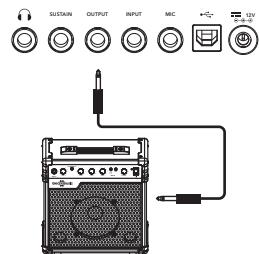

Please note: To avoid damaging the speakers, ensure the volume level is set to minimum before connecting to all external devices.

## CONNECTING AN MP3 PLAYER


The INPUT jack receives audio signals from an external audio source such as a smartphone, MP3 player and mixes them with the instrument signal, allowing you to play along with your favourite songs.

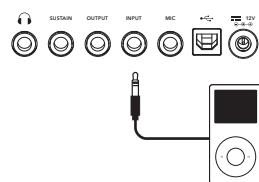

Please note: Adjust the level of the aux signal on your external device.

## CONNECTING A COMPUTER

Use a standard USB cable (not included) to connect the keyboard to the USB port of a computer and transfer MIDI information. Piano performances can also be saved onto the computer.

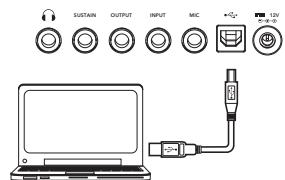

## CONNECTING A MICROPHONE


Connect a microphone (not included) into the MIC input to sing along with your keyboard performances, or with playback of the built-in songs.



Please note: Before turning the power on, set the master volume to minimum. Connect your microphone to the jack. Turn on the power and adjust the master volume accordingly.

# POWER SWITCH


Before switching on the instrument, ensure the volume is set to minimum and connect any external audio equipment. Make sure the instrument is properly connected to the power supply. Press the power switch. The display will light up and "Loading!" will be shown.

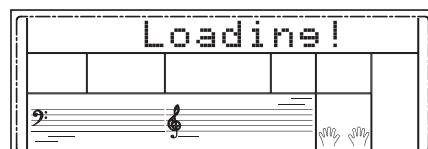

# MASTER VOLUME

Move the volume slider upwards to increase, and downwards to decrease the master volume, as required.


Please note: the internal speakers will mute when headphones are connected.

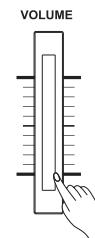

# PLAYING DEMO SONGS

To play the in-built demo songs (see demo list for more details) hold down the [SHIFT] button and then press the [DEMO] button. The LCD display will show the current demo name and number.

Use the data dial or [-/NO] and [+/YES] buttons to select the different demo songs. To stop playing and exit the demo mode, either press [START/STOP] or press [DEMO] again.

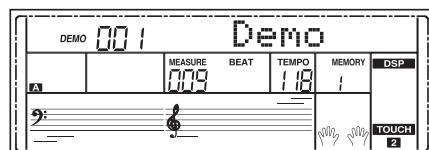

# VOICES

## SELECTING A VOICE

The keyboard has 618 different voices (refer to voice list appendix for details.) Press the [VOICE] button to enter the voice mode. The display will show the current voice name and number.

Use the data dial or the [-/NO] and [+/YES] buttons to select the required voice.

The Quick Selection buttons allow popular voices to be easily selected. Each button scrolls between the upper and lower button options.



## DUAL MODE

The DUAL function allows two different voices to be played simultaneously. To access this mode, press the [DUAL] button. The display will show the current voice name and number, and the "VOICE R2" and "DUAL" indicators.

Use the data dial, [-/NO] and [+/YES] buttons or the Quick Selection buttons to select the required second voice.

Both voices layered together will be heard when playing the keyboard. To exit this mode, press the [DUAL] button again.

## LOWER MODE

The LOWER function splits the keyboard into left and right areas, each with a different voice. To access this mode, press the [LOWER] button. The display will show the current left hand voice name and number, and the "VOICE L" and "LOWER" indicators.

Use the data dial, [-/NO] and [+/YES] buttons or the Quick Selection buttons to select the required lower voice.

The keyboard will now play with the two different lower and higher voices. To exit this mode, press the [LOWER] button again.

Please note: the "split point" where the two voices are separated will default at F#3 (key 31) but can be assigned to any other key. Refer to the function menu for more information.

## STYLES

The keyboard has 200 rhythms or playing "styles" to play along to (refer to the style list for details).

Press the [STYLE] button to enter the style mode.

Use the data dial or the [-/NO] and [+/YES] buttons to select the required style. Press the [START/STOP] button to start the rhythm track. Alternatively, press [SYNC/START] and the rhythm track will begin when you play any key on the keyboard.

The Quick Selection buttons allow popular styles to be easily selected. Each button scrolls between the upper and lower button options.

Each rhythm style has been set with a default tempo. This can be adjusted using the TEMPO [ $\nabla$ ]/[ $\wedge$ ] buttons.

Press the TEMPO [ $\nabla$ ] and [ $\wedge$ ] buttons simultaneously to restore the current style's default tempo setting.

Press the [START/STOP] button again to stop the rhythm track



## PLAYING SONGS


The keyboard has 150 in-built songs (refer to the song list for details).

Press the [SONG] button to enter the song mode. All songs will play in a loop.

Use the data dial or the [-/NO] and [+/YES] buttons to select the required song.

Press the [START/STOP] button to stop playback of all songs. Pressing it again will play the current song on repeat.

To exit song mode, press either the [STYLE] or [VOICE] buttons.

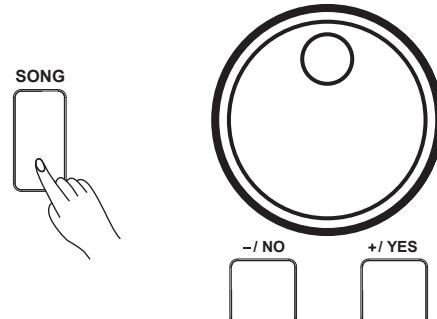

# EFFECTS

## RECORD

You can record your performances and save up to 5 user songs.

Hold down the [SHIFT] button and press the [BANK/RECORD] button to enter the user song menu. Use the data dial or the [-/NO] and [+/YES] buttons to select which user song your recording will be saved to.

Again, hold down the [SHIFT] button and press the [RECORD] button to put the keyboard into record standby, and select the required voice, rhythm style or other parameters you wish to record.

Press the [START/STOP] button or play the keyboard to start recording.

To stop recording, hold down [SHIFT] and press [RECORD]. This will automatically enter the song mode and the current recording will be played back.

In song mode, use the data dial or the [-/NO] and [+/YES] buttons to select different user songs, stored as songs 151-155. (Empty user songs will display "NoFile!")



## TOUCH

The touch response feature dynamically controls the level of the keyboard's response, allowing you to find the ideal level of key response to suit your playing style.

To enter the touch menu, hold down [SHIFT] and press the [TOUCH] button. The display shows the current touch level. The default level is 2.

The touch level can be adjusted using the data dial or the [-/NO] and [+/YES] buttons, or by holding down [SHIFT] and pressing [TOUCH] as required. Pressing the [-/NO] and [+/YES] buttons simultaneously will return to the default touch setting, level 2.

To turn off the touch function, set the value to "OFF".

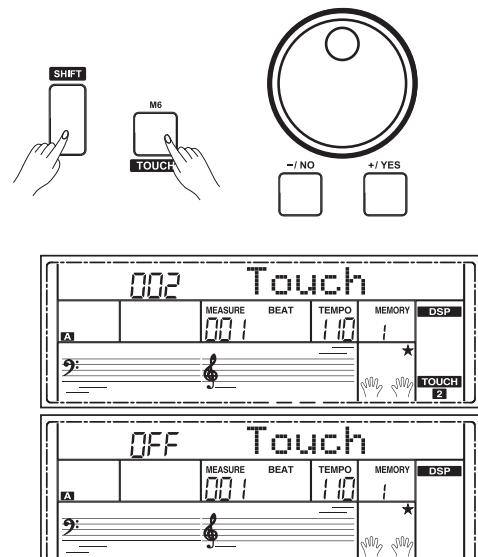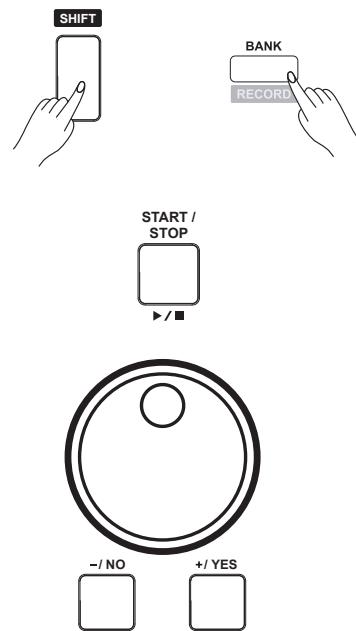

## SUSTAIN

To start the sustain function, press and hold the [SHIFT] button and then press the [SUSTAIN] button. All notes will sustain after releasing the keys.

To stop the sustain function, press the [SUSTAIN] button again.

For optimal sustain, using a sustain pedal is recommended. (refer to pedal function for more details).

## PITCH BEND

Using the pitch bend wheel can add smooth changes to notes being played on the keyboard. The pitch is increased by moving the wheel up and decreased by moving it down. The wheel returns to its centre position when released.

## MODULATION

When held down, the modulation button applies a vibrato effect to the notes being played.




## TRANSPOSE

The transpose function allows you to shift the overall key of the keyboard in steps of one semitone.

To enter the transpose menu, hold down the [SHIFT] button and then press the [TRANSPOSE] button. The display will show the current transpose setting number and "Transpos."

Use the data dial or the [-/NO] and [+/YES] buttons to adjust the transpose value as required. The range is +/- 12 semitones.

Pressing the [-/NO] and [+/YES] buttons simultaneously will return the transpose value to its default setting: "000 Transpos."

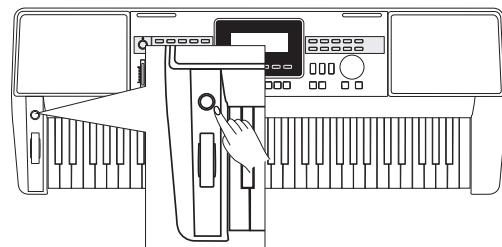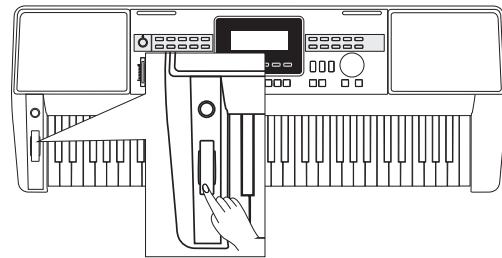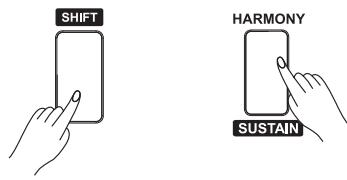

## OCTAVE

This function allows you to raise or lower the pitch of the keyboard by an octave.

To enter the octave menu, press and hold the [SHIFT] button and then press the [OCTAVE] button. The display will show the current octave setting number and "Octave."

Use the data dial or the [-/NO] and [+/YES] buttons to adjust the octave value as required. The range is +/- 1 octave.

Pressing the [-/NO] and [+/YES] buttons simultaneously will return the transpose value to its default setting: "000 Octave"

Individual octave values can be set when using the dual voice mode.

## PIANO MODE

This function allows you to quickly return to the default piano sound. Simply press the [PIANO] button to enter or exit piano mode.



Please note: when using this mode, the Auto Bass Chord function is automatically turned off.

## METRONOME

Press the [METRONOME] button to start and stop the metronome and adjust as required with the tempo [ $\nabla$ ] and [ $\wedge$ ] buttons.

Different time signatures and the volume of the metronome can be set in the function menu.

Please note: In recording mode, the metronome can be used but will not be recorded.

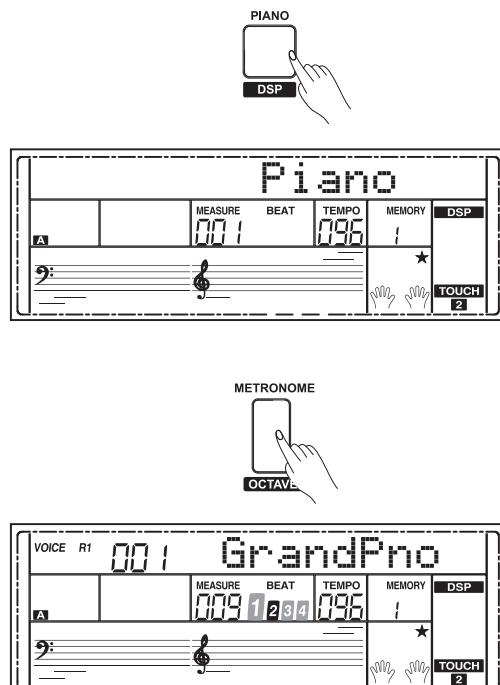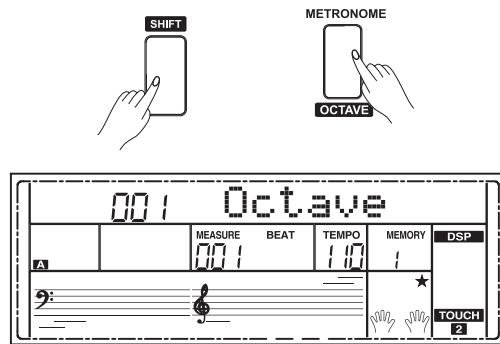

# AUTO ACCOMPANIMENT

The auto accompaniment feature puts a whole backing band at your fingertips. In this mode, all you have to do is play the chords with your left hand and the accompaniment will automatically play along in the style selected, instantly following the chords you play.

## AUTO ACCOMPANIMENT (ALL TRACKS)






In Style mode, use the data dial or the [-/NO] and [+/YES] buttons to select the required style to be played. The Quick Selection buttons can also be used. Each button scrolls between the upper and lower button options.

Press the [CHORD MODE] button to enter the Auto Bass Chord (A.B.C) mode. The keyboard is now split, with the left-hand section being the "chord zone." The A.B.C icon will show on the display. Press any key in the chord zone to start the accompaniment.

Pressing the [CHORD MODE] button again will enter the "full range" mode. The FULL RANGE icon will be shown on the display, and you can play polyphonic chords over the entire keyboard.


[SYNC START] can also be pressed to start the accompaniment automatically when any chord is played in the chord section. When you change chord, the accompaniment automatically changes too.

When playing, press [START/STOP] to stop the auto accompaniment.

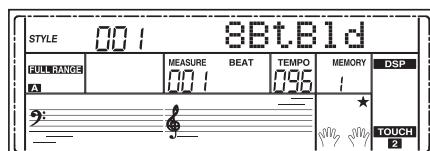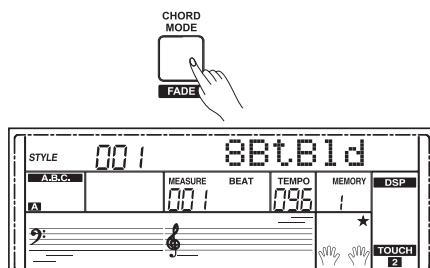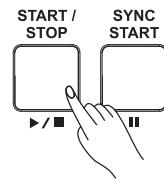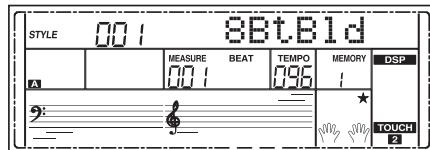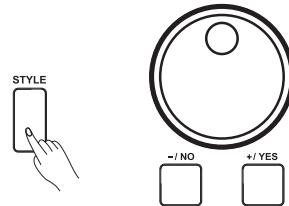


## ACCOMPANIMENT SECTIONS

There are various types of Auto Accompaniments sections that allow you to vary the arrangement of the accompaniment being played:

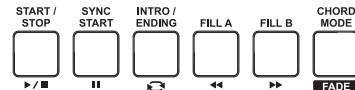

### 1. INTRO

When the intro is finished, the accompaniment will automatically lead into to the main section.

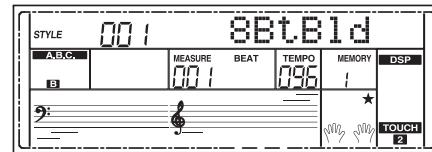

### 2.MAIN (A, B)

The main pattern of the song will be played continuously until another section is selected.

### 3. FILL (A, B)

Automatically add a fill to your performance. When the fill is finished, the accompaniment reverts to the main section.


### 4. ENDING

Use this section to appropriately end your performance. When the ending section finishes, the accompaniment automatically stops. The length of the ending differs depending on the style selected.

## PLAYING DIFFERENT ACCOMPANIMENT SECTIONS

Press the [STYLE] button and select the required rhythm using the data dial, the [-/NO] and [+/YES] buttons or the style Quick Selection buttons.

Press the [CHORD MODE] button to enter auto bass chord (A.B.C) mode.

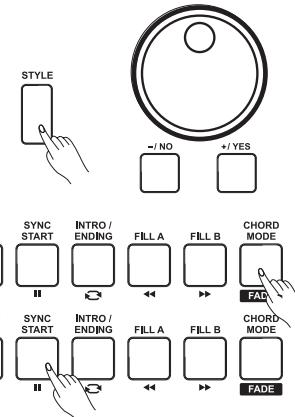

Press the [SYNC START] button to prepare the accompaniment to start when playing begins.


Press the [FILL A] button to select the Main A section.

Press the [INTRO/ENDING] button. The "A" will begin to flash on the display and the style is ready to play.

The accompaniment will start as soon as keys are pressed in the chord section.

Press the [FILL B] button to start a fill, automatically followed by the Main B section.

Press the [INTRO/ENDING] button to enter the ending section of the accompaniment.

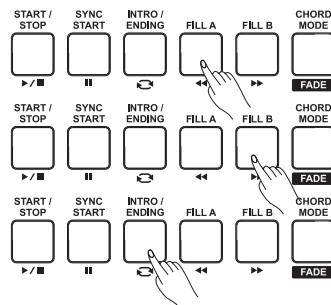

## FADE

Styles can be started and finished with a fade, producing a smoother performance.

Before starting the style, hold down the [SHIFT] button and then press the [FADE] button. "< FADE" will be shown on the display and will flash during the start of the performance.

To fade out a style, hold down the [SHIFT] button and then press the [FADE] button whilst the style is still playing. "> FADE" will be shown on the display and will flash until the style stops.

The default fade in/out time is 10 seconds.

## ACCOMPANIMENT VOLUME

The accompaniment volume can be adjusted, to keep the desired balance between style and voice volumes.

Hold down the [SHIFT] button and use the ACCOMP [+]/[-] buttons to set the desired volume (0-127) which will be shown on the display.

Holding down [SHIFT] and pressing both the ACCOMP [+]/[-] buttons simultaneously will turn the accompaniment volume off. "OFF Accomp" will be shown on the display. Repeating this process will turn the accompaniment volume back on.




## ONE TOUCH SETTINGS

When One Touch Setting (O.T.S) is enabled, you can instantly recall auto accompaniment related settings - including voice selection and digital effects - with a single touch of a button.

Press the O.T.S button to turn on this mode for the current style. "O.T.S" will be shown on the display.

To recall various panel settings that match the selected style, press one of the One Touch Setting buttons [M1]-[M4].

Please note: Entering Song mode automatically turns off O.T.S. mode.

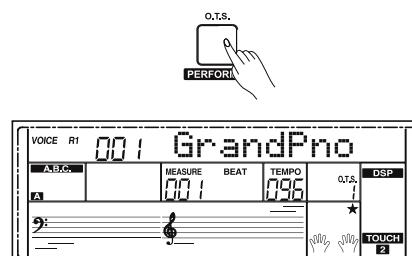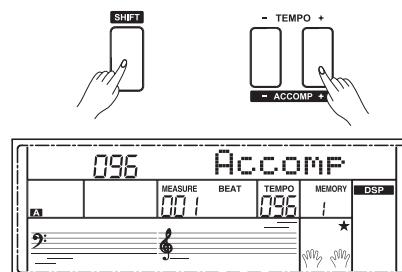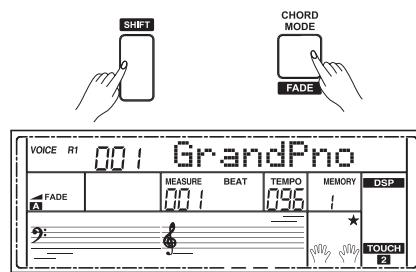



# HARMONY

This function will automatically add harmony notes to the notes you play in the right-hand section of the keyboard, complementing your performance.

To enable this feature, press the [HARMONY] button until "Duet" is displayed.

To choose a different harmony type, please refer to the harmony settings in the function menu.

To exit this mode, press the [HARMONY] button until "Off" is shown on the display.

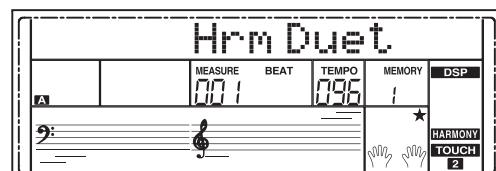
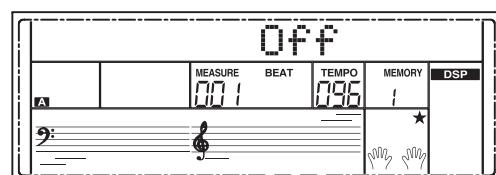


# PERFORMANCE ASSISTANT

The keyboard features a "performance assistant" mode, featuring both guitar and piano options, and allows various complex chord phrases to be easily performed.

Hold down [SHIFT] and then press the [PERFORM] button to enter the performance assistant mode. Use the data dial or the [-/NO] and [+/YES] buttons to select between guitar and piano options. The default time signature is 4:4, which can be changed to either 2:4, 3:4, or 6:8 in the function menu.

Use the TEMPO [ $\nabla$ ]/[ $\wedge$ ] buttons to adjust the tempo, as required.

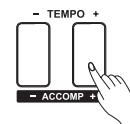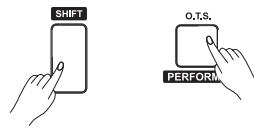

## GUITAR KEY MAP

This key map diagram shows how the different key sections are arranged in the guitar mode.

### CHORD PART:

Keys C2-B3. The chord played in this zone will be shown on the display.

### SUB AREA 1:

Keys C4-B4 (white keys only.) Pressing a key in this zone will start a "broken chord" (the notes in a chord played successively, rather than simultaneously).

### SUB AREA 2:

Keys C5-A5 (white keys only). Solo zone, allowing you to play freely and simulate the 6 strings of a real guitar.



### RHYTHM AREA:

Keys C6-G6. This zone allows you to play various rhythm styles, including guitar strums. Keys A6-B6 will play rhythm endings.

### POSITION CHANGE:

Key C7 allows you to change the guitar voice between low and high positions. "Performance Low" or "Performance High" will be indicated on the display.

Guitar mode key map

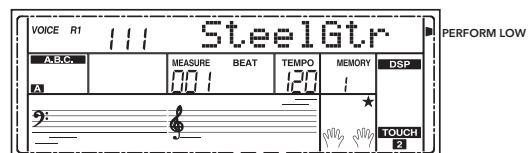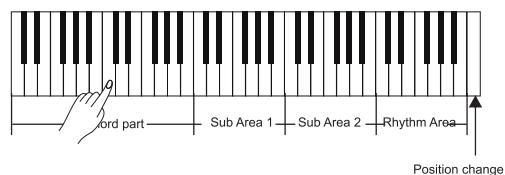

# PIANO KEY MAP

This key map diagram shows how the different key sections are arranged in the piano mode.





## CHORD PART:

Keys C2-B3. The chord played will be shown on the display.

**SUB AREA:** Keys C4-B5. Pressing a key in this zone will start a "broken chord" (the notes in a chord played successively, rather than simultaneously).

**RHYTHM AREA:** Keys C6-C7. This zone allows you to play various rhythm styles. Keys A6-C7 will play rhythm endings.

To exit the performance assistant mode, press either the [VOICE] or [STYLE] buttons. Alternatively, hold down [SHIFT] and then press the [PERFORM] button.

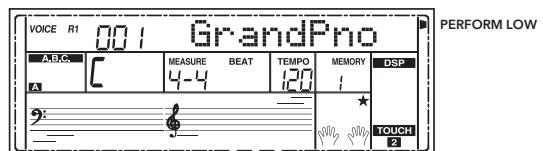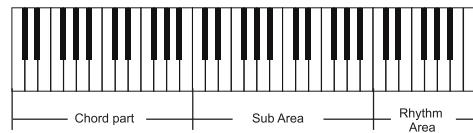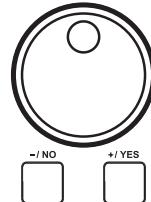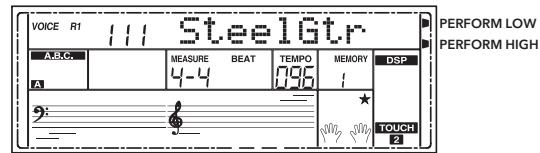

# DSP

The DSP (digital signal processing) effect adds ambience and depth to the sounds of the keyboard.



Hold down [SHIFT] and then press the [DSP] button to turn the effect on or off. This function is turned on by default.

Reverb and Chorus effects can also be added, accessed through the function menu.

## SELECTING REVERB AND CHORUS TYPES

Press the [FUNCTION] button to select the reverb or chorus type menus as required. Use the data dial or the [-/NO] and [+/YES] buttons to select the various reverb or chorus types.

Pressing the [-/NO] and [+/YES] buttons simultaneously will revert to the default types ("RevHall 1" reverb and "Gm Chr2" chorus).

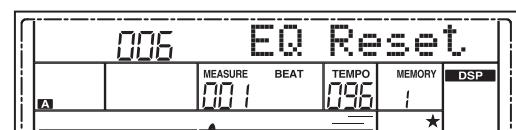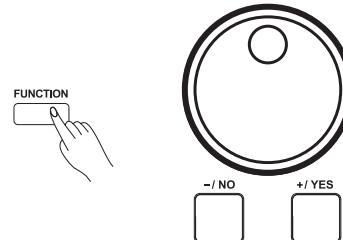

## ADJUSTING REVERB AND CHORUS LEVELS

Press the [FUNCTION] button repeatedly to select the reverb or chorus volume menus as required. Use the data dial or the [-/NO] and [+/YES] buttons to adjust the reverb or chorus levels, ranging from 0-127.

Pressing the [-/NO] and [+/YES] buttons simultaneously will revert to the default effects levels (chorus: 0, reverb: 70).



## EQ

There are 6 in-built EQ presets, as shown in the table, allowing you to further shape the desired sounds to suit your performances.

Press the [FUNCTION] button repeatedly to select the EQ type menu. The display will show the default setting: "006 EQ Reset."

Use the data dial or the [-/NO] and [+/YES] buttons to adjust the EQ type, as required.

Pressing the [-/NO] and [+/YES] buttons simultaneously will revert to the default EQ setting.

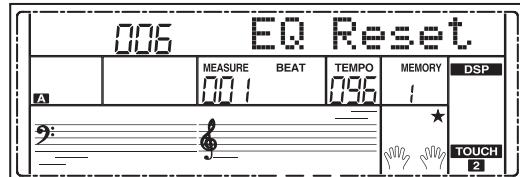
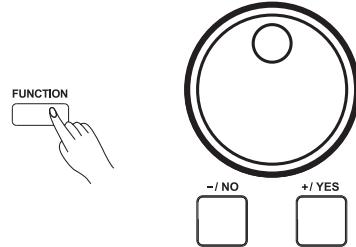


EQ TYPES		
No.	LCD Display	EQ Type
1	EQ Pop	Pop
2	EQ Rock	Rock
3	EQ Class	Classical
4	EQ Jazz	Jazz
5	EQ Dance	Dance
6	EQ Reset	Reset

## MIXER

The mixer function can be used to adjust the individual tracks of your performances.

Press the [MIXER] button repeatedly to scroll through the available tracks to edit. The selected mixer track will be shown on the display. Use the data dial or [-/NO] and [+/YES] buttons to change the parameters, as detailed in the table below:

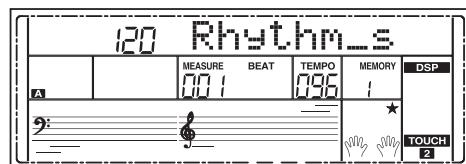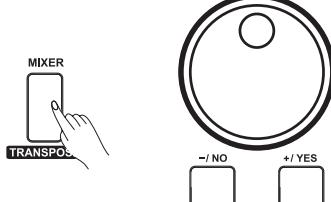

OPTIONS / PARAMETERS		
Content	LCD Display	Range
Adjust the Percussion track volume.	XXX Rhythm_s	0 - 127
Adjust the Rhythm track volume.	XXX Rhythm_m	0 - 127
Adjust the Bass track volume.	XXX Bass	0 - 127
Adjust the Chord 1 track volume.	XXX Chord1	0 - 127
Adjust the Chord 2 track volume.	XXX Chord2	0 - 127
Adjust the Chord 3 track volume.	XXX Chord3	0 - 127
Adjust the Phrase 1 track volume.	XXX Phrase1	0 - 127
Adjust the Phrase 2 track volume.	XXX Phrase2	0 - 127
Adjust the Upper 1 track volume.	XXX Upper 1	0 - 127
Adjust the Upper 2 track volume.	XXX Upper 2	0 - 127
Adjust the Lower track volume.	XXX Lower	0 - 127

# PEDAL FUNCTIONS

When using a foot pedal (not included) there are 4 functions that can be assigned to the pedal:

## 1. SUSTAIN

The pedal acts like a damper pedal on an acoustic piano, sustaining the notes played when pressed/held down.

## 2. SOFT

In this mode, pressing the pedal will make the notes played have a softer sound.





## 3. START/STOP

Pressing the pedal in this mode will allow you to start and stop the keyboard accompaniment, ideal for performances.

## 4. MEMORY

In this mode, pressing the pedal allows you to select through the saved voices in the M1-M4 memory settings.

These options can be accessed by pressing the [FUNCTION] button repeatedly until the "Pedal Type" option is selected, using the data dial or [-/NO] and [+/YES] buttons to adjust as required.

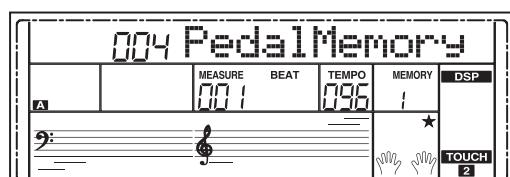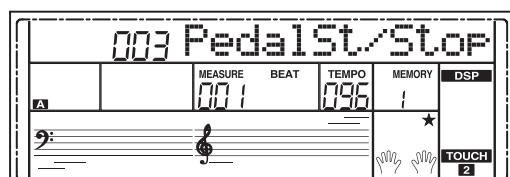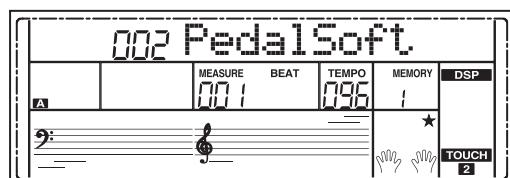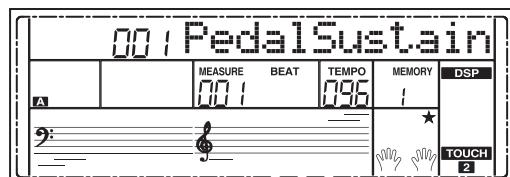

# FUNCTION MENU

To enter the Function menu, press the [FUNCTION] button repeatedly to scroll through the available menu options. The selected function will be shown on the display. Use the data dial or [-/NO] and [+/YES] buttons to change the parameters, as detailed in the table below:

FUNCTION MENU				
NO.	Content	LCD display	Range	Default
1	Tune	xxx Tune	-50 ~ +50	000
2	Key Split	xxx KeySplit	1~61	019
3	Beat Type	xxx BeatType	0, 2 ~ 9	004
4	Metronome Volume	xxx MetroVol	0~127	80
5	Pedal Type	xxx Pedal xxxx	Sustain, Soft, St/Stop, Memory	Sustain
6	EQ Type	xxx EQ xxx	Pop, Rock, Class, Jazz, Dance, Reset	Reset
7	Reverb Type	xxx Revxxxx	Room1, Room2, Room3, Hall1, Hall2, Hall3, Church1, Church2, Delay, PanDelay	RevHall1
8	Reverb Level	xxx ReverbVol	0 ~ 127	70
9	Chorus Type	xxx Chrxxxx	Chorus1, Chorus2, GM Chorus1, GM Chorus2, Flanger1, Flanger2, Rotary1, Rotary2	GMChorus2
10	Chorus Level	xxx ChorusVol	0 ~ 127	0
11	Harmony Types	xxx Hrmxxxx	Duet, StandardTrio, Full Chord, Rock Duet, Country Duet, Country Trio, Block, 4 Close 1, 4 Close 2, 4 Open, 1+5, Octave1, Octave2, Strum, Echo1, Echo2, Echo3, Echo4, Tremolo1, Tremolo2, Tremolo3, Tremolo4, Trill1, Trill2, Trill3, Trill4	HrmDuet
12	MIDI Receive	xxx Midi In	1 ~ 16, ALL	ALL
13	MIDI Transmit	xxx Midi Out	1 ~ 16	001
14	Auto Power Off	xxx PowerOff	OFF, 30, 60	030
15	Performance Beat	xxx Perform Beat	4-4, 3-4, 2-4, 6-8	4-4

Pressing the [-/NO] and [+/YES] buttons simultaneously will reset the parameter type value to its default setting.

The Function menu will automatically exit if left idle for more than 5 seconds.






# MEMORY SETTINGS

The keyboard has 8 memory banks, with each bank having 6 memories (M1-M6) allowing you to easily save and instantly recall your panel settings.

To store a panel setting, hold down the [STORE] button and then press the desired memory button [M1-M6].

To recall a saved panel setting, press one of the memory buttons [M1-M6] to recall bank 1 of that memory. Pressing the [BANK] button repeatedly allows you to scroll through the 8 banks. The display will show the bank number selected.

Please note: these memory functions cannot be recalled when using the One Touch Setting (O.T.S) mode.

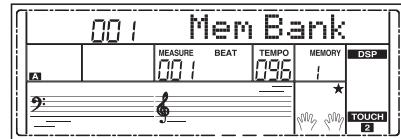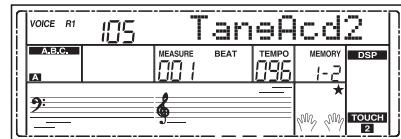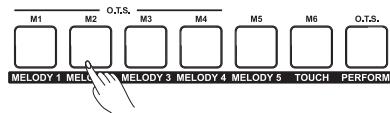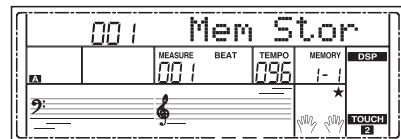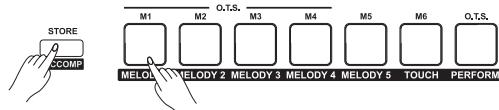



# ALBUM SONGS

The album function allows you to play along and practise a song with pre-set styles, tempos and voices in a variety of musical genres.

Please refer to the album list for full details.

To enter this mode, hold down the [SHIFT] button and then press the [ALBUM] button. The display will show the name of song selected and the album indicator will show. Use the data dial or [-/NO] and [+/YES] buttons to select different songs. The instrument will automatically recall the accompaniment parameters to fit the selected song.

To exit the song albums function, press the [VOICE] or [STYLE] button.

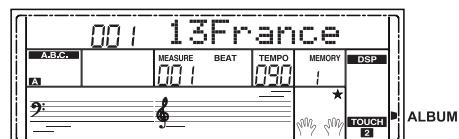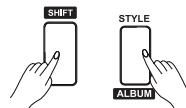

# RECORDING

With the song recording feature, you can record your own keyboard performances and store up to 5 user songs. Each user song can be recorded with 6 tracks (1 ACCOMP track and 5 MELODY tracks).

Before you start recording, you need to select a user song to which the recording song will be saved:





Hold down the [SHIFT] button and then press the [RECORD] button to enter user song selection mode. The display will show "RecSng01" and sequence number.

Use the data dial or [-/NO] and [+/YES] buttons to select the desired user song.

Hold down the [SHIFT] button and then press the [RECORD] button again to enter recording standby mode. "REC" will appear on the display and the beat indicators start flashing. The instrument will automatically select an empty track to record your performance. The select track indicator will flash on the left of display.

In recording standby mode, you can adjust parameters such as voice, style and tempo. When recording a new song, it will automatically select "MELODY 1" as the recorded track. Holding down the [SHIFT] button and then pressing "ACCOMP" (or "MELODY1" to "MELODY 5") allows you to select a desired track.

To start recording, press the [START/STOP] button or start playing the keyboard. (If you have selected the ACCOMP track, and have turned on the A.B.C. function, recording will start as soon as you play a chord in the left-hand chord zone).

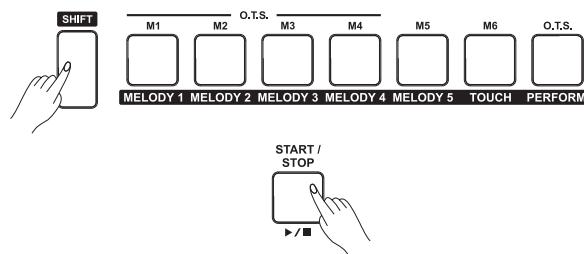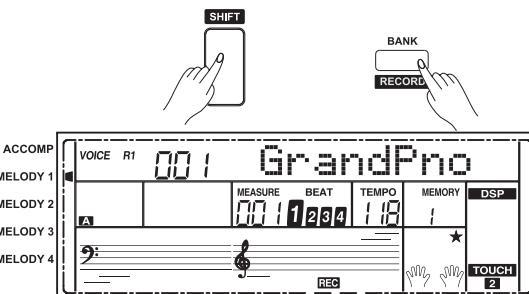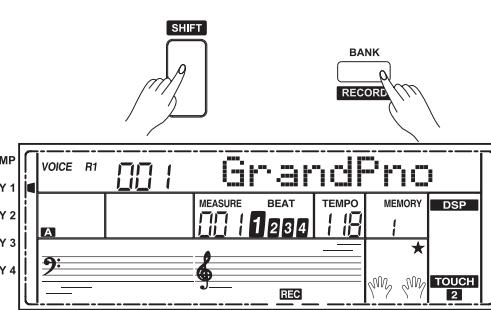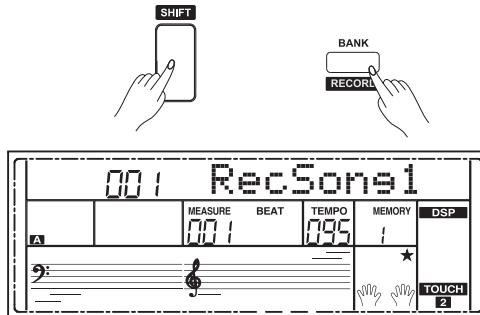

## SELECTING TRACKS

The track indicators on the display have three states: blinking, light on or light off. A blinking light means the track is chosen for recording. If the track has recorded data, the original data will be replaced. A track with the light on indicates the track has data and will play back the data during recording. A track with the light off indicates the track has no data.

In recording standby mode, you can press the track buttons repeatedly to select/de-select a track for recording.

## STOP RECORDING

To stop recording, hold down the [SHIFT] button and then press the [RECORD].

If the memory is full, the recording will stop and save automatically, and the display will show "Rec\_Full". When recording a rhythm style, recording will stop when the ending section is finished.

## PLAYBACK RECORDING

Stopping recording will automatically enter the song mode and the display will show "UserSong" and the user song number.

2. Press the [SONG] button to enter the song mode and it will play all songs in a loop. Use the data dial or [-/NO] and [+/YES] buttons to select different user songs. If there is no data in the selected user song, it will display "NoFile!"




## DELETE USER SONGS

In recording standby mode, hold down the [SHIFT] button and then press the [RECORD] button for two seconds, the display will show the prompt "Delete?". Select the track you wish to delete by pressing [ACCOMP] or the [MELODY 1] to [MELODY 5] buttons. The tracks selected will light up. If all tracks light up, the whole user song will be erased after confirmation.

Press the [+/YES] button to confirm and the recorded data in this track will be erased. Press the [-/NO] button to exit this step and go back to the recording standby mode.

### NOTE:

All user songs can be deleted by pressing and holding the [RECORD] and [STORE] buttons simultaneously whilst turning on the keyboard.

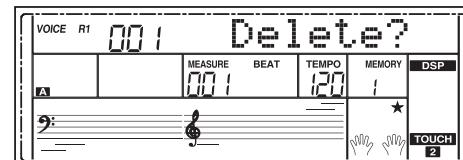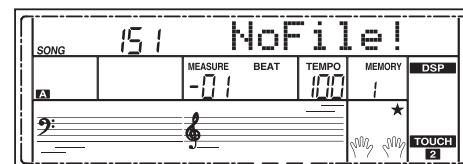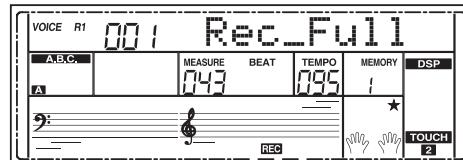

# SONGS

The keyboard has a variety of in-built songs. Each song can be played back and also practised in the Intelligent Learning System.

## LISTENING TO SONGS



To enter the song mode, press the [SONG] button. The display will show "SONG" and all songs will start playing in a loop.

Use the data dial or [-/NO] and [+/YES] buttons to select a song.

Pressing the [START/STOP] button to play a song will play that song on repeat.

To exit the song mode, when playback is stopped, press either the [STYLE] or [VOICE] buttons.

Song playback can be controlled as desired using the fast forward, rewind, pause and loop buttons.

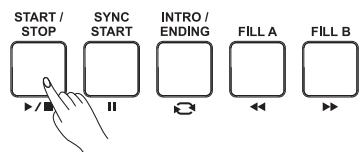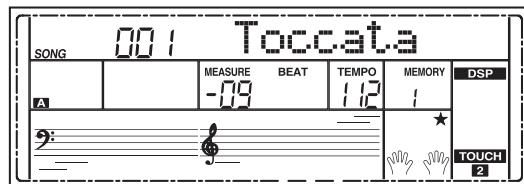

# INTELLIGENT LEARNING SYSTEM

The built-in intelligent learning mode provides a variety of ways to help you learn new songs. It smartly tailors the lessons for you and tracks your progress.

Press the [INTELLIGENT LEARNING] button to enter the Intelligent Learning mode. The display will firstly show the current song name and number, then display the lesson name before the lesson starts.

The lesson difficulty/grade symbol will also be shown, as detailed in the table.

## PERIOD AND PHRASE

The fastest way to learn a new song is to divide the song into several parts, and individually practice each part. When you have a good grasp of each part, it will be much easier to then learn the complete song.

A musical phrase is a section of music that has a complete musical sense of its own. Just like a complete sentence in an article.


A musical period is a group of phrases. This can be any number of phrases, but most commonly will be a combination of two or four phrases.

Please refer to the relationship of song, period and phrase on the diagram to the right.



In order to help you learn songs faster and more easily, there are 8 pre-set lessons for each song, which encompass: step learning of pitch, timing, left-hand technique, right-hand technique, period and phrase.

The contents of each lesson are shown in the following table:

CONTENT OF LESSONS		
NO.	LCD	Content of Lesson
1.	LESSON 1	Learn right hand pitch of period/phrase.
2.	LESSON 2	Learn right hand pitch and timing of period/phrase.
3.	LESSON 3	Learn left hand pitch of period/phrase.
4.	LESSON 4	Learn left hand pitch and timing of period/phrase.
5.	LESSON 5	Learn both hands pitch of period/phrase.
6.	LESSON 6	Learn both hands pitch and timing of period/phrase.
7.	LESSON 7	Learn both hands pitch and timing of complete song.
8.	LESSON 8	High score challenge.

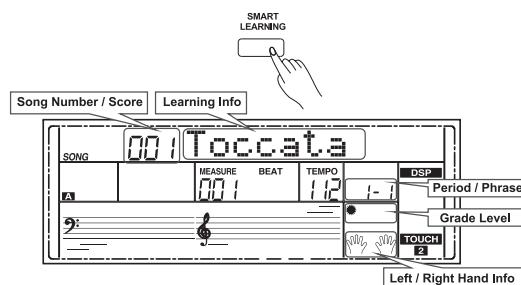

LCD Display	Grade Level
☀️🌙⭐⭐	Very Easy
☀️🌙⭐⭐	Easy
☀️🌙⭐⭐	Medium
☀️🌙⭐⭐	Hard
☀️🌙⭐⭐	Very Hard

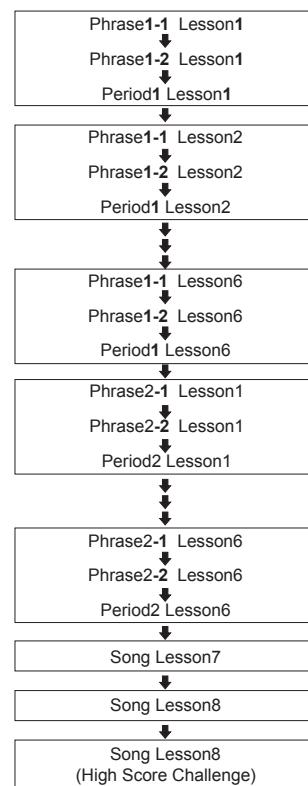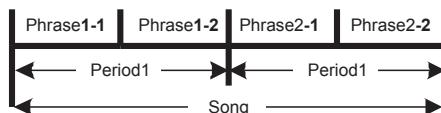

The various parts of a song will be learned in lessons 1-6, before learning the whole song in lesson 7. Also, during the lessons, the instrument will pick out those phrases that you are not so familiar with during the learning process, and tailor the practice to fit your progress. The following prompt messages will appear on the display during your learning:










PROMPT MESSAGE	
LCD	Description
Lesson 1	Prepare for the next lesson.
Play A	Preview of the phrase to learn
Try A	Play the phrase being learnt.
Go Ahead	Progress to the next period/phrase
Try Again	Please re-attempt the current period/phrase.
Play A-H	Preview of the period to learn.
Try A-H	Play the period being learnt.
Complete	Learn the complete song in lesson 7.
Test	High score challenge in lesson 8.
Score85	Displays your current high score.
Retry?	Select whether to play again when the challenge is complete.

During the intelligent learning mode, the display shows the highest score of previous learning challenges. Achieve a score of 80 or more points to progress to the next lesson. If you score less than 80 points 3 times in a row, the system will replay the current phrase to help you familiarise yourself to it.

During lessons 1, 3 and 5, the focus will be on melody pitch. After using the data dial or [-/NO] and [+/YES] buttons to select a song to be learnt, the keyboard will display "Play A" and play the first phrase to be learnt. Each note will be displayed on the relevant staff when played. Next, the display will show "Try A" indicating it is your turn to recite the phrase. If the incorrect note is played, the intelligent learning system will stop the song and resume when the correct note is played. After the phrase is completed, the display will show your score, with scores of 80 or higher allowing progress to the next level.

During lessons 2, 4 and 6, the focus will be on timing as well as pitch. If you repeatedly score less than 80 points, the system will reduce the tempo of the period/phrase being learnt to enable slower practice. Scoring over 80 points will revert to the original tempo.

Lesson 7 will focus on learning full songs, and lesson 8 is a high score challenge to try and perfect your performances.

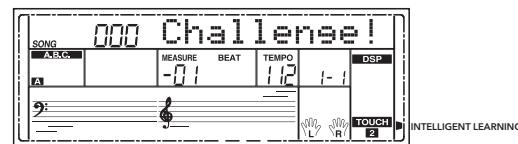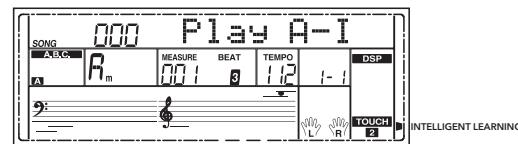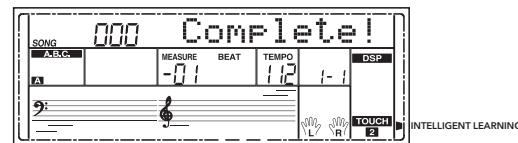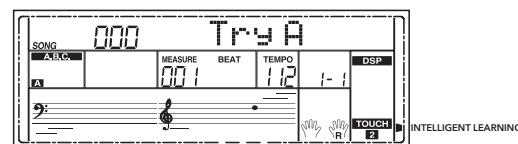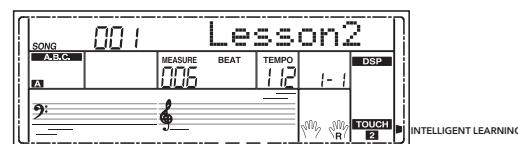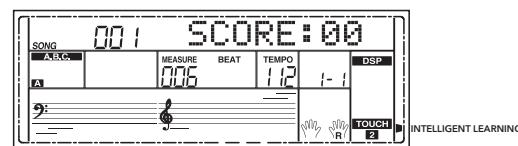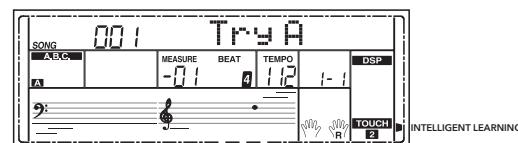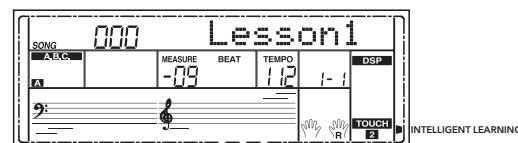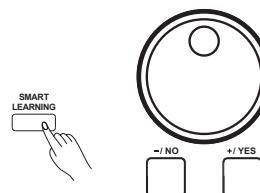

# CHORD DICTIONARY

The chord dictionary function can be used to improve and test your chord knowledge.

## DICT 1 (CHORD LEARNING MODE)

Hold down the [SHIFT] button, and then press the [DICT.] button to enter the DICT 1 mode. The displays will show "Dict.1" and the auto bass chord mode (A.B.C) is automatically turned on. In DICT 1 mode, the keys C4-B5 are used to assign the chord type, and keys C6-B6 are used to assign the chord root.

When the chord type and chord root are confirmed, the display will show the chord and its keyboard position. For example, if you want to play a CM7 chord, press key C6 to specify C as the chord root. The root note will be shown on the display but the note doesn't sound.

Press the E4 key to specify M7 as the chord type. The display will show the chord and its keyboard position. A prompt sound will be heard when you play it correctly in the chord area.






## DICT 2 (CHORD TESTING MODE)

Hold down the [SHIFT] button, and then press the [DICT.] button twice to enter the DICT 2 mode. The display will first show "Dict 2" and then will display a chord name in random order for you to play. If the chord fails to be played in 3 seconds, the correct notes will appear on the display. Once the chord is played correctly, a new chord name will appear after a few seconds.

Chords will be displayed in the dictionary mode as follows:

PROMPT MESSAGE					
Note	Chord Root	Note	Chord Type	Note	Chord Type
C6	C	C4	M	C5	7(B9)
C#6	C#/Db	C#4	M(9)	C#5	7(9)
D6	D	D4	6	D5	7(#9)
Eb6	Eb/D#	EB4	MM7	EB5	7(B13)
E6	E	E4	M7	E5	7(13)
F6	F	F4	M	F5	7(#11)
F#6	F#/Gb	F#4	M(9)	F#5	DIM7
G6	G	G4	M6	G5	DIM
Ab6	Ab/G#	AB4	M7(9)	AB5	7AUG
A6	A	A4	M7	A5	AUG
Bb6	Bb/A#	BB4	M7B5	BB5	7SUS4
B6	B	B4	7	B5	SUS4

To turn off the chord dictionary mode, hold down the [SHIFT] button and then press the [DICT.] button again.

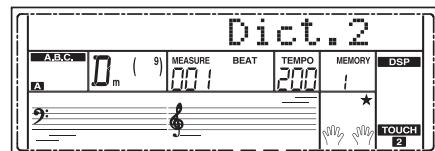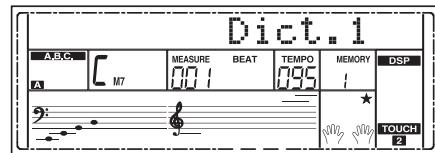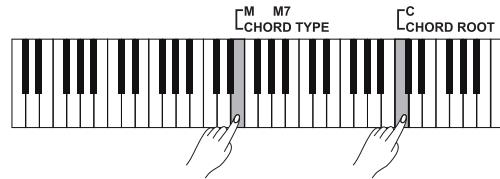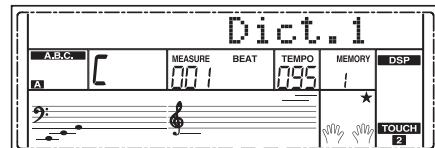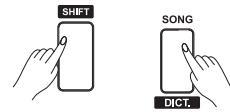

# VOICE LIST

No.	Name	LCD Name	
<b>PIANO</b>			
1	Acoustic Grand Piano	GrandPno	
2	Acoustic Grand Piano 2	GrandPn2	
3	Acoustic Grand Piano (wide)	GrandPnW	
4	Acoustic Grand Piano (dark)	GrandPnD	
5	Bright Acoustic Piano	BritePno	
6	Bright Acoustic Piano 2	BritePn2	
7	Bright Acoustic Piano (wide)	BritePnW	
8	Electric Grand Piano	E.Grand	
9	Electric Grand Piano 2	E.Grand2	
10	Electric Grand Piano (wide)	E.GrandW	
11	Electric Grand Piano (dark)	E.GrandD	
12	Honky Tonk Piano	HnkyTonk	
13	Honky Tonk Piano 2	HnkyTonk2	
14	Honky Tonk Piano (wide)	HnkyTonkW	
15	Honky Tonk Piano (dark)	HnkyTonkD	
16	Harpsichord	Harpsi	
17	Harpsichord 2	Harpsi2	
18	Harpsichord (octave mix)	HarpsiO	
19	Harpsichord (wide)	HarpsiW	
20	Harpsichord (with key off)	HarpsiOf	
21	Octave Grand Piano	OctPno	
22	Octave Grand Piano 2	OctPno2	
23	Piano & Strings	Pno&Str	
24	Piano & Pad	Pno&Pad	
25	Piano & Choir	Pno&Cho	
26	Piano & EP	Pno&EP	
27	Piano & Vibraphone	Pno&Vib	
28	Detuned Electric Piano	DetunEP	
29	Detuned Electric Piano 2	DetunEP2	
30	Electric Piano	E.Piano	
31	Electric Piano 2	E.Piano2	
32	Electric Piano 3	E.Piano3	
33	Electric Piano 4	E.Piano4	
34	Electric Piano 1 (velocity mix)	E.PnoV1	
35	Electric Piano 2 (velocity mix)	E.PnoV2	
36	60's Electric Piano	60'sEP	
37	EP Legend	EPLegend	
38	Phase EP	PhaseEP	
39	Clavi	Clavi	
40	Clavi 2	Clavi2	
41	Phase Clavi	PhaseClv	
42	Wah Clavi	WahClv	
43	Pulse Clavi	PluseClv	
44	Dream EP	DreamEP	
45	Tremolo EP	TremoEP	
46	Funk EP	FunkEP	
47	Warm EP	WarmEP	
48	Choir EP	ChorEP	
49	Wah EP	WahEP	
50	Modern EP	ModernEP	
51	EP Pad	EPPad	
<b>CHROMATIC PERCUSSION</b>			
52	Celesta	Celesta	
53	Celesta 2	Celesta2	
<b>ORGAN</b>			
54	Celesta 3	Celesta3	
55	Glockenspiel	Glocken	
56	Glockenspiel 2	Glocken2	
57	Music Box	MusicBox	
58	Music Box 2	MuscBox2	
59	Music Box 3	MuscBox3	
60	Vibraphone	Vibra	
61	Vibraphone 2	Vibra2	
62	Vibraphone (wide)	VibraW	
63	Marimba	Marimba	
64	Marimba 2	Marimba2	
65	Marimba (wide)	MarimbaW	
66	Xylophone	Xylophon	
67	Xylophone 2	Xylopho2	
68	Xylophone 3	Xylopho3	
69	Tubular Bells	TubulBel	
70	Tubular Bells 2	TubulBe2	
71	Church Bell	ChurBell	
72	Carillon	Carillon	
73	Dulcimer	Dulcimer	
74	Dulcimer 2	Dulcime2	
75	Santur	Santur	
<b>GUITAR</b>			
106	Acoustic Guitar (nylon)	NylonGtr	
107	Acoustic Guitar (nylon ) 2	NylonGt2	

# VOICE LIST

No.	Name	LCD Name	
108	Acoustic Guitar (nylon) 3	NylonGt3	
109	Acoustic Guitar (nylon + key off)	NylGtrOf	
110	Ukulele	Ukulele	
111	Acoustic Guitar (steel)	SteelGtr	
112	Acoustic Guitar (steel) 2	SteelGt2	
113	12-Strings Guitar	12StrGtr	
114	Mandolin	Mandolin	
115	Mandolin 2	Mandoli2	
116	Steel Guitar with Body Sound	SteelBdy	
117	Electric Guitar (jazz)	JazzGtr	
118	Electric Guitar (jazz) 2	JazzGtr2	
119	Electric Guitar (pedal steel)	PedalGtr	
120	Electric Guitar (clean)	CleanGtr	
121	Electric Guitar (clean) 2	CleanGt2	
122	Electric Guitar (detuned clean)	DetClnGt	
123	Mid Tone Guitar	MidTonGt	
124	Electric Guitar (muted)	MutedGtr	
125	Electric Guitar (muted) 2	MutedGt2	
126	Electric Guitar (funky cutting)	FunkGt	
127	Electric Guitar (muted velo-sw)	MutVelGt	
128	Jazz Man	JazzMan	
129	Overdriven Guitar	Ovdrv	
130	Overdriven Guitar 2	Ovdrv2	
131	Guitar Pinch	GtPinch	
132	Distortion Guitar	DistGtr	
133	Distortion Guitar 2	DistGtr2	
134	Distortion Guitar (with feedback)	FeedbkGt	
135	Guitar Feedback	GtrFedbk	
136	Distorted Rhythm Guitar	DistRyth	
137	Guitar Harmonics	GtrHarmo	
138	Guitar Harmonics 2	GtHarmo2	
139	Velocity Nylon Guitar	NylInGtVe	
<b>BASS</b>			
140	Acoustic Bass	AcoBass	
141	Acoustic Bass 2	AcoBass2	
142	Wah Bass	WahBass	
143	Electric Bass (finger)	FngrBass	
144	Finger Slap Bass	FngrSlap	
145	Electric Bass (pick)	PickBass	
146	Electric Bass (pick) 2	PickBas2	
147	Fretless Bass	Fretless	
148	Fretless Bass 2	Fretles2	
149	Slap Bass	SlapBass	
150	Slap Bass 2	SlapBas2	
151	Slap Bass 3	SlapBas3	
152	Slap Bass 4	SlapBas4	
153	Synth Bass	SynBass	
154	Synth Bass 2	SynBass2	
155	Synth Bass 3	SynBass3	
156	Synth Bass 4	SynBass4	
157	Warm Synth Bass	WarmBass	
158	Resonance Synth Bass	ResoBass	
159	Clavi Bass	ClavBass	
160	Hammer	Hammer	
161	Attack Bass	AtackBas	
<b>STRINGS &amp; ORCHESTRAL</b>			
162	Synth Bass (rubber)	RubbBass	
163	Synth Bass (rubber) 2	RubbBas2	
164	Attack Pulse	AttackPls	
<b>STRINGS &amp; ORCHESTRAL</b>			
165	Violin	Violin	
166	Violin 2	Violin2	
167	Violin (slow attack)	SlViolin	
168	Viola	Viola	
169	Viola 2	Viola2	
170	Cello	Cello	
171	Cello 2	Cello2	
172	Contrabass	Contrabs	
173	Contrabass 2	Contrbs2	
174	Tremolo Strings	TremStr	
175	Tremolo Strings 2	TremStr2	
176	Tremolo Strings 3	TremStr3	
177	Pizzicato Strings	PizzStr	
178	Pizzicato Strings 2	PizzStr2	
179	Orchestral Harp	Harp	
180	Orchestral Harp 2	Harp2	
181	Yang Chin	YangChin	
182	Timpani	Timpani	
183	Timpani 2	Timpani2	
184	String Ensembles	Strings	
185	String Ensembles 2	Strings2	
186	String Ensembles 3	Strings3	
187	String Ensembles 4	Strings4	
188	Strings & Brass	Str&Bras	
189	60's Strings	60'sStr	
190	Synth Strings	SynStrs	
191	Synth Strings 2	SynStrs2	
192	Synth Strings 3	SynStrs3	
193	Synth Strings 4	SynStrs4	
194	Synth Strings 5	SynStrs5	
195	Choir Aahs	ChoirAah	
196	Choir Aahs 2	ChorAah2	
197	Choir Aahs 3	ChorAah3	
198	Voice Oohs	VoiceOoh	
199	Voice Oohs 2	VoiOoh2	
200	Humming	Humming	
201	Analogue Voice	AnlVoice	
202	Synth Voice	SynVoice	
203	Synth Voice 2	SynVoic2	
204	Orchestra Hit	OrchHit	
205	Orchestra Hit 2	OrchHit2	
206	Bass Hit Plus	BassHit	
207	6th Hit	6thHit	
208	Euro Hit	EuroHit	
<b>STRINGS &amp; ORCHESTRAL</b>			
209	Trumpet	Trumpet	
210	Trumpet 2	Trumpet2	
211	Dark Trumpet	DarkTrp	
212	Trombone	Trombone	
213	Trombone 2	Trmbone2	
214	Trombone 3	Trmbone3	
215	Bright Trombone	BritBone	

# VOICE LIST

No.	Name	LCD Name
216	Tuba	Tuba
217	Tuba 2	Tuba2
218	Muted Trumpet	MuteTrp
219	Muted Trumpet 2	MuteTrp2
220	Muted Trumpet 3	MuteTrp3
221	French Horn	FrHorn
222	French Horn 2	FrHorn2
223	French Horn 3	FrHorn3
224	Brass Section	Brass
225	Brass Section 2	Brass2
226	Brass Section 3	Brass3
227	Synth Brass	SynBrass
228	Synth Brass 2	SynBras2
229	Synth Brass 3	SynBras3
230	Synth Brass 4	SynBras4
231	Synth Brass 5	SynBras5
232	Synth Brass 6	SynBras6
233	Synth Brass 7	SynBras7
234	Synth Brass 8	SynBras8
235	Analogue Synth Brass	AnaBrass
236	Analogue Synth Brass 2	AnaBras2
237	Analogue Synth Brass 3	AnaBras3
238	Jump Brass	JumpBras
239	Jump Brass 2	JumpBrs2
240	Funny	Funny
241	Funny 2	Funny2
<b>REED</b>		
242	Soprano Sax	SprnoSax
243	Soprano Sax 2	SprnSax2
244	Soprano Sax 3	SprnSax3
245	Alto Sax	AltoSax
246	Alto Sax 2	AltoSax2
247	Alto Sax 3	AltoSax3
248	Tenor Sax	TenorSax
249	Tenor Sax 2	TenoSax2
250	Tenor Sax 3	TenoSax3
251	Baritone Sax	BariSax
252	Baritone Sax 2	BariSax2
253	Baritone Sax 3	BariSax3
254	Oboe	Oboe
255	Oboe 2	Oboe2
256	Oboe 3	Oboe3
257	2 Oboes	2Oboes
258	English Horn	EngHorn
259	English Horn 2	EngHorn2
260	English Horn 3	EngHorn3
261	2 English Horns	2EngHons
262	Bassoon	Bassoon
263	Bassoon 2	Bassoon2
264	Bassoon 3	Bassoon3
265	2 Bassoons	2Basoons
266	Clarinet	Clarinet
267	Clarinet 2	Clarine2
268	Clarinet 3	Clarine3
269	2 Clarinets	2Clarinets

PIPE		
270	Piccolo	Piccolo
271	Piccolo 2	Piccolo2
272	Piccolo 3	Piccolo3
273	2 Piccolos	2Piccolos
274	Sweet Flute	SweeFlut
275	Flute	Flute
276	Flute 2	Flute2
277	Flute 3	Flute3
278	2 Flutes	2Flutes
279	Recorder	Recorder
280	Recorder 2	Recorder2
281	2 Recorders	2Records
282	Pan Flute	PanFlute
283	Pan Flute 2	PanFlut2
284	Sweet Pan Flute	SwPanFlu
285	Blown Bottle	Bottle
286	Blown Bottle 2	Bottle2
287	Shakuhachi	Shakhchi
288	Shakuhachi 2	Shakhch2
289	Whistle	Whistle
290	Whistle 2	Whistle2
291	Ocarina	Ocarina
292	Ocarina 2	Ocarina2
<b>SYNTH LEAD</b>		
293	Lead 1 (square)	SquareLd
294	Lead 1 (square) 2	SquareLd2
295	Lead 1 (square) 3	SquareLd3
296	Lead 1 (sine)	SineLead
297	Lead 2 (sawtooth)	SawLead
298	Lead 2 (sawtooth) 2	SawLead2
299	Lead 2 (sawtooth) 3	SawLead3
300	Lead 2 (sawtooth + pulse)	SawPlsLd
301	Lead 2 (double sawtooth)	DubSawLd
302	Lead 2 (sequenced analogue)	SquAnaLd
303	Lead 2 (sequenced analogue) 2	SqAnaLd2
304	Wavy Sawtooth	WavySaw
305	Lead Synth Voice	BaubleLd
306	Super Analogue	SuperAna
307	Lead 3 (calliope)	CallopLd
308	Lead 3 (calliope) 2	CalipLd2
309	Lead 4 (chiff)	ChiffLd
310	Lead 4 (chiff) 2	ChiffLd2
311	Lead 4 (chiff) 3	ChiffLd3
312	Lead 5 (charang)	CharanLd
313	Lead 5 (charang) 2	CharaLd2
314	Lead 5 (charang) 3	CharaLd3
315	Lead 5 (charang) 4	CharaLd4
316	Lead 5 (wire lead)	WireLead
317	Lead 5 (wire lead) 2	WireLd2
318	Lead 6 (voice)	VoiceLd
319	Lead 6 (voice) 2	VoiceLd2
320	Lead 7 (fifths)	FifthsLd
321	Lead 7 (fifths) 2	FifthLd2
322	Lead 8 (bass + lead)	BassLead
323	Lead 8 (bass + lead) 2	BasLead2

# VOICE LIST

No.	Name	LCD Name		
324	Lead 8 (bass + lead) 3	BasLead3		
325	Lead 8 (soft wire lead)	SftWrLd		
326	Massiness	Massin		
327	Square	Square		
328	Slow Square Lead	SlwSquLd		
329	Sine Solo	SineSolo		
330	Square Lead 4	SqrLd4		
331	Thick Square	ThickSqu		
332	2 Oscillators Lead	2OsclD		
333	Wavy Sawtooth 2	WavySaw2		
334	Analogue Lead	AnaLead		
335	Big Lead	BigLead		
336	Fat Lead	FatLead		
337	Pulse Width Modulation + Fourth	Rezz4th		
338	Delayed Lead	DelyLead		
339	Delayed Lead 2	DlyLead2		
340	Fifth Lead	FifLead		
341	Corrie	Corrie		
342	Quint	Quint		
<b>SYNTH PAD</b>				
343	Pad 1 (new age)	NewAge		
344	Pad 1 (new age) 2	NewAge2		
345	Pad 2 (warm)	WarmPad		
346	Pad 2 (warm) 2	WarmPad2		
347	Pad 2 (sine wave pad)	SinePad		
348	Pad 3 (polysynth)	PolySyn		
349	Pad 3 (polysynth) 2	PolySyn2		
350	Pad 3 (polysynth) 3	PolySyn3		
351	Pad 3 (polysynth) 4	PolySyn4		
352	Pad 4 (choir)	ChoirPad		
353	Pad 4 (choir) 2	ChoirPd2		
354	Pad 4a (itopia)	ItopiaPd		
355	Pad 5 (bowed)	BowedPad		
356	Pad 5 (bowed) 2	BowedPd2		
357	Pad 6 (metallic)	MetalPad		
358	Pad 6 (metallic) 2	MetalPd2		
359	Pad 7 (halo)	HaloPad		
360	Pad 7 (halo) 2	HaloPad2		
361	Pad 8 (sweep)	SweepPad		
362	Pad 8 (sweep) 2	SweepPd2		
363	Pad 8 (sweep) 3	SweepPd3		
364	Pan Pad	PanPad		
365	Pan Pad 2	PanPad2		
366	Dipolar Pad	DipolPad		
367	Pulse Width Modulation Pad	PWMPad		
368	Warmly Pad	WarmlyPd		
369	Horn Pad	HornPad		
370	Click Pad	ClickPad		
371	Analogue Pad	AnalogPd		
372	80's Poly Pad	80'sPoly		
373	Soft Pulse Width Modulation + Fourth	PWM4thSf		
374	Synth Calliope Soft	SynCalSf		
375	Soft Vox	SoftVox		
376	5th SawWave	5thSaw		
377	5th Lead Soft	5thLdSf		
378	Slow Square	SlSquare		
379	New Year Pad	NewYear		
380	Space Voice	SpcVoice		
381	Rising	Rising		
382	Congregate	Congrega		
<b>SYNTH SFX.</b>				
383	FX 1 (rain)	FXRain		
384	FX 1 (rain) 2	FXRain2		
385	FX 2 (soundtrack)	Soundtrk		
386	FX 2 (soundtrack) 2	Sondtrk2		
387	Prelude	Prelude		
388	FX 3 (crystal)	Crystal		
389	FX 3 (crystal) 2	Crystal2		
390	FX 3 (synth mallet)	SynMalet		
391	FX 4 (atmosphere)	Atmosphr		
392	FX 4 (atmosphere) 2	Atmosph2		
393	Warm Air	WarmAir		
394	FX 5 (brightness)	Bright		
395	Smog	Smog		
396	FX 6 (goblins)	Goblins		
397	FX 6 (goblins) 2	Goblins2		
398	Choir Bell	ChorBell		
399	Choir Bell 2	ChorBel2		
400	FX 7 (echoes)	Echoes		
401	FX 7 (echoes) 2	Echoes2		
402	FX 7 (echo pan)	EchoPan		
403	FX 7 (echo bell)	EchoBell		
404	FX 7 (echo bell) 2	EchoBel2		
405	FX 7 (echo bell) 3	EchoBel3		
406	FX 8 (sci-fi)	Sci-Fi		
407	FX 8 (sci-fi) 2	Sci-Fi2		
<b>WORLD MUSIC</b>				
408	Sitar	Sitar		
409	Sitar 2	Sitar2		
410	Banjo	Banjo		
411	Banjo 2	Banjo2		
412	Shamisen	Shamisen		
413	Shamisen 2	Shamise2		
414	Koto	Koto		
415	Koto 2	Koto2		
416	Taisho Koto	TaishoKt		
417	Kalimba	Kalimba		
418	Kalimba 2	Kalimba2		
419	Bag Pipe	BagPipe		
420	Bag Pipe 2	BagPipe2		
421	Fiddle	Fiddle		
422	Fiddle 2	Fiddle2		
423	Fiddle 3	Fiddle3		
424	Shehnai	Shanai		
425	Shehnai	Shanai2		
<b>PERCUSSIVE</b>				
426	Tinkle Bell	TnklBell		
427	Agogo	Agogo		
428	Agogo 2	Agogo2		
429	Agogo 3	Agogo3		
430	Steel Drums	SteelDrm		

# VOICE LIST

No.	Name	LCD Name	
431	Steel Drums 2	StelDrm2	
432	Woodblock	WoodBlok	
433	Woodblock 2	WodBlok2	
434	Castanets	Castanet	
435	Castanets 2	Castant2	
436	Taiko Drum	TaikoDrm	
437	Taiko Drum 2	TaikDrm2	
438	Taiko Drum 3	TaikDrm3	
439	Concert Bass Drum	ConBasDm	
440	Concert Bass Drum 2	ConBsDm2	
441	Acoustic Bass Drum	BassDrum	
442	Room Kick	RoomKick	
443	Power Kick	Powrkick	
444	Electric Bass Drum	EIBsDrum	
445	Analogue Bass Drum	AnBsDrum	
446	Jazz Kick	JazzKick	
447	Side Stick	SidStick	
448	Analogue Rim Shot	AnRiShot	
449	Acoustic Snare	A.Snare	
450	Room Snare	RomSnare	
451	Power Snare	PowSnare	
452	Electric Snare	E.Snare	
453	Analogue Snare	AnaSnare	
454	Jazz Snare	JazSnare	
455	Brush Tap	BrushTap	
456	Concert SD	ConcertSD	
457	Hand Clap	HandClap	
458	Tom	Tom	
459	Room Tom	RoomTom	
460	Power Tom	PowerTom	
461	Electric Tom	ElecTom	
462	Analogue Tom	AnaTom	
463	Brush Tom	BrushTom	
464	Closed Hi-hat	ClosedHH	
465	Analogue Closed Hi-hat	AnCloHH	
466	Pedal Hi-hat	PedalHH	
467	Open Hi-hat	OpenHH	
468	Crash Cymbal	CrashCym	
469	Analogue Cymbal	AnaCym	
470	Ride Cymbal	RideCym	
471	China Cymbal	ChinaCym	
472	Ride Bell	RideBell	
473	Tambourine	Tambouri	
474	Splash Cymbal	SplashCy	
475	Cowbell	Cowbell	
476	Analogue Cowbell	AnaCowbl	
477	High Bongo	HiBongo	
478	Low Bongo	LoBongo	
479	Mute Hi Conga	MuHiCnga	
480	Open Hi Conga	OpHiCnga	
481	Low Conga	LowConga	
482	Analogue Hi Conga	AnHiCnga	
483	Analogue Mid Conga	AnMiCnga	
484	Analogue Low Conga	AnLoCnga	
485	High Timbale	HiTimbal	
486	Low Timbale	LoTimbal	
487	Cabasa	Cabasa	
488	Maracas	Maracas	
489	Analogue Maracas	AnMaraca	
490	Short Guiro	ShGuiro	
491	Long Guiro	LoGuiro	
492	Claves	Claves	
493	Mute Cuica	MuCuica	
494	Open Cuica	OpCuica	
495	Mute Triangle	MuTrgle	
496	Open Triangle	OpTrgle	
497	Shaker	Shaker	
498	Mute Surdo	MuSurdo	
499	Open Surdo	OpSurdo	
500	Melodic Tom	MeloTom	
501	Melodic Tom 2	MeloTom2	
502	Synth Drum	SynDrum	
503	Rhythm Box Tom	RhythBox	
504	Electric Drum	ElecDrum	
505	Reverse Cymbal	RevCymbal	
<b>SFX</b>			
506	Guitar Fret Noise	FretNoiz	
507	Guitar Cutting Noise	GtCtNoiz	
508	Acoustic Bass String Slap	BsStSlap	
509	Breath Noise	BrthNoiz	
510	Flute Key Click	FlKeyClk	
511	Seashore	Seashore	
512	Rain	Rain	
513	Thunder	Thunder	
514	Wind	Wind	
515	Stream	Stream	
516	Bubble	Bubble	
517	Bird Tweet	Tweet	
518	Bird Tweet 2	Tweet2	
519	Dog	Dog	
520	Horse Gallop	HouseGlp	
521	Telephone Ring	Telephone	
522	Telephone Ring 2	Telphon2	
523	Door Creaking	DoorCrek	
524	Door	Door	
525	Scratch	Scratch	
526	Wind Chime	WindChim	
527	Helicopter	Helicptr	
528	Car Engine	CarEngin	
529	Car Stop	CarStop	
530	Car Pass	CarPass	
531	Car Crash	CarCrash	
532	Siren	Siren	
533	Train	Train	
534	Jetplane	Jetplane	
535	Starship	Starship	
536	Burst Noise	BurstNois	
537	Applause	Applause	
538	Laughing	Laughing	
539	Screaming	Scream	
540	Punch	Punch	

# VOICE LIST

No.	Name	LCD Nam
541	Heart Beat	HeartBet
542	Footsteps	Footstep
543	Gunshot	Gunshot
544	Machine Gun	MachnGun
545	Lasergun	Lasergun
546	Explosion	Explosio
<b>COMBINED VOICE</b>		
547	Stereo Piano & Strings Pad	Pn&StrPd
548	Stereo Piano & Choir	Pn&Choir
549	Stereo Piano & Synth Strings	Pn&SyStr
550	Stereo Piano & Warm Pad	Pn&WrmPd
551	Stereo Piano & Soft EP	Pn&SfEP
552	FM Electric Piano	FMEP
553	Digital Piano	DigitlPn
554	E.Piano & Strings	EP&Str
555	E.Piano & Acoustic Guitar	EP&Gtr
556	E.Piano & Vibraphone	EP&Vibra
557	E.Piano 2 & Pad	EP2&Pad
558	E.Piano 2 & Strings	EP2&Str
559	Harpsichord & Stereo Strings	Hrps&Str
560	Music Box & Stereo Strings	MBox&Str
561	Vibraphone & Stereo Strings	Vib&Str
562	Vibraphone Octave	VibraOct
563	Vibraphone & Marimba & Kalimba	Vib&M&K
564	Marimba & Kalimba	Mar&Kal
565	Marimba Delay	MarDelay
566	Xylophone Octave	XylopOct
567	Organ & Stereo Strings	Orgn&Str
568	Stereo Organ & Piano	Orgn&Pno
569	Rock Organ & Strings	RkOr&Str
570	Church Organ & Choir	ChOr&Cho
571	Church Organ & Strings	ChOr&Str
572	Acoustic Guitar & Flute	Gtr&Flut
573	Acoustic Guitar & Clavi	Gtr&Clav
574	24 String Guitar	24StrGtr
575	Steel Guitar & Warm Pad	StG&Pad
576	Stereo Strings & Horn	Str&Horn
577	Orchestra	Orchestr
578	Full Strings	FullStr
579	Full Strings 2	FullStr2
580	Symphonic	Symphon
581	Stereo Choir & Strings	Cho&Str
582	Stereo Choir & Steel Guitar	Cho&Gtr
583	3 Trumpet Loose	3Trumpet
584	Trombone & Stereo Strings	Tomb&Str
585	3 Trombones Loose	3Trmbone
586	3 Muted Trumpets Loose	3MuTrump
587	Club Brass	ClubBras
588	Brass & Woodwinds	Brs&Wood
589	Woodwinds & Strings	Wood&Str
590	Section Woods Small	WoodSmal
591	Pan Flute & Strings Pad	PnFl&Str
592	Koto & Shamisen	Kto&Sham
593	Flute & Clarinet	Flu&Clar
594	Flute & Oboe	Flu&Oboe

595	Flute & Bassoon	Flu&Bn
596	Flute & Oboe & Clarinet	Fl&Ob&Cl
597	Flute & Clarinet & Bassoon	Fl&Cl&Bn
598	Flute & Oboe & Bassoon	Fl&Ob&Bn
599	Flute Octave	FluteOct
600	Flute & Oboe Octave	Fl&ObOct
601	Flute & Clarinet Octave	Fl&ClOct
602	Oboe & Bassoon	Oboe&Bn
603	Oboe & Clarinet	Ob&Cl
604	Oboe & Clarinet & Bassoon	Ob&Cl&Bn
605	Oboe Octave	OboeOct
606	Oboe & Clarinet Octave	Ob&ClOct
607	Oboe & Bassoon Octave	Ob&BnOct
608	Clarinet & Bassoon	Cl&Bn
609	Clarinet & Oboe Octave	Cl&ObOct
<b>DRUMS</b>		
610	Standard Set	StandSet
611	Room Set	RoomSet
612	Power Set	PowerSet
613	Electronic Set	ElectSet
614	Analogue Set	AnalgSet
615	Jazz Set	JazzSet
616	Brush Set	BrushSet
617	Orchestra Set	OrcheSet
618	SFX Set	SFXSet

# STYLE LIST

No.	Name	LCD Name
<b>8BEAT</b>		
1	8Beat Ballad	8BtBld
2	8Beat Piano	8BtPiano
3	8Beat 1	8Beat1
4	Guitar Pop 1	GtPop1
5	8Beat Hip Hop	8BtHiHop
6	8Beat Blues Rock	8BtBluRk
7	8Beat 2	8Beat2
8	Sweet Beat	SweetBt
9	8Beat 3	8Beat3
10	Rhythm&Beat 2	Rhy&Bt2
<b>16BEAT</b>		
11	16Beat 1	16Beat1
12	16Beat Funk 1	16BtFuk1
13	16Beat Ballad 1	16BtBld1
14	16Beat R&B	16BtR&B
15	Pop 16Beat 1	Pop16Bt1
16	16Beat Funk 2	16BtFuk2
17	16Beat Dance	16BtDanc
18	Pop 16Beat 2	Pop16Bt2
19	16Beat 2	16Beat2
20	Pop 16Beat 3	Pop16Bt3
21	Pop 16Beat 4	Pop16Bt4
22	Modern 16Beat	Modr16Bt
23	16Beat Hot	16BtHot
24	16Beat Modern	16BtModr
25	16Beat Funk 3	16BtFuk3
26	16Beat 3	16Beat3
27	Cool Beat	CoolBeat
28	16Beat Ballad 2	16BtBld2
29	16Beat 4	16Beat4
30	Pop Shuffle	PopShfl
<b>POP &amp; BALLAD</b>		
31	Pop Rock 1	PopRock1
32	Pop Dance 1	PopDanc1
33	Pop Fusion	PopFusn
34	Analogue Night 1	AnalgNt1
35	6/8 Pop	6/8Pop
36	Brit. Pop 1	BritPop1
37	Brit. Pop 2	BritPop2
38	Pop Hit	PopHit
39	Fusion Shuffle	FusShfl
40	Analogue Night 2	AnalgNt2
41	Guitar Pop 3	GtPop3
42	Pop Beat	PopBeat
43	Soft Beat	SoftBeat
44	60's Pop	60'sPop
45	Sting Latin	StigLatn
46	R&B Ballad 1	R&BBld1
47	Guitar Ballad	GtBallad
48	Ballad Rock	BaldRock
49	Piano Pop	PianoPop
50	Soft Ballad	SoftBald
51	Natural Ballad	NatulBld
52	Love Ballad	LoveBald
53	Easy Ballad	EasyBald
54	Miami Folk	MiamiBld
55	Slow Ballad	SlowBald
56	Folk Ballad	FolkBald
57	Pop Ballad 1	PopBald1
58	Pop Ballad 2	PopBald2
59	EP Ballad	EPBallad
60	New R&B Ballad	NewRBBlld
<b>ROCK</b>		
61	Rock	Rock
62	New Wave	NewWave
63	Ska	Ska
64	Pop Rock 2	PopRock2
65	Slow Rock	SlowRock
66	70's Rock&Roll	70'sRock
67	Folk Rock	FolkRock
68	Soft Rock	SoftRock
69	Old Rock	OldRock
70	Easy Rock	EasyRock
71	New Shuffle	NewShufl
72	Rock Hip Hop	RkHipHop
73	Rock&Roll 1	R'N'R1
74	Rock Shuffle	RockShfl
75	Rock&Roll 2	R'N'R2
<b>BALLROOM</b>		
76	Tango 1	Tango1
77	Matador	Matador
78	Twist 1	Twist1
79	Twist 2	Twist2
80	Big Band Foxtrot	BandFox
81	Tango 2	Tango2
82	Slow Foxtrot	SlowFox
83	Slow Waltz 1	SlowWlt1
84	Swing Foxtrot	SwingFox
85	Salsa 1	Salsa1
86	Cha Cha 1	ChaCha1
87	Cha Cha 2	ChaCha2
88	Beguine 1	Beguine1
89	Beguine 2	Beguine2
90	Rumba 1	Rumba1
91	Samba 1	Samba1
92	Samba 2	Samba2
93	Jive	Jive
94	Foxtrot	FoxTrot
<b>DANCE</b>		
95	Techno 1	Techno1
96	Hip Hop 1	HipHop1
97	House 1	House1
98	Down Beat	DownBeat
99	Progressive	Progress
100	Rap 1	Rap1
101	Disco	Disco
102	70's Disco	70'sDisc
103	Club Dance	ClubDanc
104	Euro Dance	EuroDanc
105	Garage	Garage

# STYLE LIST

No.	Name	LCD Name	
<b>SOUL &amp; FUNK</b>			
106	Funk 1	Funk1	
107	Classic Funk	ClasFunk	
108	Jay R&B	JayR&B	
109	Gospel Swing	GopSwing	
110	Gospel	Gospel	
111	Funk 2	Funk2	
112	Electric Funk	ElecFunk	
113	Groove Funk	GrooveFk	
114	Rubber Funk	RubberFk	
115	Cool Funky	ColFunky	
116	Jazz Funk	JazzFunk	
117	Groove	Groove	
118	Soul	Soul	
119	Hip Hop Soul	HipHopSl	
120	Hip Hop Beat	HipHopBt	
121	R&B	R&B	
122	British Soul Pop	BritSoul	
123	Latin Jazz 1	LatinJz1	
124	Big Band 1	BigBand1	
125	Dixieland 1	Dixland1	
126	Guitar Swing 1	GtSwing1	
127	Broadway Big Band	BwayBand	
128	Swing	Swing	
129	Latin Jazz 2	LatinJz2	
130	Fusion	Fusion	
131	Acid Jazz	AcidJazz	
132	Cool Jazz Ballad	CoolJzBd	
133	Swing Shuffle	SwingSl	
134	Big Band Medium	BandMid	
135	Ragtime	Ragtime	
<b>COUNTRY</b>			
136	Country Pop 1	CntyPop1	
137	Bluegrass 1	Blugras1	
138	8Beat Country	8BtCnty	
139	Modern Country	ModrCnty	
140	Country Pop 2	CntyPop2	
141	Bluegrass 2	Blugras2	
142	2/4 Country	2/4Cntry	
143	Country Quick Steps	QuickStp	
144	Country Folk	CntyFolk	
145	Country Shuffle	CnyShuf	
<b>LATIN &amp; LATIN DANCE</b>			
146	Samba 3	Samba3	
147	Bossa Nova	BosaNova	
148	Latin	Latin	
149	New Reggae	NewRegga	
150	Reggae Dance	DanRegga	
151	Paso Doble	Pasodobl	
152	Lite Bossa	LteBossa	
153	Latin Rock	LatinRck	
154	Beguine 3	Beguine3	
155	Slow Bolero	SlBolero	
156	Disco Samba	DscSamba	
157	Mambo	Mambo	
158	Meneito	Meneito	
159	Rumba 2	Rumba2	
160	Rumba 3	Rumba3	
161	Lambada	Lambada	
162	Pop Cha Cha 1	PChaCha1	
<b>WALTZ &amp; TRADITIONAL</b>			
163	Waltz	Waltz	
164	Old Waltz	OldWaltz	
165	English Waltz	EngWaltz	
166	German Waltz	GemWaltz	
167	Italian Mazurka	ItaMazuk	
168	Mexico Waltz	MexWaltz	
169	Vienna Waltz	VinaWltz	
170	Slow Waltz 2	SlwWltz2	
171	Jazz Waltz	JazzWltz	
172	Polka	Polka	
173	6/8 March	6/8March	
174	German Polka	GemPolka	
175	Party Polka	PtyPolka	
176	Army March	ArmMarch	
177	March	March	
178	US March	USMarch	
179	French Musette	FMusette	
180	Mazurka	Mazurka	
<b>WORLD MUSIC</b>			
181	Enka Ballad	EnkaBald	
182	Laendler	Laendler	
183	Hawaiian	Hawaiian	
184	Sirtake	Sirtake	
185	Dangdut	Dangdut	
186	6/8 Flipper	6/8Flipp	
187	New Age	NewAge	
188	Tarantella	Tarantel	
189	Scottish	Scottish	
190	Norteno	Norteno	
<b>PIANIST</b>			
191	Pianist 1	Waltz	
192	Pianist 2	OldWaltz	
193	Pianist 3	EngWaltz	
194	Piano Rock	GemWaltz	
195	Pop Bossa	ItaMazuk	
196	Piano Beat	MexWaltz	
197	Piano Bar	VinaWltz	
198	Blues	SlwWltz2	
199	Pop Waltz	JazzWltz	
200	6/8 Ballad	Polka	

# SONG LIST

No.	Name	LCD Name	
<b>FOLK &amp; COUNTRY</b>			
1	Toccata	Toccata	
2	Carry Me Back To Old Virginny	Virginny	
3	El Condor Pasa	ElCondor	
4	Wedding March	Wedding	
5	Traumerei	Traumere	
6	Greensleeves	Sleeves	
7	Home Sweet Home	Swethome	
8	Aloha Oe	AlohaOe	
9	Long Long Ago	LongAgo	
10	Heidenroslein	Heidenro	
11	Die Lorelei	Lorelei	
12	My Darling Clementine	Clementine	
13	Over The Waves	OverWave	
14	Gwine To Run All Night	Gwine	
15	Oh! Susanna	Susanna	
16	Symphony No.6 "Pathetic"	Sympony6	
17	Prelude Op.28 No.15	Prelude	
18	The House Of The Rising Sun	RiseSun	
<b>POP</b>			
19	Valse Des Fleurs	Fleurs	
20	Fruhlingsstimmen	Fruhling	
21	Frohlicher Landmann	Landmann	
22	Are You Lonesome Tonight?	Lonesome	
23	Toy Symphony	ToySymph	
24	Auld Lang Syne	LangSyne	
25	Ave Maria	AveMaria	
26	Tales Of Hoffman	Hoffman	
27	La Donne Mobile	DoneMble	
28	Serenata	Serenata	
29	Bridal March	Bridal	
30	Can't Help Falling In Love	InLove	
31	Chanson Du Toreador	Toreador	
32	Danny Boy	DannyBoy	
33	Ich Liebe Dich	LieDich	
34	Wiegenlied 2	Wieglied2	
35	Spanish Serenade	Serenade	
36	Piano Concerto	Concerto	
37	Piano Concerto 2	Concrto2	
38	Madame Butterfly	Madame	
39	Invitation To The Dance	ToDance	
40	Wiegenlied 3	Wieglied3	
41	Jingle Bells	JingBell	
42	Joy To The World	JoyWorld	
43	La Paloma	LaPaloma	
44	My Bonnie	MyBonnie	
45	La Reine De Saba	Saba	
46	La Cucaracha	Cucarach	
47	Little Brown Jug	BrownJug	
48	Battle Hymne Of The Republic	BatlHyme	
49	Yellow Rose Of Texas	YellRose	
50	The Wabash Cannon Ball	CannBall	
51	Annie Laurie	AnnieLa	
52	Turkish March	Turkish	
53	An Die Musik	Musik	
54	Lieder Ohne Worte Op.62 No.6	Lieder	
55	Red River Valley	RedRiver	
56	Die Forelle	Forelle	
57	Symphony No. 94 "Surprise"	No. 94	
58	Polonaise	Polonais	
59	Rondeau	Rondeau	
60	Moments Musicaux	Musicaux	
61	Silent Night	SltNight	
62	Moldau	Moldau	
63	Summertime	Summer	
64	Dreaming Of Home And Mother	Dreaming	
65	Ring Ring De Banjo	DeBanjo	
66	Der Lindenbaum	DerLinde	
67	Zigeunerweisen	Zigeuner	
68	The Maiden's Prayer	Prayer	
69	Fur Elise	FurElise	
70	Der Freischutz	DerFreis	
71	Maria! Mari!	Maria!	
72	Heidenroslein	Heidenro	
73	Symphony No.5	Symphony	
74	Anitra's Dance	Anitra	
75	Sadko-Chanson Indoue	Chanson	
76	Orpheus	Orpheus	
<b>CLASSICAL</b>			
77	William Tell Overture	Overture	
78	A Lover's Concerto	Concerto	
79	Air On The G-String	G-String	
80	An Der Shonen Blauen Donau	Donau	
81	Auf Flugeln Des Gesanges	Gesanges	
82	Beautiful Dreamer	Dreamer	
83	Dance Des Mirlitons	Mirliton	
84	Etude Op. 10 No. 3	Etude3	
85	Gavotte	Gavotte	
86	Hungarian Dances No. 5	Hungaian	
87	From The New World	NewWorld	
88	Serenata Rimpiant	Serenata	
89	Triumphal March	Trimphal	
90	The Skaters Waltz	Skaters	
91	O Sole Mio	OSoleMio	
92	Waves Of The Danube	Danube	
93	Santa Lucia	SantaLuc	
94	Solveig's Song	Solveig	
95	Piano Sonatas No. 8 In C Minor	Patheque	
96	Brahms Waltz	BrmsWltz	
97	Aida	Aida	
98	Carmen-Prelude	Carmen	
99	L'Arlesienne	L'Arlesi	
100	Ungarische Tanz	Uungaris	
101	Mazurka	Mazurka	
102	Pizzicato Polka	Polka	
103	Menuett	Menuett	
104	Rigoletto	Rigoleto	
105	Serenade	Serenade	
106	Song Without Words	SongNoWd	
107	Swan	Swan	
108	The Dying Swan	DyingSwn	

# SONG LIST

No.	Name	LCD Name
109	Swan Lake Valse	L'Arlesi
110	The Happy Farmer	Ungaris
111	The Sleeping Beauty	Mazurka
112	La Traviata	Polka
113	Wiegenlied	Menuett
114	Mov. 2 Adagio Non Troppo Piano Sonata No. 9 In D	Rigoletto
115	Piano Sonata No. 11 In A	Sonata11
116	Prelude In C	Prelude
117	Chinese Dance	ChDance
118	Emperor Waltz	Emperor
119	March Militaire	Militair
120	Symphony No. 40	Symphony
<b>PIANO</b>		
121	Hanon Piano Fingering 1	Hanon1
122	Hanon Piano Fingering 2	Hanon2
123	Hanon Piano Fingering 3	Hanon3
124	Hanon Piano Fingering 4	Hanon4
125	Hanon Piano Fingering 5	Hanon5
126	Basic Tutorial Beyer Piano 12	Beyer12
127	Basic Tutorial Beyer Piano 13	Beyer13
128	Basic Tutorial Beyer Piano 14	Beyer14
129	Basic Tutorial Beyer Piano 15	Beyer15
130	Basic Tutorial Beyer Piano 18	Beyer18
131	Cuckoo	Cuckoo
132	Basic Tutorial Beyer Piano 21	Beyer21
133	Basic Tutorial Beyer Piano 29	Beyer29
134	Butterfly	Butterfly
135	Basic Tutorial Beyer Piano 45	Beyer45
136	Christmas Eve	XmasEve
137	Basic Tutorial Beyer Piano 50	Beyer50
138	Basic Tutorial Beyer Piano 52	Beyer52
139	Basic Tutorial Beyer Piano 55	Beyer55
140	Basic Tutorial Beyer Piano 59	Beyer59
141	Beyer Eight Degrees Jump Etude	BeyerJump
142	Basic Tutorial Beyer Piano The Scale Of C Major	BeyerC
143	Basic Tutorial Beyer Piano 65	Beyer65
144	Basic Tutorial Beyer Piano 66	Beyer66
145	Old Folks At Home (Piano)	OldFolk2
146	Basic Tutorial Beyer Piano The Scale Of G Major	BeyerG
147	Basic Tutorial Beyer Piano 70	Beyer70
148	Basic Tutorial Beyer Piano 72	Beyer72
149	Basic Tutorial Beyer Piano 73	Beyer73
150	Basic Tutorial Beyer Piano 74	Beyer74

# ALBUM LIST

No.	Name	LCD Name
1	13 Jours En France	13France
2	A Lover's Concerto	Concerto
3	A Time For Us	Timeus
4	A Whiter Shade Of Pale	WhtShade
5	Adios	Adios
6	After You've Gone	U'veGone
7	Again	Again
8	Aqua De beber	AquaBebr
9	Air For The G-String	G-String
10	All Alone Am I	AloneAml
11	All His Children	Children
12	All Shook Up	ShookUp
13	Aloha Oe	AlohaOe
14	Always In My Heart	MyHeart
15	Amapola	Amapola
16	Amazing Grace	AmzGrace
17	Amor	Amor
18	An Der Shonen Blauen Donau	Donau
19	Anastasia	Anastasi
20	Angel	Angel
21	Angustia	Angustia
22	Annie Laurie	AnnieLa
23	Are You Lonesome Tonight?	Lonesome
24	Arirang	Arirang
25	Around The World	AroWorld
26	Auf Flugeln Des Gesanges	Gesanges
27	Auld Lang Syne	LangSyne
28	Ave Maria	AveMaria
29	Bad Moon Rising	BadMoon
30	Battle Hymne Of The Republic	BatlHyme
31	Beautiful Dreamer	Dreamer
32	Besame Mucho	Besame
33	Beyond The Reef	BeyndRef
34	Bibbidi Bobbidi Boo	Bibbidi
35	Bittersweet Samba	Bitsweet
36	Blue Christmas	BlueXmas
37	Blue Tango	BluTango
38	Blueberry Hill	Blueberry
39	Born Free	BornFree
40	Brazil	Brazil
41	Breaking Up Is Hard To Do	BreakUp
42	Bridal March	Bridal
43	Bridge Over Troubled Water	Bridge
44	Bus Stop	BusStop
45	Buttons And Bows	BottnBow
46	Cachito	Cachito
47	Canadian Sunset	CaSunset
48	Can't Help Falling In Love	InLove
49	Carry Me Back To Old Virginny	Virginny
50	Chanson D'amour	Chanson
51	Chanson Du Toreador	Toreador
52	Charade	Charade
53	Chattanooga Shoe Shine Boy	ShoeBoy
54	Clelito Lindo	CleLindo
55	Close To You	CloseYou

56	Constantly	Constant
57	Cryin' In The Chapel	CryChapl
58	Dance Des Mirlitons	Mirliton
59	Danny Boy	DannyBoy
60	Dark Eyes	DarkEyes
61	Diana	Diana
62	Die Lorelei	Lorelei
63	Do Re Mi	DoReMi
64	Dominique	Dominiqu
65	Dream	Dream
66	Dream Tango	DremTngo
67	Ebb Tide	EbbTide
68	Edelweiss	Edelweis
69	El Bimbo	ElBimbo
70	El Condor Pasa	ElCondor
71	Eso Es El Amor	EsAmor
72	Esperanza	Esperanz
73	Etude Op.10 no.3	Etude3
74	Fascination	Fascina
75	Feelings	Feelings
76	Five Hundred Miles	500Miles
77	Five Minutes More	FiveMore
78	Fly Me To The Moon	FlyMoon
79	For Ever We Know	WeKnow
80	For The Good Times	GoodTime
81	Frohlicher Landmann	Landmann
82	Fruhlingsstimmen	Fruhling
83	Gavotte	Gavotte
84	Green Fields	Fields
85	Green, Green Grass Of Home	GreenGrs
86	Greensleeves	Sleeves
87	Gwine To Run All Night	Gwine
88	Gypsy Moon	GypsMoom
89	Happy Birthday To You	Birthday
90	Harbour Light	Harbour
91	Harlem Nocturne	Harlem
92	Hasta Manana	HasMana
93	Heidenroslein	Heidenro
94	Her Bright Smile Haunts Me Still	HerSmile
95	Hernando's Hideaway	Hideaway
96	Hey Jude	HeyJude
97	Historia De Un Amor	Historia
98	Home On The Range	HomeRnge
99	Home Sweet Home	SwetHome
100	Hound Dog	HoundDog
101	How Deep Is Your Love	DeepLove
102	Hungarian Dances no.5	Hungaian
103	Hurry Sundown	Sundown
104	Hymne A L'amour	L'amour
105	I Don't Hurt Any More	HurtMore
106	I Kiss Your Little Hand, Madame	kissyour
107	I Love You Much Too Much	LoveYou
108	I Need You Now	INeedYou
109	I Really Don't Want To Know	DontKnow
110	I Went To Your Wedding	UrWedding
111	If	If

# ALBUM LIST

112	If I Can Dream	IfDream
113	If I Give My Heart To You	HeartYou
114	In The Mood	InMood
115	It's Almost Tomorrow	Tomorrow
116	It's Been A Long, Long Time	LongTime
117	Jambalaya	Jambalay
118	Jazz 'n' Samba	JazSamba
119	Jeanie With The Light Brown Hair	Jeanie
120	Jingle Bells	JingBell
121	Johnny B. Goode	B.Goode
122	Joy To The world	JoyWorld
123	Jungle Drums	JungleDm
124	Kaiser Walzer	Kaiser
125	Keep Searchin'	Searchin
126	Killing Me Softly With His Song	HisSong
127	Kiss	Kiss
128	Kiss Of Fire	KissFire
129	La Chanson D'orphee	D'Orphee
130	La Contessa Scalza	Scalza
131	La Cucaracha	Cucarach
132	La Donne Mobile	DoneMble
133	La Mer	LaMer
134	La Novia	LaNovia
135	La Paloma	LaPaloma
136	La Playa	LaPlaya
137	La Ragazza Di Bube	Bube
138	La Reine De Saba	Saba
139	L'amour Est Blue	L'amour
140	Lara's Theme From "Doctor Zhivago"	Zhivago
141	Last Waltz	LastWltz
142	Les Feuilles Mortes	Feuilles
143	Let's Get Together	Together
144	Little Brown Jug	BrownJug
145	Long, Long Ago	LongAgo
146	Love Is A Many-Splendored Thing	SplndLov
147	Love Me With All Your Heart	AllHeart
148	Love Story	LovStory
149	Lullaby Of Birdland	Birdland
150	Mama Inez	Mamalnez
151	Mambo No. 5	MamboNo5
152	Mambo No. 8	MamboNo8
153	March Militaire	Militair
154	Maria Elena	MriaElna
155	Maria, My Own	Maria
156	Massachusetts	Maschuse
157	Menuet	Menuet
158	Miami Beach Rumba	MamiRmba
159	Misty	Misty
160	Mockin'bird Hill	BirdHill
161	Moliendo Coffee	Coffee
162	Moody River	ModyRivr
163	Moon River	MoonRivr
164	Moonlight Serenade	Moonlght
165	More	More
166	Moscow Nights	Moscow
167	Moulin Rouge	MoulinRg

168	Mr Lonely	MrLonely
169	My Bonnie	MyBonnie
170	My Darling Clementine	Clemtine
171	My Old Kentucky Home	Kentucky
172	My Shawl	MyShawl
173	My Way	MyWay
174	Nature Boy	NaturBoy
175	Never On Sunday	NeverSun
176	New World	NewWorld
177	Night Fall	NigtFall
178	Nobody Knows The Trouble I've Seen	Nobody
179	Noche De Tokyo	Tokyo
180	Nocturne	Nocturne
181	O Sole Mio	OSoleMio
182	Oh! Carol	Oh!Carol
183	Oh! Susanna	Susanna
184	Oh, Bury Me Not On The Lone Prairie	Prairie
185	Oh, What A Beautiful Morning	OMorning
186	Old Black Joe	BlackJoe
187	Old Dog Tray	DogTray
188	Old Folks At Home	OldFolks
189	On A Little Bamboo Bridge	BambooBg
190	On A Tropic Night	TrpicNgt
191	On London Bridge	OnBridge
192	On The Beach At Bali-Bali	BaliBali
193	One Way Ticket To The Blues	OWTicKts
194	Only You	OnlyYou
195	Over The Rainbow	Rainbow
196	Over The Waves	OverWave
197	Par Un Beau Matin D'ete	BeauMatn
198	Patricia	Patricia
199	Penelope	Penelope
200	Perfidia	Perfidia
201	Petite Fleur	Fleur
202	Piacer d'amor	Piacer
203	Pizzicato Polka	PizzPoka
204	Pretend	Pretend
205	Proud Mary	ProdMary
206	Quien sera	QuieSera
207	Quizas, Quizas, Quizas	Quizas
208	Raindrops Keep Fallin' On My Head	Raindrop
209	Ramona	Ramona
210	Red River Valley	RedRiver
211	Rhythm Of The Rain	RhymRain
212	Rock Around The Clock	Rock
213	Romance De l'amour	Romance
214	Royal Garden Blues	RoyalBlu
215	Sail Along Silv'ry Moon	SilyMoon
216	Sailing	Sailing
217	San Francisco	Francico
218	Sans Toi Mamie	ToiMami
219	Santa Claus Is Comin' To Town	SantClau
220	Santa Lucia	SantaLuc
221	Scarborough Fair	Scarboro
222	Sealed With A Kiss	Sealed
223	Sentimental Journey	Journey

# ALBUM LIST

224	Serenade	Serenade
225	Serenata Rimpaint	Serenata
226	Siboney	Siboney
227	Silent Night	SltNight
228	Singin' In The Rain	SingRain
229	Sleepy Lagoon	Lagoon
230	Sloop John B	JohnB
231	Smoke Gets In Your Eyes	SmokeEye
232	So Nice	SoNice
233	Solamente Una Ves	Salament
234	Somebody Bad Stole De Wedding Bell	StoleBel
235	Songs Of Spring	SngSprig
236	Speak Softly Love	SoftLove
237	ST.Louis Blues	ST.Louis
238	Stranger In Paradise	Paradise
239	Strangers In The Night	Stranger
240	Summer Holiday	Holiday
241	Summertime	Summer
242	Summertime In Venice	Venice
243	Sunrise, Sunset	Sunrise
244	Superstar	Superstr
245	Sweet And Gentle	SwetGtle
246	Taboo	Taboo
247	Take Me Home, Country Roads	CntyRoad
248	Tales Of Hoffman	Hoffman
249	Tammy	Tammy
250	Tango Notturno	TangoNot
251	Tennessee Waltz	Tennesse
252	The Blue-Bells Of Scotland	BlueBell
253	The Breeze And I	Breeze&I
254	The Dying Swan	DyingSwn
255	The End Of The World	EndWorld
256	The Exodus Song	Exodus
257	The Eyes Of Love	EyesLove
258	The Girl From Ipanema	Ipanema
259	The Great Pretender	Pretend
260	The House Of The Rising Sun	RiseSun
261	The Impossible Dream	ImDream
262	The Loco-Motion	TheLoco
263	The Longest Day	Longest
264	The Peanut Vendor	Vendor
265	The River Of No Return	NoReturn
266	The Shadow Of Your Smile	UrSmile
267	The Skaters Waltz	Skaters
268	The Sound Of Silence	Silence
269	The Wabash Cannon Ball	CannBall
270	The Way We Were	TheWay
271	This Land Is Your Land	YourLand
272	Those Were The Days	TheDays
273	Three Coins In The Fountain	Fountain
274	Tico-Tico	TicoTico
275	Tie A Yellow Ribbon'Round	Ye.Ribbon
276	The Ole Oak Tree	LovAgain
277	To Love Again	Toccata
278	Toccata	TomDoley
279	Tom Dooley	LaNeige

280	Top Of The World	TopWorld
281	Toy Symphony	ToySymph
282	Traumerei	Traumere
283	Triumphal March	Trimphal
284	Tu Ne Sais Pas Aimer	TuAimer
285	Turkey In The Straw	TukyStaw
286	Un Buco Nella Sabbia	Sabbia
287	Una Lacrima Sul Viso	Lacrima
288	Unchained Melody	Melody
289	Valse Des Fleurs	Fleurs
290	Vaya Con Dios	VayaDios
291	Venus	Venus
292	Washington Square	Washnton
293	Waves Of The Danube	Danube
294	Wedding March	Wedding
295	When You And I Were Young, Maggie	YoungMag
296	Where The Boys Are	WhereBoy
297	Whispering Hope	Whisper
298	Wiegenlied	Wieglied
299	Wiegenlied 2	Wieglied2
300	Without you	WithoutU
301	Wonderland By Night	WonNight
302	Words	Words
303	Y.M.C.A.	Y.M.C.A.
304	Yellow Rose Of Texas	YellRose
305	Yesterday	Yestday
306	Yesterday Once More	OnceMore
307	You Always Hurt The One You Love	HurtLove
308	You Are My Sunshine	Sunshine
309	You Mean Everything To Me	MeanToMe
310	Your Love Is Mine	LoveMine

---

## SPECIFICATION

Keys ..... 61 Touch Sensitive Keys

Polyphony ..... 64 Note

Voices..... 618

Rhythm Styles ..... 200

Songs ..... 150 Songs, with Music  
Tutorial System

Dimensions ..... Height 142mm x  
Width 970mm x Depth  
370mm

Weight ..... 6.75kg

Power ..... 12V DC/2000mA  
via 100-240V PSU  
(Included) or 6 x AA  
batteries (not included)

Inputs ..... Mic Input 1/4" Jack, Aux  
Input 1/4"

Jack for Sustain Pedal ..... 1/4" Jack  
(pedal not included)

Outputs ..... Audio Output 1/4" Jack,  
Headphones 1/4" Jack,  
USB MIDI

Speakers ..... 2 x 35W

KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM  
METALLVÄGEN 45A | 195 72 ROSERSBERG | STOCKHOLM | SVERIGE  
LAHNSTRÄÙE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **[info@gear4music.com](mailto:info@gear4music.com)**