



ELECTRONIC DRUM KIT

DD200X

USER MANUAL


 

 









INTRODUCTION

Thank you for purchasing the DD200X Electronic Drum Kit. To get the most out of your product, please read this manual carefully.







FEATURES

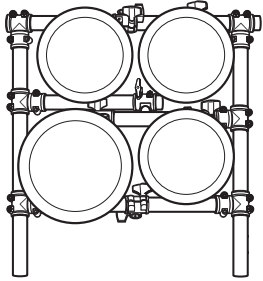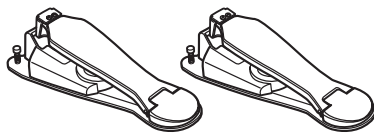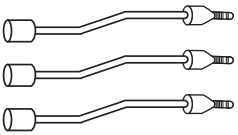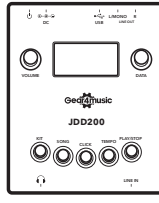- Adult sized electronic drum kit.
- Includes 38 drum kits and 44 songs to play along to.
- Perfect your timing with the adjustable metronome.
- Jam with your favourite songs and artists via the aux-in.


 
 
CONTENTS
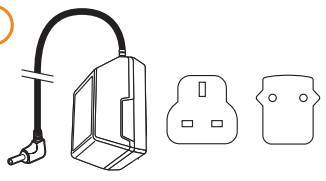
<p>1</p> 	<p>2</p>  <p>X3</p>	<p>3</p> 
<p>4</p> 	<p>5</p>  <p>X3</p>	<p>6</p> 
<p>A</p>  <p>X3</p>	<p>B</p>  <p>X3</p>	<p>C</p> 
<p>D</p> 	<p>E</p> 	<p>F</p> 
<p>G</p> 		


ATTACH THE PARTS

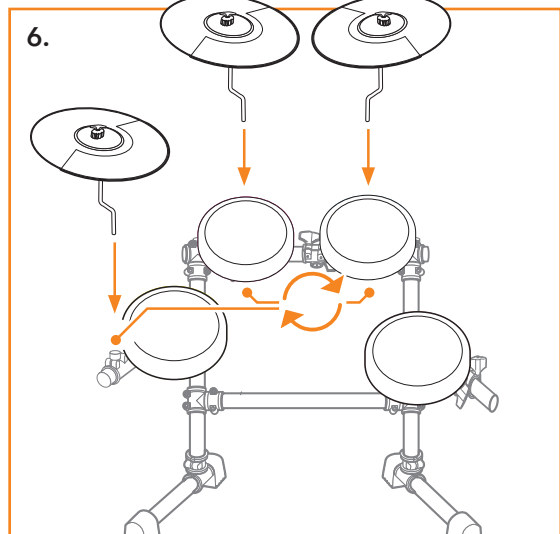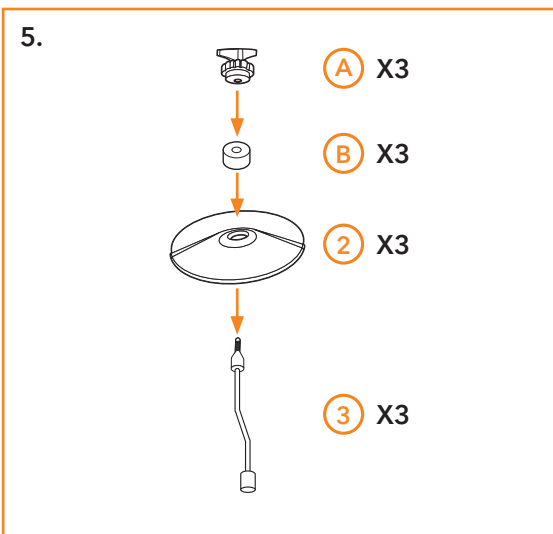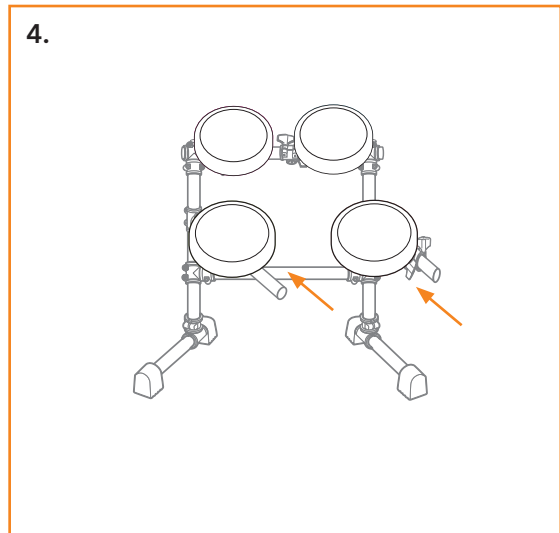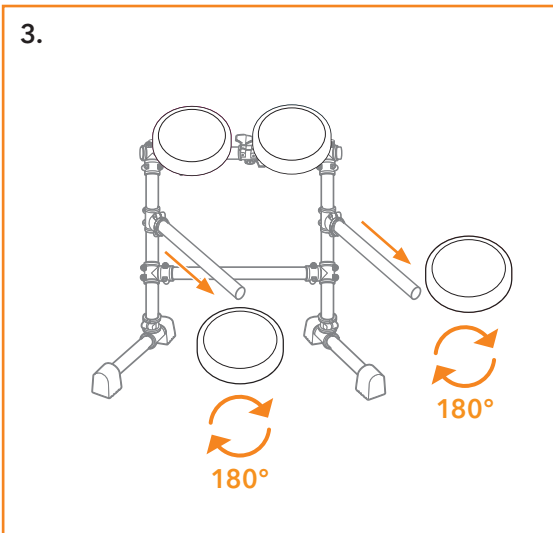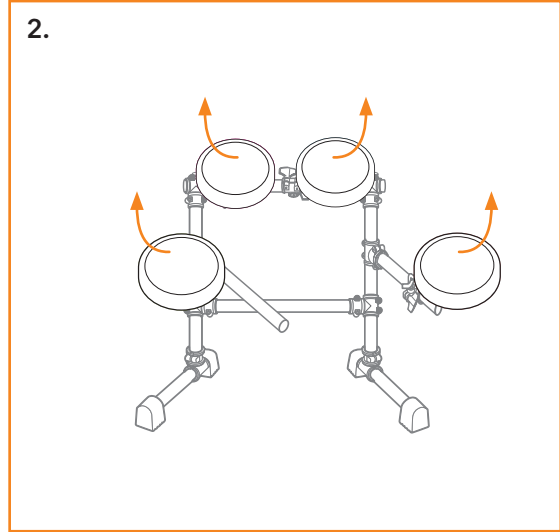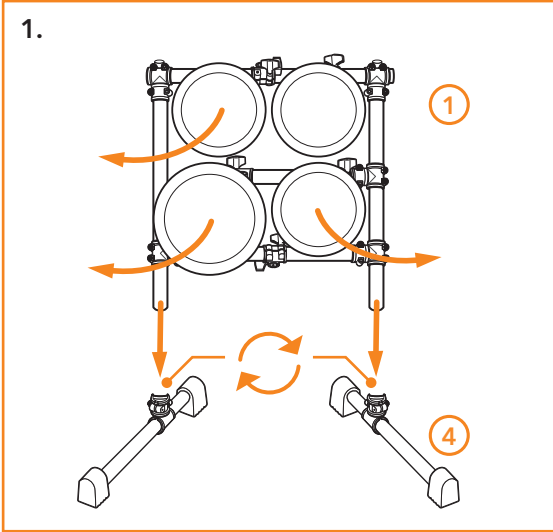

ATTACH THE PARTS

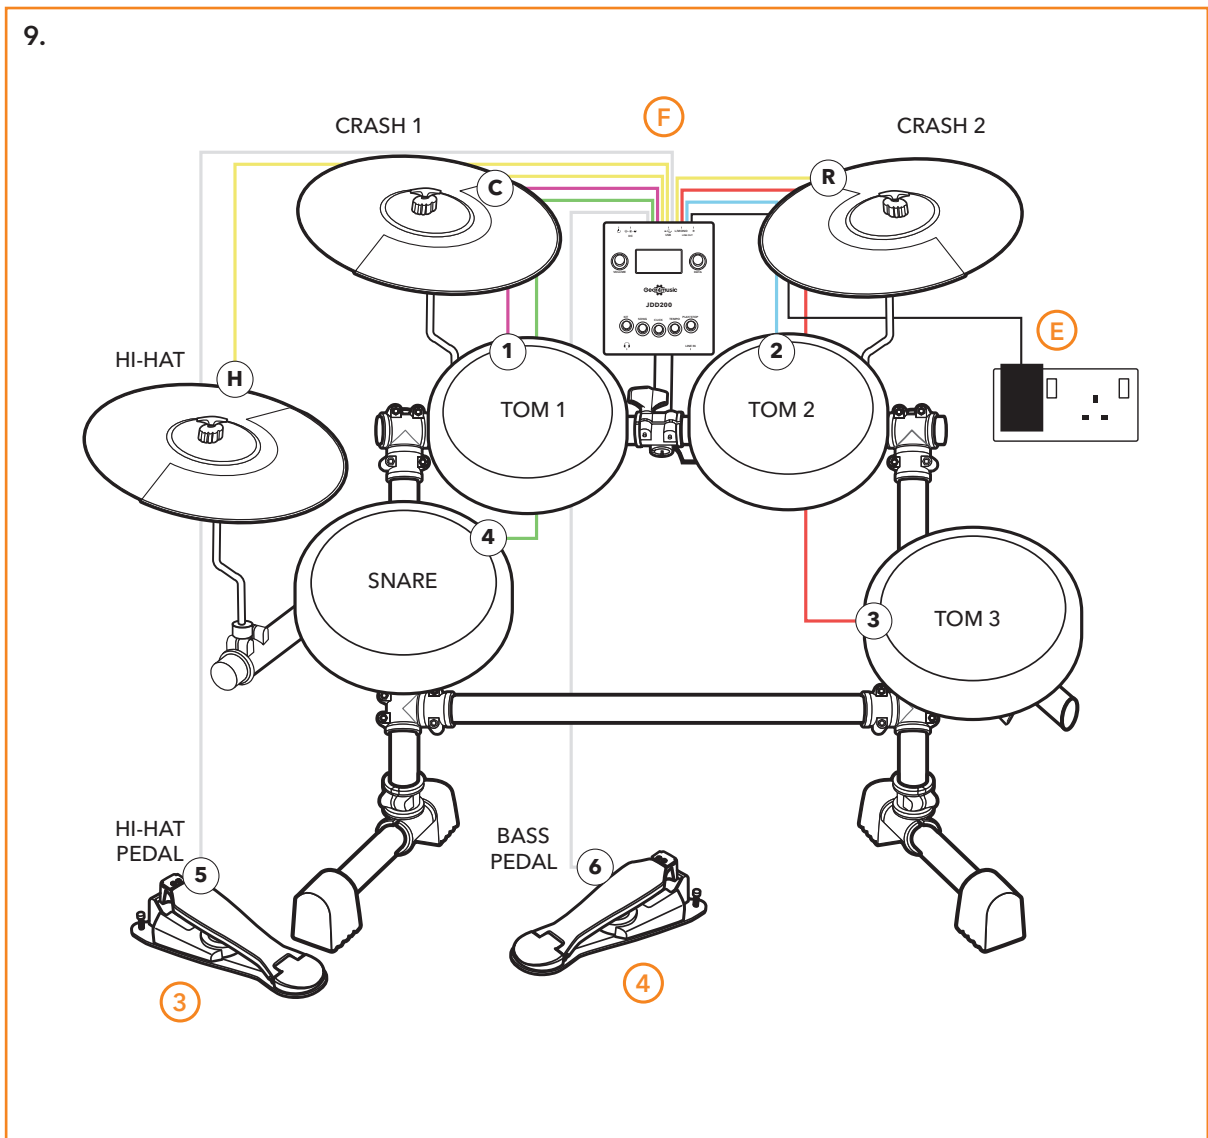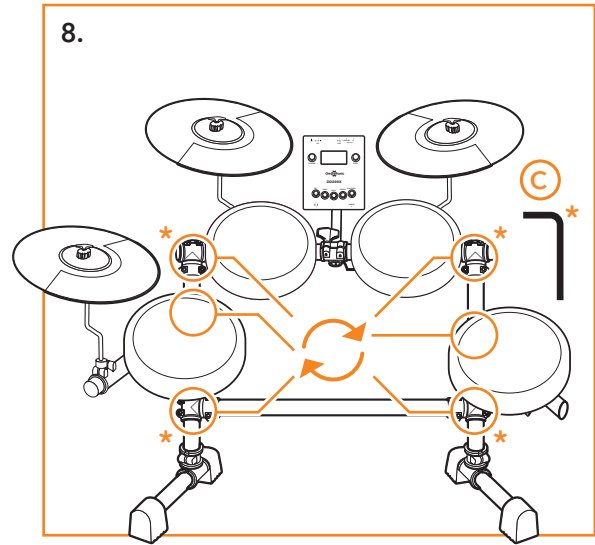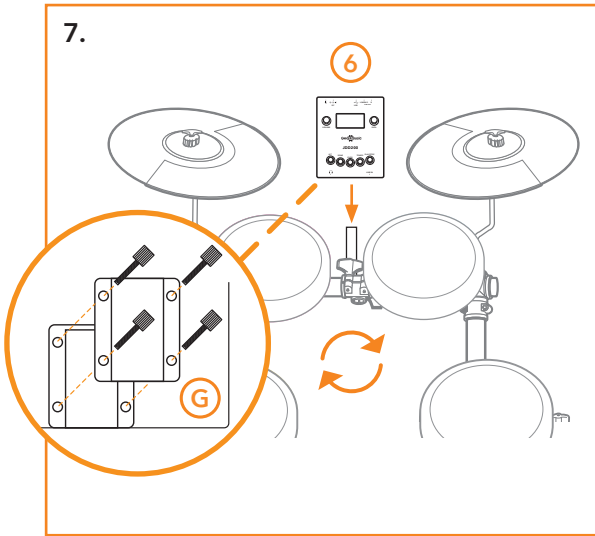

FUNCTIONS

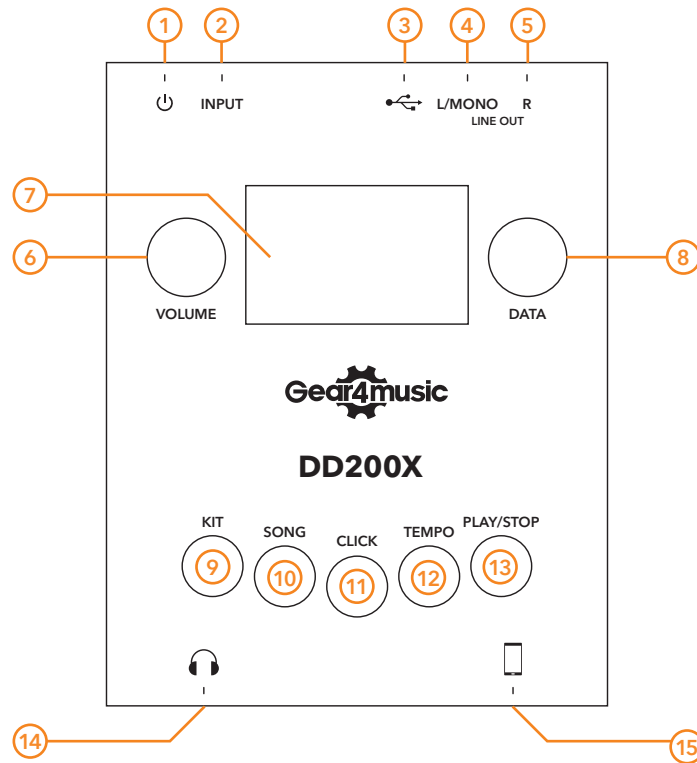

1. POWER

Use this to switch the DD200X on or off. A power supply needs to be connected to enable the module to work.

2. INPUT

Connect the DD200X module to a power source here via the supplied 9V power supply.

3. USB

Use this to connect the DD200X to your computer.

4. L/MONO

Insert a jack cable here to connect the DD200X to your amplifier, drum monitor, interface or PA system. Please note, this is not suitable for headphones.

5. R

For a stereo output you'll need to insert an additional cable into the R jack output.

6. VOLUME

Use this wheel to control the overall volume of the DD200X.

7. SCREEN

View all module information on this screen.

8. DATA

Use this wheel to adjust the settings within the drum kit after being selected by the individual buttons below.

9. KITS

Press this button to explore the 38 drum kits on offer. In order to scroll through please rotate the data wheel to select the sound you desire.

10. SONG

Press this button to explore the 44 accompaniment songs built into the DD200X. The SCREEN will show S.01 - S.44 to display this information.

Use the PLAY/STOP button to start and stop the current song. An index of songs is available on page 9.

11. CLICK

Press this button to activate the metronome. You have the choice of several different rhythms; the screen will show C.01 - C.12 depending on the desired rhythm.

Please note, the click button can mute the drum accompaniment during SONG mode, allowing you to play along to the track.

12. TEMPO

Press this button to adjust the tempo that the metronome counts at. This also allows you to adjust the speed of the song. Pressing the tempo button will display a number on the SCREEN. Use the DATA wheel to increase or decrease this value from 40 - 250 BPM.

13. PLAY/STOP

Use this to start and stop the accompaniment.

14. HEADPHONES

Connect your 3.5mm minijack headphones here. Please ensure the volume is low before using the headphones. Once comfortable, turn up to your desired volume.

15. LINE IN

Connect external audio devices such as a laptop or mp3 player to the drum kit here. This is useful for playing along to your own music. The volume can only be controlled via the external audio device. Ensure the output volume on the external audio device is low before connecting, and then turn up to the desired volume.

KIT LIST

D.01 - Pop1
D.02 - Pop 2
D.03 - Studio 1
D.04 - Studio 2
D.05 - Studio 3
D.06 - Garage
D.07 - Jazz
D.08 - Indie
D.09 - Hard Rock
D.10 - Old Rock
D.11 - Funky Jazz
D.12 - Funky Jazz 2
D.13 - Fusion
D.14 - Dance
D.15 - Electric
D.16 - Modern
D.17 - Latin
D.18 - Alternative
D.19 - Bubinga
D.20 - Samba
D.21 - Custom 1
D.22 - Custom 2
D.23 - Pop Live
D.24 - Club Dance
D.25 - Progress
D.26 - GM Standard
D.27 - GM Room Set
D.28 - GM Power Set
D.29 - GM Electric Set
D.30 - Percussion 1
D.31 - Percussion 2

SONG LIST

S.01 - Acid Jazz
S.02 - Ballad Beat
S.03 - Big Band
S.04 - Breakbeat
S.05 - Cha Cha
S.06 - Cool Soul
S.07 - Dancey Pop
S.08 - Dixie
S.09 - Easy Beat
S.10 - Easy Rock
S.11 - Easy Soul
S.12 - Fast Funk
S.13 - Folk
S.14 - Folk Shuffle
S.15 - Funk
S.16 - Hard Rock
S.17 - Hard Rock 2
S.18 - Hip Hop
S.19 - Jazz Dance
S.20 - Mambo
S.21 - Polka

S.22 - Pop Rock
S.23 - Pop Swing
S.24 - Pop
S.25 - Pop Disco
S.26 - Pop Ballad
S.27 - Pop Waltz
S.28 - R&B Ballad
S.29 - Real Soul
S.30 - Reggae
S.31 - Rock Beat
S.32 - Folk Rock
S.33 - Salsa
S.34 - Samba
S.35 - Shuffle
S.36 - Slow Beat
S.37 - Slow Pop
S.38 - Soft Beat
S.39 - Soul
S.40 - Standard Pop
S.41 - Swing
S.42 - Techno
S.43 - Techno Pop
S.44 - Waltz

RHYTHM LIST

C.01 - 1/4 Notes
C.02 - 1/8 Notes
C.03 - Offbeat 1/8 Notes
C.04 - 1/8 Note Triplets
C.05 - 1/8 Triplet Pattern
C.06 - 1/16 Notes
C.07 - Offbeat 1/16 Notes
C.08 - 1/16 Note Pattern
C.09 - 1/16 Gallop Pattern
C.10 - 1/16 Note Pattern with Rest
C.11 - 1/16 Note Swing
C.12 - 1/16 Note Triplets

MIDI CHART					
FUNCTION		TRANSMITTED	RECOGNISED	NOTES	
BASIC CHANNEL	DEFAULT CHANGED	10 x	1-8 & 10-16 x		
MODE	DEFAULT MESSAGE ALTERED	x x *****	Mode 3 x *****		
NOTE NUMBER	TRUE VOICE	0 - 127 *****	0 - 127 0 - 127		
VELOCITY	NOTE ON NOTE OFF	0 - 127 x	0 - 127 0 - 127		
AFTER TOUCH	KEYS CHANNELS	x x	x x		
PITCH BEND					
CONTROL CHANGE		0 1 4 5 6 7 10 11 64 65 66 67 71 72 73 74 80 81 90 91 120 121 123	x x	o o	Bank Select Modulation Foot Control Portamento Time Data Entry Volume Pan Expression Sustain Pedal Portamento ON/OFF Sostenuto Pedal Soft Pedal Resonance Release Time Attack Time Cut Off Reverb Program Chorus Program Reverb Level Chorus Level All Sound OFF Reset All Controller *1 All Notes OFF *1
PROGRAM CHANGE		x	o		
SYSTEM EXCLUSIVE		x	o		
SYSTEM COMMON	SONG POSITION SONG SELECT TUNE	x x x	x x x		
SYSTEM REAL TIME	CLOCK COMMANDS	x x	x x		
AUX MESSAGES	LOCAL ON/OFF ALL NOTES OFF ACTIVE SENSE RESET	x x x x	x x x x		

SPECIFICATIONS

PADS

Snare Pad8" Single trigger mesh pad
Tom Pads8" Single trigger mesh pad
Cymbal Pads	Crash, Ride and Hi-Hat single trigger rubber pads
Kick Drum	Pedal control

MODULE

Preset Kits	38
Training Patterns	44
Controls	Volume, Kit Select, Song Select, Click, Tempo, Adjust, Start/Stop, Data Scroll/Select

DIMENSIONS AND WEIGHTS

Set Up (W x H x D)530-1080 x 820-1170 x 540 mm
Folded Down530 x 775 x 350 mm (approx.)
Playing Footprint	1220 x 1200 mm
Weight	12kg

KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM
METALLVÄGEN 45A | 195 72 ROSERSBERG | STOCKHOLM | SVERIGE
LAHNSTRASSE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **info@gear4music.com**