

**Premier**<sup>®</sup>

# PowerPlay

Digital Drum Kit

## User Manual

PM-PP1 / PM-PP1X



## WARNING!

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel. Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock. The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. No naked flame sources, such as lighted candles, should be placed on the product. Allow adequate air circulation and avoid obstructing vents (if present) to prevent internal heat build-up. The ventilation must not be impeded by covering the appliance with items such as newspapers, table-cloths, curtains etc. The mains plug is used to disconnect the appliance from the mains supply. Ensure that the mains outlet is easily-accessible and remove the plug from the mains outlet if you notice any abnormality with the appliance.

## VAROVÁNÍ!

Nezakrývajte. Uvniť nejsoú žádné součásti opravitelné uživatelem. S požadavkem na servis se obracejte na kvalifikované servisní oddělení. Neumisťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným prašením, mechanickými vibracemi nebo šokem. Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt. Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt. Umožněte dostatečnou cirkulaci vzduchu a vyhněte se obstrukci ventilátorů (pokud jsou přítomné) pro předěti interního přehřívání. Ventilace nesmí být narušena překrytím zařízení výrobky jako např. noviny, kuchyňské utěrky, záclony apod. Hlavní kabel umožňuje odpojit zařízení od elektriny. Ujistěte se, že hlavní napájecí výstup je snadno dostupný a odpojte kabel pokud zaznamenáte jakoukoliv abnormálnítu na zařízení.

## DVARSEL!

Dækslet må ikke åbnes. Ingen bruger-udskeftelige dele indeni. Overlad service til kvalificeret service personale. Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støj, mekaniske vibrationer eller stød. Produktet må ikke udsættes for vand eller stønk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet. Må ikke placeres nær åben ild, tændte stearinlys må ikke placeres på produktet. Vær sikker på at der er tilstrækkelig luftcirkulation og undgår at dække ventiler (hvis der er nogen) for at undgå at produktet bliver varmt. Ventilationen må ikke blokeres med overdækning af apparatet med genstande som aviser, dug, gardiner osv. Stikket bruges til at afbryde apparatet fra strømmen. Sikre at stikkontakten er let tilgængelige, og fjern stikket fra stikkontakten, hvis du bemærker noget unormalt med apparatet.

## WAARSCHUWING!

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhouden over aan bevoegd onderhoudspersoneel. Plaats het product niet in de buurt van een hittebron zoals een radiator of in direct zonlicht of in een stofrijke omgeving, mechanische vibratie of schok. Plaats het product niet in de buurt van spatende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas. Er mogen geen open vlammen zoals aangestoken kaarsen op de apparatuur worden geplaatst. Zorg om overhitting te voorkomen voor voldoende ventilatie en bellemmer ventilatieroosters niet. Bedek het product niet met dingen zoals kranten, tafellakens, gordijnen etc. De stekker van dit apparaat wordt gebruikt om het apparaat aan en uit te zetten. Zorg ervoor dat het stopcontact gemakkelijk bereikbaar is en haal de stekker uit het stopcontact als u enige onregelmatigheden ondervindt.

## VAROITUS!

Älä avaa kantta. Ei sisällä käyttäjä-huollettavia osia. Huollot saa suorittaa vain pätevä huoltomies. Älä säilytä tuotetta minkään kuumen lähellä kuten patteri tai suoraan auringonpaisteesta, pölyisessä, mekaanisessa värinässä tai iskussa. Tuotetta ei saa altistaa tippuvallalle tai loiskeelle tai nesteitä sisältäviä tuotteita kuten maljakkoo eivät saa olla tuotteen lähetyvillä. Avotulita kuten sytytetty kynttilä ei saa olla tuotteen päällä. Salli riittävä ilmankierto ja vältä tuuletusaukkojen tukkiminen (jos sellaisia on olemassa) estämään sisäisen lämmön muodostuminen. Tuuletusta ei saa estää peittämällä laite esineillä, kuten sanomalehdillä, pöytäliinoilla, verhoilla jne. Verkkoirtapistoketta käytetään irrottamaan laite verkkovirrasta. Varmista, että pistorasia on helposti saatavilla ja irrota pistotulppa pistorasiasta, jos havaitset jotain epänormaalia laitteessa.

## ATTENTION!

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation à du personnel de réparation qualifié. Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques. L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé dessus. Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil. Assurer une circulation d'air suffisante et éviter d'obstruer les fentes (le cas échéant) afin d'éviter une surchauffe interne. La ventilation ne doit pas être bloquée en couvrant l'appareil avec des objets tels que des journaux, des nappes, des rideaux, etc. La prise secteur est utilisée comme dispositif de débranchement. La prise murale doit être facile d'accès, et en cas d'anomalie de l'appareil, débrancher la prise de courant au niveau de la prise murale.

## WARNUNG!

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile. Überlassen Sie Wartungsarbeiten qualifiziertem Fachpersonal. Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Vibrationen oder Stößen. Schützen Sie das Produkt vor tropfenden oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt. Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden. Sorgen Sie für eine ausreichende Luftzirkulation und vermeiden Sie, dass die Lüftungsschlitze (falls vorhanden) abgedeckt werden, um einen internen Wärmestau zu verhindern. Die Belüftung darf nicht durch Abdecken des Gerätes mit Gegenständen wie Zeitungen, Tischdecken, Vorhängen usw. blockiert werden. Der Netzstecker dient zum Trennen des Gerätes vom Netz. Vergewissern Sie sich, dass die Steckdose leicht zugänglich ist, und ziehen Sie den Stecker aus der Steckdose, wenn Sie eine Anomalie mit dem Gerät bemerken.

## AVVERTIMENTO!

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto. Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock. Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto.

EN

Non esporre il prodotto a fuoco, candele o oggetti simili. Assicurarsi la circolazione dell'aria e non ostruire le ventole, se presenti, per evitare il surriscaldamento. La ventilazione non deve subire impedimenti dovuti a giornali, tovaglie, tende, ecc. La spina principale viene utilizzata per disconnettere il prodotto dalla principale fonte di energia. Assicurarsi che la spina sia facilmente accessibile e disconnettere l'unità nel caso si notassero dei difetti di funzionamento.

## ADVASEL!

Ikke åpne dekslet. Inneholder ingen deler som kan brukes. Overlat reparasjon til kvalifisert servicepersonell. Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støy, mekanisk vibrasjon eller støt. Produktet må ikke utsettes for drypping eller spruting, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet. Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet. Tillat tilstrekkelig luft sirkulasjon og unngå å blokkere ventiler (hvis tilstede) for å forhindre intern varmeoppsamlning. Pass på at ventilasjon ikke hindres ved å unngå å dekke apparatet med ting som aviser, bordduker, gardiner osv. Stikkontakten brukes til å koble apparatet fra strømforsyningen. Forsikre deg om at stikkontakten er lett tilgjengelig og ta støpelet ut av stikkontakten hvis du oppdager uregelmessigheter under bruk av apparatet.

NO

CZ

DK

NL

FI

FR

DE

IT

## OSTRZEŻENIE!

Nie otwierać pokryw. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla wyszkolonego personelu. Nie umieszczać produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym wibracjom. Produkt ten nie może być ekspozycyjny na kapanie lub chłapanie, a przedmioty wypelnione płynami, takie jak wazy, nie powinny być na nim umieszczane. Zbliża otwartego ognia, takie jak np. świece, nie powinny być umieszczone na produkcie. Należy zapewnić odpowiednią wentylację i uniknąć blokowania otworów wentylacyjnych, aby uniknąć niewyżrznego wzrostu temperatury. Wentylacja nie powinna być utrudniana poprzez nakrywanie urządzenia gazetami, obrusami czy zasłonami. Wtyczka sieciowa służy do odłączenia urządzenia od zasilania sieciowego. Należy upewnić się, że gniazdo sieciowe jest łatwo dostępne, a w razie wystąpienia nieprawidłowości w funkcjonowaniu urządzenia odłączyć je od zasilania sieciowego.

PL

## ATENÇÃO!

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado. Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque. Não mantenha o produto num local húmido ou perto líquidos como vasos, etc. Não aproxime o produto a fontes de fogo vivo, como velas. Mantenha o produto num espaço suficientemente arejado de forma a evitar sobre-aquecimento. Não bloqueie a ventilação do instrumento, cobrindo-o com artigos como cortinas, toalhas de mesa ou jornais. O transformador é utilizado para conectar e desconectar o artigo da principal fonte de energia. Certifique-se que a ficha é facilmente acessível e que o artigo está devidamente ligado à corrente se detectar alguma anomalia com o funcionamento.

PT

## VÝSTRAHA!

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko. Nevystavujte produkt do blízkosti akéhokoľvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so sľnečným žiarením, nadmerným prašným prostredím, mechanickým vibráciám alebo šokom. Produkt nesmie prísť do kontaktu s vodou a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt. Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkt. Umožnite dostatočnú cirkuláciu vzduchu a zabráňte obstrukcii ventilačných otvorov (ak sú prítomné) kvôli prevencii vnútorného prehrievania. Ventilácia nesmie byť narušená prekrytím zariadenia výrobkami ako napr. noviny, kuchynské utierky, záclony a pod. Hlavný kábel umožňuje odpojit zariadenie od elektriny. Uistite sa, že hlavný napájecí výstup je ľahko dostupný a odpojte kábel ak zaznamenáte akúkoľvek abnormálnu na zariadení.

SK

## OPOZORILO!

Ne odpirajte pokrva. V notranjosti ni nobenih delov, ki jih uporabnik lahko sam popravlja. Popravilo prepustite usposobljenemu oseboju. Ne postavljajte izdelka na lokacijo v bližini vira toplote, kot je radiator, ali na območje, ki je izpostavljeno neposredni sončni svetlobi, pretiranemu prahu, mehanskim treslajem ali udarcem izdelek ne sme biti izpostavljen kapljanju ali brizganju in nobeni predmeti, napolnjeni z vodo, kot so vaze, se ne smejo postaviti na izdelek. Nobenega od virov odprtega ognja, kot so vžgane sveče, se ne sme postavljati na izdelek. Zagotovite zadostno kroženje zraka in umaknite ovire na odprtinah (če obstajajo), zaradi preprečevanja kopičenja notranje toplote. Ventilacija se ne sme ovirati s prekrivanjem naprave s predmeti, kot so časopisi, prti, zavese itn. Omrežni vtič se uporablja za izklop naprave iz električnega omrežja. Poskrbite, da je omrežna vtičnica zlahka dostopna in izvlecite vtičnik iz vtičnice, če opazite kakršno koli nepravilnost pri napravi.

SI

## ¡ADVERTENCIA!

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado. No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo. No ponga objetos llenos de líquidos en la superficie de este aparato. No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato. Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstruya o tape las aberturas con objetos como periódicos, manteles, cortinas, etc. El enchufe se utiliza para desconectar el producto de la corriente. Si nota algún defecto, desconecte el de la toma de corriente.

ES

## VARNING!

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal. Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock. Produkten bör ej bli utsatt för droppande eller stänk och ingen objekt fyllda med vätskor som t.ex vaser skall ställas på produkten. Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten. Tillåt tillräcklig luftcirkulation och blockera ej eventuella ventiler för att undvika intern överhettning. Ventilen bör ej täckas av föremål såsom tidningar, dukar, gardiner etc. Nätkontakten används för att koppla bort apparaten från eluttaget. Se till att eluttaget är lättåtkomligt och avlägsna kontakten från eluttaget om du upptäcker något abnormt med produkten.

SE

---

# Contents

Introduction . . . . .	4	<b>Display / Control</b> . . . . .	21
Functions . . . . .	5-6	<b>USB</b> . . . . .	21
Main Screen . . . . .	7	<b>Hi-Hat</b> . . . . .	22
Drum Kit List . . . . .	8	<b>Coach Mode</b> . . . . .	23
Customising a Kit . . . . .	9	<b>Warm Up Mode</b> . . . . .	23
Naming a Kit . . . . .	9	<b>Warm Up Settings</b> . . . . .	24
Instrument List . . . . .	10	<b>Quiet Mode</b> . . . . .	24
Volume Editor . . . . .	11	<b>Song List</b> . . . . .	25
Song Mode . . . . .	12	<b>Kit List</b> . . . . .	25
Song List . . . . .	12	<b>Voice List</b> . . . . .	26-30
Mute List . . . . .	13	<b>Specifications</b> . . . . .	31
Song Settings . . . . .	13		
Recording a Performance . . . . .	14		
Recording . . . . .	14		
Tempo . . . . .	15		
Tempo Parameters . . . . .	15		
Sound Editing Mode . . . . .	16		
Trigger Settings . . . . .	16		
Parameter Chart . . . . .	17		
MIDI Settings . . . . .	18		
Mix Settings . . . . .	19		
Effect Interface . . . . .	19		
Room Interface . . . . .	20		
Reverb Interface . . . . .	20		
EQ Interface . . . . .	20		
Utility Settings . . . . .	21		
System Reset . . . . .	21		

---

## Introduction

Thank you for purchasing the Premier PowerPlay / PowerPlay-X Digital Drum Kit. To get the most out of your product, please read this manual carefully.

## Box Contents

### PowerPlay

- 1 x PowerPlay module
- 1 x Heavy duty steel frame
- 1 x 10" Dual zone snare pads
- 3 x 10" Dual zone toms
- 1 x 12" Kick pad with included pedal
- 1 x 12" Dual zone crash cymbal
- 1 x 12" Dual zone ride cymbal
- 1 x Hi-hat with remote foot control
- 1 x Pair of drumsticks



### PowerPlay-X

- 1 x PowerPlay module
- 1 x Heavy duty steel frame
- 1 x 10" Dual zone snare
- 3 x 10" Dual zone toms
- 1 x 12" Kick pad with included pedal
- 2 x 12" Dual zone crash cymbal
- 1 x 14" Triple zone ride cymbal
- 1 x Hi-hat on tripod stand (box 2)
- 1 x Pair of drumsticks

## Key Features

- Full mesh pad kit with authentic kick pad (PowerPlay/X) and hi-hat stand (X only)
- Includes 25 preset kits, 25 user kits and 25 practice songs
- Achieve total control over the feel of the kit thanks to the unique tensioning design featured on snare and tom pads
- Curate your signature drum sound via 423 fully-customisable samples
- The broad range of connectivity on offer makes both kits ideal for practice and performance

# Functions

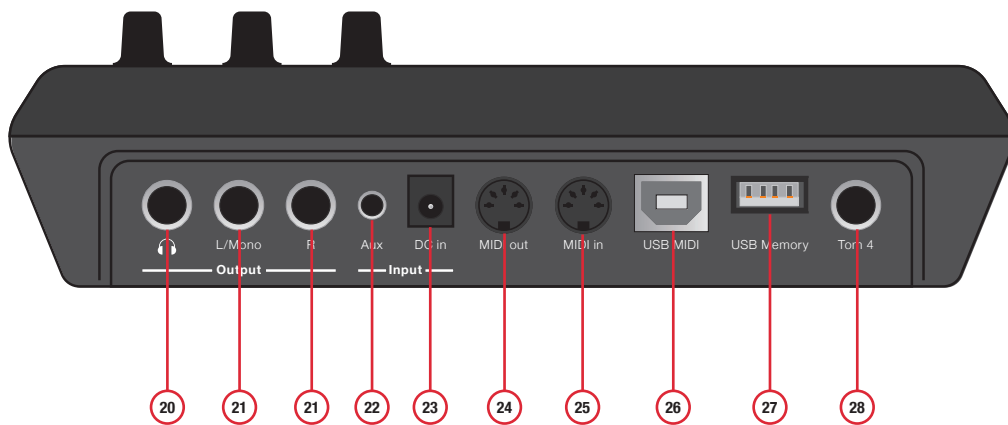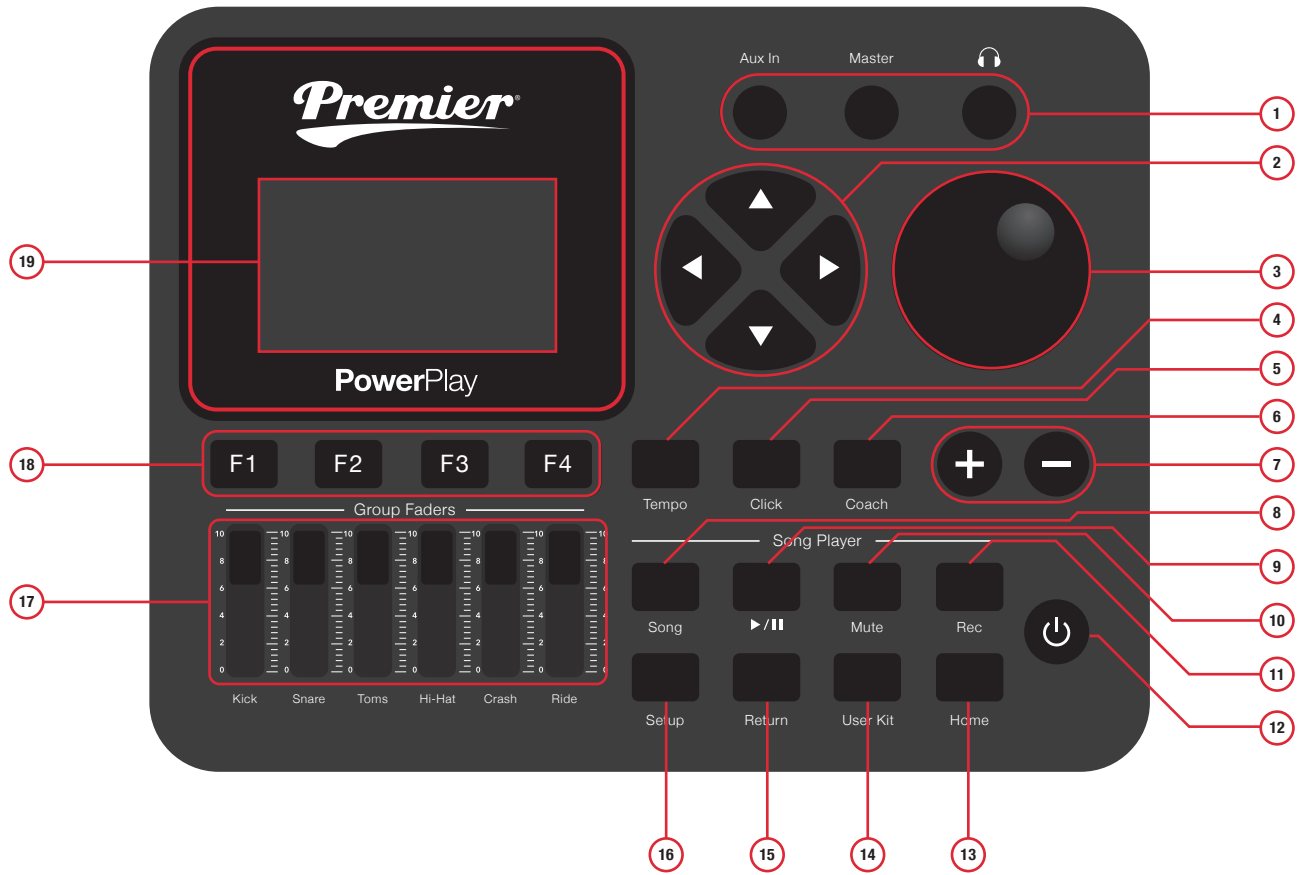


- 
- 1. Aux In**  
Use this dial to determine the volume of the auxiliary input.
- Master**  
Use this dial to determine the global volume of the PowerPlay/X.
- Headphone**  
Use this dial to determine the volume of the headphone output.
- 2. Cursor**  
Use these buttons to navigate your way through the interface.
- 3. Rotary**  
Use this rotary controller to make macro value changes.
- 4. Tempo**  
Press this button to enter tempo settings and edit parameters.
- 5. Click**  
Press this button to engage/disengage the metronome.
- 6. Coach**  
Press this button to enter the coach menu and find the practice menu.
- 7. + / -**  
Use these buttons to adjust setting values.
- 8. Song**  
Press this button to enter song mode and edit parameters.
- 9. Play / Pause**  
Press this button to start/stop the current song.
- 10. Mute**  
Press this button to mute sounds in the current song.
- 11. Rec**  
Press this button to record your performance.
- 12. Power**  
Press this button to turn the PowerPlay drum kit on/off.
- 13. Home**  
Press this button to return to the home page.
- 14. User Kit**  
Press this button to enter the user kit section.
- 15. Return**  
Press this button to confirm current settings and return back to the previous screen.
- 16. Set Up**  
Press this button to enter the set-up page and make changes to MIDI, triggering and pad sensitivity.
- 17. Group Faders**  
Adjust these faders to determine the exact level for each element of your drum kit.
- 18. F1-F4**  
Press these buttons to access any functions page shown at the bottom of the display.
- 19. Screen**  
Use this screen to view all relevant information for the PowerPlay/X.
- 20. Headphones**  
Use this output to connect a pair of 6.35mm stereo headphones.
- 21. L / Mono and R**  
Use these outputs to connect to an amp / mixer or interface. Please note, should you desire to just take a mono feed then only use the left output.
- 22. Aux**  
Use this input to connect an external audio device such as a smartphone, tablet or computer to play audio through the PowerPlay/X.
- 23. DC-In**  
Connect the PowerPlay/X to a power source here.
- 24. MIDI Out**  
Use this output to connect the PowerPlay/X to your MIDI interface.
- 25. MIDI In**  
Use this input to trigger sounds generated by MIDI data.
- 26. USB MIDI**  
Use this input to connect the PowerPlay/X to your computer to play/record MIDI data.
- 27. USB Memory**  
Connect a USB flash drive here to play audio through the PowerPlay/X.
- 28. Tom 4**  
Use this input to connect an additional pad.
-

---

## Main Screen

Press [HOME] to enter the main screen.

1. Kit type
2. Current hitting pad
3. Kit number
4. Kit name
5. Velocity indicator
6. Function bar
7. USB icon

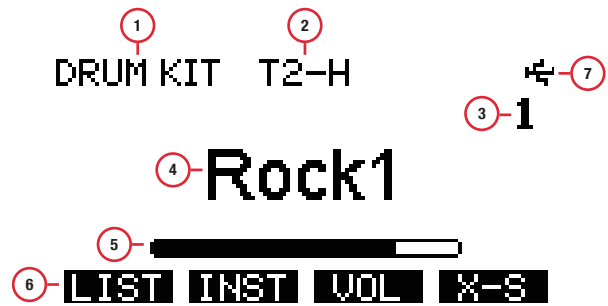

Button	Function
◀	Press this button to access the previous kit.
▶	Press this button to access the following kit.
+	Press this button to access the previous kit.
-	Press this button to access the following kit.
F1	Press this button to enter the Drum Kit List, see p8 for more details.
F2	Press this button to enter the Instrument List, see p10 for more details.
F3	Press this button to enter the volume editor, see p11 for more details.
F4	Press this button to switch off X-Stick. Please note X-S means on, OFF means off.
Kit / Home	Press this button to switch between the preset kit and user kit.
Editor	Kit select.

---

## Drum Kit List

When on the main home page press [F1] to enter the drum kit list.

1. Current drum kit number
2. Drum kit name
3. Function bar



Button	Function
◀	Press this button to access the previous kit.
▶	Press this button to access the following kit.
+	Press this button to access the previous kit.
-	Press this button to access the following kit.
F1	Press this button to switch between the preset kits and user kits.
F2	Press this button to delete the current kit. Please note, preset kits cannot be deleted.
F3	Press this button to enter the edit function and adjust the volume of the pad.
F4	Press this button to create a new kit. Please note, the current kit will be copied.
Editor	Kit select.



## Customising a Kit

When in the drum kit interface press [F4] to enter the kit editing interface.

### 1. [F1]

Press this button to rename the current kit.

### 2. [F2]


When a USB card is inserted press this button to export the kit.

### 3. [F3]

When a USB card is inserted press this button to import previously created kits.

### 4. [F4]

Press this button to return to the home screen.

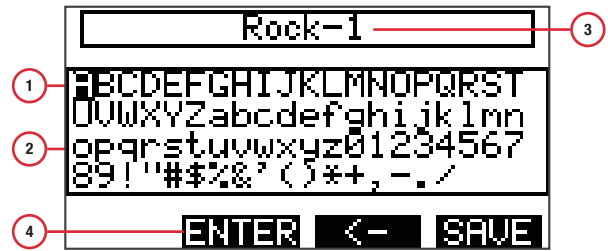

## Naming a Kit


When in the drum kit interface press [F3] to create a new kit. In order to name this kit press [F1].

### 1. Letter currently selected

### 2. Characters

### 3. Current kit name

### 4. Function bar

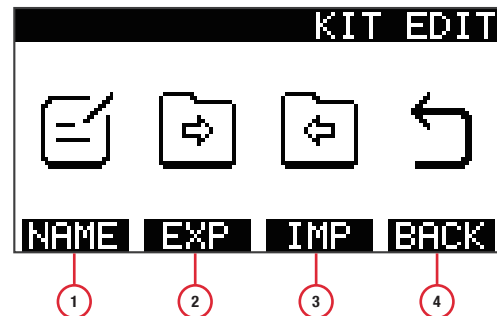


Button	Function
▲	Press this button to access the previous character.
▼	Press this button to access the following character.
◀	Press this button to access the line above.
▶	Press this button to access the line below.
F2	Press this button to select the character you desire.
F3	Press this button to delete the last character.
F4	Press this button to save the current kit name.
Editor	Kit select.

---

# Instrument List

When in the drum kit interface, press [F2] to enter the instrument settings.

1. Instrument number
2. Preset name
3. Function bar
4. Pad currently selected

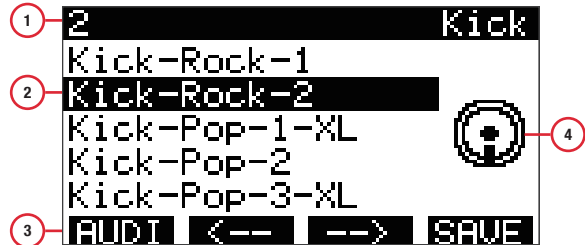


Button	Function
▲	Press this button to access the previous instrument.
▼	Press this button to access the following instrument.
◀	Press this button to access the previous pad.
▶	Press this button to access the following pad.
+	Press this button to access the previous instrument.
-	Press this button to access the following instrument.
F1	Press this button to listen to the current instrument.
F2	Press this button to move to the previous pad's instrument sound.
F3	Press this button to move to the next pad's instrument sound.
F4	Press this button to exit the current instrument and save any changes.
Editor	Instrument select.

# Volume Editor

When on the home screen, press [F3] to adjust the volume of each pad.

1. Current pad
2. Volume
3. Volume bar
4. Volume faders

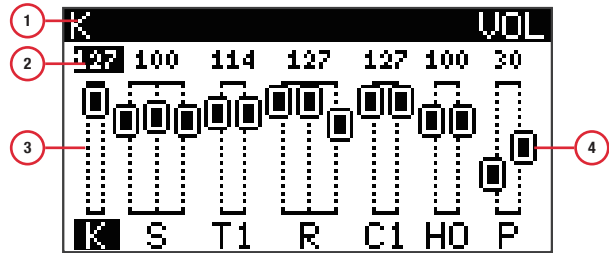

Button	Function
▲	Press this button to access the previous pad.
▼	Press this button to access the following pad.
◀	Press this button to increase the volume.
▶	Press this button to decrease the volume.
+	Press this button to increase the volume.
-	Press this button to decrease the volume.
<b>Editor</b>	Volume adjust.


**Please note:** You can also select a pad to edit the volume by striking it.

---

## Song Mode

Press [SONG] to enter song mode.

1. Name of current song
2. Progress bar
3. Volume indicator
4. Song length

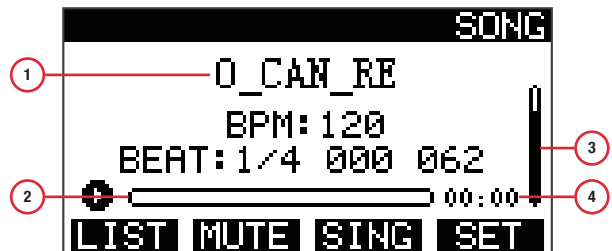

Button	Function
▶ /	Press this button to play/stop the song.
▲	Press this button to play the previous song.
▼	Press this button to play the next song.
◀	Press this button to increase the volume.
▶	Press this button to decrease the volume.
F1	Press this button to access the Song List.
F2	Press this button to enter the mute list to isolate / remove elements of the song.
F3	Press this button to determine playback mode.
F4	Press this button to enter the song setting interface.
Editor	Edit playback process of song.

## Song List

When in song mode, press [F4] to load the list of songs available.

Upon selecting your song press [RETURN] to go back to the previous screen.

---

## Mute List

When in song mode, press [F2] to load the mute screen.


- F1**  
Press this button to mute/unmute the drums.
- F2**  
Press this button to mute/unmute the piano.
- F3**  
Press this button to mute/unmute the bass.
- F4**  
Press this button to mute/unmute other parts.



## Song Settings

When in song mode, press [F4] to enter song settings.

- Adjust this function to determine the playback speed of the in-built songs.
- Adjust this function to determine the start of a loop for an in-built song.
- Adjust this function to determine the end of a loop for an in-built song.
- Engage this function to record whilst performing the current song.

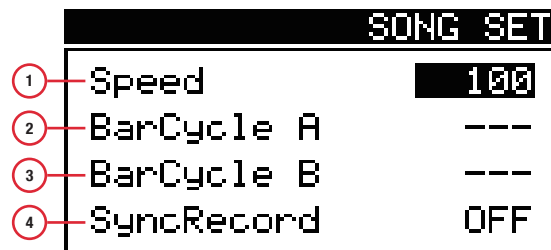

---

## Recording a Performance

Press [REC] to enter the recording function.

1. File name
2. Progress bar
3. Playback progress
4. Song duration



Button	Function
<b>Rec</b>	Press this button to start/stop recording.
◀	Press this button to access the previous recording.
▶	Press this button to access the following recording.
<b>F1</b>	Press this button to open the recorded file.
<b>F2</b>	Press this button to play/pause the recorded file.
<b>F3</b>	Press this button to abort the current recording.
<b>F4</b>	Press this button to save the recording.

## Recording

After pressing [REC] you will be given three seconds to prepare before the recording begins.




---

# Tempo

Press [TEMPO] to open the settings page.

Button	Function
Click	Press this button to open/close the tempo menu.
◀	Press this button to alter the parameter of the selected option.
▶	Press this button to alter the parameter of the selected option.
▲	Press this button to scroll upwards through the parameters.
▼	Press this button to scroll downwards through the parameters.
+	Press this button to edit the parameter of the selected option.
-	Press this button to edit the parameter of the selected option.

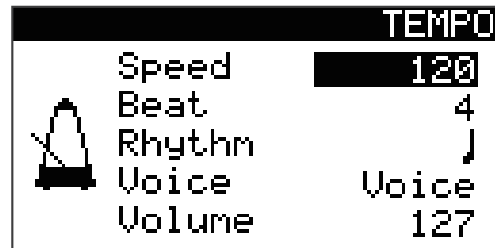

## Tempo Parameters

Parameter	Value	Description
<b>Speed</b>	20 - 260	This allows you to adjust the BPM.
<b>Beat</b>	1 - 9	This allows you to adjust the beats per measure.
<b>Rhythm</b>	4 Types	This allows you to adjust the rhythm of each beat.
<b>Voice</b>	6 Types	This allows you to adjust the sound of the metronome.
<b>Volume</b>	0 - 127	This allows you to adjust the volume of the metronome.

---

## Sound Editing Mode


Press [SET UP] to enter the settings page.

Button	Function
F1	Press this button to enter the Trigger Settings interface.
F2	Press this button to enter the MIDI Settings interface.
F3	Press this button to enter the Mix Settings interface.
F4	Press this button to enter the Utility interface.

## Trigger Settings

When in settings, press [F1] to enter trigger settings.

1. Current pad
2. Values
3. Functions page

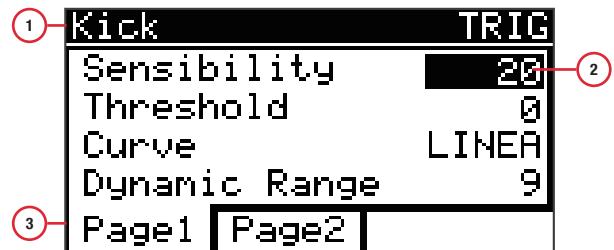

Button	Function
▲	Press this button to select the previous pad.
▼	Press this button to select the following pad.
◀	Press this button to select the previous parameter.
▶	Press this button to select the following parameter.
F1	Press this button to select page 1.
F2	Press this button to select page 2.
+	Press this button to adjust the selected parameter.
-	Press this button to adjust the selected parameter.




## Parameter Chart

Parameter	Value	Description
Sensitivity	0-31	You can adjust the sensitivity value to accommodate your own style of playing. This grants you more control over the dynamics of your performance.  When higher sensitivity levels are set, the pads will be susceptible to lighter hits. Lower values will reduce the sensitivity.
Threshold	0-31	This setting allows you to determine a threshold at which the pad will respond to hits.  You'll find this useful for minimising the risk of vibrations triggering sounds on other pads.  This setting can be adjusted on demand and should be repeated until you find the perfect setting that suits your playing style.
Curve		These settings help control the relationship between velocity and volume. Please adjust this curve until you achieve a response that feels natural to you.  Linear – Linear offers the most natural relationship between velocity and volume.  EXP1/EXP2 – In contrast to linear, the heavier the hit, the greater the velocity.  LOG1/LOG2 – Compared to EXP1/EXP2, the lighter the hit, the greater the velocity.  SPLINE – Spline offers a huge response to powerful hits.  LOUD1/LOUD2 – These settings allow you to achieve powerful drum hits with very little strength required. This will come in particularly useful when you require consistent hits.
Dynamic Range	0 - 9	This adjusts the overall dynamic range of the drum kit. When set at a low volume the drum kit will only produce loud hits. When set at "9" you will be able to play at all volumes.
Scan Time	0 - 4.0(ms)	This determines the detection time of the signal after you first hit the pad.
Retrig Level	0 - 16	This setting minimises the risk of unwanted re-triggering. Occasionally the module will interpret a sample fading out as a new hit and repeat the sound. Adjusting this setting resolves this issue.
Mask Time	0 - 64(ms)	This setting minimises the risk of accidental double triggering. Adjust this setting if you experience problems with ghost notes.
Anti-Cross	0 - 80	This setting minimises cross talk (the accidental triggering of a pad caused by vibrations when hitting another aggressively). In most cases you can prevent cross talk by moving the pads away from each other and checking that they are not overtightened on the frame. However if the issue still occurs, adjust this setting until cross talk is eliminated.
Rim Gain	0 - 8	This allows you to adjust the sensitivity of the rim pad. The higher the value, the greater the sensitivity.
Head Rim	0 - 80	When hitting a drumhead hard you may accidentally trigger the rim. Increase this setting to reduce the sensitivity of the rim.
Xstick Adj	-9 - +9	This allows you to determine the strike strength of the cross-stick hit.
Pedal HH Sens	-5 - +5	This allows you to adjust the sensitivity of the closed hi-hat.

# MIDI Settings

When in settings, press [F2] to enter MIDI settings.

1. Function
2. Parameter
3. Functions page

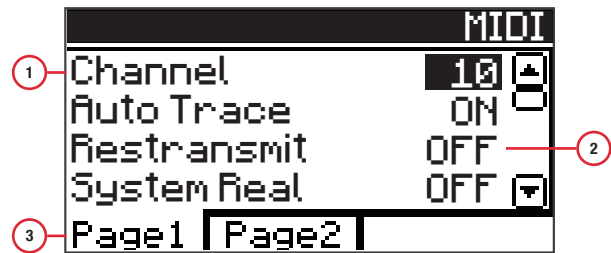

Button	Function
◀	Press this button to decrease the parameter.
▶	Press this button to increase the parameter.
▲	Press this button to move to the previous parameter.
▼	Press this button to move to the following parameter.
+	Press this button to increase the selection parameter.
-	Press this button to decrease the selection parameter.
F1	Press this button to select page 1.
F2	Press this button to select page 2.

Parameter	Value	Description
<b>Channel</b>	1 - 16	Sets the MIDI channel number.
<b>Auto Trace</b>	On / Off	Turns Auto Trace on/off.
<b>Retransmit</b>	On / Off	Turns Retransmit on/off.
<b>System Real</b>	On / Off	Turns System Real on/off.
<b>MIDI Out</b>	On / Off	Turns MIDI Out on/off.
<b>MIDI In</b>	On / Off	Turns MIDI In on/off.
<b>USB MIDI Out</b>	On / Off	Turns USB-MIDI Out on/off.
<b>USB MIDI In</b>	On / Off	Turns USB-MIDI-In on/off.

## Mix Settings

When in settings, press [F3] to enter mix settings.

Button	Function
◀	Press this button to select the previous pad.
▶	Press this button to select the following pad.
▲	Press this button to select the previous parameter.
▼	Press this button to select the following parameter.
+	Press this button to increase the value of the selected parameter.
-	Press this button to decrease the value of the selected parameter.
F1	Press this button for the effect page.
F2	Press this button for the room parameter page.
F3	Press this button for the reverb page.
F4	Press this button for the EQ page.

Kick		MIX	
Coarse		0	
Fine		20	
Tone		54	
Pan		0	
EFF	ROOM	REX	EQ

## Effect Interface

Parameter	Value	Description
Coarse	-24 - +24	Coarse tuning the selected hitting pad.
Fine	0 - 127	Fine tuning the selected hitting pad.
Tone	0 - 127	Set the tone of the selected hitting pad.
Pan	-64 - +63	Set the pan of the selected hitting pad.
Decay	0 - 127	Set the decay of the selected hitting pad.
Reverb	0 - 127	Set the reverb volume of the selected hitting pad.

Kick		MIX	
Coarse		0	
Fine		20	
Tone		54	
Pan		0	
EFF	ROOM	REX	EQ

## Room Interface

Parameter	Value	Description
Room Size	5	Set the room size.

MIX	
RoomSize	Largest
EFF	ROOM
REX	EQ

## Reverb Interface

Parameter	Value	Description
Reverb Type	7	Set the reverb type.
Reverb Level	0 - 127	Set reverb level.
Reverb Time	0 - 127	Set reverb time.
Reverb PreLP	0 - 7	To set the reverb below the selected low threshold.

MIX	
Reverb Type	Hall1
Reverb Level	100
Reverb Time	64
Reverb PreLP	0
EFF	ROOM
REX	EQ

## EQ Interface


Parameter	Value	Description
Equalizer	on / off	The switch of EQ.
EQLowGain	-12dB – +12dB	Increase / decrease the range of the low frequency.
EQHighGain	-12dB – +12dB	Increase / decrease the range of the high frequency.
EQLowFreq	40Hz – 1KHz	Set the range of the low frequency.
EQHighFreq	900Hz – 5KHz	Set the range of the high frequency.

MIX	
Equalizer	ON
EQLowGain	1.3dB
EQHighGain	-0.9dB
EQLowFreq	523HZ
EFF	ROOM
REX	EQ

## Utility Settings

When in settings, press [F4] to enter utilities.

1. Press this button to reset the PowerPlay/X drum kit.
2. Press this button to access the display/control settings.
3. Press this button to access USB settings.
4. Press this button to access hi-hat settings.

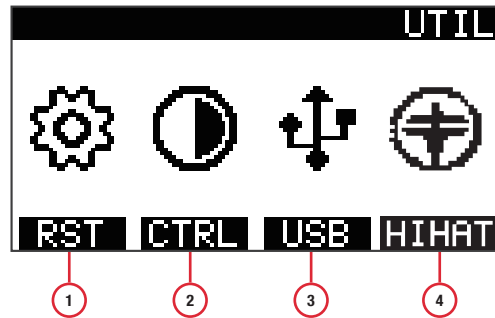

## System Reset

When In utilities, press [F1] to access system reset settings. Here you will be presented with three options.


1. Reset all data
2. Reset preset data
3. Reset user data



## Display / Control


When in utilities, press [F2] to access display/control settings.

Parameter	Value	Description
Bright	10 - 100	Increase/decrease the brightness value.
Contrast	20 - 40	Increase/decrease the contrast value.

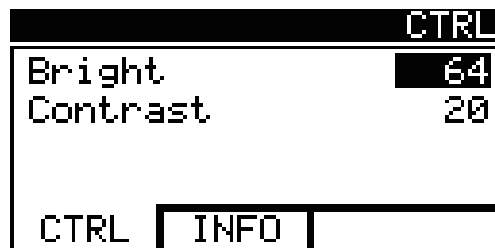

## USB

When in utilities, press [F3] to USB settings. This will allow you to format the USB card connected to the PowerPlay/X.

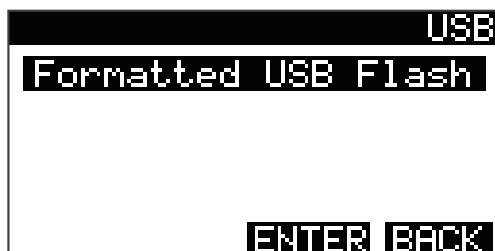


---

## Hi-Hat

When in utilities press [F3] to enter hi-hat settings. This grants you access to all hi-hat parameters.

1. Alternate between using the physical hi-hat and the hi-hat pedal (PP1X only).
2. Use this to adjust the virtual height / sound of the open hi-hat.
3. Use this to adjust the virtual height / sound of the half open hi-hat.
4. Use this to adjust the virtual height / sound of the closed hi-hat.

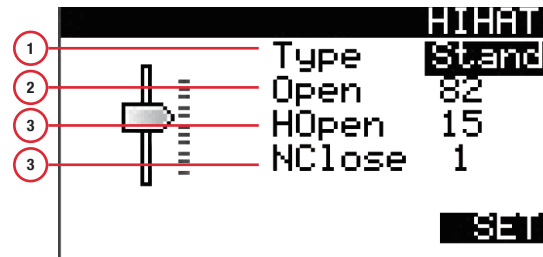

Button	Function
▲	Press this button to select the previous parameter.
▼	Press this button to select the following parameter.
◀	Press this button to decrease the virtual height setting.
▶	Press this button to increase the virtual height setting.
—	Press this button to increase the virtual height setting.
+	Press this button to increase the virtual height setting.
F4	Press this button to reset any parameter changes to default.

---

## Coach Mode

Press [COACH] to enter coach mode.

Button	Function
F1	Press this button to enter warm up practice mode.
F2	Press this button to enter quiet practice mode.



## Warm Up Mode

When in coach mode, press [F1] to enter warm up mode.

1. Current BPM
2. Beat display
3. Practice rhythm change template
4. Remaining exercises
5. Function


Button	Function
+	Press this button to increase the BPM.
-	Press this button to decrease the BPM.
F1	Press this button to start/stop practice.
F4	Press this button to enter the warm up settings.



## Warm Up Settings

When in the warm up mode, press [F4] to enter the settings.

Parameter	Description
<b>Duration</b>	Set warm up duration.
<b>Change Up</b>	Set warm up practice difficulty, rhythm change template.
<b>Rhythm Cycle</b>	Adjust the sensitivity depending on whether you're using a real hi-hat or a hi-hat pedal.

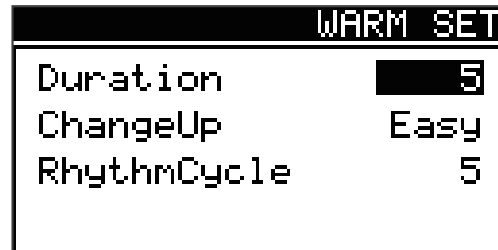


## Quiet Mode

When in coach mode, press [F2] to enter quiet mode.

1. Current BPM
2. Beat display
3. Remaining exercises
4. Function

Button	Function
<b>+</b>	Press this button to increase the BPM.
<b>-</b>	Press this button to decrease the BPM.
<b>F1</b>	Press this button to start/stop practice.
<b>F4</b>	Press this button to enter the warm up settings.

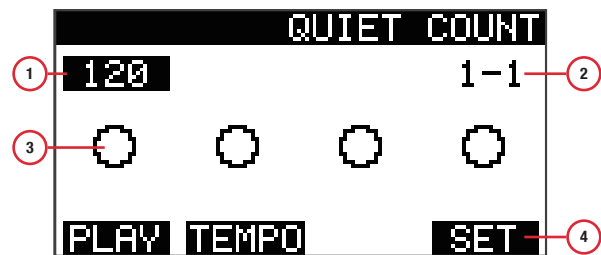

Parameter	Value	Description
<b>Duration</b>	1 - 30	Adjust this to establish the duration of the warm up.
<b>Measures</b>	4, 8, 16	Adjust this to establish the difficulty of the warm up.
<b>Quiet</b>	1, 2	Adjust this to establish the number of quiet passages within a measure.
<b>Random</b>	On / Off	Engage this to randomise the number of quiet passages.



---

## Preset Song List

No.	Name
1	Demo 1
2	Demo 2
3	Demo 3
4	Demo 4
5	Demo 5
6	Demo 6
7	Demo 7
8	Demo 8
9	Demo 9
10	Demo 10
11	Demo 11
12	Demo 12
13	Demo 13
14	Demo 14
15	Demo 15
16	Demo 16
17	Demo 17
18	Demo 18
19	Demo 19
20	Demo 20
21	Demo 21
22	Demo 22
23	Demo 23
24	Demo 24
25	Demo 25

## Preset Kit List

No.	Name
1	Rock1
2	Rock2
3	Rock3
4	Rock4
5	Pop1
6	Pop2
7	Pop3
8	Jazz1
9	Jazz2
10	Brush1
11	Fiesta1
12	Jungle1
13	Funk1
14	Funk2
15	Electron-1
16	Electron-2
17	Electron-3
18	Alphabetical
19	Percussion-1
20	Absynth-1
21	Afroshop-1
22	bottlepoppin-1
23	Jack-1
24	Concrete
25	Fix

## Voice List

No.	Name
<b>Kick (1)</b>	
1	Kick-Rock1
2	Kick-Rock2
3	Kick-Pop1-XL
4	Kick-Pop2
5	Kick-Pop3-XL
6	Kick-Pop4-XL
7	Kick-Pop5
8	Kick-Vintage1
9	Kick-Vintage2-XL
10	Kick-Vintage3-XL
11	Kick-Metal1-XL
12	Kick-Metal2-XL
13	Kick-Jazz-XL
14	Kick-Jungle1
15	Kick-Jungle2-XL
16	Kick-Jungle3-XL
17	Kick-Jungle4-XL
18	Kick-Electro8-L
19	Kick-Electro8-S
20	Kick-Electro9-L
21	Kick-Electro9-V
22	Kick-Electro9-2
23	Kick-Electro9-2L
24	Kick-Electro5-V
25	Alphabetical_Kick
<b>Kick (2)</b>	
26	Kick Absynth 1
27	Kick Absynth 2
28	Kick AfroShop 1
29	Kick AfroShop 2
30	KickArena 1
31	Kick Arena 2
32	Kick Argon 1
33	Kick Argon 2
34	Kick BottlePop 1
35	Kick BottlePop 2
36	Kick Bouncin 1
37	Kick Bouncin 2
38	Kick Concrete 1
39	Kick Concrete 2
40	Kick Dakeat 1
41	Kick Dakeat 2
42	Kick Ganja 1

<b>Snare (1)</b>	
43	Kick Ganja 2
44	Kick Jack 1
45	Kick Jack 2
46	Snare-Rock1
47	Snare-Rock1-R
48	Snare-Rock1-CS
49	Snare-Rock2-R
50	Snare-Rock2-CS
51	Snare-Rock3
52	Snare-Rock2-XL
53	Snare-Rock1-R
54	Snare-Rock2-R
55	Snare-Pop1
56	Snare-Pop 1-R
57	Snare-Pop2-CS
58	Snare-Pop3
59	Snare-Pop1-R-XL
60	Snare-Vintage1
61	Snare-Vintage1-R
62	Snare-Vintage1-CS
63	Snare-Metal2-R-XL
64	Snare-Metal2
65	Snare-Metal3
66	Snare-Metal4-XL
67	Snare-Metal1-R
68	Snare-Metal1-XL
69	Snare-Metal2-R
70	Snare-Metal1-Op-XL
71	Snare-Metal3-O
72	Snare-Metal3-XL
73	Snare-Jazz-R-XL
74	Snare-Jazz-CS-XL
75	Snare-Jazz-XL
76	Snare-Jazz-Z2-XL
77	Snare-Jazz-R2-XL
78	Snare-Brush 1-R
79	Snare-Brush 1-Op-XL
80	Snare-Brush 1-XL
81	Snare-Brush2-XL
82	Snare-Fiesta 1-CS
83	Snare-Fiesta1
84	Snare-Fiesta1-R
85	Snare-Fiesta2
86	Snare-Fiesta2-R
87	Snare-Jungle1
88	Snare-Jungle2

## Voice List

No.	Name
89	Snare-Jungle2-R
90	Snare-Jungle1-R-XL
91	Snare-Electro5-1
92	Snare-Electro8-RS
93	Snare-Electro9-1
94	Snare-Electro9-RS
95	Clap-Electro8
96	Clap-Electro9
Snare (2)	
97	Snare Absynth 1
98	Snare Absynth 2
99	Snare AfroShop 1
100	Snare AfroShop 2
101	Snare Arena 1
102	Snare Arena 2
103	Snare Argon 1
104	Snare Argon 2
105	Noise Argon 1
106	Noise Argon 2
107	Snare BottlePop 1
108	Snare BottlePop 2
109	Snare Bouncin 1
110	Snare Bouncin 2
111	Snare Dakeat 1
112	Snare Dakeat 2
113	Snare Concrete 1
114	Snare Concrete 2
115	Snare Jack 1
116	Snare Jack 2
117	Rim Argon
118	Rimshot Argon
Tom (1)	
119	Tom-Rock-1-XL
120	Tom-Rock-1-Rim
121	Tom-Rock-2-XL
122	Tom-Rock-2-Rim
123	Tom-Rock-3-XL
124	Tom-Rock-3-Rim
125	Tom-Rock-EQ-1-XL
126	Tom-Rock-EQ-1-Rim
127	Tom-Rock-EQ-2-XL
128	Tom-Rock-EQ-2-Rim
129	Tom-Rock-EQ-3-XL
130	Tom-Rock-EQ-3-Rim

Snare (1)	
131	Tom-Pop-1
132	Tom-Pop-1-Rim
133	Tom-Pop-2
134	Tom-Pop-2-Rim
135	Tom-Pop-3
136	Tom-Pop-3-Rim
137	Tom-Vintage-1
138	Tom-Vintage-1-Rim
139	Tom-Vintage-2
140	Tom-Vintage-2-Rim
141	Tom-Vintage-3
142	Tom-Vintage-3-Rim
143	Tom-Metal1-1-XL
144	Tom-Metal1-2-XL
145	Tom-Metal1-3-XL
146	Tom-Metal2-1-XL
147	Tom-Metal2-2-XL
148	Tom-Metal2-3-XL
149	Tom-Metal2-4-XL
150	Tom-Metal1-1-Rim
151	Tom-Metal1-2-Rim
152	Tom-Metal1-3-Rim
153	Tom-Metal2-1-Rim
154	Tom-Metal2-2-Rim
155	Tom-Metal2-3-Rim
156	Tom-Metal2-4-Rim
157	Tom-Jazz1-1-XL
158	Tom-Jazz2-1-XL
159	Tom-Jazz1-1-Rim
160	Tom-Jazz2-1-Rim
161	Tom-Brush-1-XL
162	Tom-Bass-Brush-XL
163	Tom-Fiesta-1
164	Tom-Fiesta-2
165	Tom-Fiesta-3
166	Tom-Fiesta-4
167	Tom-Fiesta-1-Rim
168	Tom-Fiesta-2-Rim
169	Tom-Fiesta-3-Rim
170	Snare-Fiesta 1-CS
171	Snare-Fiesta1
172	Snare-Fiesta1-R
173	Snare-Fiesta2
174	Snare-Fiesta2-R
175	Snare-Jungle1
176	Snare-Jungle2

## Voice List

No.	Name
177	Tom-Electro1-1
178	Tom-Electro1-2
179	Tom-Electro2-1
180	Tom-Electro2-2
181	Tom-Electro3
182	Tom-Electro-Rim
183	Tom-Electro3-Rim
<b>Tom (2)</b>	
184	DjembeAfro 1
185	DjembeAfro 2
186	DjembeAfro 3
187	DununbaAfro 1
188	DununbaAfro 2
189	DununbaAfro 3
190	PercAbsynth 1
191	PercAbsynth 2
192	PercAbsynth 3
193	PercJack 1
194	PercJack 2
195	PercJack 3
196	SangbaAfroShop 1
197	SangbaAfroShop 2
198	SangbaAfroShop 3
199	ShakerArena 1
200	ShakerArena 2
201	ShakerArena 3
202	ShakerConcrete 1
203	ShakerConcrete 2
204	ShakerConcrete 3
205	Tom Absynth 1
206	Tom Absynth 2
207	Tom Absynth 3
<b>Ride (1)</b>	
208	Ride_Rock1-T
209	Ride_Rock1-B
210	Ride_Rock1-E
211	Ride_Rock2-T
212	Ride_Rock2-B
213	Ride_Rock3_E
214	Ride_Rock3_B
215	Ride_Rock4_Bell
216	Ride-Rock5-T
217	Ride-Rock5-B-XL
218	Ride-Vintage-T

219	Ride-Vintage-B
220	Ride-Metal-T
221	Ride-Metal-B
222	Ride-Jazz1-T-XL
223	Ride-Jazz1-B-XL
224	Ride-Jazz2-T-XL
225	Ride-Jazz2-B-XL
226	Ride-Jazz2-T2-XL
227	Ride-Brush 1-T-XL
228	Ride-Brush 1-B-XL
229	Ride-Brush2-T
230	Ride-Brush2-B
231	Ride-Brush2-E
232	Ride-Brush2-T-XL
233	Ride-Fiesta 1-T
234	Ride-Fiesta2-T
235	Ride-Jungle1-T
236	Ride-Jungle2-T
237	Ride-Jungle1-B
238	Cymb 808L
239	Shaker-Electro8
<b>Ride (2)</b>	
240	Ride Glowstix 1
241	Ride Glowstix 2
242	Ride Gong VB
243	RideBell Gong VB
244	Bell AfroShop 1
245	Bell AfroShop 2
246	Ride Arena 1
247	Ride Arena 2
248	Ride Neuron 1
249	Ride Neuron 2
250	RideBell Neuron
251	Bongo Bouncin
252	Ride Ganja
253	Ride Orgami
254	Ride Overtime
255	Ride Rare 1
256	Ride Rare 2
257	Ride Shooter
258	Ride Sintheti
259	Ride Alkaloid V1
260	Ride Alkaloid V2
261	Ride Soulesque
262	Ride Soulesque
263	Ride X

# Voice List

No.	Name
<b>Crash (1)</b>	
264	Crash_Rock1-T
265	Crash_Rock1-E
266	Crash_Rock2-T
267	Crash_Rock2-E
268	Crash_Rock3-T
269	Crash_Rock3-E
270	Crash_Classic-T
271	Crash_Classic_E
272	Crash-Rock4-E-XL
273	Crash-Rock5-E
274	China-Vintage1
275	Crash-Vintage1-E
276	Crash-Vintage2-E
277	Crash-Vintage3-E
278	Crash-Metal2-E
279	China-Metal1-XL
280	Crash-Metal2-E-XL
281	Crash-Metal2-E
282	Crash-Metal3-E-XL
283	Crash-Metal3-E
284	Crash-Metal4-E-XL
285	Crash-Jazz1-E-XL
286	Crash-Jazz2-E
287	Crash-Jungle1-E
288	Crash-Jungle2-E
289	Crash-Jungle3-E
290	Splash-Jungle4-XL
291	Splash-Jungle5-XL
<b>Crash (2)</b>	
292	BalafonAfro 1
293	BalafonAfro 2
294	BalafonAfro 3
295	Combo Argon
296	Crash Arena 1
297	Crash Arena 2
298	Crash Argon 3
299	Crash BotPop 1
300	Crash BotPop 2
301	Crash BotPop 3
302	Crash Baune 1
303	Crash Baune 2
304	Crash Baune 3
305	Crash Concrete

<b>Hi-hat (1)</b>	
306	HH_Classic_T_O
307	HH_Classic_T H-2
308	HH_Classic_T H-1
309	HH_Classic_T_C
310	HH_Classic_E_O
311	HH_Classic_E_H-2
312	HH_Classic_E_H-1
313	HH_Classic_E_C
314	HH_Classic_Chick
315	H H Classic_Splash
316	HH-Rock-T-O
317	HH-Rock-T-H-4
318	HH-Rock-T-H-3
319	HH-Rock-T-H-2
320	HH-Rock-T-H-1
321	HH-Rock-T-C
322	HH-Rock-E-O-XL
323	HH-Rock-E-H-4
324	HH-Rock-E-H-3
325	HH-Rock-E-H-2
326	HH-Rock-E-H-1
327	HH-Rock-E-C-XL
328	HH-Rock-E-C
329	HH-Rock-Chick
330	HH-Rock-Splash
331	HH-Brush-O-XL
332	HH-Brush-O-X
333	HH-Brush-O
334	HH-Brush-H-3
335	HH-Brush-H-2
336	HH-Brush-H-1
337	HH-Brush-C
338	HH-Brush-Chick
339	HH-Brush-Splash
340	HH-Fiesta-O
341	H H-Fiesta-H-3
342	H H-Fiesta-H-2
343	H H-Fiesta-H-1
344	HH-Fiesta-T-C
345	HH-Fiesta-E-C-1-XL
346	HH-Fiesta-E-C-2-XL
347	HH-Fiesta-Chick
348	HH-Fiesta-Splash
349	HH-Vintage-T-O-2-XL
350	HH-Vintage-T-O-1-XL
351	HH-Vintage-T-O-L

# Voice List

No.	Name
352	HH-Vintage-T-O
353	HH-Vintage-T-H-3
354	HH-Vintage-T-H-2
355	HH-Vintage-T-H-1
356	HH-Vintage-T-C
357	HH-Vintage-Chick
358	HH-Vintage-Splash
359	HH-Electro-O
360	HH-Electro-H-3
361	HH-Electro-H-2
362	HH-Electro-H-1
363	HH-Electro-C
364	HH-Electro-Chick
365	HH-Electro-Splash
<b>Hi-hat (2)</b>	
366	OpenHHAbs1
367	OpenHHAbs2
368	ClosedHH Abs1
369	ClosedHH Abs2
370	OpenHH Afro 1
371	OpenHH Afro 2
372	ClosedHH Afro 1
373	ClosedHH Afro 2
374	OpenHH BoPop 1
375	OpenHH BoPop 2
376	ClosedHH BoPop 1
377	ClosedHH BoPop 2
378	OpenHH Bouncin 1
379	OpenHH Bouncin 2
380	ClosedHH Baune 1
381	ClosedHH Baune 2
382	OpenHH Coner 1
383	OpenHH Coner 2
384	ClosedHH Coner 1
385	ClosedHH Coner 2
386	Splash N eubauten
387	OpenHH Jack 1
388	OpenHH Jack 2
389	ClosedHH Jack 1
390	ClosedHH Jack 2
<b>Claps</b>	
391	Clap Absynth
392	Clap AfroShop
393	ClapArena 1

394	ClapArgon 1
395	Clap BotPop 1
396	Clap Bouncin 1
<b>SFX</b>	
397	Laughing
398	Screaming
399	Punch
400	Heart Beat
401	Applause
402	Door Closing
403	Door Creaking
404	Wind Chimes
405	Car Engine
406	Car Brakes
407	Car Crash
408	Car Passing
409	Siren
410	Train
411	Jet Plane
412	Helicopter
413	Starship
414	Gun Shot
415	Machine Gun
416	Horse Gallop
417	Birds Tweet
418	Rain
419	Thunder
420	Wind
421	Seashore
422	Stream
423	Bubble

---

## Specifications

Songs . . . . .	25
Preset Kits . . . . .	25
User Kits . . . . .	25
Instruments . . . . .	423
DSP Effects . . . . .	Decay, EQ, Pan, Pitch, Reverb
Metronome . . . . .	Yes, 20-260 BPM
Display . . . . .	12.8 x 6.4cm LED
USB . . . . .	Yes
Power Supply . . . . .	DC-12V, 1A
Jack . . . . .	USB Memory (USB Type A)
Aux . . . . .	3.5mm
USB MIDI . . . . .	USB Type B
Phone . . . . .	6.35mm
L/Mono . . . . .	6.35mm
R . . . . .	6.35mm
MIDI In . . . . .	6core DIN
MIDI Out . . . . .	6core DIN
Tom 4 . . . . .	6.35mm
Data In . . . . .	DB25

If you have any more questions about this product, please contact your Premier distributor

Kettlestring Lane | York | YO30 4XF | United Kingdom  
Metallvägen 45a | 195 72 Rosersberg | Stockholm | Sverige  
Lahnstraße 27 | 45478 Mülheim An Der Ruhr | Deutschland  
[www.gear4music.com](http://www.gear4music.com)

**Premier**<sup>®</sup>