



DIGITAL PIANO

DP-6 / DP-6-WH

USER MANUAL



WARNING!

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel. Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock. The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. No naked flame sources, such as lighted candles, should be placed on the product. Allow adequate air circulation and avoid obstructing vents (if present) to prevent internal heat build-up. The ventilation must not be impeded by covering the appliance with items such as newspapers, tablecloths, curtains etc.

VAROVÁNÍ!

Nezakrývejte. Uvnitř nejsou žádné součásti opravitelné uživatelem. S požadavkem na servis se odkažte na kvalifikované servisní oddělení. Neumisťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným prašením, mechanickým vibracemi nebo šokem. Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt. Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt. Umožněte dostatečnou cirkulaci vzduchu a vyhněte se obstrukci ventilátorů (pokud jsou přítomné) pro předejítí interního přehřívání. Ventilace nesmí být narušena překrytím zařízení výroby jako např. noviny, kuchyňské utěrky, záclony apod.

DVARSEL!

Dækslet må ikke åbnes. Ingen bruger-udskiftelige dele indeni. Overlad service til kvalificeret service personale. Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støv, mekaniske vibrationer eller stød. Produktet må ikke udsættes for vand eller stænk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet. Må ikke placeres nær åben ild, tændte stearinlys må ikke placeres på produktet. Vær sikker på at der er tilstrækkelig luftcirkulation og undgå at dække ventiler (hvis der er nogen) for at undgå at produktet bliver varmt. Ventilationsen må ikke blokeres med overdækning af apparatet med genstande som aviser, dug, gardiner osv.

WAARSCHUWING!

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhoud over aan bevoegd onderhoudspersoneel. Plaats het product niet in de buurt van een hittebron zoals een radiator of in direct zonlicht of in een stofrijke omgeving, mechanische vibratie of schok. Plaats het product niet in de buurt van spatende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas. Er mogen geen open vlammen zoals aangestoken kaarsen op de apparatuur worden geplaatst. Zorg om overhitting te voorkomen voor voldoende ventilatie en bellemmer ventilatoroosters niet. Bedek het product niet met dingen zoals kranten, tafellakens, gordijnen etc.

VAROITUS!

Älä avaa kantta. Ei sisällä käyttäjä-huollettavia osia. Huollot saa suorittaa vain pätevät huoltomiehet. Älä säilytä tuotetta minkään kuumman lämpötilän kuin tuotteen sallittua korkeutta, esimerkiksi mekaanisessa värinässä tai iskussa. Tuotetta ei saa altistaa tippuvalle tai loiskeelle tai nesteitä sisältäviä tuotteita kuten maljako eivät saa olla tuotteen lähetyillä. Avotulia kuten sytytetty kynttilä ei saa olla tuotteen päällä. Salli riittävä ilmankierto ja vältä tuuletusaukkojen tukkiminen (jos sellaisia on olemassa) estämään sisäisen lämmön muodostumisen. Tuuletusta ei saa estää peittämällä laite esineillä, kuten sanomalehdillä, pöytäliinoilla, verhoilla jne.

ATTENTION!

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation à du personnel de réparation qualifié. Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques. L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé dessus. Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil. Assurer une circulation d'air suffisante et éviter d'obstruer les fentes (le cas échéant) afin d'éviter une surchauffe interne. La ventilation ne doit pas être bloquée en couvrant l'appareil avec des objets tels que des journaux, des nappes, des rideaux, etc.

WARNUNG!

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile. Überlassen Sie Wartungsarbeiten qualifiziertem Fachpersonal. Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Vibrationen oder Stößen. Schützen Sie das Produkt vor tropfenden oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt. Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden. Sorgen Sie für eine ausreichende Luftzirkulation und vermeiden Sie, dass die Lüftungsschlitze (falls vorhanden) abgedeckt werden, um einen internen Wärmestau zu verhindern. Die Belüftung darf nicht durch Abdecken des Gerätes mit Gegenständen wie Zeitungen, Tischdecken, Vorhängen usw. blockiert werden.

AVVERTIMENTO!

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto. Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock. Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto. Non esporre il prodotto a fuoco, candele o oggetti simili. Assicurarsi la circolazione dell'aria e non ostruire le ventole, se presenti, per evitare il surriscaldamento. La ventilazione non deve subire impedimenti dovuti a giornali, tovaglie, tende, ecc.

ADVARSEL!

Ikke åpne dekslet. Inneholder ingen deler som kan brukes. Overlat reparasjon til kvalifisert servicepersonell. Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støv, mekanisk vibrasjon eller støt. Produktet må ikke utsettes for drypping eller spruting, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet. Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet. Tillat tilstrekkelig luft sirkulasjon og unngå å blokkere ventiler (hvis tilstede) for å forhindre intern varmeoppsamling. Pass på at ventilasjon ikke hindres ved å unngå å dekke apparatet med ting som aviser, bordduker, gardiner osv.

EN

OSTRZEŻENIE!

Nie otwierać pokrywy. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla wyszkolonego personelu. Nie umieszczaj produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym wibracjom. Produkt ten nie może być ekspozowany na kapanie lub chłapanie, a przedmioty wypełnione płynami, takie jak wazy, nie powinny być na nim umieszczane. Zródła otwartego ognia, takie jak np. świece, nie powinny być umieszczane w produkcji. Należy zapewnić odpowiednią wentylację i unikać blokowania otworów wentylacyjnych, aby uniknąć wewnętrzznego wzrostu temperatury. Wentylacja nie powinna być utrudniana poprzez nakrywanie urządzenia gazetami, obrusami czy zasłonami.

PL

CZ

ATENÇÃO!

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado. Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibrações ou choque. Não mantenha o produto num local húmido ou perto líquidos como vasos, etc. Não aproxime o produto a fontes de fogo vivo, como velas. Mantenha o produto num espaço suficientemente arejado de forma a evitar sobre-aquecimento. Não bloqueie a ventilação do instrumento, cobrindo-o com artigos como cortinas, toalhas de mesa ou jornais.

PT

DK

VÝSTRAHA!

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko. Nevystavujte produkt do blízkosti akéhokoľvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so slnečným žiarením, nadmerným prašným prostredím, mechanickým vibráciám alebo šokom. Produkt nesmie prísť do kontaktu s vodou a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt. Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkt. Umožnite dostatočnú cirkuláciu vzduchu a zabráňte obštrukcii ventiláčnych otvorov (ak sú prítomné) kvôli prevencii vnútorného prehrievania. Ventilácia nesmie byť narušená prekrytím zariadenia výrobkami ako napr. noviny, kuchynské utierky, záclony a pod.

SK

NL

OPOZORIO!

Ne odpirajte pokrova. V notranjosti ni nobenih delov, ki jih uporabnik lahko sam popravlja. Popravilo prepustite usposobljenemu osebju. Ne postavljajte izdelka na lokacijo v bližini vira toplote, kot je radiator, ali na območje, ki je izpostavljeno neposredni sončni svetlobi, pretiranemu prahu, mehanskim tresljajem ali udarcem. Izdelek ne sme biti izpostavljen kapljanju ali brizganju in nobeni predmeti, napolnjeni z vodo, kot so vaze, se ne smejo postaviti na izdelek. Nobenega od virov odprtega ognja, kot so vžgane sveče, se ne sme postavljati na izdelek. Zagotovite zadostno kroženje zraka in umaknite ovire na odprtinah (če obstajajo), zaradi preprečevanja kopičenja notranje toplote. Ventilacija se ne sme ovirati s prekrivanjem naprave s predmeti, kot so časopisi, prti, zavese itn.

SI

FI

¡ADVERTENCIA!

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado. No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo. Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato. No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato. Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstruya o tape las aberturas con objetos como periódicos, manteles, cortinas, etc.

ES

FR

VARNING!

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal. Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock. Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten. Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten. Tillåt tillräcklig luftcirkulation och blockera ej eventuella ventiler för att undvika intern överhettning. Ventilen bör ej täckas av föremål såsom tidningar, dukar, gardiner etc.

SE

DE

IT

NO

INTRODUCTION

Thank you for purchasing the DP-6 Digital Piano by Gear4music. To get the most out of your product, please read this manual carefully.


CONTENTS

- 1 x DP-6/DP-6-WH Digital Piano
- 1 x Power supply unit (PSU)
- 1 x Sustain pedal
- 1 x User manual
- 1 x USB cable

FEATURES

- Full sized keyboard with 88 hammer action keys.
- Achieve a wide range of sounds thanks to 16 instrument voices and 64 note polyphony.
- Perform out loud and practice in silence via integrated speakers and two headphone outputs.
- Add the perfect finishing touches to your sound with on-board reverb, chorus and EQ.

FUNCTIONS

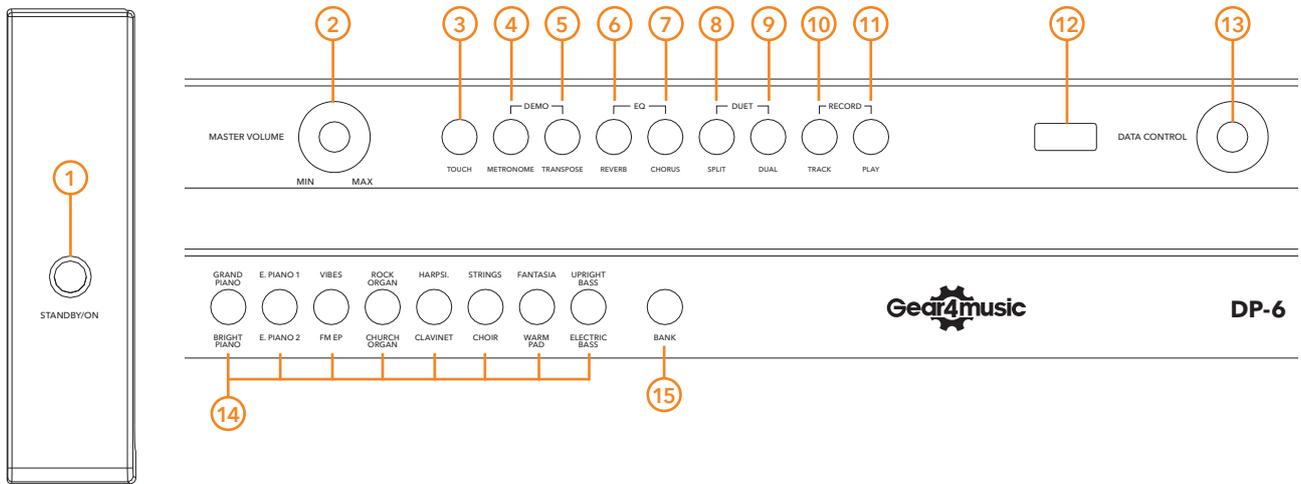

FRONT

1. STAND BY

Use this button to turn the DP-6 on/off.

2. MASTER VOLUME

Use this knob to adjust the global volume.

3. TOUCH

Use this button to determine the velocity of the keys.

4. METRONOME

Use this button to engage/disengage the metronome.

5. TRANPOSE

Use this button to engage/disengage transposition.

6. REVERB

Use this button to engage/disengage the reverb effect.

7. CHORUS

Use this button to engage/disengage the chorus effect.

8. SPLIT

Use this button to split the piano into two sections.

9. DUAL

Use this button to layer two voices that can be played simultaneously.

10. TRACK

Use this button to select the track you wish to record on.

11. PLAY

Use this button to commence playback.

12. LED DISPLAY

Use this screen to view the voice you're using.

13. DATA CONTROL WHEEL

Use this wheel to scroll through various options.


14. VOICE

Use these buttons to select your preferred voice.

15. BANK

Use bank in conjunction with voice to select a voice from the bottom row.

FUNCTIONS

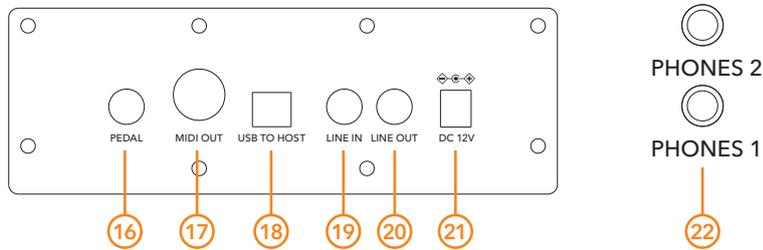

REAR

16. PEDAL

Use this input to connect a sustain pedal

17. MIDI OUTPUT

Use this to transfer MIDI data to an external device

18. USB TO HOST

Use this to connect the DP-6 to your computer.

19. LINE IN

Use this to play an external sound source from the DP-6s speakers.

20. LINE OUT

Use this to connect the DP-6 to an external amplifier, interface, or mixer.

21. 12v DC POWER INPUT

Use this input to connect the DP-6 to a power source.

22. HEADPHONES OUTPUT

Use the two outputs to connect headphones for quiet practice.

FUNCTIONS

POWER


After safely connecting the supplied power supply firstly to the piano and then the mains, turn on the piano by pressing the [STANDBY/ON] button. The display will light up.



AUTO POWER OFF


The unit will Auto Power Off after 30 minutes of not being used, except when playing demo songs.

To de-activate the Auto Power Off function: hold the first white key and first black key from the left side of the keyboard at the same time and then press the [STANDBY/ON] button.

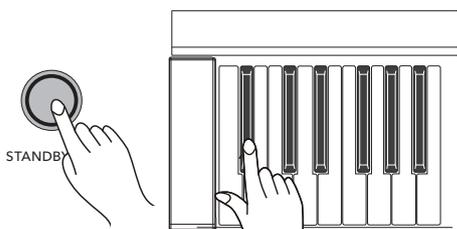


SETTING THE VOLUME

It is advised to set the [MASTER VOLUME] to "MIN" when powering on the piano, and then adjust the volume to your desired level when playing.

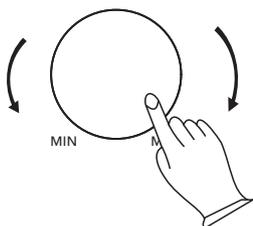


USING HEADPHONES

Two sets of standard headphones can be connected via the PHONES outputs (situated underneath the left-hand piano keys) for private practice. The internal speakers are automatically muted when headphones are connected to Phones 1 output.

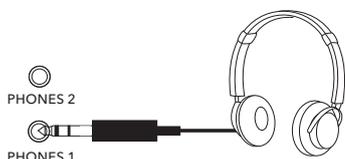

LINE OUT

The LINE OUT jack is a stereo output that can be used to connect the piano to an external sound system, such as a keyboard amplifier, interface, or mixer.

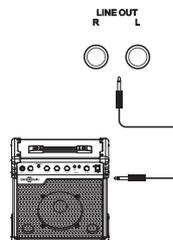


LINE IN

The LINE IN jack allows you to mix an external sound source (such as a smartphone or MP3 player) with the piano's internal sounds, for playback through the piano's in-built speakers or headphone output. The volume of the LINE IN is controlled by the external sound source.


MIDI OUTPUT

Use the MIDI OUTPUT to transfer MIDI data, including note and touch velocity, via a 5-pin MIDI cable (not included) from the piano to the MIDI INPUT of a compatible external device.

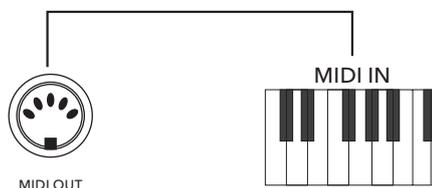

USING USB MIDI

 The DP-6 allows the transfer of MIDI via USB from the piano to an audio interface or "host." Use the audio interface to control the MIDI signal.



SUSTAIN PEDAL

The foot pedal included with your digital piano can be connected to the SUSTAIN input and, when held down, allows the sound of the notes played to decay slowly, or "sustain." A piano-style foot pedal may also be used. The sustain input will auto-detect the polarity of the sustain pedal used. Ensure the piano is turned off before connecting the pedal, otherwise it may not be recognised by the piano correctly.


A double pedal (not included) may be used with the DP-6. When using this type of pedal, the left-hand pedal is the "soft" pedal (which decreases the output volume when held down) and the right-hand pedal acts as the normal sustain pedal.

VOICES

The piano has 16 different in-built voices. These digitally sampled musical instrument sounds may be selected one at a time, or layered to produce two voices at once. To select a main voice, press the appropriate voice select button on the right side of the front panel. This will select the voice name above the button.

Pressing the [BANK] button allows you to then select the second set of voice names below the voice buttons.

The data control wheel can also be used to select the different voices.

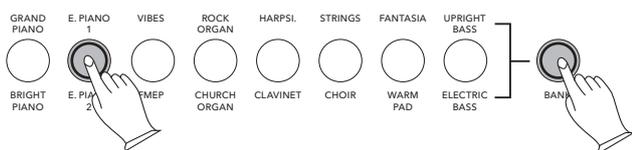

TOUCH SENSITIVITY

The DP-6 has four levels of touch sensitivity, allowing you to find the ideal level of key response to suit your playing style.


Press the [TOUCH] button repeatedly to change through the different options:

LOW: play the keys harder to produce the maximum output.

NORMAL: standard strength is required to produce maximum output.

HIGH: requires less strength to produce maximum output.

FIXED: turns off the touch sensitivity, meaning the same volume is produced regardless of how hard or soft the keys are played.

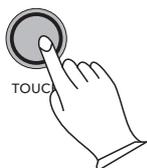


METRONOME

The DP-6 has an in-built metronome, a great feature for practising and a solid rhythm guide when recording.


Press the [METRONOME] button to turn the metronome on.

The tempo of the metronome will be shown on the display (default speed 120bpm) and can be adjusted as required using the data control wheel. The tempo range is 20-280bpm.

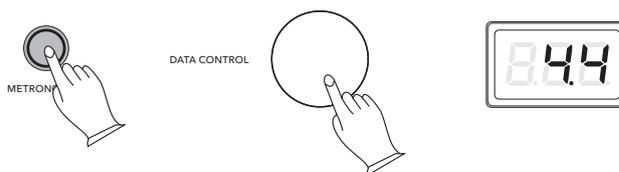

The time signature of the metronome can also be set. To do this press and hold the [METRONOME] button until the display shows the default time signature: 4:4. Release the button and then use the data control wheel to select from the different time signatures:


2/2, 2/4, 3/4, 4/4, 5/4, 6/8, 7/8, 9/8, 12/8.

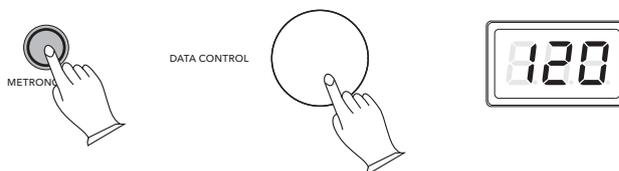

TRANSPOSE

The transpose function allows you to raise or lower the pitch of the piano in semitone increments from -12 to +12.

To turn on the transpose function, press the [TRANSPOSE] button. The LED will display: 0. The data control wheel can now be used to select the desired transpose value.

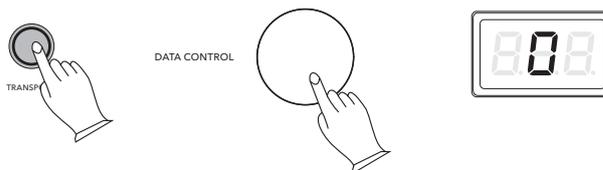


DEMOS

The DP-6 features 16 demo songs, each demonstrating a different voice.

To select a demo song, press the [METRONOME] and [TRANSCOPE] buttons simultaneously. The first demo song will feature the Piano 1 voice. During playback, another demo song may be chosen by pressing a different voice select button. Alternatively, use the data control wheel to select different demo songs.

To stop the demo song. Press the [METRONOME] and [TRANSCOPE] buttons together again.

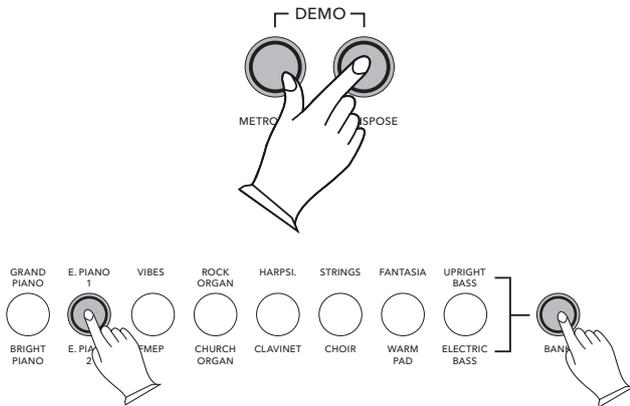

REVERB & CHORUS


The in-built reverb and chorus effects can be added to the selected voices and help to add expression to your playing. The settings will be retained even when the power is turned off/on.

REVERB

Press the [REVERB] button to add the effect to the current voice. The display will show "r-1." Use the data control wheel to select between the 8 different in-built reverb types.

To adjust the amount of the effect, press and hold the [REVERB] button for 3 seconds. The data control wheel can now be used to adjust the reverb level from 0-127, which will be shown on the display.

To turn off the reverb effect, press the [REVERB] button again.

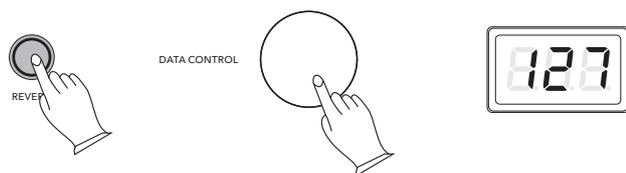


CHORUS

Press the [CHORUS] button to add the effect to the current voice. The display will show "c-1." Use the data control wheel to select between the 8 different in-built chorus types.

To adjust the amount of the effect, press and hold the [CHORUS] button for 3 seconds. The data control wheel can now be used to adjust the chorus level from 0-127, which will be shown on the display.

To turn off the chorus effect, press the [CHORUS] button again.

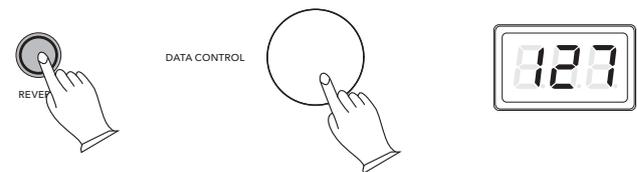


EQ ADJUSTMENT

The overall EQ of the piano's sound can be shaped by adjusting the bass and treble settings.

TO CHANGE THE BASS LEVEL

Press the [REVERB] and [CHORUS] buttons together to enter the EQ mode.

Now press the [REVERB] button, and the display will show the current bass value. The data control wheel can be used to set the bass level, from -12 to +12 as desired.

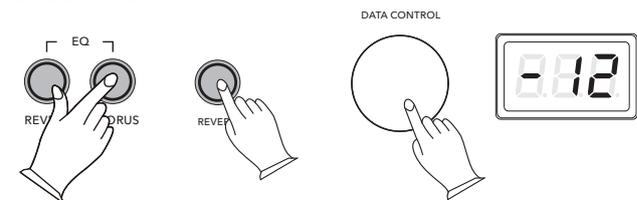

TO CHANGE THE TREBLE LEVEL


Press the [REVERB] and [CHORUS] buttons together to enter the EQ mode.

Now press the [CHORUS] button, and the display will show the current treble value. The data control wheel can be used to set the treble level, from -12 to +12 as desired.

SPLIT MODE


The piano keys can be "split" into two sections, allowing different voices to be played in the left and right hands.

To enter this mode, press the [SPLIT] button. The display will show "SPL."

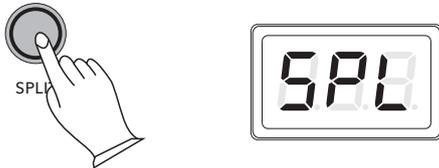


The default left-hand voice will be E.PIANO 1, and the default split point will be piano key F2 (key number 21.)

To change the left-hand voice, press and hold down the [SPLIT] button and press the required voice button.

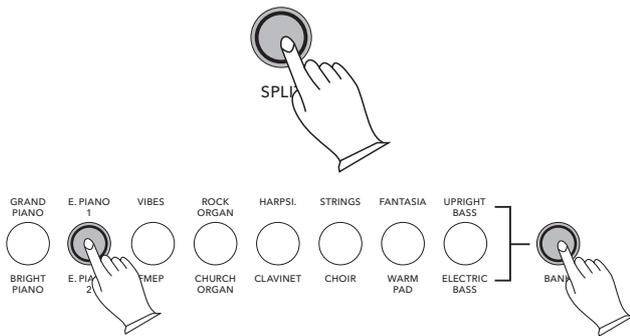

To change the point at which the piano is split, press and hold the [SPLIT] button, then use the data control wheel to select the desired split point key.

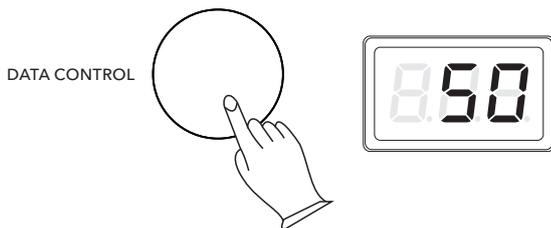


To exit the split mode, press the [SPLIT] button again.

DUAL MODE

Dual mode allows you to layer two voices and play them simultaneously.


To add a second voice to the currently selected one, first press the [DUAL] button and then press the voice button of the required layer voice. Both the selected voice button lights will be on when the sounds are layered. The display will show "Ly.r"

To exit the dual mode, press the [LAYER] button again.

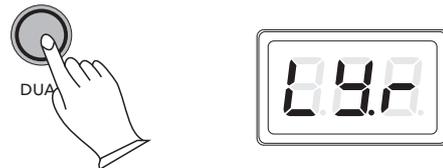

DUET MODE

The DP-6 can be divided into two sections that both play the same notes, voice, octave, and volume. This provides an ideal teaching function, allowing two people to play the same notes simultaneously.

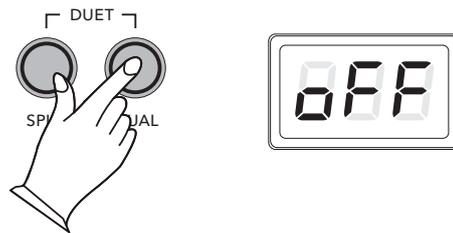

The split point between the two sections is at piano key C#3.

To enter/exit the duet mode, press the [SPLIT] and [DUAL] buttons together.


Using the dual mode will automatically exit the layer and split modes.

RECORDING

The DP-6 features an in-built 2 track recorder, allowing you to record, playback and overdub one part on top of another, using the same or a different voice.

Before recording, set the desired voice, tempo, reverb level and other functions.

To select the track you want to record on, press the [TRACK] button and then use the data control wheel to select between track 1 or track 2. (If either of the tracks contain recorded data, the display will show a "." after the track number.)

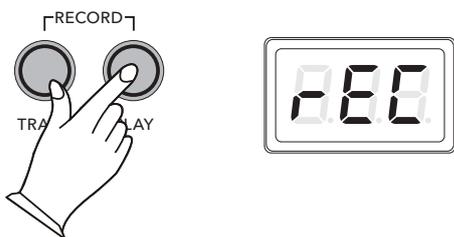

Once you are ready to record, press the [TRACK] and [PLAY] buttons together to enter the recording mode. The display will flash "rEC" and then show the track selected.

The metronome can be turned on/off as required by pressing the [METRONOME] button. The metronome sound acts as a guide and will not be recorded.

Recording will begin as soon as you start to play.

To stop recording, press the [TRACK] button. Recordings will be stored even when the piano is turned off/on.

PLAYBACK

To listen to your recorded tracks, press the [TRACK] button when in normal performance mode.

Use the data control wheel to select from the following playback options:

TR1: playback the audio recorded to track 1.

TR2: playback the audio recorded to track 2.


SNG: playback the audio from both tracks simultaneously.

Press the [PLAY] button to begin playback.

To stop playback and return to performance mode, press the [PLAY] button again.

CLEARING RECORDED TRACKS

To erase the recorded tracks, when in record mode, select the track you want to clear with the data control wheel and then press the [TRACK] button twice quickly to delete the recording.

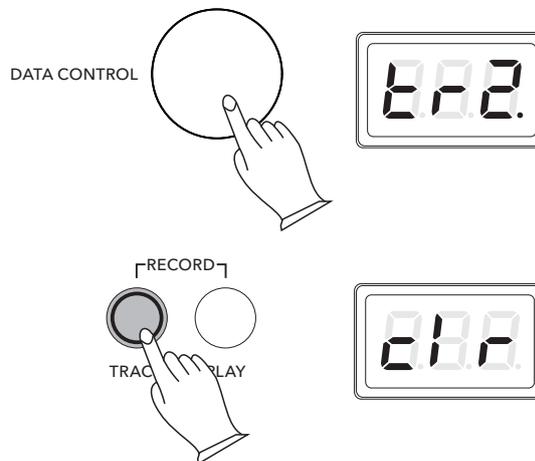


When recording a new track, any previous recording on that track will automatically be deleted.

FACTORY RESET

Performing a factory reset will clear all memory settings and restore all functions to their factory default settings.

To perform a factory reset, firstly turn the piano power off. Then hold down both the [METRONOME] and [TRANSPPOSE] buttons whilst powering on the piano.

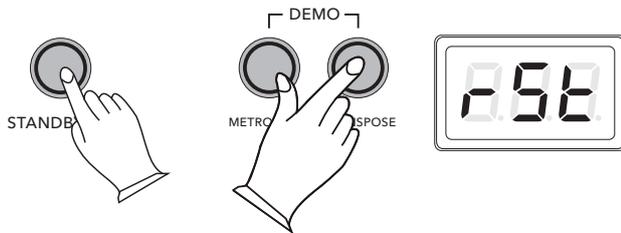

The display will show "Rst".

When the [METRONOME] and [TRANSPPOSE] buttons are released, the piano will return to performance mode and function normally, as if powered on for the first time.

VOICES LIST

LED DISPLAY	VOICE NAMES
Pno	GRAND PIANO
EP1	E.PIANO 1
u16	VIBES
ro9	ROCK ORGAN
hAr	HARPSI
Str	STRINGS
FAn	FANTASIA
UP8	UPRIGHT BASS
bno	BRIGHT PIANO
EP2	E.PIANO 2
FEP	FM EP
Ch9	CHURCH ORGAN
CLA	CLAV
Chr	CHOIR
PAd	WARM PAD
EL8	ELECTRIC BASS

SPECIFICATIONS

Keys	.88 Weighted, Hammer Action, Velocity Sensitive
Polyphony	.64 Notes
Connections	.12V DC Power, 1/4" Jack Line In, 1/4" Jack Line Out, MIDI Out, USB to Host, 1/4" Jack Sustain Pedal Input, 2 x 1/4" Jacks Headphones Outputs
Speakers	.2 x 10W
Dimensions	.Height: 420mm x Width: 1390mm x Depth: 780 mm
Weight	.26.1kg piano only / 34.1kg including stand
DSP Effects	.Reverb, Chorus & EQ
Included Accessories	.PSU, Sustain Pedal, USB cable & Owner's Manual

KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM
METALLVÄGEN 45A | 195 72 ROSERSBERG | STOCKHOLM | SVERIGE
LAHNSTRASSE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **info@gear4music.com**