






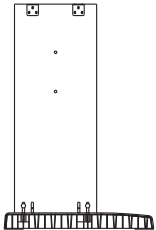




DIGITAL PIANO

DP-6 / DP-6-WH


SETUP GUIDE

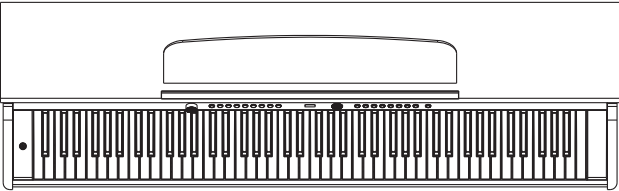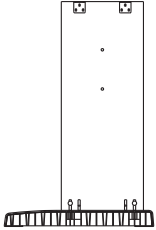CONTENTS CHECKLIST


First, check the contents of the package and make sure you have everything you need.

| | | | | | |
|---|---|--|---|--|--|
|  X1 | |  X1 | | | |
|  X2 | |  X1 | | | |
|  X2 |  X4 |  X4 |  X4 | | |

 
TOOLS REQUIRED





1

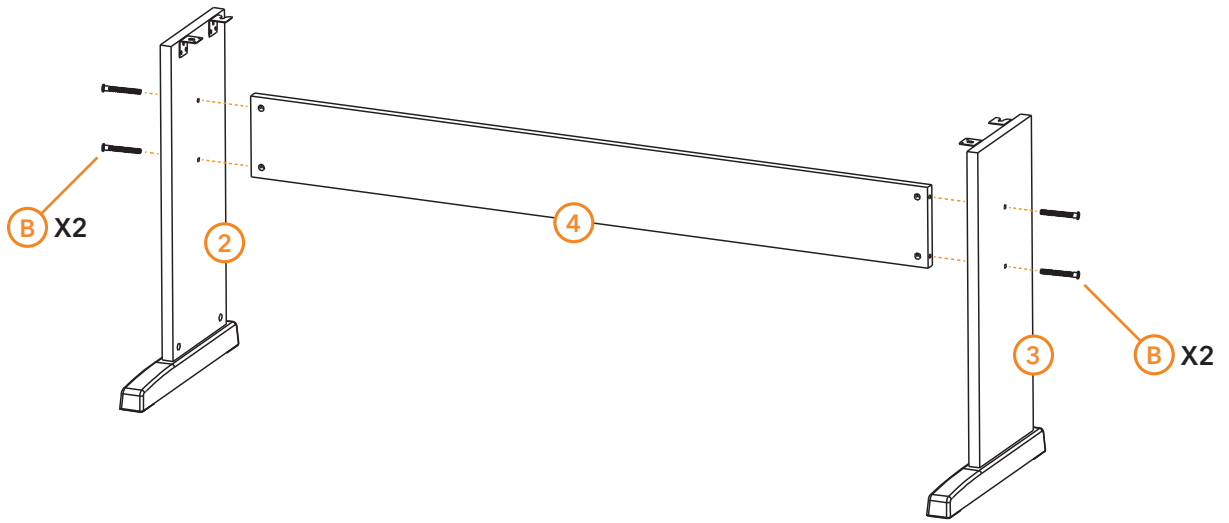

2

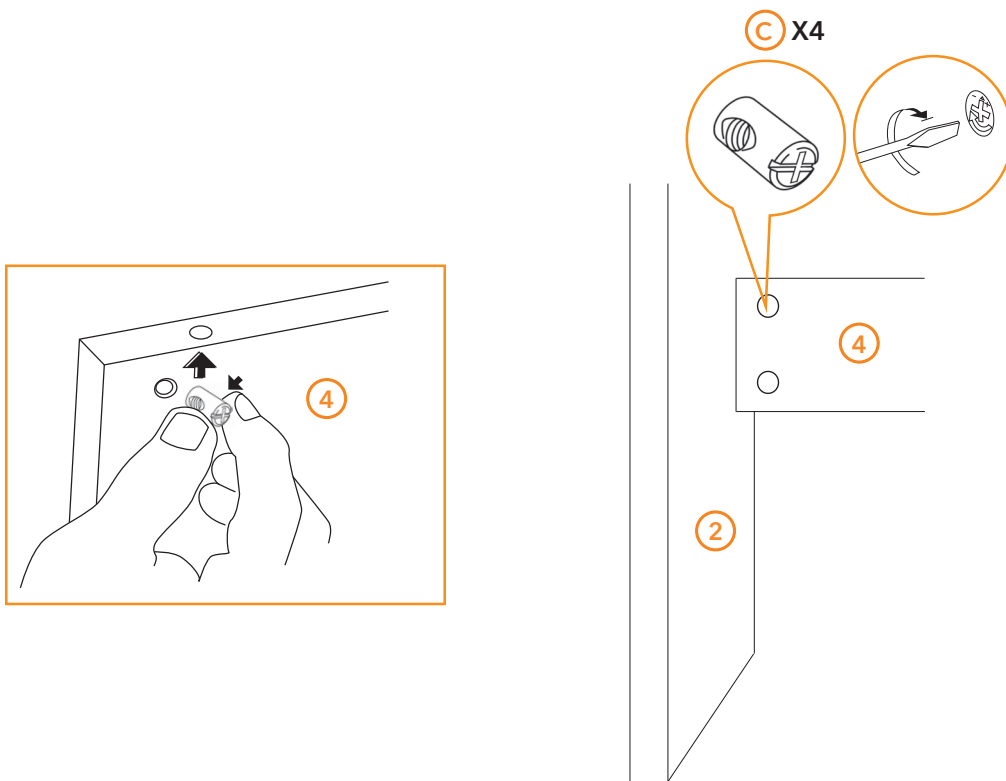

3

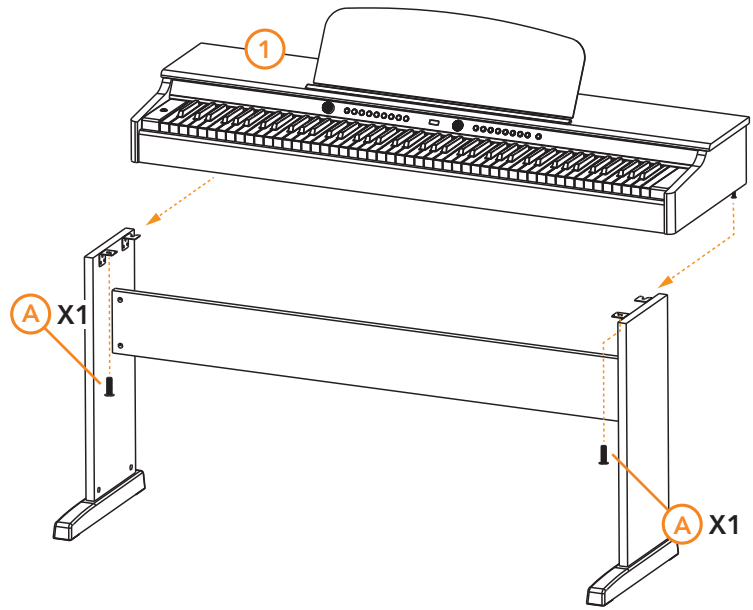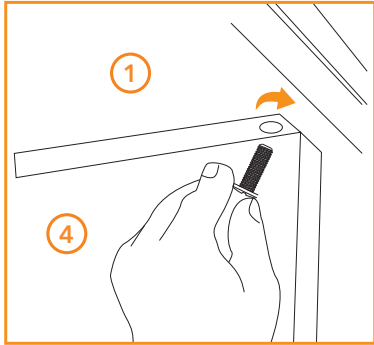

KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM
METALLVÄGEN 45A | 195 72 ROSERSBERG | STOCKHOLM | SVERIGE
LAHNSTRASSE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **info@gear4music.com**