



KEYBOARD WITH USB MIDI

MK-6000

USER MANUAL

WARNING!

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel
Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock
The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product
No naked flame sources, such as lighted candles, should be placed on the product
Allow adequate air circulation and avoid obstructing vents (if present) to prevent internal heat build-up.
The ventilation must not be impeded by covering the appliance with items such as newspapers, tablecloths, curtains etc.
The mains plug is used to disconnect the appliance from the mains supply. Ensure that the mains outlet is easily-accessible and remove the plug from the mains outlet if you notice any abnormality with the appliance.

VAROVÁNÍ!

Nezakrývejte. Uvnitř nejsou žádné součásti opravitelné uživatelem. S požadavkem na servis se odkažte na kvalifikované servisní oddělení.
Neumísťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným prašením, mechanickými vibracemi nebo šokem.
Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt.
Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt.
Umožněte dostatečnou cirkulaci vzduchu a vyhněte se obstrukci ventilátorů (pokud jsou přítomné) pro předejítí interního přehřívání. Ventilace nesmí být narušena překrytím zařízení výrobky jako např. noviny, kuchyňské utěrky, záclony apod.
Hlavní kabel umožňuje odpojit zařízení od elektřiny. Ujistěte se, že hlavní napájecí výstup je snadno dostupný a odpojte kabel pokud zaznamenáte jakoukoliv abnormalitu na zařízení.

DVARSEL!

Dækslet må ikke åbnes. Ingen bruger-udskeftelige dele indeni. Overlad service til kvalificeret service personale
Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støv, mekaniske vibrationer eller stød
Produktet må ikke udsættes for vand eller stænk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet
Må ikke placeres nær åben ild, tændte stearinlys må ikke placeres på produktet
Vær sikker på at der er tilstrækkelig luftcirkulation og undgå at dække ventiler (hvis der er nogen) for at undgå at produktet bliver varmt. Ventilasjonen må ikke blokeres med overdækning af apparatet med genstande som aviser, dug, gardiner osv.
Stikket bruges til at afbryde apparatet fra strømmen. Sikre at stikkontakten er let tilgængelig, og fjern stikket fra stikkontakten, hvis du bemærker noget unormalt med apparatet.

WAARSCHUWING!

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhoud over aan bevoegd onderhoudspersoneel.
Plaats het product niet in de buurt van een hittebron zoals een radiator of in direct zonlicht of in een stofrijke omgeving, mechanische vibratie of schok.
Plaats het product niet in de buurt van spatende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas.
Er mogen geen open vlammen zoals aangestoken kaarsen op de apparatuur worden geplaatst. Zorg om overhitting te voorkomen voor voldoende ventilatie en bellemmer ventilatorroosters niet. Bedek het product niet met dingen zoals kranten, tafellakens, gordijnen etc.
De stekker van dit apparaat wordt gebruikt om het apparaat aan en uit te zetten. Zorg ervoor dat het stopcontact gemakkelijk bereikbaar is en haal de stekker uit het stopcontact als u enige onregelmatigheid ondervindt.

VAROITUS!

Älä avaa kantta. Ei sisällä käyttäjä-huollettavia osia. Huollot saa suorittaa vain pätevät huoltomies.
Älä säilytä tuotetta minkään kuuman lähellä kuumen patteri tai suorassa auringonpaisteessa, pölyisessä, mekaanisessa värinässä tai iskussa
Tuotetta ei saa altistaa tippuvalle tai loiskeelle tai nesteitä sisältäviä tuotteita kuten maljakko eivät saa olla tuotteen lähetyillä
Avotulia kuten sytytetty kynttilä ei saa olla tuotteen päällä.
Salli riittävä ilmankierto ja vältä tuuletusaukkojen tukkiminen (jos sellaisia on olemassa) estämään sisäisen lämmön muodostuminen. Tuuletusta ei saa estää peittämällä laite esineillä, kuten sanomalehdillä, pöytäliinoilla, verhoilla jne.
Verkkovirtapistoketta käytetään irrottamaan laite verkkovirrasta. Varmista, että pistorasias on helposti saatavilla ja irrota pistotulppa pistorasiasista, jos havaitset jotain epänormaalia laitteessa.

ATTENTION!

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation a du personnel de réparation qualifié
Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques
L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé dessus
Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil
Assurer une circulation d'air suffisante et éviter d'obstruer les fentes (le cas échéant) afin d'éviter une surchauffe interne. La ventilation ne doit pas être bloquée en couvrant l'appareil avec des objets tels que des journaux, des nappes, des rideaux, etc.
La prise secteur est utilisée comme dispositif de débranchement. La prise murale doit être facile d'accès, et en cas d'anomalie de l'appareil, débrancher la prise de courant au niveau de la prise murale.

WARNING!

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile. Überlassen Sie Wartungsarbeiten qualifiziertem Fachpersonal.
Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Vibrationen oder Stößen.
Schützen Sie das Produkt vor tropfenden oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt.
Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden.
Sorgen Sie für eine ausreichende Luftzirkulation und vermeiden Sie, dass die Lüftungsschlitze (falls vorhanden) abgedeckt werden, um einen internen Wärmestau zu verhindern. Die Belüftung darf nicht durch Abdecken des Gerätes mit Gegenständen wie Zeitungen, Tischdecken, Vorhängen usw. blockiert werden.
Der Netzstecker dient zum Trennen des Gerätes vom Netz. Vergewissern Sie sich, dass die Steckdose leicht zugänglich ist, und ziehen Sie den Stecker aus der Steckdose, wenn Sie eine Anomalie mit dem Gerät bemerken.

AVVERTIMENTO!

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto.
Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock.
Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto.
Non esporre il prodotto a fuoco, candele o oggetti simili.
Assicurarsi la circolazione dell'aria e non ostruire le ventole, se presenti, per evitare il surriscaldamento.

EN

La ventilazione non deve subire impedimenti dovuti a giornali, tovaglie, tende, ecc.
La spina principale viene utilizzata per disconnettere il prodotto dalla principale fonte di energia. Assicurarsi che la spina sia facilmente accessibile e disconnettere l'unità nel caso si notassero dei difetti di funzionamento.

ADVARSEL!

Ikke åpne dekslet. Inneholder ingen deler som kan brukes. Overlat reparaasjon til kvalifisert servicepersonell.
Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støv, mekanisk vibrasjon eller støt.
Produktet må ikke utsettes for drypping eller spruting, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet.
Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet.
Tillat tilstrekkelig luft sirkulasjon og unngå å blokkere ventiler (hvis tilstede) for å forhindre intern varmeoppsamling. Pass på at ventilasjon ikke hindres ved å unngå å dekke apparatet med ting som aviser, bordduker, gardiner osv.
Stikkontakten brukes til å koble apparatet fra strømforsyningen. Forsikre deg om at stikkontakten er lett tilgjengelig og ta støpelet ut av stikkontakten hvis du oppdager uregelmessigheter under bruk av apparatet.

NO

CZ

OSTRZEŻENIE!

Nie otwierać pokrywy. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla wyszkolonego personelu.
Nie umieszczać produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym wibracjom.
Produkt ten nie może być ekspozowany na kąpienie lub chłapanie, a przedmioty wypełnione płynami, takie jak wazy, nie powinny być na nim umieszczone.
Źródła otwartego ognia, takie jak np. świece, nie powinny być umieszczone w produkcji.
Należy zapewnić odpowiednią wentylację i unikać blokowania otworów wentylacyjnych, aby uniknąć wewnętrznego wzrostu temperatury. Wentylacja nie powinna być utrudniana poprzez nakrywanie urządzenia gazetami, obrusami czy zasłonami.
Wtyczka sieciowa służy do odłączenia urządzenia od zasilania sieciowego. Należy upewnić się, że gniazdo sieciowe jest łatwo dostępne, a w razie wystąpienia nieprawidłowości w funkcjonowaniu urządzenia odłączyć je od zasilania sieciowego.

PL

DK

ATENÇÃO!

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado
Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque
Não mantenha o produto num local húmido ou perto líquidos como vasos, etc.
Não aproxime o produto a fontes de fogo vivo, como velas
Mantenha o produto num espaço suficientemente arejado de forma a evitar sobre-aquecimento. Não bloqueie a ventilação do instrumento, cobrindo-o com artigos como cortinas, toalhas de mesa ou jornais
O transformador é utilizado para conectar e desconectar o artigo da principal fonte de energia. Certifique-se que a ficha é facilmente acessível e que o artigo está devidamente ligado à corrente se detectar alguma anomalia com o funcionamento

PT

NL

VÝSTRAHA!

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko.
Nevystavujte produkt do blízkosti akéhokoľvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so slnečným žiarením, nadmerným prašným prostredím, mechanickým vibráciám alebo šokom.
Produkt nesmie prísť do kontaktu s vodou a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt.
Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkt.
Umožnite dostatočnú cirkuláciu vzduchu a zabráňte obstrukcii ventilačných otvorov (ak sú prítomné) kvôli prevencii vnútorného prehrievania. Ventilácia nesmie byť narušená prekrytím zariadenia výrobkami ako napr. noviny, kuchynské uterky, záclony a pod.
Hlavný kábel umožňuje odpojiť zariadenie od elektriny. Uistite sa, že hlavný napájací výstup je ľahko dostupný a odpojte kábel ak zaznamenáte akúkoľvek abnormalitu na zariadení.

SK

FI

OPOZORILO!

Ne odpirajte pokrova. V notranjosti ni nobenih delov, ki jih uporabnik lahko sam popravlja. Popravilo prepustite usposobljenemu oseboju
Ne postavljajte izdelka na lokacijo v bližini vira toplote, kot je radiator, ali na območje, ki je izpostavljeno neposredni sončni svetlobi, pretiranemu prahu, mehanskim tresljajem ali udarcem
Izdelek ne sme biti izpostavljen kapljanju ali brizganju in nobeni predmeti, napolnjeni z vodo, kot so vaze, se ne smejo postaviti na izdelek
Nobeneaga od virov odprtega ognja, kot so vzgane sveče, se ne sme postavljati na izdelek
Zagotovite zadostno kroženje zraka in umaknite ovire na odprtinah (če obstajajo), zaradi preprečevanja kopičenja notranje toplote. Ventilacija se ne sme ovirati s prekrivanjem naprave s predmeti, kot so časopisi, prti, zavese itn.
Omrežni vtič se uporablja za izklop naprave iz električnega omrežja. Poskrbite, da je omrežna vtičnica zlahka dostopna in izvlecite vtič iz vtičnice, če opazite kakršno koli nepravilnost pri napravi.

SI

FR

¡ADVERTENCIA!

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado.
No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo.
Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato.
No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato.
Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstacule o tape las aberturas con objetos como periódicos, manteles, cortinas, etc.
El enchufe se utiliza para desconectar el producto de la corriente. Si nota algún defecto, desconecte el de la toma de corriente.

ES

DE

WARNING!

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonall
Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock.
Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten.
Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten.
Tillåt tillräcklig luftcirkulation och blockera ej eventuella ventiler för att undvika intern överhettning.
Ventilen bör ej täckas av föremål såsom tidningar, dukar, gardiner etc.
Nätkontakten används för att koppla bort apparaten från eluttaget. Se till att eluttaget är lättåtkomligt och avlägsna kontakten från eluttaget om du upptäcker något abnormalt med produkten.

SE

IT

INTRODUCTION

Thank you for purchasing the MK-6000. To get the most out of your product, please read this manual carefully.

 
BOX CONTENTS

- 1 x MK-6000 Keyboard with USB MIDI by Gear4music
- 1 x Power supply unit (PSU)
- 1 x Music rest
- 1 x User manual

FEATURES

- 61-key keyboard with USB MIDI connectivity.
- Includes 300 voices, 300 rhythms and 56 demo songs.
- Versatile playback options with stereo 3.5mm output and 3.5mm headphones output.
- Capture fleeting moments of inspiration with record and playback functionality.
- Includes power supply and music rest.

FUNCTIONS

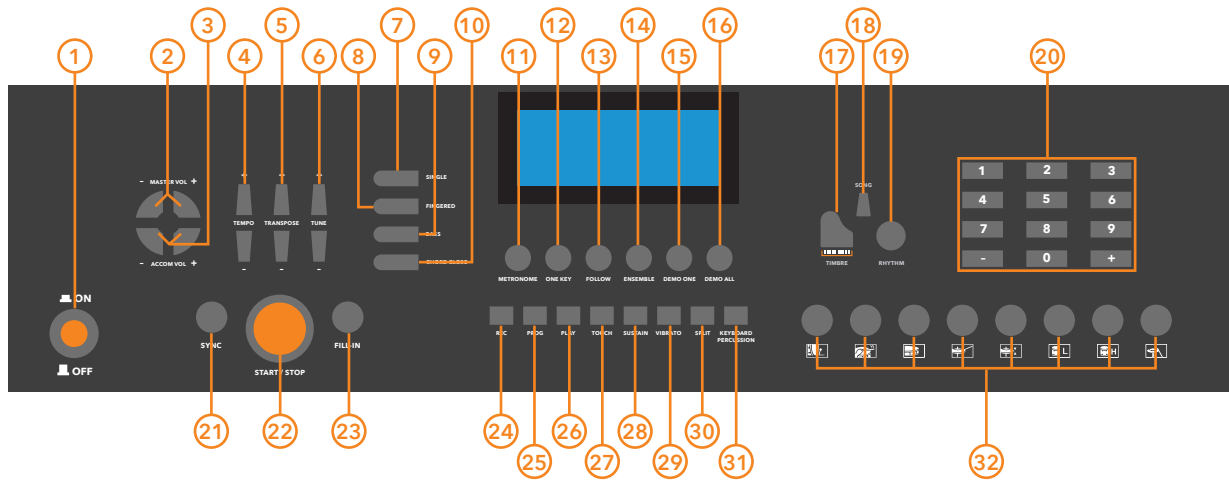

FRONT PANEL

- | | |
|-------------------------|-------------------------|
| 1. POWER | 17. TIMBRE |
| 2. MASTER VOLUME | 18. SONG |
| 3. ACCOMPANIMENT VOLUME | 19. RHYTHM |
| 4. TEMPO | 20. NUMBERS |
| 5. TRANSPOSE | 21. SYNC |
| 6. TUNE | 22. START/STOP |
| 7. SINGLE | 23. FILL IN |
| 8. FINGERED | 24. RECORD |
| 9. BASS | 25. PROGRAM |
| 10. CHORD CLOSE | 26. PLAY |
| 11. METRONOME | 27. TOUCH |
| 12. ONE KEY | 28. SUSTAIN |
| 13. FOLLOW | 29. VIBRATO |
| 14. ENSEMBLE | 30. SPLIT |
| 15. DEMO ONE | 31. KEYBOARD PERCUSSION |
| 16. DEMO ALL | 32. PERCUSSION BUTTONS |

FUNCTIONS



LCD DISPLAY

A. TEMPO DISPLAY

This indicates the current tempo.

B. NUMERIC DISPLAY

This indicates the current preset active.

C. RC-VOLUME

This indicates when the accompaniment volume is being adjusted.

D. VOLUME

This indicates when the master volume is being adjusted.

E. METRONOME

This indicates when the metronome is engaged.

F. BEAT INDICATOR

This indicates when the beat is being adjusted.

G. KEYBOARD DISPLAY

This indicates the note(s) being played.

H. VIBRATO

This indicates when the vibrato effect is enabled.

I. SUSTAIN

This indicates when the sustain effect is enabled.

J. RECORD

This indicates when the recording mode is active.

K. PROGRAM

This indicates when rhythm programming is active

L. PLAY

This indicates the recorded melody or programmed rhythm playback.

M. TONE

This indicates the numeric keypad is set to timbre selection.

N. SONG

This indicates the numeric keypad is set to song selection.

O. RHYTHM

This indicates the numeric keypad is set to rhythm selection.

P. SPLIT

This indicates when the keyboard is split into two timbres.

Q. LEARN

This indicates that teaching mode is active.

R. SINGLE

This indicates that single fingered chord mode is active.

 
S. FINGERED

This indicates that fingered chord mode is active.

T. TOUCH

This indicates when touch response is enabled.

FUNCTIONS

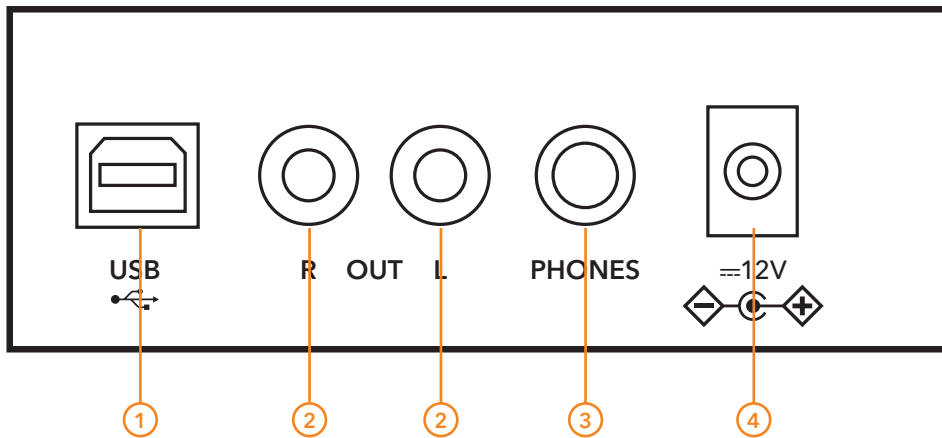

REAR PANEL

1. USB MIDI

Connect your keyboard to your computer here.

2. OUTPUTS LEFT/RIGHT

Connect your keyboard to mixers and interfaces here.

3. HEADPHONES OUTPUT

Connect a pair of 3.5mm headphones here.
Please note when headphones are inserted the speakers automatically mute.

4. DC 12V POWER INPUT

Connect the keyboard to a power source here.

 
WARNING!

To prevent damage to your hearing, speakers, and other audio equipment, reduce the volume and have the power off before connecting to any other equipment.

GETTING STARTED


POWER

Press the power [ON/OFF] button to turn the keyboard on or off. The LCD display will illuminate when powered on.

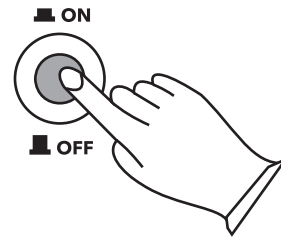


MASTER VOLUME

 Control the master volume by pressing the [MASTER VOL +/-] controls. The "VOLUME" indicator will light up and the current volume level (01-16) will be shown on the display. Press the [MASTER VOL +/-] buttons simultaneously to reset the default level (11).

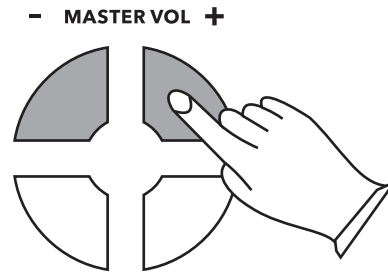

ACCOMPANIMENT VOLUME

 Control the accompaniment volume by pressing the [ACCOM VOL +/-] controls. The "RC VOLUME" indicator will light up and the current volume level (01-16) will be shown on the display. Press the [ACCOM VOL +/-] buttons simultaneously to reset to the default level (11).

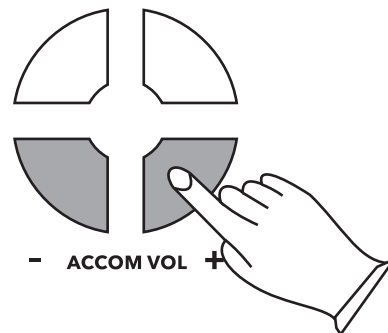

DEMO SONGS

 
 
The MK-6000 has 56 in-built demo songs, from 000 to 055, accessed by pressing the [SONG] button.

The "SONG" indicator will light up and the current demo song number will be shown on the display.

Press the [+/-] buttons on the keypad to select different demo songs, and the [START/STOP] button to control playback.

Whilst a demo song is playing, press the [DEMO ONE] button to play the selected song on a loop, or press the [DEMO ALL] button to play all 56 songs in sequence.

SONG

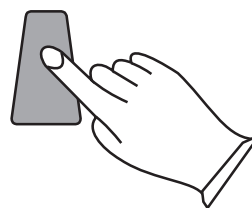

DEMO ONE

DEMO ALL

TIMBRE SELECTION

 
Select from 300 different timbres, from 000 to 299. When the instrument is switched on, the timbre selection function will automatically be enabled.

The "TONE" indicator will be lit and the current timbre number will be shown on the display.

The default tone will be "000 Acoustic Piano" and can be adjusted by pressing the corresponding number buttons or pressing the [+/-] controls on the number keypad.

When using other functions, press the [TIMBRE] button to return to/enable to the timbre select function.


TONE

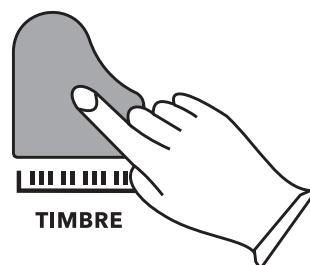

TIMBRE

RHYTHM SELECTION

 Select from 300 different rhythms, from 000 to 299. Press the [RHYTHM] button to enable/return to this function.

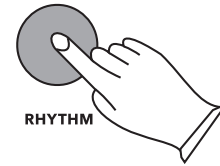


The "RHYM" indicator will light up and the current rhythm number will be shown on the display.


The default rhythm will be "000 8 Beat Pop" and can be adjusted by pressing the corresponding number buttons or pressing the [+/-] controls on the number keypad.

When using other functions, press the [RHYTHM] button to return to/enable rhythm select.

 
Press [START/STOP] to control playback of the selected rhythm. Press [TEMPO +/-] to increase or decrease the rhythm speed.

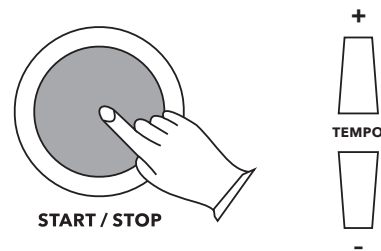

 The MK-6000 can be set to begin playing the selected rhythm at the same time as the accompaniment by pressing the [SYNC] button after selecting the desired rhythm. The four beat indicators on the display will start to flash. Next, press the [SINGLE] or [FINGERED] chord buttons if required, and begin playback of both the rhythm and accompaniment by playing the desired keyboard keys.

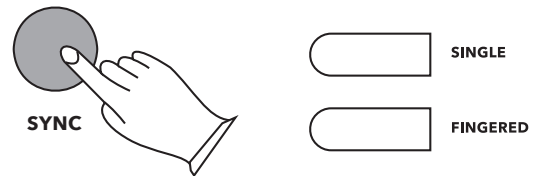

 
Pressing the [FILL-IN] button will momentarily change the rhythm patterns, to add variety to your performances. Fills can be added at any time during rhythm or auto-accompaniment playback.

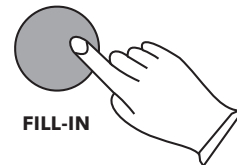

PERCUSSION

The MK-6000 has a wide range of percussion sounds.

 
As well as the MK-6000's eight dedicated percussion buttons, pressing the [KEYBOARD PERCUSSION] button allows you to play percussion sounds on the keyboard keys, as indicated by the symbols above the keys. Press the [KEYBOARD PERCUSSION] button again to return to normal keyboard operation.

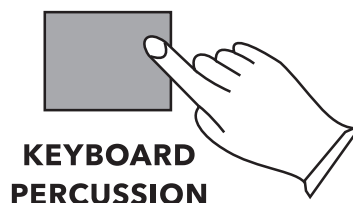

METRONOME

The MK-6000 has an in-built metronome feature that can be started and stopped by pressing the [METRONOME] button. Press the [METRONOME] button repeatedly to select between the four different time signatures (1/4, 2/4, 3/4 and 4/4). The metronome symbol on the display will indicate the selected time signature.

 
Use the [TEMPO +/-] buttons to adjust the tempo of the metronome as required, ranging from 30-240 beats per minute (bpm). Hold down either the +/- buttons to rapidly change the tempo. Press both [TEMPO +/-] buttons simultaneously to return to the default speed (120bpm).

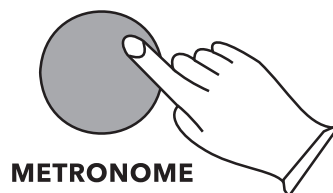

TOUCH


The MK-6000 has touch sensitive keys, allowing louder notes to be heard when the keys are pressed harder and quieter notes when the keys are pressed more softly. The default setting for this is "on" (as shown by the "TOUCH" indicator on the display).

 Press the [TOUCH] button to disable/enable this feature. The "TOUCH" indicator will go off/on accordingly.

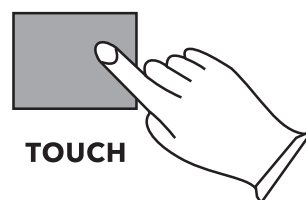

SUSTAIN

 Press the [SUSTAIN] button to add sustain to the notes being played. The "SUS" indicator will light up on the display when this effect is turned on. Press the [SUSTAIN] button again to disable the effect.

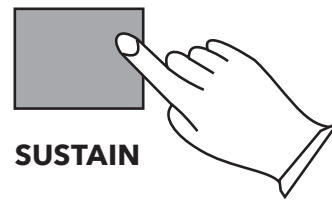


VIBRATO

Press the [VIBRATO] button to add a vibrato effect to the notes being played. The "VIB" indicator will light up on the display when this effect is turned on. Press the [VIBRATO] button again to disable the effect.



TRANSCOPE

 This function allows you to shift the overall key of the keyboard in steps of one semitone. The range is +/- 6 semitones. Press the [TRANSCOPE +/-] buttons to increase or decrease by one semitone as required. Holding both [TRANSCOPE +/-] buttons down simultaneously will return to normal pitch.



TUNE

This function allows you to fine tune the pitch of the keyboard using the [TUNE +/-] buttons.

The numeric range is from -99 to +99 and corresponds to +/- 1 semitone. Holding both [TUNE +/-] buttons down simultaneously will restore the tuning to 0.



SPLIT

 
This feature allows the keyboard to effectively be split (after 24 left-hand keys) and the same octaves (starting at note C3) to be played on both the left and right-hand side of the keyboard. This function is ideal for tuition purposes allowing both the teacher and player to play the same melodies simultaneously.

To enable this mode, press the [SPLIT] button. The "SPLIT" indicator will be shown on the display.

When in SPLIT mode, a different timbre can be selected for the right-hand section, using the normal timbre select method.

Pressing [SPLIT] again will disable the effect and return to the default mode.


Please note, SPLIT mode is automatically disabled when using SINGLE or FINGERED chord modes.

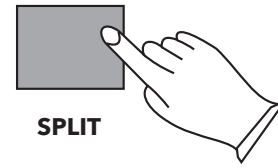

SPLIT


BASS

 Press the [BASS] button to add extra bass to the selected timbre. Press the [BASS] button again to turn off this effect and revert to the original sound.

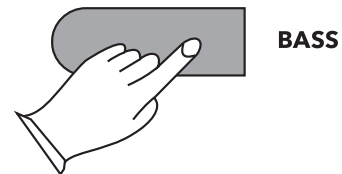

SINGLE KEY AUTO BASS CHORD

 When the rhythm function is enabled, pressing [SINGLE CHORD] allows you to play a single key chord in the "chord zone" of the keyboard (left-hand 19 keys) as displayed in the table below. The "SIN" indicator will be shown on the display.

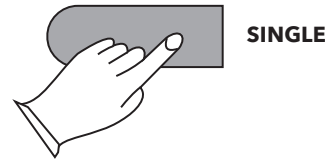

 
The major chords are marked above the keys. Minor chords can be played by pressing the major key and any black key to its left. Seventh chords can be played by pressing the major key and any white key to its left. Minor seventh chords can be played by pressing the major key and both any white key and any black key to its left. Please see the example fingering in the diagram below.









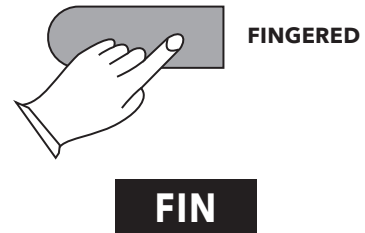






SIN

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

FINGERED CHORD BASS CHORD


When the rhythm function is enabled, pressing [FINGERED CHORD] will allow you to play a fingered chord in the "chord zone" of the keyboard (left-hand 19 keys) as displayed in the table below. The "FIN" indicator will be shown on the display. The fingering for C-root chords is shown below.



Major 	Minor(m) 	Seventh(7) 	Minor 7 th (m7) 	Diminished 7 th (dim7) 
Major 7th (maj7) 	Minor 7 flat 5 (m7-5) 	Diminished (dim) 	Augumented (aug) 	Suspended forth (sus 4) 
7 Suspended forth (7sus4) 	Minor ninth (m9) 	Minor Major 7 (mM7) 	7 flat 5 (7-5) 	Ninth (9) 

Press [CHORD CLOSE] button to disable the single key and fingered chord functions and allow the rhythm to continue. Alternatively, press the [START/STOP] button to end the chord mode and stop the rhythm.

 Please note, SPLIT mode is automatically disabled when using SINGLE or FINGERED chord modes.



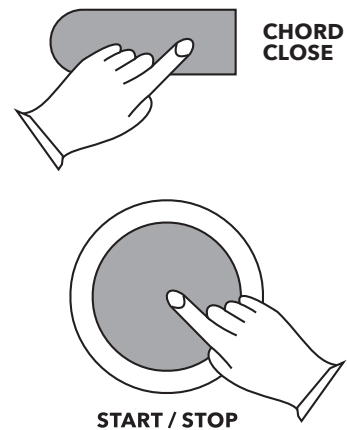


RECORDING

To record your playing press the [REC] button to enable the recording function. The "REC" indicator will be shown on the display. The metronome will play to assist with timing and, if not required, can be turned off by pressing the [METRONOME] button. Begin playing to record your performance and press the [REC] button again to stop recording.

Performances of up to 180 notes can be recorded. Recording stops automatically if the memory becomes full.

   Press the [PLAY] button to playback the recorded notes. The "PLAY" indicator will be shown on the display and the [TEMPO +/-] buttons can be used to speed up or slow down the performance as required. When playback is finished, press the [PLAY] button to listen to the recording again or press the [REC] button twice to clear the recording from the keyboard's memory.

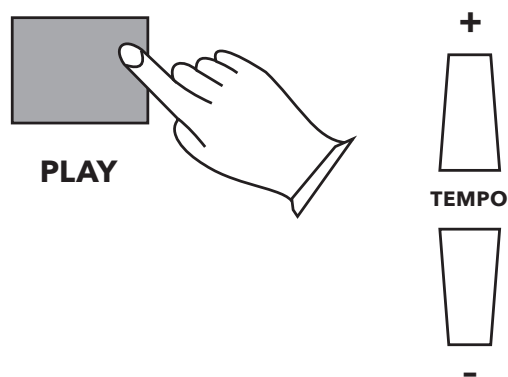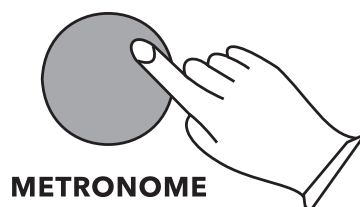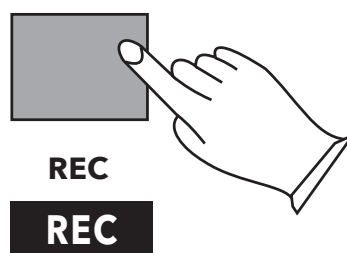

RHYTHM PROGRAMMING

The MK-6000 allows you to create custom rhythms by programming percussion sounds.

 
 
Press the [PROG] button to enable the rhythm programming function. The "PRG" indicator will be shown on the display. The metronome will play to assist with timing and, if not required, can be turned off by pressing the [METRONOME] button.

Along with the drum sounds from the percussion buttons, percussion sounds from the keyboard keys can also be included by pressing the [KEYBOARD PERCUSSION] button before you start.

Press any sequence of up to 128 percussion sounds to program your custom rhythm and press the [PROG] button again to stop programming. The "PRG" indicator will go off. Programming will stop automatically if 128 beats are played.

The timing between the last percussion sound and the end of the recording is also recorded, so it is advised to press the [PROG] button to end recording on a beat.

Press [PLAY] to playback the programmed rhythm in a loop. The "PLAY" indicator will be shown on the display and the [TEMPO +/-] buttons can be used to speed up or slow down the performance as required. When playback is finished, press the [PLAY] button to listen to the recording again or press the [PROG] button twice to clear the recording from the keyboard's memory.

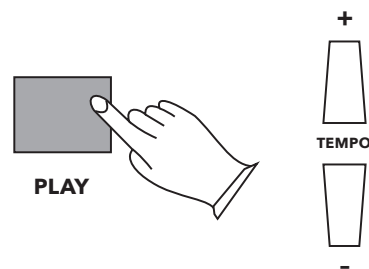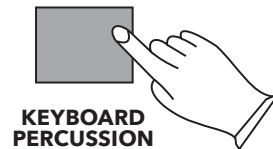

TRAINING

The MK-6000 has three in-built training features to help progress your playing ability.

Training 1: One Key

This feature is designed to help you learn the timing of the notes in the on-board songs. First, select a song to practice by pressing the [SONG] button followed by the +/- buttons on the numeric keypad as required. The "SONG" indicator and current song number will be shown on the display. You can change to a different song at any time during the lesson using the same method.

Press the [ONE KEY] button to enable the One Key training function.

The "LEARN" indicator will be shown on the display.

The keyboard plays the song's introduction and waits for you to press any key on the keyboard. The keyboard on the display will indicate the correct keys to play (any key can be pressed to start).

In this training mode, the keyboard will continue to play the accompaniment and wait for you to play each note until the song is complete. The keyboard then moves on to the next song.

Press the [ONE KEY] button again to exit this mode. The "LEARN" indicator will go off.



Training 2: Follow

This feature plays the accompaniment for the in-built songs automatically and allows you to learn how to play the melody.

First, select a song to practice by pressing the [SONG] button followed by the +/- buttons on the numeric keypad as required. The "SONG" indicator and current song number will be shown on the display. You can change to a different song at any time during the lesson using the same method.

Press the [FOLLOW] button to enable the Follow training function.


 
 
SONG

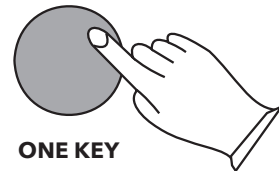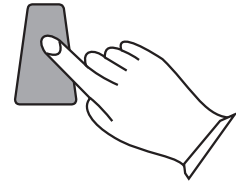

ONE KEY

LEARN

   SONG

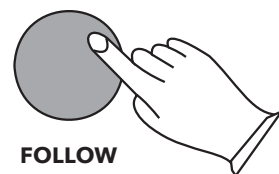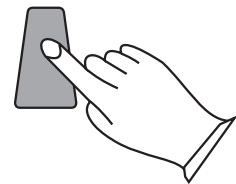

FOLLOW

 
The "LEARN" indicator will be shown on the display.

The keyboard plays the song's introduction and waits for you to press the correct key on the keyboard. The keyboard on the display will indicate the correct keys to play.

In this training mode, the song will continue when you press the correct key. If you press the incorrect key, the keyboard will wait for you to play the right note before continuing. Play each note correctly until the song is complete. The keyboard then moves on to the next song.

Press the [FOLLOW] button again to exit this mode. The "LEARN" indicator will go off.

LEARN

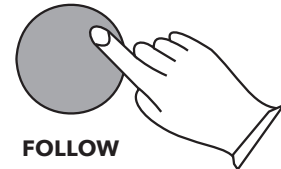

Training 3: Ensemble

This mode allows you to play the melody that you have learned, whilst the keyboard plays the accompaniment.

First, select a song to practice by pressing the [SONG] button followed by the +/- buttons on the numeric keypad as required. The "SONG" indicator and current song number will be shown on the display. You can change to a different song at any time during the lesson using the same method.

Press the [ENSEMBLE] button to enable the Ensemble training function.

The "LEARN" indicator will be shown on the display.

 
 
The keyboard begins to play the melody and accompaniment automatically. The keyboard on the display will indicate the correct keys to play.

In this training mode, pressing any key will stop the keyboard from playing the melody so you can play it yourself. The accompaniment will continue. If there is no key pressed within 5 seconds, the system will continue playing the melody itself until a key is pressed again.


Play each note correctly until the song is complete. The keyboard then moves on to the next song.

Press the [ENSEMBLE] button again to exit this mode. The "LEARN" indicator will go off.

SONG

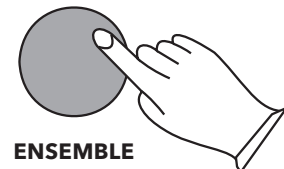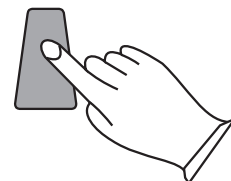

LEARN

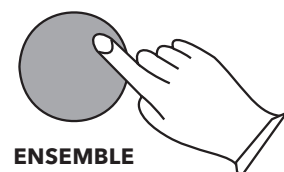 

TIMBRE LIST

NUMBER	TIMBRE
000	Acoustic Grand Piano
001	Bright Acoustic Piano
002	Electric Grand Piano
003	Honky-Tonk Piano
004	Rhodes Piano
005	Chorused Piano
006	Harpsichord
007	Clavichord
008	Celesta
009	Glockenspiel
010	Music box
011	Vibraphone
012	Marimba
013	Xylophone
014	Tubular Bell
015	Dulcimer
016	Drawbar Organ
017	Percussive Organ
018	Rock Organ
019	Church Organ
020	Reed Organ
021	Accordion
022	Harmonica
023	Tango Accordion
024	Acoustic Guitar (Nylon)
025	Acoustic Guitar (Steel)
026	Electric Guitar (Jazz)
027	Electric Guitar (Clean)
028	Electric Guitar (Muted)
029	Overdriven Guitar
030	Distortion Guitar
031	Guitar Harmonics
032	Acoustic Bass
033	Electric Bass(Finger)
034	Electric Bass (Pick)
035	Fretless Bass
036	Slap Bass 1
037	Slap Bass 2
038	Synth Bass 1
039	Synth Bass 2
040	Violin
041	Viola
042	Cello
043	Contrabass
044	Tremolo Strings
045	Pizzicato Strings
046	Orchestral Harp
047	Timpani

048	String Ensemble 1
049	String Ensemble 2
050	Synth Strings 1
051	Synth Strings 2
052	Choir Aahs
053	Voice Oohs
054	Synth Voice
055	Orchestra Hit
056	Trumpet
057	Trombone
058	Tuba
059	Muted Trumpet
060	French Horn
061	Brass Section
062	Synth Brass 1
063	Synth Brass 2
064	Soprano Sax
065	Alto Sax
066	Tenor Sax
067	Baritone Sax
068	Oboe
069	English Horn
070	Bassoon
071	Clarinet
072	Piccolo
073	Flute
074	Recorder
075	Pan Flute
076	Bottle Blow
077	Shakuhachi
078	Whistle
079	Ocarina
080	Lead 1 (Square)
081	Lead 2 (Sawtooth)
082	Lead 3 (Calliope Lead)
083	Lead 4 (Flute Lead)
084	Lead 5 (Charango)
085	Lead 6 (Voice)
086	Lead 7 (Fifths)
087	Lead 8 (Bass + Lead)
088	Pad 1 (New Age)
089	Pad 2 (Warm)
090	Pad 3 (Poly Synth)
091	Pad 4 (Choir)
092	Pad 5 (Bowed)
093	Pad 6 (Metallic)
094	Pad 7 (Halo)
095	Pad 8 (Sweep)
096	FX 1 (Rain)
097	FX 2 (Soundtrack)
098	FX 3 (Crystal)
099	FX 4 (Atmosphere)

100	FX 5 (Brightness)
101	FX 6 (Goblins)
102	FX 7 (Echoes)
103	FX 8 (Sci-Fi)
104	Sitar
105	Banjo
106	Shamisen
107	Koto
108	Kalimba
109	Bagpipe
110	Fiddle
111	Shehnai
112	Tinkle Bell
113	Agogo
114	Steel Drums
115	Woodblock
116	Taiko Drum
117	Melodic Tom
118	Synth Drum
119	Reverse Cymbal
120	Guitar Fret Noise
121	Breath Noise
122	Seashore
123	Bird Tweet
124	Telephone Ring
125	Helicopter
126	Applause
127	Gunshot
128	Electric Guitar (Jazz) 1
129	Orchestra Hit 1
130	Acoustic Guitar (Nylon) 1
131	Slap Bass 3
132	Lead 17 (Voice)
133	Acoustic Guitar (Steel) 1
134	Tango Accordion 1
135	Trombone 1
136	Acoustic Guitar (Nylon) 2
137	Ocarina 1
138	FX 17 (Goblins)
139	Viola 1
140	Violin 1
141	Pad 16 (Halo)
142	Vibraphone 1
143	Rock Organ 1
144	Shamisen 1
145	Chorused Piano 1
146	Synth Strings 3
147	Tuba 1
148	Timpani 1
149	Lead 18 (Fifths)
150	Harpsichord 1

151	Distortion Guitar 1
152	Rhodes Piano 1
153	Church Organ 1
154	Dulcimer 1
155	Electric Bass (Pick) 1
156	Honky-Tonk Piano 1
157	Percussive Organ 1
158	Synth Bass 3
159	Lead 15 (Charango)
160	Bright Acoustic Piano 1
161	Recorder 1
162	Contrabass 1
163	Lead 10 (Sawtooth)
164	Electric Bass (Finger) 1
165	Synth Pad
166	Choir Aahs 1
167	Pad 11 (Warm)
168	String Ensemble 3
169	Contrabass 2
170	Accordion 1
171	Trombone 2
172	String Ensemble 5
173	Accordion 2
174	Kalimba 1
175	FX 18 (Goblins)
176	Kalimba 1
177	Reed Organ 1
178	Lead 16 (Charango)
179	FX 15 (Brightness)
180	Voice Oohs 1
181	Electric Guitar (Clean) 1
182	Xylophone 1
183	Electric Bass (Pick) 2
184	Piccolo 1
185	Tuba 2
186	Acoustic Guitar (Steel) 2
187	FX 12 (Crystal)
188	Honky-Tonk Piano 2
189	Rhodes Piano 2
190	Celesta 1
191	Harpsichord 2
192	French Horn 1
193	Electric Organ 1
194	Electric Guitar (Muted) 1
195	Vibraphone 2
196	Orchestral Harp 1
197	FX 19 (Echoes)
198	Ocarina 1
199	Pad 9 (New Age)
200	Soprano Sax 1
201	Tango Accordion 2

202	Brass Section 1
203	Tubular Bell 1
204	Electric Guitar (Jazz) 2
205	Alto Sax 1
206	Synth Bass 4
207	Flute 1
208	Banjo 1
209	Muted Trumpet 1
210	Voice Oohs 2
211	Synth Voice 1
212	Tinkle Bell 1
213	Rock Organ 2
214	Oboe 1
215	Koto 1
216	English Horn 1
217	Timpani 1
218	Tremolo Strings 1
219	Lead 9 (Square)
220	Church Organ 2
221	Pad 10 (New Age)
222	Bagpipe 1
223	FX 11 (Soundtrack)
224	Marimba 1
225	Electric Guitar (Clean) 2
226	Chorused Piano 2
227	Muted Trumpet 2
228	Pad 14 (Bowed)
229	Lead 12 (Calliope lead)
230	Pad 15 (Metallic)
231	Acoustic Bass 1
232	Shakuhachi 1
233	Electric Organ 2
234	Orchestral Harp 2
235	Cello 1
236	Overdriven Guitar 1
237	Slap Bass 4
238	Dulcimer 2
239	Pad 17 (Halo)
240	Banjo 1
241	Clarinet 1
242	Marimba 2
243	Drawbar Organ 1
244	FX 13 (Atmosphere)
245	French Horn 2
246	String Ensemble 4
247	Electric Bass (Finger) 2
248	Pad 18 (Sweep)
249	Organ
250	Bassoon 1
251	Fretless Bass 1
252	Harmonica 1

253	Xylophone 2
254	Clavichord 1
255	FX 14 (Atmosphere)
256	Overdriven Guitar 2
257	FX 9 (Rain)
258	Fiddle 1
259	Electric Guitar (Muted) 2
260	Reed Organ 2
261	Drawbar Organ 2
262	Harpichord 3
263	Brass Section 2
264	Distortion Guitar 2
265	Synth Pad 1
266	Lead 11 (Sawtooth)
267	FX 10 (Rain)
268	Vibraphone 3
269	Synth Brass 3
270	Tubular Bell 2
271	Lead 19 (Bass + Lead)
272	FX 16 (Brightness)
273	Pad 12 (Poly Synth)
274	Celesta 2
275	Baritone Sax 1
276	Glockenspiel 1
277	Pan Flute 1
278	Percussive Organ 2
279	Lead 14 (Flute Lead)
280	Lead 13 (Calliope Lead)
281	Shamisen 2
282	Synth Brass 4
283	Shehnai 1
284	Sitar 1
285	Music Box 1
286	Bottle Blow 1
287	Glockenspiel 2
288	Bright Acoustic Piano 2
289	Pad 13 (Choir)
290	Pizzicato Strings 1
291	Harmonica 2
292	Chorused Piano 3
293	String Ensemble 6
294	Synth Strings 4
295	FX 20 (Sci-Fi)
296	Trumpet 1
297	Clavichord 2
298	Acoustic Bass 2
299	Tenor Sax 1

RHYTHM LIST

000	8-Beat Pop
001	8-Beat Soul
002	8-Beat Rock
003	Pop Rock
004	60's Soul
005	70's Soul
006	Funk
007	Twist
008	British Pop
009	Hard Rock
010	Fusion
011	Fusion Shuffle
012	Vintage Guitar Pop
013	Schlager Italia
014	Straight Rock
015	Jazz Rock
016	Fast Gospel
017	Folk Rock
018	Rock Boogie
019	Rock Classical
020	Rock Shuffle
021	Rock & Pop
022	Skiffle
023	Funk Pop Rock
024	Acoustic Rock
025	Cha Cha Cha
026	Rumba
027	Jive
028	Pasodoble
029	Samba 1
030	Samba 2
031	Schlager Rock 1
032	Schlager Rock 2
033	Foxtrot
034	Viennese Waltz
035	Tango 1
036	Tango 2
037	Carnival
038	Organ Samba
039	Reel
040	Gay Gordons
041	Scandi Waltz
042	Bossa Nova
043	Mambo 1
044	Mambo 2
045	Bolero
046	Cumbia
047	Latin Rock

048	Tijuana
049	Reggae
050	Salsa
051	Reggae 12-Beat
052	Slow Rock 1
053	Slow Rock 2
054	Slow Soul
055	8-Beat Adria
056	Unplugged
057	New Age Pop
058	8-Beat Modern
059	Country Ballad
060	Love Song
061	Modern Country Pop
062	Electro Pop
063	R&B Ballad
064	Rock Ballad
065	Slow & Easy
066	Analogue Ballad
067	Electric Ballad
068	80's Boy Band
069	Techno
070	Funky Disco
071	Saturday Night
072	Club Latin
073	Disco Chocolate
074	Disco Funk
075	Disco Hands
076	Disco Party
077	Disco Samba
078	UK Pop
079	Club Dance
080	Hip Shuffle
081	Charleston
082	Disco Pop
083	70's Disco Funk
084	Disco Philly
085	Disco House
086	80's Disco
087	Country 1
088	Country 2
089	Finger Pickin'
090	Country Brothers
091	New Country
092	Easy Country
093	70's Chart Country
094	Hoedown
095	Country Shuffle
096	Big Band Shuffle 1
097	Big Band Shuffle 2
098	Big Band Shuffle 3
099	Fast Band 1

100	Fast Band 2
101	Cat Groove
102	Dixie Jazz
103	Medium Jazz
104	Jazz Big Band
105	Jazz Club
106	Ragtime
107	Frankly Soul
108	Classic Big Band
109	French Jazz
110	Jump Jive
111	Ober Polka
112	Polka Pop
113	Blue Grass 1
114	Blue Grass 2
115	Blue Grass 3
116	Pop Waltz
117	USA March
118	Hully Gully
119	Tarantella
120	Limbo Rock
121	Swing Waltz
122	Pub Piano
123	Jazz Waltz 1
124	Jazz Waltz 2
125	Show Tune
126	Polka
127	Party Polka
128	Big Band Shuffle 4
129	Big Band Shuffle 5
130	Big Band Shuffle 6
131	Fast Band 3
132	Fast Band 4
133	Frankly Soul 2
134	Jazz Funk
135	Classic Big Band 2
136	French Jazz 2
137	Blue Grass 4
138	Blue Grass 5
139	Blue Grass 6
140	Pop Waltz 2
141	USA March 2
142	Hully Gully 2
143	Tarantella 2
144	Limbo Rock 2
145	Swing Waltz 2
146	Pub Piano 2
147	Jazz Waltz 3
148	Jazz Waltz 4
149	Tango 3
150	Tango 4

151	German Waltz
152	Carnival 2
153	Organ Samba 2
154	Reel 2
155	Gay Gordons 2
156	Scandi Waltz 2
157	Pop Classics
158	Live 8-Beat
159	Power Rock
160	Acoustic Rock
161	Cool 8-Beat
162	Up-tempo 8-Beat
163	90's Rock Ballad
164	Chart Rock Shuffle
165	Brit Pop
166	Brazilian Samba
167	Brit Pop Swing
168	60's 8-Beat
169	Fast Bossa Nova
170	60's Guitar Pop
171	70's 8-Beat
172	90's Guitar Pop
173	Soft Rock
174	Chart Guitar Pop
175	Guajira
176	70's Disco Funk 2
177	Disco Philly 2
178	Disco House 2
179	80's Disco 2
180	Swing Fox 2
181	Slow Fox 2
182	Organ Cha Cha 2
183	Organ Quick Step 2
184	Cat Groove 2
185	Dixie Jazz 2
186	Medium Jazz 2
187	Jazz Big Band 2
188	Jazz Club 2
189	Ragtime 2
190	Jazz Guitar Club
191	Modern Jazz
192	Acoustic Jazz
193	Cool Jazz Ballad
194	Modern Jazz Ballad
195	Easy Listening
196	Bebop
197	Jump Jive 2
198	Country Ballad 2
199	Country Two Step 2
200	Country 3
201	Country 4

202	Finger Pickin' 2
203	Country Brothers 2
204	New Country 2
205	Easy Country 2
206	70's Chart Country 2
207	Hoedown 2
208	Show Tune 2
209	Polka 2
210	Ober Polka 2
211	Party Polka 2
212	Waltz 2
213	Cha Cha 2
214	Rumba 2
215	Jive 2
216	Pasodoble 2
217	Samba 3
218	Samba 4
219	Schlager Polka 2
220	Polka Pop2
221	Euro Trance
222	6-8 Trance
223	Latin DJ's
224	Bomba
225	Chillout Cafe
226	70's Glam Piano
227	French House
228	English Waltz
229	8 Beat Ballad 1
230	Club House
231	House
232	Country Shuffle 2
233	Schlager Rock 3
234	Schlager Rock 4
235	Fox Trot 2
236	Viennese Waltz 2
237	Orchestra Big Band 1
238	Big Band Fast1
239	Orchestra Swing 1
240	Orchestra Swing 2
241	Rock Cha Cha 2
242	Organ Swing
243	Secret Service
244	Animation Ballad
245	Christmas Waltz
246	Modern Pop Ballad
247	Soul R&B
248	R&B Soul Ballad
249	Euro Hip Hop
250	Trip Hop
251	Ibiza 2004
252	Modern Big Band Shuffle

253	Modern Big Band
254	Pop Guitar Ballad
255	Ibiza 2002
256	New R&B Ballad
257	Guitar Serenade
258	Organ Ballad
259	Joropo
260	Reggaeton
261	8 Beat Ballad 2
262	Chillout
263	16 Beat Ballad 1
264	Forro
265	J-Pop Hit
266	16 Beat Ballad 2
267	70's Pop Ballad
268	Epic Ballad
269	Easy Ballad
270	Son Cubano
271	West Coast Pop
272	Classic 16 Beat
273	Jazz Pop
274	Movie Swing
275	Movie Ballad
276	Rumba Flamenco
277	Trance Pop
278	Orchestral Big Band 2
279	Big Band Fast 2
280	Cool Shuffle
281	Bachata
282	Bubblegum Pop
283	Rock Shuffle
284	Jig
285	Hawaiian
286	Electronica
287	Funky House
288	Club Beat
289	Retro Club
290	Modern Chart Pop
291	MOR Swing
292	12-8 Ballad
293	Norteno
294	French Waltz
295	Merengue
296	Retro Pop
297	EP Ballad
298	Power Ballad
299	Guitar Ballad

DEMO SONG LIST

000	Santa Claus Is Coming To Town
001	Boogie Rock
002	Little Brown Jug
003	Skip To My Lou
004	She Wore A Yellow Ribbon
005	March from "The Nutcracker"
006	Are You Sleeping
007	Small Bees
008	Twinkle Twinkle Little Star
009	Marry Had A Little Lamb
010	Old McDonald Had A Farm
011	Jingle Bells
012	London Bridge
013	Turkey In The Straw
014	Long Long Ago
015	Oh! Susanna
016	Sweet Family
017	If You Are Happy
018	Yankee Doodle Dandy
019	Spring
020	Arabesque No.1
021	Les Premiers Sourires De Vanessa
022	Turkish March
023	Symphony No.40
024	"Carmen" Overture
025	Texas Yellow Rose
026	Menuet from the "L'Arlesienne Suite"
027	Humoresque
028	Cuckoo Waltz
029	Sur Le Pont d'Avignon
030	My Bonnie
031	Red River Valley
032	Red Nosed Reindeer
033	Edelweiss
034	Fur Elise
035	Green Sleeves
036	Hungarian Dances No.5
037	Happy Birthday
038	We Wish You A Merry Christmas
039	Chopin Nocturnes
040	Overture "William Tell"
041	Greetings Of Love
042	Beethoven's Sonata
043	Swan Lake
044	Ave Maria
045	Johann Sebastian Bach
046	Jesus Joy of Man's Desire
047	"Orpheus In The Underworld" Overture

048	Canon
049	Donna Donna
050	Ten Little Indians
051	Autumn Leaves
052	Joy To The World
053	AR Demo
054	Layla
055	Yaheluy

SPECIFICATIONS

Keys	61 Touch Sensitive
Voices.....	300
Rhythms.....	300
Power	12V DC via 100-240V PSU (included)
Dimensions: Height.....	125mm x Width: 965mm x Depth: 368mm
Weight	4kg
Inputs	None
Outputs	USB MIDI, L+R 3.5mm Jacks, Headphones 3.5mm Jack



KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM
METALLVÄGEN 45A | 195 72 ROSERSBERG | STOCKHOLM | SVERIGE
LAHNSTRASSE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **info@gear4music.com**