

# PURE

## Evoke

C-F6 with Bluetooth





# Evoke C-F6

Thank you for choosing Evoke C-F6. This manual will get you up and running in no time, and explains how to make the most of your Evoke. We're constantly improving and adding new features to our products. To take advantage of any enhancements made since your product was shipped, please visit [support.pure.com](http://support.pure.com) where you can download the latest version of this user guide in PDF format.

EN


DE

FR

IT

NL

DA/NO

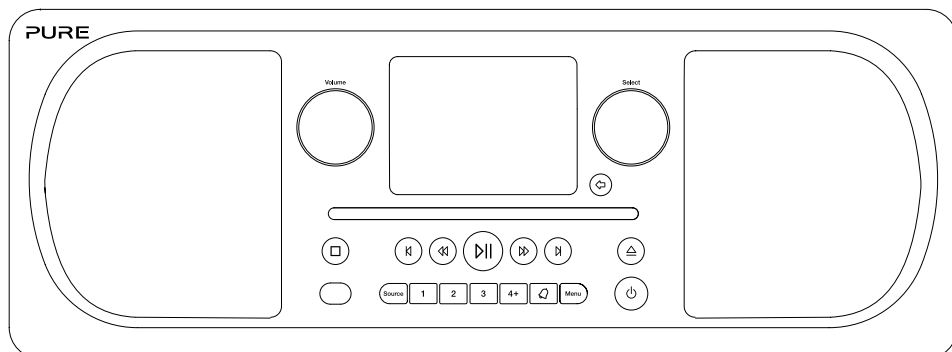

## **Safety information**

1. Familiarise yourself with all of the safety information and instructions before using the radio. When passing this radio on to others, please include all documents.
2. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.  
If liquid or water is spilled on to the radio, switch it off at the mains immediately, disconnect the mains plug and contact your dealer.  
Never touch the plug or the radio itself with wet hands. Never pull the power cable when disconnecting the power adaptor from the power supply.
3. The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like
4. Using the radio in rooms or climates with high humidity and temperatures may cause condensation to form inside the radio, which can damage the radio.  
Use apparatus in moderate climates only.
5. Avoid extreme degrees of temperature, either hot or cold. Place the device well away from heat sources such as radiators or gas/electric fires. No naked flame sources, such as lighted candles, should be placed on the apparatus
6. The mains power adapter is used as the disconnect device, the disconnect device shall remain readily operable.  
Fit the mains adaptor to an easily accessible socket located near the radio and ONLY use the mains power adapter supplied.
7. Use only power supplies listed in the user instructions. (Model GPE248-180133-Z)
8. Ensure that the available supply voltage corresponds with the required operational voltage of the radio before use.
9. Disconnect your radio from the power supply if you will not use your radio for a long period of time (e.g. if you are going on holiday).
10. Always unplug your radio from the mains socket before cleaning. When cleaning the radio, do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the radio's surface.
11. To reduce the risk of electric shock, do not remove any screws as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

### **CAUTION**

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.




### **WARNING**


Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



## **Symbols on the product and in the user manual**

 Potentially serious risk to your personal safety. To avoid possible injury or death, obey all safety notices with this symbol.

  Caution. Read the user manual before use.

 Where to switch on or off the product, or put it in standby.

**12V DC 2.0A**  12V DC power supply input, 2.0 amps.

 DC connector polarity, the centre of the connector terminal is positive.

## **4 Introduction**

- 4 Network requirements
- 4 Front panel
- 4 Front panel buttons
- 5 Rear connectors
- 5 Remote control

## **6 Getting started**

- 6 Quick set up
- 7 Adjusting and muting the volume
- 7 Display

## **9 Internet listening**

- 9 Listening to internet content
- 10 Favourite podcasts and internet radio stations

## **11 Playing a CD**

- 11 Inserting a CD
- 11 Playing a track
- 11 Playback controls
- 11 Repeating tracks
- 11 Shuffling tracks
- 11 Ejecting a CD

## **12 Listening to digital or FM radio**

- 12 Changing digital stations
- 12 Changing FM stations

## **13 Using radio presets**

- 13 To quick-store a station to a preset button (1-3)
- 13 To store a station to the preset list (4-12)
- 13 To recall a preset when listening to digital radio, FM radio or internet radio

## **14 Streaming audio to Evoke**

- 14 Streaming using Bluetooth
- 15 Streaming from Spotify
- 15 Streaming audio from a PC or Mac

## **16 Controlling Evoke from your smartphone or tablet**

## **17 Alarms and timers**

- 17 Setting an alarm
- 17 Cancelling a sounding alarm
- 17 Snoozing a sounding alarm
- 17 Setting the sleep timer

## **18 Options and settings**

- 18 System settings
- 24 DAB settings
- 26 FM radio settings

## **27 Specifications**


# Introduction

## Network requirements


To enjoy using all of Evoke's features, you will need:

- A router, wireless access point or similar network device (802.11a/b/g/n) that is connected to a broadband internet connection.
- A PC, tablet or smartphone, etc connected to the same Wi-Fi as your Evoke.


## Front panel

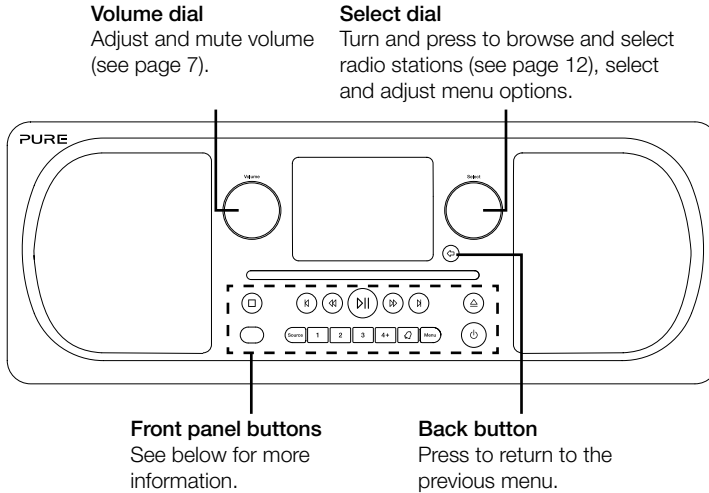


## Front panel buttons

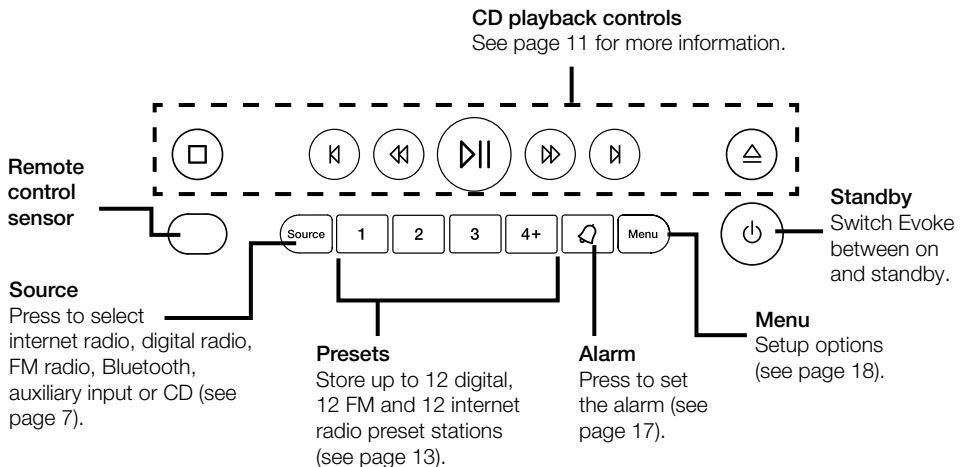

## Rear connectors

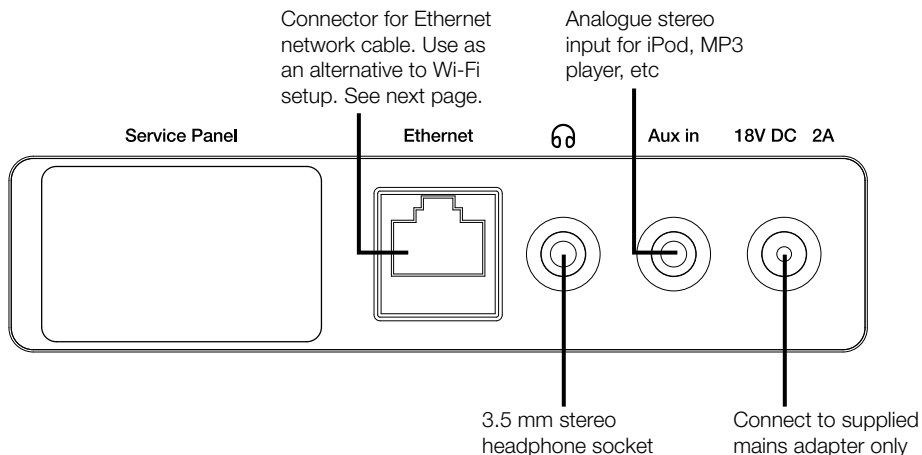


## Remote control

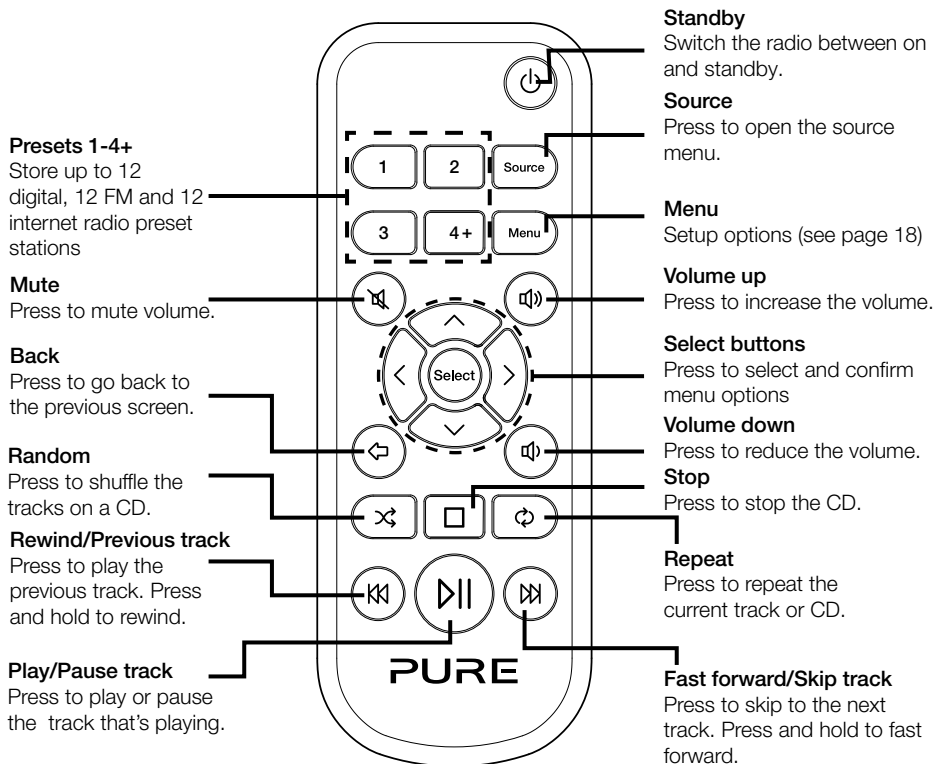


# Getting started

## Quick set up

- 1 • Fit the correct pin connector to the supplied mains power adapter.

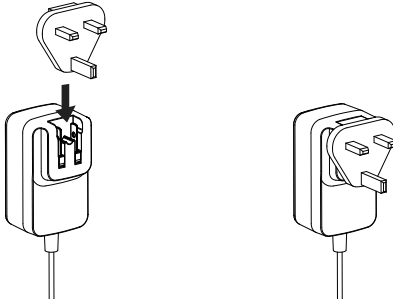

- 2 • Unclip the aerial and fully extend it (steps **A** and **B**).  
• If you want to connect Evoke to your network using an Ethernet cable, connect an Ethernet cable from the Ethernet port on the back of Evoke to your router (**C**).  
• Insert the jack of the supplied mains adapter into the socket on the rear of the radio (**D**).  
• Plug the mains adapter into the mains supply (**E**).

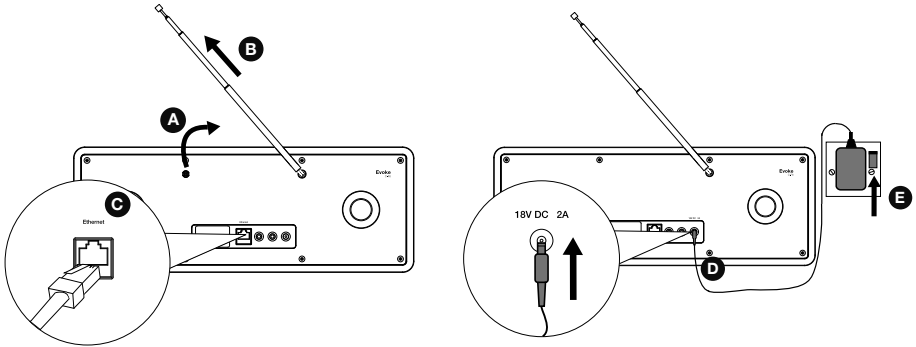

- 3 The first time you switch on Evoke you will be asked if you would like to run the setup wizard, which will help you connect Evoke to your network. If you want to run the setup wizard now, turn and press the **Select** dial to select 'Yes' and follow the prompts on screen. To set up Evoke later, turn and press the **Select** dial to select 'No'.


**Note:** For more information on using the setup wizard see page 18.





## Adjusting and muting the volume

Turn the **Volume** dial or press the **Volume** buttons on the remote to increase or decrease the volume. Press the **Volume** dial or press the **Mute** button on the remote to mute.

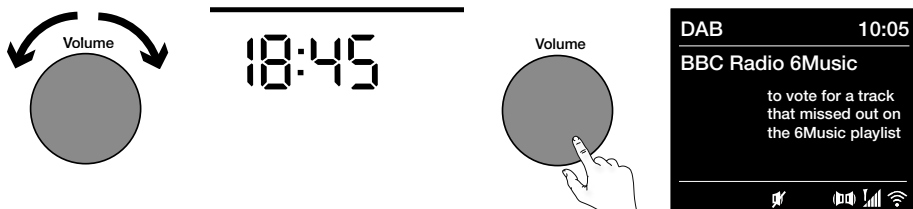


**Note:** Evoke will automatically go into standby if left in mute for 30 minutes.

## Display

### Source menu

Press the **Source** button to display the 'Source' menu. Turn and press the **Select** dial to switch between Evoke's sources.

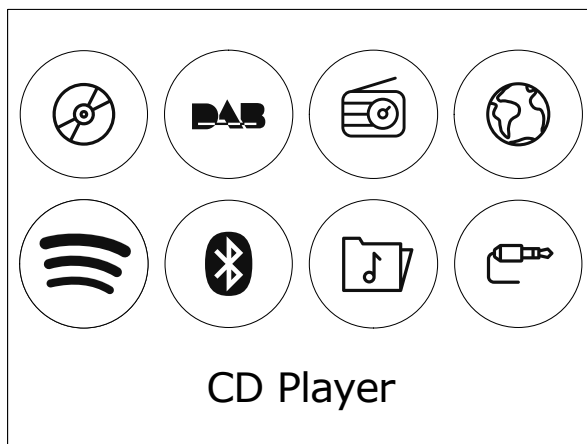

#### Description

- CD Player
- DAB Radio
- FM Radio
- Internet Radio
- Spotify
- Bluetooth
- Music Player
- Aux In

#### Function

- Listen to a CD.
- Listen to a digital radio station.
- Listen to an FM radio station.
- Listen to an internet radio station or podcast.
- Listen to Spotify (see page 15).
- Listen to content streamed from your phone or tablet.
- Listen to tracks from your computer.
- Listen to content from a device connected to your Aux in connection.

## Changing the information shown on screen

When listening to a digital radio station, FM radio station or you are streaming a track from your Bluetooth device, you can change the information that is displayed on Evoke's screen. When listening to an MP3 on a CD, Evoke displays information about the track.

### Internet radio

When listening to digital radio, press the **Select** dial to toggle the information displayed on Evoke's screen between 'Scrolling text', 'Signal strength', 'Programme type', 'Ensemble', 'Frequency', 'Signal error', 'Bitrate', 'Time' or 'Date'.

### Digital radio

When listening to digital radio, press the **Select** dial to toggle the information displayed on Evoke's screen between 'Scrolling text', 'Signal strength', 'Programme type', 'Ensemble', 'Frequency', 'Signal error', 'Bitrate', 'Time' or 'Date'.

### FM radio

When listening to FM radio, press the **Select** dial to toggle the information displayed on Evoke's screen between 'Scrolling text', 'Programme type', 'Date' or 'Frequency'.

You can connect Evoke to your network (see page 19) to access to thousands of internet radio stations and podcasts from around the world. Once connected to the internet you can also access additional subscription services such as Spotify, which provides you with instant access to millions of music tracks. We're constantly improving and adding new features to our internet service. To find out more about the latest enhancements made since your product was shipped, please visit [support.pure.com](http://support.pure.com).

## Listening to internet content



Internet radio menu

Thousands of radio stations around the world broadcast online. To listen to an internet radio station or podcast:

1. Press the **Source** button to display the 'Source' menu.
2. Turn and press the **Select** dial to select 'Internet radio'.
3. Turn and press the **Select** dial to select one of the options listed below.

## My favourites

Select this option to start listening to an internet radio station that you added to your favourites list (see page 10 for more information).

## Local United Kingdom

Select this option to browse for an internet radio station based in your country. Turn and press the **Select** dial to select 'All stations' to view all local based stations in alphabetical order. To browse for a station based on genre, turn and press the **Select** dial to select the genre you want to browse for.

## BBC

Select this option to browse for a BBC radio station.

## Stations

Select this option to browse for any internet radio station. Turn and press the **Select** dial to browse for a station based on the 'Location' or 'Genre'.

## Search stations

Select this option to search for an internet radio station. Turn and press the **Select** dial to highlight and select characters. Select 'BKSP' to delete a character. Turn and press the **Select** dial to start searching for an internet station. To cancel your search, turn and press the **Select** dial to select 'CANCEL'.

## Podcasts

Podcasts are prerecorded audio shows on a wide variety of subjects such as comedy, arts, business, and culture, for you to enjoy anytime. Turn and press the **Select** dial to browse for a podcast based on the 'Location' or 'Genre'.

## Search podcasts

Select this option to search for a podcast. Turn and press the **Select** dial to highlight and select characters. Select 'BKSP' to delete a character. Turn and press the **Select** dial to start searching for an podcast. To cancel your search, turn and press the **Select** dial to select 'CANCEL'.

## My added stations

Select this option to start listening to any internet radio stations that you manually added via the Nuvola website. See the help page on [smarradio.frontier-nuvola.net](http://smarradio.frontier-nuvola.net) to find out how to manually add radio stations.

## Help

Select this option to view some frequently asked questions relating to internet radio.

## Favourite podcasts and internet radio stations

If you've found a podcast or internet radio station that you enjoy listening to, you can save it as a favourite by registering your Evoke on the Nuvola website ([smartradio.frontier-nuvola.net](http://smartradio.frontier-nuvola.net)). If you don't want to register your Evoke, you can still save up to 12 internet radio stations as presets and access them in the same way as digital and FM radio presets (see page 13 for more information). Once registered on Nuvola, Evoke will also restore your favourite podcasts and internet radio stations as soon as you've re-connected Evoke to the internet if you ever perform a factory reset.

### Registering Evoke on Nuvola

1. Press the **Source** button and turn and press the **Select** dial to select 'Internet radio' from the Home screen.
2. Press the **Menu** button and turn and press the **Select** dial to select 'Station list'.
3. Turn and press the **Select** dial to select 'Help'.
4. Turn and press the **Select** dial to select 'Get access code'. Evoke will display an eight digit access code along with a message that tells you the amount of time the code will be valid for.
5. Make a note of the code and go to [smartradio.frontier-nuvola.net](http://smartradio.frontier-nuvola.net) on your web browser.
6. If you already have a Nuvola account, enter your email address and password and click **Sign-in**. If you don't have a Nuvola account, click **Create account** and follow the instructions on-screen.
7. Click on **Add new device**.
8. Enter the access code that you retrieved from Evoke in the 'Device code' field and press the **Submit** button to register Evoke.

Congratulations! You've registered your Evoke on Nuvola. Any favourite internet radio stations will now be saved to your Nuvola account.

### Saving a favourite podcast or internet radio station

See the help page on [smartradio.frontier-nuvola.net](http://smartradio.frontier-nuvola.net) to find out how to save podcasts and internet radio stations on the Nuvola website.

### Listening to a favourite internet radio station or podcast

1. Press the **Source** button and turn and press the **Select** dial to select 'Internet radio' from the Home screen.
2. Press the **Menu** button and turn and press the **Select** dial to select 'Station list'.
3. Turn and press the **Select** dial to select 'My favourites'.
4. Turn and press the **Select** dial to choose between 'Podcasts' and 'Stations'.
5. Turn and press the **Select** dial to choose the radio station or podcast that you want to listen to.

## Inserting a CD







Insert your CD label side up. When you first insert a CD, Evoke displays 'Reading' for a few seconds while the CD loads. After a few seconds, your CD will start to play automatically.

## Playing a track

During audio CD playback, Evoke's display shows the track number and the amount of time the track has been playing. Evoke will also display the file name if this is available.


## Playback controls

You can use the following controls on the front panel or remote control to control CD playback:

-  Press to pause the track that is currently playing. If you have paused a track, press to resume playback.
-  Press to play the previous track.
-  Press to skip to the next track.
-  Press and hold to rewind the track that is currently playing.
-  Press and hold to fast forward the track that is currently playing.
-  Press to stop the CD.

## Repeating tracks

You can use the 'Repeat' setting on Evoke to repeat the track that is currently playing or the entire CD. To change the 'Repeat' setting:

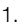1. Press the **Menu** button and turn and press **Select** dial or press the  button on the remote control to choose 'Repeat'.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select one of the following repeat options:


**Repeat one:** Select this option if you want to repeat the track that is currently playing.

**Repeat all:** Select this option if you want to repeat the entire CD.


**Normal:** Select this option if you don't want to repeat any tracks or the entire CD.

## Shuffling tracks


You can use the 'Shuffle' setting on Evoke to listen to shuffle the tracks on your CD. To change the 'Shuffle' setting:

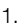1. Press the **Menu** button and turn and press the **Select** dial or press the  button on the remote control to choose 'Shuffle'.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Shuffle' if you want to enable track shuffling. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Normal' if you want to disable track shuffling.

## Ejecting a CD

Press the  button. Wait until Evoke displays 'Eject' and remove the CD.

# Listening to digital or FM radio

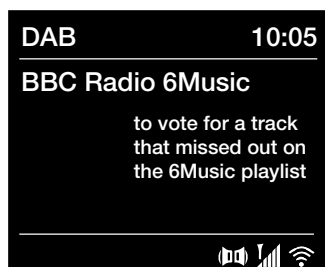

Digital radio screen



Changing digital radio station

## Changing digital stations

### Using the front panel controls

1. Turn the **Select** dial left or right to browse through the list of available digital stations.
2. Push the **Select** dial to change the station.

### Using the remote control

1. Press the < or > button on the remote to browse through the list of available digital stations.
2. Press the **Select** button to change the station.

## Changing FM stations

### Seek tuning

Press the **Select** dial or the **⏪** or **⏩** buttons on the front panel to seek to the next or previous FM radio station that has a strong signal. If you are using the remote control press the **⏪** or **⏩** buttons on the remote control to seek to the next or previous station.

### Manual tuning

Turn the **Select** dial right or left or press the **⏪** or **⏩** buttons on the front panel to step up or down 0.05 MHz. If you are using the remote control press the < or > buttons to step up or down 0.05 MHz.

You can store up to 12 digital, 12 FM and 12 internet radio stations for quick access.

**Note:** You can also save internet radio stations as favourites, see page 10 for more information.

## To quick-store a station to a preset button (1-3)

Tune to the digital, FM or internet radio station you want to store. Press and hold one of the numbered Preset buttons (1-3) for two seconds until you see a message to confirm that the preset has been stored.

## To store a station to the preset list (4-12)

1. Tune to the digital, FM or internet radio station you want to store.
2. Hold the **4+** button to view the numerical list of stored presets, then turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose any Preset number between 4 and 12. You can overwrite existing presets.
3. Press the **Select** dial or the **Select** button on the remote control to store the preset.

## To recall a preset when listening to digital radio, FM radio or internet radio

1. To tune to Presets 1 to 3, press the corresponding numbered button on the front panel or on the remote control (1 to 3).
2. To access presets 4 to 12 on the front panel press the **4+** button, turn the **Select** dial right or left to scroll through the list of presets, then push and release the **Select** dial to tune to the selected preset. To access presets 4 to 12 using the remote control, press and release the **4+** button and use the **<Select>** buttons to scroll and select a preset.

# Streaming audio to Evoke

## Streaming using Bluetooth


You can use Bluetooth to stream any audio from your phone or tablet to Evoke.

### Pairing a mobile device with Evoke

Before you can stream audio to Evoke, you will need to pair your phone or tablet with Evoke.

**Note:** Bluetooth pairing varies on different mobile devices. See your mobile device manual for specific information.

To pair with Evoke using Bluetooth:

1. Press the **Source** button and turn and press the **Select** dial to select 'Bluetooth'. Evoke will display the Bluetooth input display and the Bluetooth icon (  ) will start to flash.  
**Note:** If the Bluetooth icon is displayed, Evoke is already connected to another Bluetooth device. See below for more information.
2. On your mobile device, select the option to add a new Bluetooth device. On some mobile devices you may need to select the search or scan option.
3. Start the pairing process on your mobile device. Do this by selecting 'Evoke C-F6' from the list of available devices that appear on the mobile device's screen. Your mobile device will connect to Evoke automatically once paired.

You will now be able to start streaming audio to Evoke from your mobile device.

### Disconnecting a mobile device from Evoke

You can only have one mobile device connected to Evoke via Bluetooth at any one time. If you want to stream audio from a different mobile device, you will need to disconnect any mobile device that is currently connected to Evoke via Bluetooth first.

To disconnect a mobile device from Evoke:

1. Press the **Menu** button and turn and press the **Select** dial to select 'BT disconnect'.
2. Turn and press the **Select** dial to select 'Yes' to disconnect your mobile device from Evoke.

If your mobile device goes out of Evoke's Bluetooth range (this is usually around 10m (30ft)) the mobile device's Bluetooth connection is disconnected automatically. To manually disconnect your mobile device from Evoke, you will need to open the Bluetooth settings on your mobile device (see your mobile device's manual for more information).

When you disconnect a mobile device from Evoke, Evoke will remain in the 'Bluetooth' source. To listen to another source, e.g. digital radio, press the **Source** button to display the home menu and turn and press the **Select** dial to choose the source you want to listen to.



## Streaming from Spotify

Press the **Source** button and turn and press the **Select** dial to select 'Spotify' from the Home screen.

### Spotify Connect

#### A better way to listen at home

Spotify Connect lets you play Spotify through your home speakers or TV, using the Spotify app as a remote.

You'll need a Spotify Premium account to use Spotify Connect. If you don't have it, just go to <http://www.spotify.com/freetrial> for your free trial.

**Step 1.** Connect your device to the same Wi-Fi network as your phone, tablet or PC running the Spotify app.

**Step 2.** Open the Spotify app, and play any song.

**Step 3.** Tap the song image in the bottom left of the screen.

**Step 4.** Tap the **Connect** icon .

**Step 5.** Pick your Evoke C-F6 from the list.

For more information on how to set up and use Spotify Connect please visit [www.spotify.com/connect](http://www.spotify.com/connect).

### Licenses

The Spotify Software is subject to third party licenses found here:

<http://www.spotify.com/connect/third-party-licenses>

For more information on how to setup and use Spotify Connect please visit [www.spotify.com/connect](http://www.spotify.com/connect).

## Streaming audio from a PC or Mac

You can stream audio stored on your computer or on a UPnP-compatible Network Attached Storage (NAS) device to Evoke. To stream audio from your computer you will need to install media server software on it, such as Windows® Media Player 11. For help setting up Windows Media Player as a server, follow our step-by-step guides at <http://support.pure.com>.

### Listening to streamed tracks on Evoke

1. Press the **Source** button and turn and press the **Select** dial to select 'Music player'.
2. Turn and press the **Select** dial to choose the media player that you want to stream music from.
3. Turn and press the **Select** dial to navigate and select the track or playlist.

# Controlling Evoke from your smartphone or tablet

You can switch between sources, browse content and control the volume on Evoke on your smartphone or tablet by downloading the Pure Select app. You can download the Pure Select app on your smartphone or tablet from the Apple App Store or Google Play. To find out more about using the Pure Select app, see the help supplied with the app.

**Note:** Your smartphone or tablet will need to be on the same Wi-Fi network as Evoke.

## Opening the Pure Select app for the first time

You will be asked to select the device that you want to stream to when you first open the app. Select Evoke from the list of devices that are displayed on the app's screen. If you've already installed the app, select Evoke from the drop-down menu at the top of the screen.

## Finding your way around the Pure Select app

The Pure Select app has three main views, which you can select by tapping the tabs at the top of the app's screen:

**SOURCE:** Tap to switch between Evoke's sources.

**NOW PLAYING:** Tap to view and control the content that is currently playing on Evoke. See 'Pure Select app controls' below for more information.

**BROWSE:** Tap to browse for an internet radio station or podcast.

## Pure Select app controls



1. Tap to tune into one of your favourite internet stations.
2. Tap to shuffle the shuffle the track that is currently playing when listening to a playlist.
3. Displays any artwork associated with the radio station or music playing.
4. Tap to share what you are listening to with your friends on various social media, including Facebook and Twitter.
5. Tap to repeat the current track that is playing.
6. When playing music, displays information about the artist and album. When listening to a radio station, displays information about the radio show.
7. Playback controls.
8. Volume controls.


Tap  to mute Evoke's volume.

Slide bar to adjust Evoke's volume.

Now playing screen in the Pure Select app

## Setting an alarm

Evoke has two alarms which can switch the radio on and tune to a digital or FM radio station, play a CD or sound an alarm tone.

1. Press the  button.
2. Turn and press the **Select** dial to select 'Alarm 1' or 'Alarm 2'.
3. Turn the **Select** dial to scroll through each alarm setting. If you want to change a setting, press the **Select** dial. You can set the following alarm options:

**Enable:** Turn and press the **Select** dial to choose when you want the alarm to repeat. The available options are 'Daily', 'Once', 'Weekends' or 'Weekdays'.



**Time:** Turn and press the **Select** dial to adjust the hour of the alarm. **Note:** If you have set your Evoke to use the 12 hour time format, make sure that you select the 'AM' or 'PM' version of the hour before pressing the **Select** dial. Repeat to set the minutes of the alarm.

**Mode:** Turn and press the **Select** dial to choose between 'Buzzer', 'Internet radio', 'DAB', 'FM' or 'CD'. **Note:** If you select 'CD' as the alarm source and there is no CD in Evoke when the alarm sounds, the 'Buzzer' will sound instead.

**Preset:** If you have set your alarm to tune into an internet, digital or FM radio station, turn and press the **Select** dial to choose between the last radio station you were listening to or one of the stations in your preset list.

**Volume:** Turn and press the **Select** dial to set the volume of Evoke when the alarm sounds.


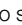
**Save:** Turn and press the **Select** dial to save the alarm.

Evoke's display will show the  or  icon to show that the alarm has been set.

## Cancelling a sounding alarm

To cancel a sounding alarm, press any button except the **Select** dial. If you press the **Standby** button during a sounding alarm, Evoke will enter standby.

## Snoozing a sounding alarm

To snooze a sounding alarm, press the **Select** dial. Evoke's display will show the snooze countdown timer and the alarm icon ( or ) will flash to show how long the alarm will snooze for. By default, Evoke snoozes an alarm for 5 minutes. To change the default snooze time see page 7.

## Setting the sleep timer

Evoke has a sleep timer that switches your Evoke into standby after a set time period. To set the sleep timer:



1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Main menu' and then choose 'Sleep'.
3. Turn the **Select** dial or use the **< >** buttons on the remote control to increase the duration of the sleep timer from 15 to 60 minutes. Press the **Select** dial or the **Select** button on the remote control to start the sleep timer.

Evoke's display will show the sleep icon when the sleep timer is active.

# Options and settings

Press the **Menu** button on Evoke or on the remote control to access the Settings menu.

## System settings

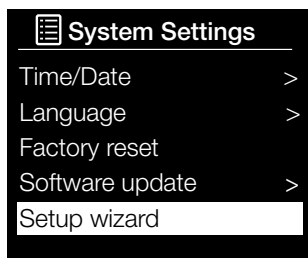
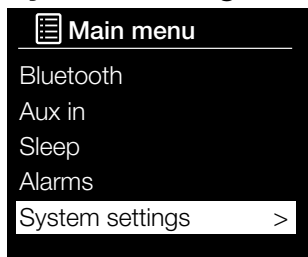


## Setup wizard

1. Press the **Menu** button.
2. Turn and press the **Select** dial to select 'Main menu' > 'System settings' > 'Setup Wizard'.
3. To run the setup wizard now, turn and press the **Select** dial to select 'YES'. To set up Evoke later, turn and press the **Select** dial to select 'NO'.
4. Turn and press the **Select** dial to choose between a 12 or 24 hour time format.
5. Turn and press the **Select** dial to select the method that you want to use for updating Evoke's time. You can choose to update the time based on the 'DAB' or 'FM' radio signal or you can update Evoke's time from your network. To disable automatic time updates, choose 'No update'.
6. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to set the day of the month. Repeat to set the month, year, hour and minutes.
7. If you have set your Evoke to use the 12 hour time format, turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose the 'AM' or 'PM' version of the hour.
8. To set Evoke up so that you can use the Pure Select app to take Evoke out of standby ('Keep network connected'), turn and press the **Select** dial to choose 'YES'. If you want to disable this feature to save power, turn and press the **Select** dial to choose 'NO'.
9. Evoke will display a message to tell you that the Setup wizard has completed. Press the **Select** dial to exit the Setup wizard.

**Helpful hint:** Your Wi-Fi key is case sensitive, make sure to enter it exactly as shown.

## Network settings

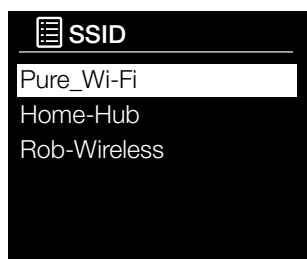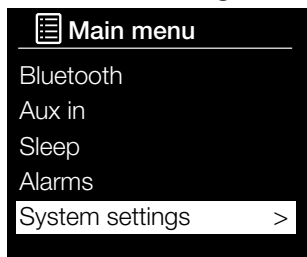

### Connecting Evoke to your Wi-Fi using the network wizard

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Network' > 'Network wizard'. Evoke will search for available Wi-Fi networks.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select the name (SSID) of your Wi-Fi network. If your network requires a key, follow steps 5-6.
4. Enter your network key or password by turning and pressing the **Select** dial or use the **<Select>** buttons on the remote control to highlight and select characters. If you want to delete the last character, turn the **Select** dial or use the **<Select>** buttons on the remote control to select 'BKSP' and push to confirm.
5. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'OK'. Evoke will connect to your network.

**Helpful hint:** Your Wi-Fi key is case sensitive, make sure to enter it exactly as shown.

### Connecting Evoke to your Wi-Fi using push button connect

You can use push button connect to connect Evoke to your Wi-Fi if your router supports WPS. Refer to your router user guide for more information on WPS.

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Network' > 'PBC WLAN setup'.
3. Follow the steps shown on Evoke's screen to finish push button connect setup.

### Viewing Evoke's network settings

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Network' > 'View settings'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to display the SSID, IP address and various other network settings.

### Viewing Evoke's WLAN region

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Network' > 'WLAN region'.

Evoke will display the region that Evoke's WLAN connection has been designed to operate in.

## Manually connecting Evoke to your wireless network

Manually configure your wireless network (for advanced users only).

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Network' > 'Manual settings'.
3. Follow the steps shown on Evoke's screen to manually add Evoke to your wireless network.

## NetRemote PIN Setup

If you want to restrict the devices that can connect to Evoke using the Pure Select app, you can get Evoke to request a PIN number when you first connect to Evoke.

To set up a pin number:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Network' > 'NetRemote PIN Setup'.
3. Enter your network key or password by turning and pressing the **Select** dial or use the **<Select>** buttons on the remote control to highlight and select the numbers. If you want to delete the last number, turn the **Select** dial to select 'BKSP' and push to confirm.
4. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'OK'. You will now need to enter this PIN whenever you want to connect a new device to Evoke using the Pure Select app.

## Network profile

Every time you connect Evoke to a new Wi-Fi, Evoke will store the connection information as a profile so that if you plan to use Evoke in several locations, you won't have to keep re-enter the Wi-Fi settings.

Evoke stores the four most recent Wi-Fi profiles and will try to connect to a Wi-Fi network using the stored profiles. If Evoke can't connect to the Wi-Fi using one of the stored profiles, you will need to connect Evoke to your network using the wizard (see page 19) or manually (see above).

If you think you will only visit a Wi-Fi connection once, you can delete the profile by carrying out the following:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Network' > 'Network profile'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose the profile that you want to delete.
4. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Yes' to delete the profile. If you want to keep the profile, turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'No'.

**Note:** You cannot delete a profile that is currently in use.

## Clear network settings

Evoke will delete all previous Wi-Fi connections, passwords and other network settings. If using the wireless connection method, this will also perform a fresh scan for available networks.

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Network' > 'Clear network settings'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Yes' to clear all network settings. If you want to keep the current network settings, turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'No'.

## Keep network connected

To set Evoke up so that you can use the Pure Select app to take Evoke out of standby:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Network' > 'Keep network connected'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Yes' to enable Evoke to be taken out of standby using the app. If you want to disable this feature to reduce power consumption, turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'No'.

**Note:** Evoke will consume more power if you decide to maintain the network connection during standby.

## Choosing an equalisation setting

Evoke includes seven equalisation audio presets and also includes a loudness setting to help improve your listening experience when listening to Evoke at a low volume.

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Equalizer'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose between 'Flat', 'Jazz', 'Rock', 'Movie', 'Classic', 'Pop' and 'News'. If you want to use a custom equalisation setting, select 'My EQ' (see below for more information).

## Creating a custom equalisation setting

You can manually set the bass and treble levels and specify if the loudness setting is enabled to help improve your listening experience when listening to Evoke at a low volume.

### Setting the bass and treble manually

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Equalizer' > 'My EQ profile setup'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Bass' or 'Treble'.
4. Turn and press the **Select dial** or use the **<Select>** buttons on the remote control to set the level from '-14' (low) to '14' (high).

### Switching on Evoke's loudness setting

If listening to Evoke at low volume, you can use the loudness setting to improve your listening experience. To switch the loudness setting on or off:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Equalizer' > 'My EQ profile setup'.
3. Turn and the **Select** dial or use the **<Select>** buttons on the remote control to scroll down to 'Loudness'.
4. Press the **Select** dial to toggle the loudness setting 'On' or 'Off'.

### Choosing a custom equalisation setting

When you have finished setting up your profile, carry out the following to listen to it on Evoke.

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Equalizer'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'My EQ'.

## Choosing a room equalisation setting

Evolve includes three predefined room equalisation settings that lets you optimise your listening experience based on the type of room you have placed Evolve in.

To change the room equaliser setting on Evolve:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Room EQ'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose between one of the following room equaliser settings:

**Room EQ1:** Choose this option for detailed, clear audio, which is ideal for places like a lounge.

**Room EQ2:** Choose this option for a slightly softer audio response, which suits places with harder materials and surfaces like kitchens and conservatories.

**Room EQ3:** Choose this option for rooms with lots of soft surfaces where high frequencies get absorbed easily, like bedrooms.

## Time and date settings

The clock will automatically set itself using your digital radio signal, FM radio signal or your network. If the time or date does not update automatically, you can manually set it using this option.

**Note:** Any time or date updates received by a digital broadcast will override manual settings.

### Setting the time and date manually

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Time/Date'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to set the day of the month. Repeat to set the month and year of the current date and hour and minutes of the current time.
4. If you have set your Evolve to use the 12 hour time format, turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose the 'AM' or 'PM' version of the hour.

### Time and date synchronization options

You can synchronize the time and date on Evolve using either the FM or digital radio signal or your internet connection.

To specify the clock synchronization options:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Time/Date'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Auto update'.
4. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose between the 'Update from DAB', 'Update from FM', 'Update from network' and 'No update' clock synchronization options.

### Changing the time format

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Time/Date'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Set format'.
4. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose between '12' and '24'.



## Setting the time zone

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Time/Date'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Set timezone'.
4. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose your timezone.

## Daylight saving time options

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Main menu' > 'System settings' > 'Time/Date'.
3. Turn and **press the Select** dial or use the **<Select>** buttons on the remote control to choose 'Daylight savings'.
4. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Yes' if you want to enable daylight savings time. Turn and press the **Select** dial to choose 'No' if you want to disable daylight savings time.

## Changing your preferred language

You can select the language that your Evoke uses for menus and options.

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Main menu' > 'System settings' > 'Language'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select a menu language.

## Carrying out a factory reset

Resetting your Evoke removes all presets, stored stations, alarms and resets all other options to default settings.

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Main menu' > 'System settings' > 'Factory Reset'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to select 'Yes' to reset Evoke to factory settings. Select 'No' if you do not want to reset your Evoke to factory settings.

## Displaying the software version

To display the version of software and Spotify that is running on Evoke:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Main menu' > 'System settings' > 'Info'.
3. Turn the **Select** dial to scroll down the screen and view all of the version information.

## Backlight

You can adjust the duration that the screen is illuminated for and the brightness of the screen when Evoke is switched on or in standby.

### Power-on level

To specify the brightness of the screen when Evoke is switched on or in standby:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Main menu' > 'System settings' > 'Backlight'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose to adjust the screen's brightness in 'Operation Mode' or 'Standby mode'.
4. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose between 'High', 'Medium' or 'Low' for when Evoke is switched on or choose between 'Medium', 'Low' and 'Off' for when Evoke is in standby.

## DAB settings

**Note:** You can only see the DAB settings when you have selected 'DAB' as the radio source.

### Scan

You can use the scan (autotune) function to automatically scan for new digital radio stations and remove inactive ones.

To carry out an autotune:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Scan'. The number of stations found will be displayed during the autotune.

When the autotune has finished, Evoke will tune to the last station that you were listening to. If the last station you were listening to is no longer available, Evoke will tune into the first station in the alphabetical list.

## Manual tuning

To manually tune Evoke to a digital radio station that broadcasts on DAB Band III:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Manual tune'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose the channel that the radio station is broadcasting on.
4. Press the **Menu** button to return to the main menu.

## Prune invalid

To remove inactive stations from the station list:

1. Press the **Menu** button.
  2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Prune invalid'.
  3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Yes'.
- Evoke will remove all inactive stations from the station list.

## Dynamic range control

Dynamic Range Control (DRC) is used to make quieter sounds in a digital radio broadcast easier to hear at low volume or in a noisy environment. Check with the broadcasters to find out if they use DRC.

To change the DRC settings:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'DRC'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose between one of the following options:

**DRC high:** Applies maximum compression to the DRC level.

**DRC low:** Applies reduced compression to the DRC level.

**DRC off:** Removes DRC compression.

## Changing the digital radio station order

To change the order that Evoke displays digital radio stations in:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Station Order'.
3. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose between one of the following options:

**Alphanumeric:** Choose this option to display digital radio stations in alphanumerical order.

**Ensemble:** Choose this option to list stations in groups according to their multiplex. Multiplexes or ensembles are groups of stations owned and broadcast by a single operator.

**Valid:** Choose this option to only display active radio stations.

## FM radio settings

**Note:** You can only see the FM radio settings when you have selected 'FM' as the radio source.

### FM stereo option

You can choose between stereo or mono reception when listening to FM radio. Mono may improve clarity where stereo signals are weak.

To change between Stereo or Mono reception:



1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Audio Setting'.
3. To use mono reception, turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'YES'. If you want to use stereo reception turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'NO'.

### FM scan

You can choose whether Evoke automatically stops at the next available FM station or the next available FM station with a strong signal when scanning for an FM station. To change the FM scan setting:

1. Press the **Menu** button.
2. Turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'Scan Setting'.
3. To automatically stop at the next available FM station with a strong signal, turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'YES'. To automatically stop at the next available FM station regardless of the signal strength, turn and press the **Select** dial or use the **<Select>** buttons on the remote control to choose 'NO'

# Specifications

<b>Radio</b>	Digital (DAB/DAB+), FM and internet radio (via Wi-Fi).
<b>Frequencies</b>	Digital Band III 174–240 MHz, FM 87.5-108 MHz (with RDS).
<b>Display</b>	2.8", TFT colour display.
<b>Network</b>	Wi-Fi: 802.11a, 802.11b and 802.11g supported with WEP and WPA/WPA2 encryption, WPS. 2.412 GHz ~ 2.472 GHz (channels 1 to 13), 5 GHz. 0.5 MB broadband speed recommended. Ethernet
<b>Bluetooth</b>	Bluetooth, Frequency range: 2402 < 2480 MHz, Maximum power: 10.00 dBm (EIRP). A2DP support
<b>Software version</b>	V1A41
<b>Media streaming</b>	Audio codecs supported include WMA, AAC, MP3, FLAC. Media streaming requires UPnP server/DLNA
<b>Speaker</b>	2x 3" full range driver, 20 W output
<b>Input connectors</b>	18 V DC power adapter socket (adapter supplied). 3.5mm Line-in for auxiliary devices. Ethernet socket.
<b>Output connectors</b>	3.5mm stereo headphone socket.
<b>Mains power adapter</b>	Adapter: Input AC 100 - 240 V~,50/60 Hz; Output DC 18V  , 2 A; Main unit: DC 18V  , 2 A
<b>Dimensions</b>	380mm wide x 223mm deep x 145mm high
<b>Weight</b>	4.2kg
<b>Warranty</b>	Comprehensive two year warranty.
<b>Approvals</b>	CE marked. Hereby, Pure International Ltd, declares that this Band II LPD radio, model Pure Evoke C-F6 is in compliance with the essential requirements of RED, 2014/53/EU. The Declaration of Conformity may be consulted at <a href="http://www.pure.com/about/red">http://www.pure.com/about/red</a>



**Warranty information**

Pure International Limited warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Should you have a problem with your unit please contact your supplier or contact Pure Support at <http://support.pure.com>.

**Disclaimer**

Pure International Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Pure International Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Pure International Limited to notify any person or organization of such revisions or changes.

**Trademarks**

Evoke C-F6, Pure & the Pure logo are trademarks or registered trademarks of Pure International Limited.

**Copyright**

Copyright © 2017 Pure International Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Pure International Limited.

**Correct disposal of this product**



This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection system or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.