

# VISIONKEY-200

## USER MANUAL

## **WARNING!**

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel  
 Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock.  
 The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.  
 No naked flame sources, such as lighted candles, should be placed on the product.  
 Allow adequate air circulation and avoid obstructing vents (if present) to prevent internal heat build-up. The ventilation must not be impeded by covering the appliance with items such as newspapers, tablecloths, curtains etc.  
 The mains plug is used to disconnect the appliance from the mains supply. Ensure that the mains outlet is easily-accessible and remove the plug from the mains outlet if you notice any abnormality with the appliance.

## **VAROVÁNÍ!**

Nezakrývejte. Uvnitř nejsou žádné součásti opravitelné uživatelem. S požadavkem na servis se odkážte na kvalifikované servisní oddělení. Neumísťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným prásením, mechanickými vibracemi nebo šokem.  
 Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt. Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt.  
 Umožněte dostatečnou cirkulaci vzduchu a vyhněte se obstrukci ventilátorů (pokud jsou přítomné) pro předejítí interního přehřívání. Ventilace nesmí být narušena překrytím zařízení výrobky jako např. noviny, kuchyňské úterky, záclony apod.  
 Hlavní kabel umožňuje odpojit zařízení od elektriny. Ujistěte se, že hlavní napájecí výstup je snadno dostupný a odpojte kabel pokud naznamenáte jakoukoliv abnormalitu na zařízení.

## **ADVARSEL!**

Dækslet må ikke åbnes. Ingen bruger-udsiftelige dele indeni. Overlad service til kvalificeret service personale  
 Placer ikke produktet i nærheden af varmekilder såsom en radiator eller et direkte sollys, meget støv, mekaniske vibrationer eller stød  
 Produktet må ikke udsettes for vind eller stærk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet  
 Må ikke placeres nær åbenild, tænde stearinlys må ikke placeres på produktet  
 Vær sikker på at der er tilstrækkelig luftcirculation og undgår at dække ventilører (hvis der er nogen) for at undgå at produktet bliver varmt.  
 Ventilationen må ikke blokeres med overdækning af apparatet med genstande som viser, dug, gardiner osv.  
 Stikket bringes til at afbryde apparatet fra strømmen. Sikre at stikkontakterne er let tilgængelige, og fjern stikket fra stikkontakten, hvis du bemærker noget unormalt med apparatet.

## **WAARSCHUWING!**

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhoud over aan bevoegd onderhoudspersoneel.  
 Plaats het produkt niet in de buurt van een hittebron zoals een radiator of in direkt zonlicht of in een stofrijke omgeving, mechanische vibratie of schok.  
 Plaats het produkt niet in de buurt van spattende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas. Er mogen geen open vlammen zoals aangestoken kaarsen op de apparatuur worden geplaatst.  
 Zorg om overheating te voorkomen voor voldoende ventilatie en bellemmer ventilatiroosters niet. Bedek het produkt niet met dingen zoals kranten, tafellakens, gordijnen etc.  
 De stekker van dit apparaat wordt gebruikt om het apparaat aan en uit te zetten. Zorg ervoor dat het stopcontact gemakkelijk bereikbaar is en haal de stekker uit het stopcontact als u enige onregelmatigheid ondervindt.

## **EN VAROITUS!**

Älä avaa kannetta. Ei sisällä käyttäjää-huollettavia osia. Huollot saa suorittaa vain pätevät huoltomies.  
 Älä säälytä tuotetta minäkään kuuman läheellä kuten patteri tai suorassa auringonpaisteessa, pölyisessä, mekaanisessa värinässä tai istrussa. Tuotetta ei saa alistiä tippuvaille tai loiskeelle tai nestetiä sisältävästä tuotteesta kuten maljakko eivät saa olla tuotteen lähettyville. Avotulia kuten sytytetyt kynttilä ei saa olla tuotteen päällä. Salli riittävä ilmankierto ja väältä tuuletusaukkojen tukkiminen (jos sellaisissa on olemassa) estämään sisäisen lämmön muodostumisen. Tuuletusta ei saa estää peittämällä laite esineillä, kuten sanomalehdillä, pöytälinnoilla, verhoilla jne. Verkkovirtapistoketta käytetään irrottamaan laite verkkovirrasta. Varmista, että pistorasia on helposti saatavilla ja irrota pistotulppa pistorasiasta, jos havaitset joitain epänormaalia laitteessa.

## **ATTENTION!**

FR

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation à du personnel de réparation qualifié.  
 Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques.  
 L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé dessus.  
 Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil.  
 Assurer une circulation d'air suffisante et éviter d'obstruer les fentes (le cas échéant) afin d'éviter une surchauffe interne. La ventilation ne doit pas être bloquée en couvrant l'appareil avec des objets tels que des journaux, des nappes, des rideaux, etc.  
 La prise secteur est utilisée comme dispositif de débranchement. La prise murale doit être facile d'accès, et en cas d'anomalie de l'appareil, débrancher la prise de courant au niveau de la prise murale.

## **WARNUNG!**

DE

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile. Überlassen Sie Wartungsarbeiten qualifizierten Fachpersonal.  
 Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Vibratoren oder Stößen.  
 Schützen Sie das Produkt vor tropfenden oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt.  
 Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden.  
 Sorgen Sie für eine ausreichende Luftzirkulation und vermeiden Sie, dass die Lüftungsschlitze (falls vorhanden) abgedeckt werden, um einen internen Wärmestau zu verhindern. Die Belüftung darf nicht durch Abdecken des Gerätes mit Gegenständen wie Zeitungen, Tischdecken, Vorhängen usw. blockiert werden.  
 Der Netzstecker dient zum Trennen des Gerätes vom Netz. Vergewissern Sie sich, dass die Steckdose leicht zugänglich ist, und ziehen Sie den Stecker aus der Steckdose, wenn Sie eine Anomalie mit dem Gerät bemerken.

## **AVVERTIMENTO!**

IT

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto. Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock.  
 Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto.  
 Non esporre il prodotto a fuoco, candele o oggetti simili.  
 Assicurarsi la circolazione dell'aria e non ostruire le ventole, se presenti, per evitare il surriscaldamento. La ventilazione non deve subire impedimenti dovuti a giornali, tovaglie, tende, ecc.  
 La spina principale viene utilizzata per disconnettere il prodotto dalla principale fonte di energia. Assicurarsi che la spina sia facilmente accessibile e disconnettere l'unità nel caso si notassero dei difetti di funzionamento.

## **ADVARSEL!**

Ikke åpne dekselet. Inneholder ingen deler som kan brukes. Overlat reperasjon til kvalifisert servicepersonell.  
 Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støv, mekanisk vibrasjon eller stø.  
 Produktet må ikke utsettes for drypping eller sprutting, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet.  
 Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet.  
 Tillat tilstrekkelig luftcirkulasjon og unngå å blokkere ventiler (hvis tilstede) for å forhindre intern varmeoppsamling. Pass på at ventilasjon ikke hindres ved å unngå å dekke apparatet med ting som viser, bordduker, gardiner osv.  
 Stikkontakten brukes til å koble apparatet fra strømforsyningen.  
 Forsikre deg om at stikkontakten er lett tilgjengelig og ta stepelet ut av stikkontakten hvis du oppdager uregelmessigheter under bruk av apparatet.

## **OSTRZEŻENIE!**

Nie otwierać pokrywy. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla wyszkolonego personelu.  
 Nie umieszczać produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym wibracjom. Produkt ten nie może być eksponowany na kapanie lub chłapanie, a przedmioty wypełnione pynam, takie jak wazy, nie powinny być na nim umieszczane.  
 Źródła otwartego ognia, takie jak np. świece, nie powinny być umiejscowiane na produkcji.  
 Należy zapewnić odpowiednią wentylację i uniakać blokowania otworów wentylacyjnych, aby uniknąć wewnętrznego wzrostu temperatury. Wentylacja nie powinna być utrudniana poprzez nakrywanie urządzenia gazetami, obrusami czy zasłonami.  
 Wtyczka sieciowa służy do odłączenia urządzenia od zasilania sieciowego. Należy upewnić się, że gniazdo sieciowe jest łatwo dostępne, a w razie wystąpienia nieprawidłości w funkcjonowaniu urządzenia odłączyć je od zasilania sieciowego.

## **ATENÇÃO!**

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado.  
 Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque  
 Não mantenha o produto num local húmido ou perto líquidos como vasos, etc.  
 Não aproxime o produto a fontes de fogo vivo, como velas  
 Mantenha o produto num espaço suficientemente arejado de forma a evitar sobre-aquecimento. Não bloquee a ventilação do instrumento, cobrindo-o com artigos como cortinas, toalhas de mesa ou jornais  
 O transformador é utilizado para conectar e desconectar o artigo da principal fonte de energia. Certifique-se que a ficha é facilmente acessível e que o artigo está devidamente ligado à corrente se detectar alguma anomalia com o funcionamento

## **VÝSTRAHA!**

Neovráťajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko.  
 Nevystavujte produkt do blízkosti akéhokoľvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so slnečným žiareniom, nadmerným prásnym prostredím, mechanickým vibráciám alebo šokom.  
 Produkt nesmie prísť do kontaktu s vodom a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt.  
 Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkте.  
 Umožnite dostatočnú cirkuláciu vzduchu a zabráňte obstrukcii ventiláčnych otvorov (ak sú prítomné) kvôli prevencii vnútorného prehrevania. Ventilácia nesmie byť narušená prekrytím zariadenia výrobkami ako napr. noviny, kuchynské utierky, záclony a pod.  
 Hlavný kábel umožňuje odpojíť zariadenie od elektriny. Uistite sa, že hlavný napájací výstup je ľahko dosiahnuteľný a odpojte kábel ak zaznamenáte akúkolvek abnormálitu na zariadení.

NO

## **OPOZORILO!**

Ne odpirajte pokrova. V notranosti ni nobenih delov, ki jih uporabnik lahko sam popravljajo. Popravilo prepustite usposobljenemu osobju Ne postavljajte izdelka na lokacijo v bližini vira topote, kot je radiator, ali na območje, ki je izpostavljen neposredni sončni svetlobi, pretiranem prahu, mehanskim tresljajem ali udarcem Izdelek ne sme biti izpostavljen kapljaluji ali brižganju in nobeni predmeti, napolnjeni z vodo, kot so vase, se ne smejo postaviti na izdelek Nobenega od virov odprtega ognja, kot so vžgane sveče, se ne sme postavljati na izdelek Zagotovite zadostno kroženje zraka in umaknite ovire na odprtinhach (če obstajajo), zaradi preprečevanja kopičenja notranje topote. Ventilacija ne sme ovirati s prekrivanjem naprave s predmeti, kot so časopisi, prti, zavese itn.

Omrežni vtic se uporablja za izklop naprave iz električne omrežja. Poskrbite, da je omrežna vtičnica zlahka dostopna in izvlecite vtičač iz vtičnice, če opazite kakršno kolik nepravilnost pri napravi.

PL

## **iADVERTENCIA!**

ES

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado. No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo. Evite lugares expuestos a un humedad. No ponga objetos llenos de líquidos en la superficie de este aparato. No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato. Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstruya o tape las aberturas con objetos como periódicos, manteles, cortinas, etc. El enchufe se utiliza para desconectar el producto de la corriente. Si nota algún defecto, desconéctelo de la toma de corriente.

## **WARNING!**

SE

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal. Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock. Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten. Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten. Tillåt tillräcklig luftcirkulation och blockera ej eventuella ventiler för att undvika intern överhettning. Ventilen bör ej täckas av föremål såsom tidningar, dukar, gardiner etc. Nätkontakten används för att koppla bort apparaten från eluttaget. Se till att eluttaget är lättåtkomligt och avlägsna kontakten från eluttaget om du upptäcker något abnormalt med produkten.

SK

---

## **CONTENTS**

Intro .....	5
Functions .....	6
Setting Up .....	7-8
Select & Play Sounds.....	9
Dual Mode.....	9
Split / Duo Mode .....	10
Playing the Drum Kit Sounds .....	11
Metronome .....	11
Selecting & Playing Rhythms .....	12-13
Demo Songs .....	14
Saving / Loading Settings.....	15
Setting Items for Performance .....	16-17
Quick Recording & Playback .....	18
Bluetooth.....	19
Tone List.....	20-21
Rhythm List .....	21
Demo List.....	22
Auto Accompaniment .....	23-24
Specifications .....	25

---


## **INTRODUCTION**

Thank you for purchasing the VISIONKEY-200 Portable Digital Piano by Gear4music. To get the most out of your product, please read this manual carefully.

### **CONTENTS**

- 1 x VISIONKEY-200 Portable Digital Piano by Gear4music
- 1 x Sustain Pedal
- 1 x User Manual
- 1 x PSU Power Adapter
- 1 x Music Stand

## FUNCTIONS

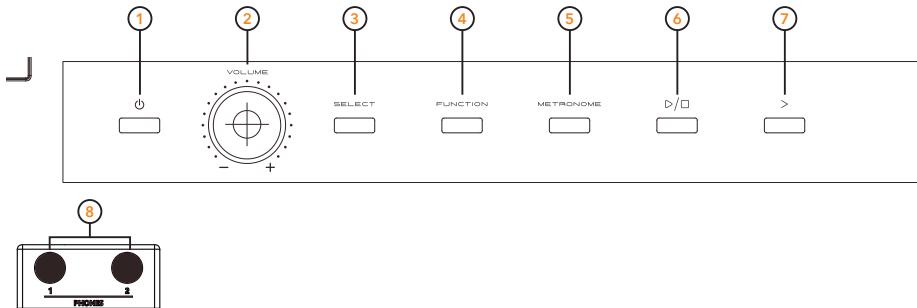

### FRONT PANEL

#### 1. POWER

Press this button to turn the VISIONKEY-200 on/off.

#### 2. VOLUME

Use this control to adjust the master volume.

#### 3. SELECT

Use this button to alternate between Tone, Rhythm, and Demo categories.

#### 4. FUNCTION

Use this button in conjunction with the appropriate key to alter settings on the VISIONKEY-200.

#### 5. METRONOME

Use this button to turn the metronome on/off.

#### 6. PLAY / PAUSE


Use this button to start and stop rhythms and demo songs. This can also be used when recording.

#### 7. >

Use this button to determine the next tone, rhythm, or demo song.

#### 8. HEADPHONES

Connect up to two pairs of headphones here for silent playback.

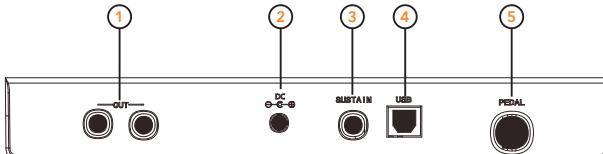

### BACK PANEL

#### 1. OUT

Use these outputs to connect a pair of external active speakers.

#### 2. DC

Connect the supplied PSU here to a power socket in order to power the device.

#### 3. SUSTAIN

Connect a sustain pedal with a 6.35mm jack cable here.

#### 4. USB

Connect a USB cable here to use the keyboard with your computer.

#### 5. PEDAL

Connect a triple pedal with a 5-pin DIN plug here.

---

## SETTING UP

### CONNECTING THE POWER ADAPTER

Connect the power adapter here as shown in the diagram. If the VISIONKEY-200 is not used for an extended period then please remove the adapter.



### POWER ON/OFF

Press the power button to turn the VISIONKEY-200 on/off. When powered on the LED indicator will light up.




### ADJUSTING THE MASTER VOLUME

Turn the volume control clockwise to increase the master volume of the keyboard. Turning anti-clockwise decreases the VISIONKEY-200's volume.



### MUSIC REST INSTALLATION

Please install the music rest as per the diagram below.

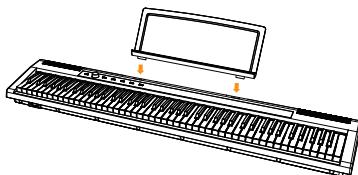


### SUSTAIN PEDAL CONNECTION

Please connect the included sustain foot pedal as per the diagram below.



### TRIPLE PEDAL CONNECTION

Please connect the triple foot pedal (sold separately as part of the VISIONKEY-200 wooden stand) as per the diagram below.

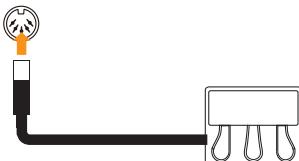

---


## SETTING UP

### USING HEADPHONES

The VISIONKEY-200 features two headphone jacks at the front of the keyboard. This allows two pairs of headphones to be connected so that players can perform together, or a teacher can monitor a student without disturbing those around them.

Should you require additional headphone outputs then the stereo outputs at the rear can also be used.


To ensure no damage to your hearing or the headphones, please ensure that the volume is set to a minimum before powering on and then gradually turned up.

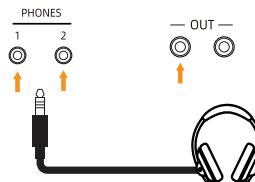

### USING EXTERNAL SPEAKERS

The VISIONKEY-200 includes two speaker outputs on the rear of the keyboard. This allows you to connect a pair of active speakers directly to the keyboard.

To ensure no damage to your hearing or the speakers, please ensure that the volume is set to a minimum before powering on and then gradually turned up.

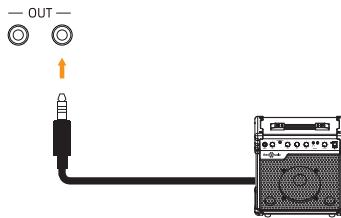

### USB TO HOST PORT


Connect the keyboard to a computer by using a USB cable. This allows the VISIONKEY-200 to be used as a MIDI controller for third party VSTs within a DAW, or with standalone software.




## SELECT & PLAY SOUNDS

The VISIONKEY-200 feature 128 sounds.

- To select tone selection mode, press and hold the [SELECT] button, and press any of the C7-C8 keys. The piano will beep to confirm tone selection mode is activated.

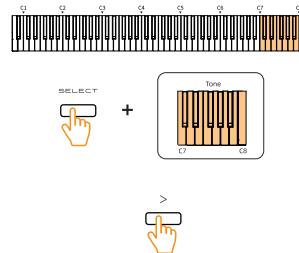

- Press the [NEXT] button to find the preferred sound, please refer to the tone list at the end of the manual for more details.
- Tones can also be selected by their number in the tone list. To do this, press and hold the [FUNCTION] button and use the desired combination of the numbers shown above piano keys B2-D4.


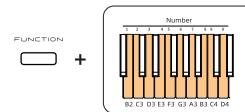


## DUAL MODE

The VISIONKEY-200 offers a Dual Mode Function. This allows two sounds to be played simultaneously. To access this mode:

- Select the desired tone for Voice 1 as show above.
- Press and hold the [FUNCTION] button, and then press piano key [C5] to engage Dual Mode.
- Select the desired tone for Voice 2 as shown above.
- The keyboard will now play the two selected tones.


Please note: To disengage Dual Mode, press and hold the [FUNCTION] button and then press piano key [D5].

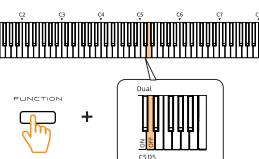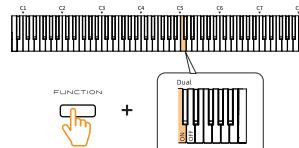


## SPLIT / DUO MODE

The VISIONKEY-200 features Split Mode, allowing two different sounds to be played separately in the left and right areas of the piano, the split point between the two sounds is piano key C4.

- Firstly, select the desired left-hand sound.
- Then press and hold the [FUNCTION] button and press piano key E5 to turn on Split Mode.

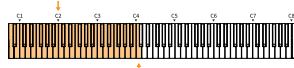

- Now select the desired right-hand sound.

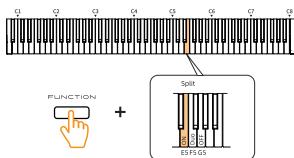

- The piano will now play the different selected tones in the left and right areas.
- To turn off Split Mode, press and hold the [FUNCTION] button and press piano key G5.




The VISIONKEY-200 also offers a Duo Mode, meaning the piano keys can be divided into two sections that both play the same notes, voice (Acoustic Grand Piano), octave, and volume. This provides an ideal teaching function, allowing two people to play the same notes simultaneously.

- To turn on Duo Mode, press and hold the [FUNCTION] button, press piano key F5.
- To exit Duo Mode, press and hold the [FUNCTION] button, then press piano key G5.

## PERCUSSION MODE

The VISIONKEY-200 features 88 drum sounds, allowing you to use the piano keys to play a wide range of percussion sounds.

- To activate Percussion Mode, press and hold the [FUNCTION] button, then press the A8 piano key.
- The piano keys will now play the various drum kit sounds.
- To turn off Percussion Mode, press and hold the [FUNCTION] button, then press the B8 piano key.

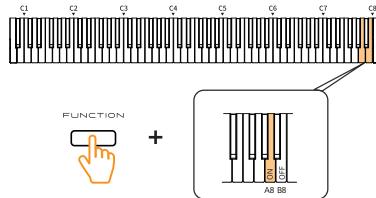

## METRONOME

The VISIONKEY-200 features a built-in Metronome with 6 different time signatures and adjustable tempo.


### Turning the Metronome ON/OFF

- To turn the metronome on/off, press the [METRONOME] button. The LED indicator will light up when in use.




### Adjusting the Tempo

- To adjust the tempo of the metronome, press and hold the [FUNCTION] button, then press piano key D#7 to increase and piano key F#7 to decrease the tempo, as desired.

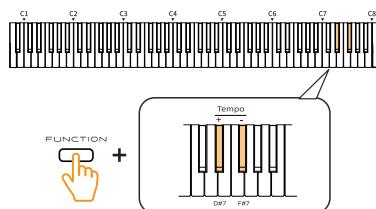

### Select the Time Signature

- To adjust the time signature of the metronome, Press and hold the [FUNCTION] button, then press piano keys G6-C7 to select between the following time signatures: 1/4, 2/4, 3/4, 4/4, 5/4 and 6/4.

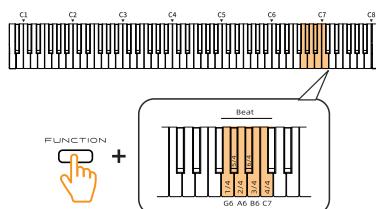


---

## SELECT AND PLAYING RHYTHMS

The VISIONKEY-200 features 83 different in-built rhythms, along with Intro / Chord Accompaniment and Ending features that allow the arrangement of the accompaniment to be more varied.

### Selecting a Rhythm


- To select rhythm selection mode, press and hold the [SELECT] button, then press any one of F#3-C#6 piano keys to select the Style Status. The piano will beep to confirm rhythm selection mode is activated.

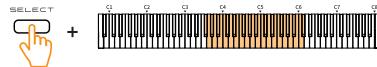

- Press the [NEXT] button to find the preferred rhythm, please refer to the rhythm list at the end of the manual for more details.



- Rhythms can also be selected by their number in the rhythm list. To do this, press and hold the [FUNCTION] button and use the desired combination of the numbers shown above piano keys B2-D4.

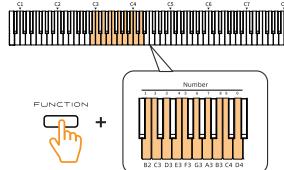


- Press [▷/□] button to start and stop playing the rhythm.



### Adjusting the Rhythm Volume



- To adjust the rhythm volume, press and hold the [FUNCTION] button, then press piano keys C1 to increase and D1 to decrease the volume of the rhythm being played.

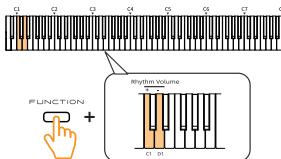

## Adding Intro / Ending Variation

The Intro/Ending function can help to add expression to the rhythm and variation to your performance.


- To add an introduction, press and hold the [FUNCTION] button, then press piano key D#1 before the rhythm is started. After the introduction is played, the main section of the rhythm will follow.
- To add an ending or “outro” to the rhythm, at any time during the main section, press and hold the [FUNCTION] button and then press piano key D#1 again.

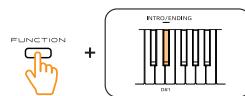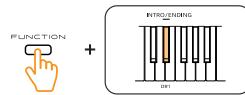



## Auto Accompaniment Function

The auto accompaniment feature puts a whole backing band at your fingertips. In this mode, all you have to do is play the chords with your left hand and the accompaniment will automatically play along in the style selected, instantly following the chords you play.

- To start the rhythm, press the [▷/□]
- Press and hold the [FUNCTION] button, then press piano key A0 to turn on the Auto Accompaniment mode.
- Use piano keys A0-F3 to play the Smart/Multi Chord accompaniment.
- To turn off Auto Accompaniment mode, press and hold the [FUNCTION] button, then press piano key B0.

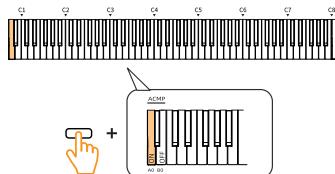

Tips: For example, to play a C Chord, you can either press piano key C3 in Smart Mode or press keys C2+E2+G2 in Multi-Mode. For more information of the Auto Accompaniment Chord List, please refer to pages 22 - 23.

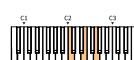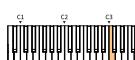


---

## DEMO SONGS

The VISIONKEY-200 comes complete with 47 demo songs which you can either listen to or play along with.


### Select a Song

- Press and hold the [SELECT] button then press any key within a range of [A#0]-[F3] to select a song.

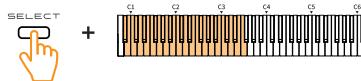

- Press either the [NEXT] button or use the combination operation by pressing [FUNCTION] and the relevant number keys to select the desired song.

- Press the [▷/□] button to play the song.

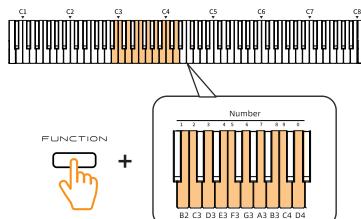

- When done, press the [▷/□] button to stop the song.

### Song Practice Mode

- Enter song mode and select the desired demo song.
- Press and hold any white and black key within a range of [A#0]-[F3] then press the play/pause button to engage song practice mode. The song will start playing when you begin to play the keyboard.


---

## SAVING / LOADING SETTING

The VISIONKEY-200 includes four slots that allow you to save specific sounds you have created using on-board processing. These can easily be accessed anytime during your performance.

### Save Your Setting

- Press and hold the [FUNCTION] button then press either C2, D2, E2, or F2 to select your desired bank.
- Press and hold the [FUNCTION] button then hold down [B1] to save your preset.

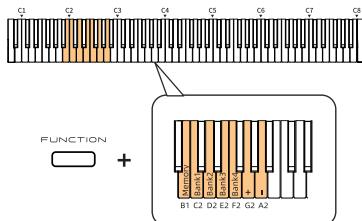

### Load Your Setting

- Press and hold the [FUNCTION] button then press either C2, D2, E2, or F2 to select your desired bank.
- Press and hold the [FUNCTION] button then quick press [B1] to load your preset.

### Alternating Between Banks

- Press and hold the [FUNCTION] button then press [G2] to go backward and [A2] to go forward through your desired banks.

# SETTING VARIOUS ITEMS FOR PERFORMANCE


The VISIONKEY-200's function settings give you further control over the keyboard, allowing you to transpose, as well as adjust the octave, level of sensitivity and processing applied.

## Transpose

Transpose allows you to adjust the key of the VISIONKEY-200 in semitone intervals.

- Press and hold the [FUNCTION] button then press either [G1] to decrease or [A1] increase the key.


Please Note:  
The default value is 0, the range of transposition goes from -12 to +12.

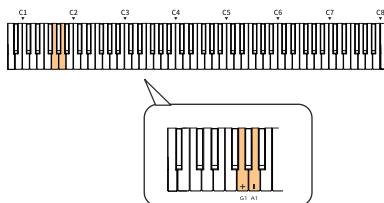

## Octave

Octave allows you to adjust the octave range of the VISIONKEY-200.


- Press and hold the [FUNCTION] button then press either [E1] to decrease or [F1] increase the octave.

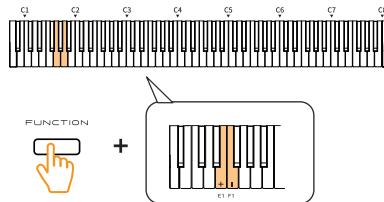

## Touch Sensitivity

The VISIONKEY-200 has four variants of touch sensitivity. These consist of Fixed (Off), Soft, Normal, and Hard. Please note that the default setting is normal.


- Press and hold the [FUNCTION] button then press either [D7], [E7], [F7], or [G7] to determine the level of touch sensitivity you require. The onboard processing allows you to adjust the tonal quality of the VISIONKEY-200.

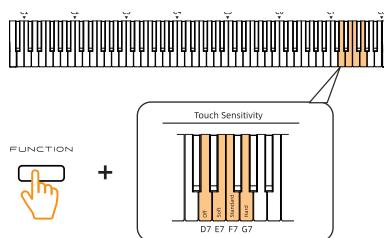

---


## Reverb

- Press and hold the [FUNCTION] button then press [C6] to engage the reverb effect. Repeat this step to cycle through the 8 reverbs on offer.
- Press and hold the [FUNCTION] button then press [D6] to disengage the reverb effect.

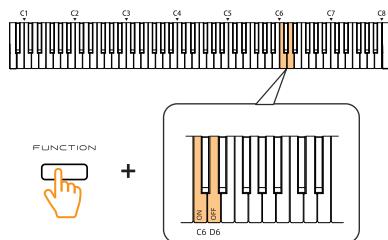

## Chorus

- Press and hold the [FUNCTION] button then press [E6] to engage the chorus effect. Repeat this step to cycle through the 8 choruses on offer.
- Press and hold the [FUNCTION] button then press [F6] to disengage the chorus effect.

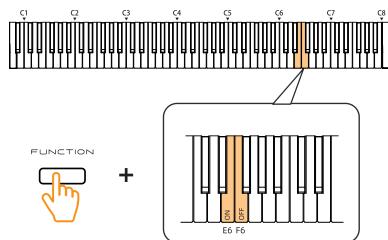

---

## QUICK RECORDING AND PLAYBACK

The VISIONKEY-200 features a 16-track recorder that allows you to capture and layer your performances which can be played back at any time.

- Press and hold the [METRONOME] button and then press one of the keys ranging from [B2] - [C4] to select a track to record on.


- When recording an accompaniment press the [D4] to select track "0". You will hear a beep as confirmation that the track has been selected.

- Play the keyboard to begin recording. The LED indicator will flash to signify that the keyboard is in record mode.

- Once finished hold down the ▶/□ key to stop recording.

- When recording mode is turned off, hold down the ▶/□ key to listen back to your recording.

- To delete recordings on all tracks, press and hold the [METRONOME] button then press any one of the [B2]-[D4] keys. After hearing a beep from the VISIONKEY-200 hold down the ▶/□ key.

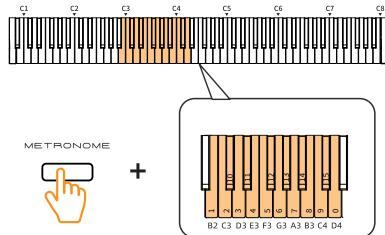

---

## **BLUETOOTH AUDIO**

VISIONKEY-200 features Bluetooth Audio, you can connect your mobile device and playback the audio songs and jam along with your VISIONKEY-200, to do this:

- Power On your VISIONKEY-200.
- Engage Bluetooth on your device.
- Search for “BT Audio” and connect.
- The VISIONKEY-200 will acknowledge it has connected and your device is successfully paired, ready for playback music from your device.

# TONE LIST

No.	TONE
<b>PIANO</b>	
0	Acoustic Grand
1	Bright Acoustic
2	Electric Grand
3	Honky-tonk Piano
4	Suitcase Piano
5	Chorused Piano
6	Harpsichord
7	Clavichord
<b>CHROMATIC PERCUSSION</b>	
8	Celesta
9	Glockenspiel
10	Music box
11	Vibraphone
12	Marimba
13	Xylophone
14	Tubular Bells
15	Dulcimer
<b>ORGAN</b>	
16	Hammond Organ
17	Percussive Organ
18	Rock Organ
19	Church Organ
20	Reed Organ
21	Accordion
22	Harmonica
23	Tango Accordion
<b>GUITAR</b>	
24	Acoustic Guitar
25	Acoustic Guitar
26	Electric Guitar (Jazz)
27	Electric Guitar
28	Electric Guitar
29	Overdriven Guitar
30	Distortion Guitar
31	Guitar Harmonics
<b>BASS</b>	
32	Acoustic Bass
33	Electric Bass(finger)
34	Electric Bass (pick)
35	Fretless Bass
36	Slap Bass 7
37	Slap Bass 2
38	Synth Bass 1
39	Synth Bass 2
<b>STRINGS</b>	
40	Violin
41	Viola
42	Cello
43	Contrabass
44	Tremolo Strings
45	Pizzicato Strings
46	Orchestral Harp
47	Timpani
<b>SYNTH</b>	
48	String Ensemble 7
49	String Ensemble 2
50	Synth Strings 1
51	Synth Strings 2
52	Choir Ahhs
53	Voice Ooohs
54	Synth Voice
55	Orchestra Hit
<b>BRASS</b>	
56	Trumpet
57	Trombone
58	Tuba
59	Muted Trumpet
60	French Horn
61	Brass Section
62	Synth Brass 1
63	Synth Brass 2
<b>REED</b>	
64	Soprano Sax
65	Alto Sax
66	Tenor Sax
67	Baritone Sax
68	Oboe
69	English Horn
70	Bassoon
71	Clarinet
<b>WIND</b>	
72	Piccolo
73	Flute
74	Recorder
75	Pan Flute
76	Bottle Blow
77	Shakuhachi
78	Whistle
79	Ocarina
<b>LEAD</b>	
80	Lead 1 (square)
81	Lead 2 (sawtooth)
82	Lead 3 (caliope)
83	Lead 4 (chiff lead)
84	Lead 5 (charang)
85	Lead 6 (voice)
86	Lead 7 (fifths)
87	Lead 8
<b>SYTH PAD</b>	
88	Pad 1 (new age)
89	Pad 2 (warm)
90	Pad 3 (polysynth)
91	Pad 4 (choir)
92	Pad 5 (bowed)
93	Pad 6 (metallic)
94	Pad 7 (halo)
95	Pad 8 (sweep)
<b>SYNTH EFFECTS</b>	
96	FX 1 (rain)
97	FX 2 (soundtrack)
98	FX 3 (crystal)
99	FX4 (atmosphere)
100	FX 5 (brightness)
101	FX 6 (goblins)
102	FX 7 (echoes)
103	FX 8 (sci-fi)
<b>WORLD</b>	
104	Sitar
105	Banjo
106	Shamisen
107	Koto
108	Kalimba
109	Fiddle
110	Bagpipe
111	Shehnai

No.	TONE
<b>PERCUSSIVE</b>	
112	Tinkle Bell
113	Agogo
114	Steel Drums
115	Wood Block
116	Taiko Drum
117	Melodic Tom
118	Synth Drum
119	Reverse Cymbal
<b>EFFECTS</b>	
120	Guitar Fret Noise
121	Breath Noise
122	Seashore
123	Bird Tweet
124	Telephone Ring
125	Helicopter
126	Applause
127	Gunshot

## RHYTHM LIST

No.	RHYTHM
0	7/8
1	88beat
2	76 Beat
3	80's Pop
4	90's Dance
5	Acid
6	African
7	Afro Pop
8	70's Disco
9	Ballroom Disco
10	Beguine
11	Big Band
12	Blues
13	Bossa Nova
14	Break Beat
15	Caribbean Soul
16	Cha-Cha
17	China Dance
18	Country Rock
19	Cool Soul
20	Dance Kick
21	Dance Rock
22	Dance Pop
23	Deep Happy
24	Disco
25	Dixie
26	Drum & Bass
27	Easy Beat
28	Easy Rock
29	Euro song
30	Fast Funk
31	Folk
32	Funk
33	Fusion
34	Geloun
35	Glam Rock
36	Goth Dance
37	Grunge
38	Guinea
39	Happy Pop
40	Hard Rock
41	HipHop
42	Jazz Dance
43	Jazz Funk

44	Jazz Rap
45	Lazy Pop
46	March
47	Polka
48	Pop
49	Pop Rock
50	Pop Ballad
51	Pop Bossa
52	Pop Disco
53	Pop Euro
54	Power Pop
55	R&B
56	R&B Ballad
57	Real Soul
58	Reggae
59	Reggae Soul
60	Rock & Roll
61	Rock Beat
62	Salsa
63	Samba
64	Shuffle
65	SlowBeat
66	SlowPop
67	SlowRock
68	Smooch
69	Soul Bass
70	Soca
71	SoulBeat
72	Standard
73	Swing
74	Tango
75	Tecno Pop
76	Tenny Pop
77	Te azz
78	Trot
79	Trycoun
80	Uban
81	Urban Blues
82	Waltzer

---

## DEMO LIST

No.	RHYTHM
0	Mariage Dreamour
1	ChopinFi
2	Turkish March
3	Carman Overture
4	The River
5	Nobody
6	Songbook
7	Canon
8	The Butterfly Lovers
9	Mariage De Amor
10	Starry Sky
11	Sonata
12	Etude 01
13	Etude 02
14	Etude 03
15	Etude 04
16	Etude 05
17	Etude 06
18	Etude 07
19	Etude 08
20	Etude 09
21	Etude 10
22	Etude 11
23	Etude 12
24	Etude 13
25	Etude 14
26	Etude 15
27	Etude 16
28	Etude 17
29	Etude 18
30	Etude 19
31	Etude 20
32	Etude 27
33	Etude 22
34	Etude 23
35	Etude 24
36	Etude 25
37	Etude 26
38	Etude 27
39	Etude 28
40	Etude 29
41	Etude 30
42	Etude 31
43	Etude 32
44	Etude 33
45	Etude 34
46	Etude 35

---

## AUTO ACCOMPANIMENT



## AUTO ACCOMPANIMENT

C	Cm	C7	Cm7	Cdim7	CM7	Cm7-5	Cdim
C <sup>#</sup> (D <sup>b</sup> )	C <sup>#</sup> (D <sup>b</sup> )m	C <sup>#</sup> (D <sup>b</sup> )7	C <sup>#</sup> (D <sup>b</sup> )m7	C <sup>#</sup> (D <sup>b</sup> )dim7	C <sup>#</sup> (D <sup>b</sup> )M7	C <sup>#</sup> (D <sup>b</sup> )m7-5	C <sup>#</sup> (D <sup>b</sup> )dim
D	Dm	D7	Dm7	Ddim7	DM7	Dm7-5	Ddim
(D <sup>#</sup> )/E <sup>b</sup>	(D <sup>#</sup> )/E <sup>b</sup> m	(D <sup>#</sup> )/E <sup>b</sup> 7	(D <sup>#</sup> )/E <sup>b</sup> m7		(D <sup>#</sup> )/E <sup>b</sup> M7	(D <sup>#</sup> )/E <sup>b</sup> m7-5	(D <sup>#</sup> )/E <sup>b</sup> dim
E	Em	E7	Em7		EM7	Em7-5	Edim
F	Fm	F7	Fm7		FM7	Fm7-5	Fdim
F <sup>#</sup> (G <sup>b</sup> )	F <sup>#</sup> (G <sup>b</sup> )m	F <sup>#</sup> (G <sup>b</sup> )7	F <sup>#</sup> (G <sup>b</sup> )m7		F <sup>#</sup> (G <sup>b</sup> )M7	F <sup>#</sup> (G <sup>b</sup> )m7-5	F <sup>#</sup> (G <sup>b</sup> )dim
G	Gm	G7	Gm7		GM7	Gm7-5	Gdim
(G <sup>#</sup> )/A <sup>b</sup>	(G <sup>#</sup> )/A <sup>b</sup> m	(G <sup>#</sup> )/A <sup>b</sup> 7	(G <sup>#</sup> )/A <sup>b</sup> m7		(G <sup>#</sup> )/A <sup>b</sup> M7	(G <sup>#</sup> )/A <sup>b</sup> m7-5	(G <sup>#</sup> )/A <sup>b</sup> dim
A	Am	A7	Am7		AM7	Am7-5	Adim
(A <sup>#</sup> )/B <sup>b</sup>	(A <sup>#</sup> )/B <sup>b</sup> m	(A <sup>#</sup> )/B <sup>b</sup> 7	(A <sup>#</sup> )/B <sup>b</sup> m7		(A <sup>#</sup> )/B <sup>b</sup> M7	(A <sup>#</sup> )/B <sup>b</sup> m7-5	(A <sup>#</sup> )/B <sup>b</sup> dim
B	Bm	B7	Bm7		BM7	Bm7-5	Bdim

---

## SPECIFICATIONS

Keys ..... 88 Touch Sensitive

Polyphony ..... 128 notes

Voices ..... 128

Rhythms ..... 83

Songs ..... 61

Dimensions ..... Height 90 x  
Width 1350 x  
Depth 285 mm

Weight ..... 6kg

Power ..... 12V DC/3000mA  
via 110-240V PSU  
(included)

Connectivity ..... USB MIDI, 1/4" Jack  
and 5-pin DIN pedal  
connections, L+R 1/4"  
Jack Outputs, 2 x  
Headphone Outputs,  
Bluetooth Audio.

Speakers ..... 2 x 10W





KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM  
METALLVÄGEN 45A | 195 72 ROSERSBERG | STOCKHOLM | SVERIGE  
LAHNSTRÄÙE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **info@gear4music.com**