


* このスタンドを正しくお使いいただくために、ご使用前に「安全上のご注意」と「使用上のご注意」をよくお読みください。また、取扱説明書は必要なときにすぐに見ることができるよう、手元に置いてください。



- 組み立て作業は、必ず2人以上で行ってください。
- このスタンドを組み立てたり、移動したりする際は、手をはさんだり、足の上に落とさないよう、十分に注意してください。
- 安全に作業できるスペースを確保してください。
- 電動工具を使用して組み立てないでください。ネジが空回りする恐れがあります。
- KSC-76はFP-80専用です。

部品の確認

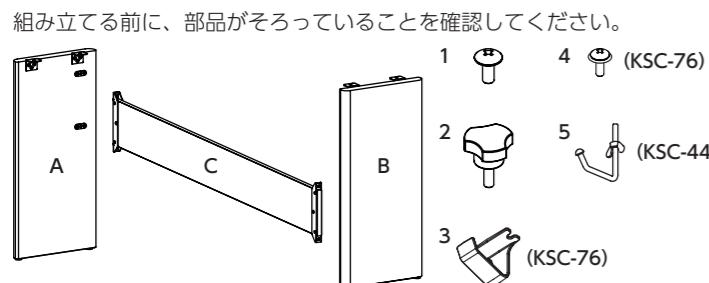

KSC-76

A	サイド・ボード(左)	1個
B	サイド・ボード(右)	1個
C	センター・ボード	1個
1	ネジa(M6×18mm)	4本
1	ネジa(M6×18mm)	4本
2	ノブ・ボルト	4本
2	ノブ・ボルト	4本
3	ヘッドホン・フックa	1個
4	ヘッドホン・フックb	1個
5	ねじb(M4×16mm)	2本

KSC-44

A	サイド・ボード(左)	1個
B	サイド・ボード(右)	1個
C	センター・ボード	1個
1	Screw "a"(M6×18 mm)	4
2	Knob bolt	4
3	Headphone hook "a"	1
4	Screw "b"(M4×16 mm)	2


組み立て手順

- プラス・ドライバーをご用意ください。
- 各ネジはしっかりと締め付け、安定した水平な場所に設置してください。
- 作業中、ペダル・コードや電源コードをはさまないように注意してください。

1 スタンドの組み立て

最初はネジをゆるめに締めて全体を組みます。そして、ゆがみを補正しながら締め付けるとうまく組み上げることができます。


- サイド・ボード(右)(金具が内側になるように)をネジa(M6×18mm)でセンター・ボードに固定します。
- サイド・ボード(左)も同様にネジa(M6×18mm)で固定します。

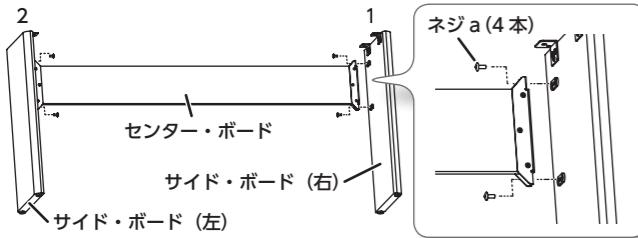

3 ヘッドホン・フックの取り付け


KSC-76

- ヘッドホン・フックaをネジb(M4×16mm)で固定します。

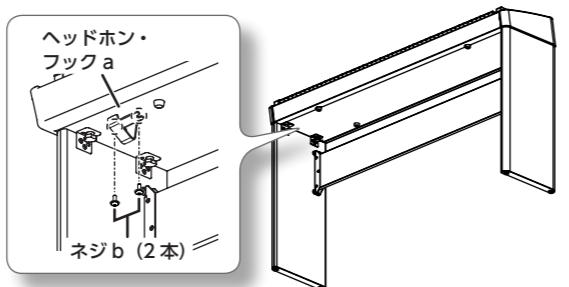

KSC-44


- ヘッドホン・フックbを、本体下にある穴に差し込みながら回します。
- ヘッドホン・フックbの蝶ネジを回して、ヘッドホン・フックbを固定します。

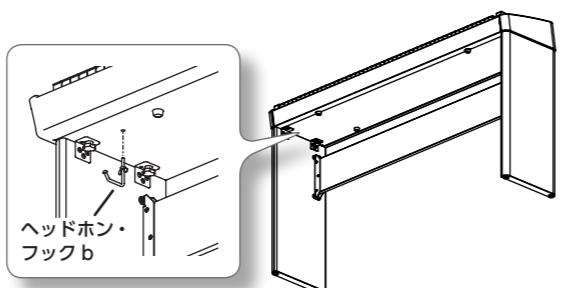

2 本体とスタンドの組み立て

- ピアノ本体をスタンドの上に載せ、ノブ・ボルトでしっかりと固定します。

※ 本体を持つときは、手をはさまないように注意してください。

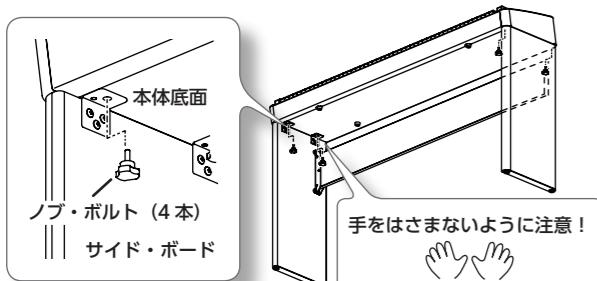

※ 製品の仕様や外観は、改良のため予告なく変更することがあります。


* Before using this stand, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES." Additionally, the manual should be saved and kept on hand as a convenient reference.



- Make sure that another person is on hand to help with the assembly and setup.
- Be very careful, when you assemble and move the piano, to make sure that you do not drop it on your hands or feet.
- Prepare an area in which you can perform the assembly safely.
- Do not use a power tool (e.g., an electric screwdriver) to assemble the stand. You risk damaging or stripping the screws.
- The KSC-76 is designed specifically to be used with the FP-80.

Parts Check

Before you begin assembling the stand, check that all the parts were supplied.

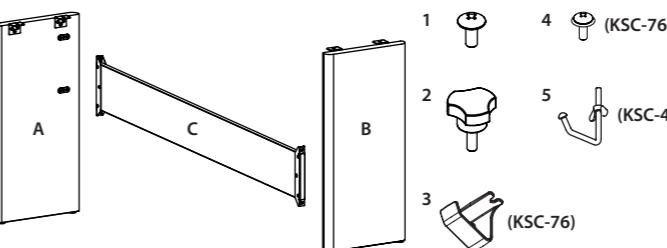

KSC-76

A	Side board (left)	1
B	Side board (right)	1
C	Center board	1
1	Screw "a"(M6×18 mm)	4
2	Knob bolt	4
3	Headphone hook "a"	1
4	Screw "b"(M4×16 mm)	2

KSC-44

A	Side board (left)	1
B	Side board (right)	1
C	Center board	1
1	Screw "a"(M6×18 mm)	4
2	Knob bolt	4
3	Headphone hook "b"	1


Assembly Procedure

- You will also need to have a Phillips screwdriver.
- Fasten each screw tightly, then place the stand in a stable and horizontal place.
- Do not allow the pedal cord or power cable to get twisted or pinched while assembling the stand.

1 Stand Assembly

At first, assemble the entire stand in a temporary fashion, without really tightening the screws. Then, after checking the overall alignment of the boards (and gently shifting certain parts where necessary), go around and tightly fasten each of the screws.



- Attach the side board (right) for the right sides to the center board (so that the metal parts face inside) using screws "a"(M6×18 mm).
- Use screws "a"(M6×18 mm) to attach the side board (left) in the same way.

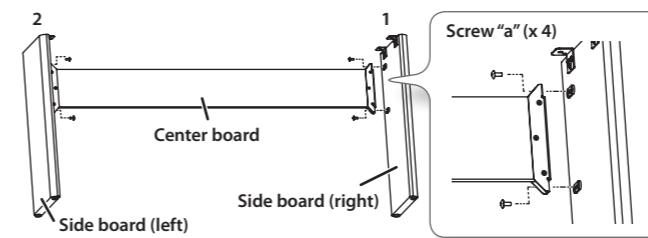

3 Attaching the Headphone Hook



KSC-76

- Attach the headphone hook "a" using screws "b" (M4×16 mm).

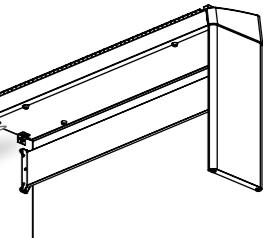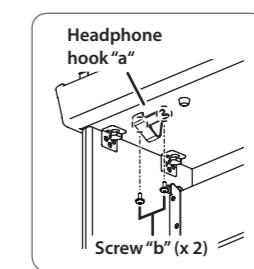

KSC-44


- Press and twist the headphone hook "b" included with the piano into the hole in the bottom of the piano (refer to the figure below).
- Turn the thumbscrew of the headphone hook "b" to secure the headphone hook "b".

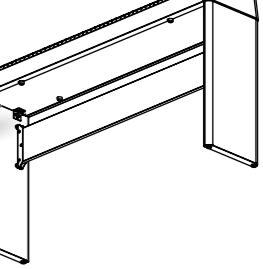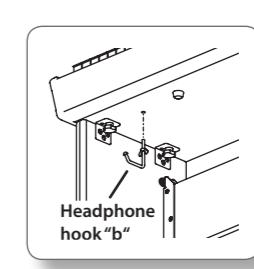

2 Installing the Piano on the Stand

- Set the piano on the stand, then firmly attach the four knob bolts.

* When handling the piano, firmly grasp it. Be careful, so you do not get your fingers pinched.

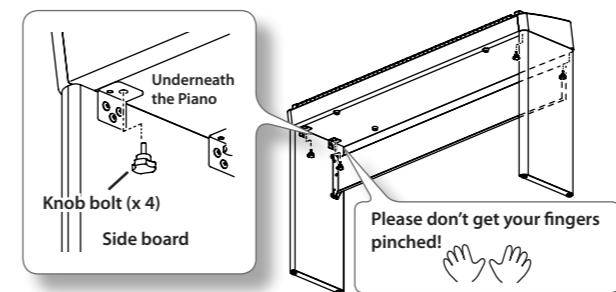

* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.



安全上のご注意

火災・感電・傷害を防止するには

⚠️ 警告と⚠️ 注意の意味について



取り扱いを誤った場合に、使用者が死亡または重傷を負う可能性が想定される内容を表しています。



取り扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表しています。

※物的損害とは、家屋・家財および家畜・ペットにかかる拡大損害を表しています。

図記号の例



△は、注意（危険、警告を含む）を表しています。具体的な注意内容は、△の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表しています。



○は、禁止（してはいけないこと）を表しています。具体的な禁止内容は、○の中に描かれています。左図の場合は、「分解禁止」を表しています。



●は、強制（必ずすること）を表しています。具体的な強制内容は、●の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表しています。

以下の指示を必ず守ってください



分解や改造をしない

このスタンドを分解したり（取扱説明書に記載されている指示を除く）、改変したりしないでください。



個人で修理や部品交換はしない

修理／部品の交換などで、取扱説明書に書かれていないことは、絶対にしないでください。必ずお買い上げ店またはローランドお客様相談センターに相談してください。



次のような場所で使用や保管はしない

- ・ 温度が極端に高い場所（直射日光の当たる場所、暖房機器の近く、発熱する機器の上など）
- ・ 水気の近く（風呂場、洗面台、濡れた床など）や湿度の高い場所
- ・ 湯気や油煙が当たる場所
- ・ 塩害の恐れがある場所
- ・ 雨に濡れる場所
- ・ ほこりや砂ぼこりの多い場所
- ・ 振動や揺れの多い場所



不安定な場所に設置しない

このスタンドを、ぐらつく台の上や傾いた場所に設置しないでください。必ず安定した水平な場所に設置してください。



お子様が取り扱うときの注意

お子様のいる場所で使用する場合、お子様の取り扱いやいたずらに注意してください。必ず大人のかたが、監視／指導してあげてください。



落としたり、強い衝撃を与えることなし

このスタンドを落としたり、強い衝撃を与えることなしでください。



使用上のご注意

設置について

- 直射日光の当たる場所や発熱する機器の近く、閉め切った車内などに放置しないでください。また、至近距離から照らす照明器具（ピアノ・ライトなど）や強力なスポット・ライトで長時間同じ場所を照らさないでください。変形、変色することがあります。

お手入れについて

- お手入れは、柔らかい布で乾拭きするか、固く絞った布で汚れを拭き取ってください。木目にそって全体を均一の力で拭くようにします。同じ所ばかり強くこすると、仕上げを損なうことがあります。
- 変色や変形の原因となる、ベンジン、シンナー、アルコール類は使用しないでください。

修理について

- お客様がこのスタンドを分解、改造された場合、以後の性能について保証できなくなります。また、修理をお断りする場合もあります。
- 当社では、このスタンドの補修用性能部品（製品の機能を維持するために必要な部品）を、製造打切後8年間保有しています。この部品保有期間を修理可能の期間とさせていただきます。なお、保有期間を過ぎた後でも、故障箇所によっては修理可能の場合がありますので、お買い上げ店、またはローランドお客様相談センターにご相談ください。

その他の注意について

- 輸送や引っ越しをするときは、このスタンドが入っていた箱と緩衝材、または同等品で梱包してください。
- このスタンドが入っていた梱包箱や緩衝材を廃棄するときは、各地域のゴミの分別基準に従ってください。

移動するときの注意

- 移動は2人以上で行ってください。
- 移動する前にACアダプターなどを外してください。
- 水平になるように持ち上げてください。
- 手をはさんだり、足の上に落とさないように注意してください。

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠️ WARNING and ⚠️ CAUTION Notices

⚠️ **WARNING** Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.

The ⚠️ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.

⚠️ **CAUTION** Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly.

The ⚠️ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.

⚠️ Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

The ⚠️ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING



Do not disassemble or modify by yourself

Do not open or perform any internal modifications on this stand. (The only exception would be where this manual provides specific instructions which should be followed in order to put in place user-installable options.)



Do not repair or replace parts by yourself

Do not attempt to repair this stand, or replace parts within it (except when this manual provides specific instructions directing you to do so). Please consult an authorized Roland distributor or the nearest Roland Service Center; a list of these can be found in the owner's manual for the device to which you are using.



Use the stand only for the specified products

This stand is designed specifically to be used with the Roland products (KSC-76: FP-80, KSC-44: FP-50 and FP-7/4 series). If used in combination with other products, you risk sustaining injuries as the result of the product dropping down or toppling over due to a lack of stability.



Evaluate safety issues before using stands

Even if you observe the cautions given in the owner's manual, certain types of handling may allow this product to fall from the stand, or cause the stand to overturn. Please be mindful of any safety issues before using this product.



Avoid climbing on top of this stand, or placing heavy objects on it

Never climb on top of, nor place heavy objects on this stand.



Keep small items out of the reach of children

To prevent accidental ingestion of the parts listed below, always keep them out of the reach of small children.



Do not place in an unstable location

Make sure you always have this stand placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.



Adults must provide supervision in places where children are present

When using this stand in locations where children are present, be careful so no mishandling of this stand can take place. An adult should always be on hand to provide supervision and guidance.



IMPORTANT NOTES

Placement

- Do not expose this stand to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Also, do not allow lighting devices that normally are used while their light source is very close to this stand (such as a piano light), or powerful spotlights to shine upon the same area of this stand for extended periods of time. Excessive heat can deform or discolor this stand.

Maintenance

- To clean this stand, use a dry, soft cloth; or one that is slightly dampened. Try to wipe the entire surface using an equal amount of strength, moving the cloth along with the grain of the wood. Rubbing too hard in the same area can damage the finish.
- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- When you need to transport this stand, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.

Cautions When Moving The Piano

- You must use two or more people when moving the piano.
- Before moving the piano, disconnect the AC adaptor and other cables.
- Keep the piano level when lifting it.
- Be careful not to pinch your hands or drop the piano on your feet.

For C.A. US (Proposition 65)

WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

Copyright © 2013 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.
Roland is a registered trademark of Roland Corporation in the United States and/or other countries.