

SubZero

PARTYVOX DSP KARAOKE MACHINE WITH WIRELESS MICROPHONES

USER MANUAL

Thank you for purchasing the SubZero PartyVox DSP Karaoke Machine With Wireless Microphones. To get the most out of your product, please read this manual carefully.

BOX CONTENTS

- 1 x SubZero PartyVox DSP Karaoke Machine
- 2 x Wireless Microphones
- 1 x User Manual

FEATURES


- Bluetooth, USB and Aux Input Connectivity
- Dynamic Lighting Modes
- Magic Sound & Original Voice Modes

1

SPECIFICATIONS

- Up To 10 Metres Bluetooth Range
- Customisable Bass and Treble Settings
- Adjust The Key Of Songs To Suit Your Vocal Range

FUNCTIONS

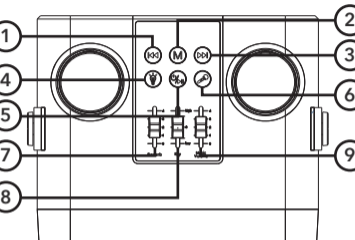

SPEAKER CONTROLS

- 1. PREVIOUS SONG**
Short press to skip to the previous song during playback.
- 2. MODE**
Short press to switch between speaker modes: Bluetooth / Micro SD Card / USB-A / Aux. For Bluetooth pairing, search for device name "SZ-PARTYVOX".

2

3. NEXT SONG

Short press to skip to the next song during playback.

4. LIGHT EFFECT

Short press to change the lighting effect.

5. POWER/PLAY/PAUSE

Long Press: Turns the speaker on/off. Short Press: Play/Pause song playback.

6. MICROPHONE

Short press to turn the original microphone sound on/off.

7. REVERB

Adjust the fader from 0 (no reverb) to 4 (full reverb) and control the amount of reverb effect added to the microphone sound.

8. KEY

Adjust the fader to increase or decrease the key (pitch) of the music accompaniment, to suit the performer's vocal range. Set the fader to 0 to return to the original pitch.

9. MUSIC VOLUME

Adjust the fader to control the balance between the accompaniment music and microphone sounds.

3

3. NEXT SONG

Short press to skip to the next song during playback.

4. LIGHT EFFECT

Short press to change the lighting effect.

5. POWER/PLAY/PAUSE

Long Press: Turns the speaker on/off. Short Press: Play/Pause song playback.

6. MICROPHONE

Short press to turn the original microphone sound on/off.

7. REVERB

Adjust the fader from 0 (no reverb) to 4 (full reverb) and control the amount of reverb effect added to the microphone sound.

8. KEY

Adjust the fader to increase or decrease the key (pitch) of the music accompaniment, to suit the performer's vocal range. Set the fader to 0 to return to the original pitch.

9. MUSIC VOLUME

Adjust the fader to control the balance between the accompaniment music and microphone sounds.

4

3. SPEAKER INDICATOR LIGHT

Flashing light indicates speaker is not connected to any device. The blue light becomes constant when Bluetooth connection successful. For Bluetooth pairing, search for device name "SZ-PARTYVOX". The indicator light will turn red when the speaker is charging, and turn off when fully charged.

4. USB-A

Insert a compatible USB flashdrive here for music playback. USB mode is automatically selected when MP3 audio files are inserted.

5. DC 5V POWER

5V USB-C port for charging the speaker.

1. AUX INPUT

3.5mm line input for wired playback with compatible devices.

2. MICRO SD CARD

Insert a compatible micro SD card here for music playback. SD card mode is automatically selected when MP3 audio files are inserted.

1. MICROPHONE POWER

Long Press: Turns the microphone on/off. Short Press: Control the microphone mute on/off options.

2. MICROPHONE VOLUME +

Short press to increase the microphone volume.

3. MICROPHONE VOLUME -

Short press to decrease the microphone volume.

5

4. ORIGINAL SOUND

Short press: Turns on/off the original sound and bypasses any added effects. Long Press: Turns on/off Magic Sound mode.

5. MICROPHONE INDICATOR LIGHT

Flashing blue light indicates microphone is not connected to the speaker. The blue light becomes constant when connection successful. The indicator light will turn red when the microphone is charging, and turn off when fully charged.

6. MICROPHONE USB-C

5V USB-C port for charging the microphones.

1. MICROPHONE POWER

Long Press: Turns the microphone on/off. Short Press: Control the microphone mute on/off options.

2. MICROPHONE VOLUME +

Short press to increase the microphone volume.

3. MICROPHONE VOLUME -

Short press to decrease the microphone volume.

4. ORIGINAL SOUND

Short press: Turns on/off the original sound and bypasses any added effects. Long Press: Turns on/off Magic Sound mode.

5. MICROPHONE INDICATOR LIGHT

Flashing blue light indicates microphone is not connected to the speaker. The blue light becomes constant when connection successful. The indicator light will turn red when the microphone is charging, and turn off when fully charged.

6

6. MICROPHONE USB-C

5V USB-C port for charging the microphones.

1. MICROPHONE POWER

Long Press: Turns the microphone on/off. Short Press: Control the microphone mute on/off options.

2. MICROPHONE VOLUME +

Short press to increase the microphone volume.

3. MICROPHONE VOLUME -

Short press to decrease the microphone volume.

4. ORIGINAL SOUND

Short press: Turns on/off the original sound and bypasses any added effects. Long Press: Turns on/off Magic Sound mode.

5. MICROPHONE INDICATOR LIGHT

Flashing blue light indicates microphone is not connected to the speaker. The blue light becomes constant when connection successful. The indicator light will turn red when the microphone is charging, and turn off when fully charged.

6. MICROPHONE USB-C

5V USB-C port for charging the microphones.

MICROPHONE CONTROLS AND CONNECTIVITY

1. MICROPHONE POWER
Long Press: Turns the microphone on/off. Short Press: Control the microphone mute on/off options.

2. MICROPHONE VOLUME +
Short press to increase the microphone volume.

3. MICROPHONE VOLUME -
Short press to decrease the microphone volume.

7

6. MICROPHONE USB-C

5V USB-C port for charging the microphones.

1. MICROPHONE POWER

Long Press: Turns the microphone on/off. Short Press: Control the microphone mute on/off options.

2. MICROPHONE VOLUME +

Short press to increase the microphone volume.

3. MICROPHONE VOLUME -

Short press to decrease the microphone volume.

4. ORIGINAL SOUND

Short press: Turns on/off the original sound and bypasses any added effects. Long Press: Turns on/off Magic Sound mode.

5. MICROPHONE INDICATOR LIGHT

Flashing blue light indicates microphone is not connected to the speaker. The blue light becomes constant when connection successful. The indicator light will turn red when the microphone is charging, and turn off when fully charged.

6. MICROPHONE USB-C

5V USB-C port for charging the microphones.

MICROPHONE CONTROLS AND CONNECTIVITY

1. MICROPHONE POWER
Long Press: Turns the microphone on/off. Short Press: Control the microphone mute on/off options.

2. MICROPHONE VOLUME +
Short press to increase the microphone volume.

3. MICROPHONE VOLUME -
Short press to decrease the microphone volume.

8

SPECIFICATIONS

Power	DC 5V, 1A
Speaker	15W
Speaker Battery	Capacity 2400mAh
Microphone Battery	Capacity 500mAh
Bluetooth Device Name	SZ-PARTYVOX
Inputs	3.5mm Aux, Micro SD, USB-A, USB-C Power
Materials	ABS, LED Lights
Product Weight	861g (Speaker and Microphones)
Karaoke Machine Dimensions	165 x 140 x 175mm
Microphone Dimensions	130 x 40 x 32 mm

9

WWW.GEAR4MUSIC.COM

KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM
LAHNSTRASSE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on:

+44 (0) 330 365 4444 or info@gear4music.com

WARNING!

EN

Do not open cover. No user-serviceable parts inside. Refer servicing to qualified service personnel.

Do not place the product in a location near a heat source such as a radiator, or in an area subject to direct sunlight, excessive dust, mechanical vibration or shock

The product must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.

No naked flame sources, such as lighted candles, should be placed on the product.

Do not attempt to remove the rechargeable lithium-ion battery from this product. Contact a qualified professional for removal.

VAROVÁNÍ!

CZ

Nezakrývejte. Uvnitř nejsou žádné součásti opravitelné uživatelem. S požadavkem na servis se odkažte na kvalifikované servisní oddělení.

Neumísťujte produkt v blízkosti zdroje tepla, jako je radiátor, nebo na místo s přímým slunečním světlem, nadměrným prašením, mechanickými vibracemi nebo šokem.

Produkt nesmí přijít do kontaktu s vodou a žádné objekty naplněné tekutinami, jako například vázy, by neměly být umístěny na produkt.

Žádné zdroje otevřeného ohně, jako například svíčky, by neměly být umístěny na produkt.

11

Nepokoušejte se vyjmout dobijecí li-ion baterii z tohoto produktu. Pro vyjmutí kontaktujte prosím kvalifikovaného pracovníka.

DVARSEL!

DK

Dækslet må ikke åbnes. Ingen bruger-udskeftelige dele indeni. Overlad service til kvalificeret service personale.

Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støv, mekaniske vibrationer eller stød.

Produktet må ikke udsættes for vand eller stænk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet.

Må ikke placeres nær åben ild, tændte stearinlys må ikke placeres på produktet

Forsøg ikke at fjerne det genopladelige lithium-ion batteri fra dette produkt. Kontakt en kvalificeret professionel for at fjerne det.

WAARSCHUWING!

NL

Maak de behuizing niet open. Dit toestel bevat geen onderdelen die door de gebruiker kunnen worden vervangen. Laat onderhoud over aan bevoegd onderhoudspersoneel.

Plaats het product niet in de buurt van een hittebron zoals een radiator of in direct zonlicht of in een stofrijke omgeving, mechanische vibratie of schok.

Plaats het product niet in de buurt van spattende of lekkende voorwerpen gevuld met een vloeistof zoals bijvoorbeeld een vaas. Er mogen geen open vlammen zoals aangestoken kaarsen op de

12

apparatuur worden geplaatst. Probeer de oplaadbare lithium-ion-accu niet uit dit product te verwijderen. Neem contact op met een gekwalificeerde professional voor verwijdering.

VAROITUS!

FI

Älä avaa kantta. Ei sisällä käyttäjä-huollettavia osia. Huollot saa suorittaa vain pätevä huoltomies.

Placer ikke produktet i nærheden af varmekilder såsom en radiator eller i direkte sollys, meget støv, mekaniske vibrationer eller stød. Produktet må ikke udsættes for vand eller stænk, og ingen genstande fyldt med væsker, f.eks. vaser, må anbringes på produktet.

Må ikke placeres nær åben ild, tændte stearinlys må ikke placeres på produktet

Forsøg ikke at fjerne det genopladelige lithium-ion batteri fra dette produkt. Kontakt en kvalificeret professionel for at fjerne det.

ATTENTION!

FR

Ne pas ouvrir le couvercle. Aucune pièce interne réparable par l'utilisateur. Confier la réparation à du personnel de réparation qualifié.

Ne pas laisser l'appareil à proximité d'une source de chaleur telle qu'un radiateur, dans un endroit directement exposé aux rayons du soleil, trop poussiéreux, ou pouvant subir des chocs mécaniques.

L'appareil ne doit pas être exposé aux gouttes d'eau et aux éclaboussures, et aucun objet rempli de liquide, tel qu'un vase, ne

13

doit être posé dessus. Ne placer aucune source de flamme nue, telle qu'une bougie allumée, sur l'appareil. Ne tentez en aucun cas d'enlever la batterie rechargeable lithium-ion de ce produit. Veuillez contacter un professionnel pour la retirer.

WARNUNG!

DE

Öffnen Sie nicht das Gehäuse. Im Inneren befinden sich keine vom Benutzer zu wartenden Teile. Überlassen Sie Wartungsarbeiten qualifiziertem Fachpersonal.

Stellen Sie das Produkt nicht an einen Ort in der Nähe einer Wärmequelle wie etwa eines Heizkörpers oder in einem Bereich mit direktem Sonnenlicht, übermäßigem Staub, mechanischen Vibrationen oder Stößen.

Schützen Sie das Produkt vor tropfenden oder spritzenden Flüssigkeiten, und stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf das Produkt.

Offene Feuerquellen wie Kerzen dürfen nicht auf dem Gerät abgestellt werden

Versuchen Sie nicht, den wiederaufladbaren Lithium-Ionen-Akku aus diesem Produkt zu entfernen. Wenden Sie sich zum Entfernen an qualifiziertes Fachpersonal.

AVVERTIMENTO!

IT

Non aprire il coperchio. Se fosse necessario, riferirsi ad un esperto.

14

Non esporre il prodotto a fonti di calore, luce del sole diretta, polvere, vibrazioni meccaniche o altri possibili shock. Non esporre il prodotto a perdite di liquido o a spruzzi. Non appoggiare nessun oggetto contenente acqua sul prodotto. Non esporre il prodotto a fuoco, candele o oggetti simili. Non tentare di rimuovere la batteria ricaricabile agli ioni di litio da questo prodotto. Per la sostituzione della batteria rivolgersi a un professionista qualificato.

ADVARSEL!

NO

Ikke åpne dekslet. Inneholder ingen deler som kan brukes. Overlat reoperasjon til kvalifisert servicepersonell.

Ikke plasser produktet i nærheten av varmekilder som f.eks. en radiator, eller i områder som er utsatt for direkte sollys, mye støv, mekanisk vibrasjon eller støt.

Produktet må ikke utsettes for drypping eller spruting, og gjenstander som er fylt med væsker, som f.eks. vaser, skal ikke plasseres på produktet.

Åpne flammer, som f.eks. tente lys, bør ikke plasseres på produktet. Ikke forsøk å fjerne de oppladbare lithium-ion batteriet fra dette produktet. Kontakt en kvalifisert profesjonell for fjerning.

OSTRZEŻENIE!

PL

Nie otwierać pokrywy. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla

15

wyszkolonego personelu. Nie umieszczać produktu w pobliżu źródła ciepła, np. grzejnika, lub w bezpośrednim świetle słonecznym, kurzu, czy mechanicznym wibracjąm.

Produkt ten nie może być ekspozowany na kapanie lub chłapanie, a przedmioty wypełnione płynami, takie jak wazy, nie powinny być na nim umieszczane.

Źródła otwartego ognia, takie jak np. świece, nie powinny być umieszczone na produkcie.

Nie próbuj usuwać litowo-jonowej baterii powtórnego ładowania z tego produktu. Skontaktuj się z wykwalifikowanym specjalistą w celu usunięcia.

ATENÇÃO!

PT

Não abra a tampa. Não tente a reparação do instrumento por si. Dirija-se a pessoal qualificado.

Não aproxime a uma fonte de calor excessivo ou exponha o produto à luz solar, poeira, vibração ou choque.

Não mantenha o produto num local húmido ou perto líquidos como vasos, etc.

Não aproxime o produto a fontes de fogo vivo, como velas. Não tente remover a bateria recarregável de íões de lítio deste produto. Contacte um profissional qualificado para a sua remoção.

VÝSTRAHA!

SK

Nie otwieraj pokrywę. W środku nie ma części nadających się do naprawy przez użytkownika. Prosimy pozostawić serwis dla

16

Neotvárajte kryt. Vo vnútri nie sú žiadne súčasti, ktoré sú opraviteľné užívateľom. S požiadavkou na servis sa obráťte na kvalifikované servisné stredisko. Nevystavujte produkt do blízkosti akéhokolvek tepelného zdroja ako napr. radiátora, alebo do kontaktu so slnečným žiarením, nadmerným prašným prostredím, mechanickým vibráciám alebo šokom.

Produkt nesmie prísť do kontaktu s vodou a žiadny objekt naplnený vodou, ako napr. váza, nesmie byť umiestnený na produkt.

Žiadne výrobky s otvoreným ohňom, ako napr. sviečky, by nemali byť umiestnené na produkt.

Nepokúšajte sa sami vyberať lítiovo-iónovú batériu z tohoto produktu. Kontaktujte za účelom jej odstránenia kvalifikovaného profesionála.

OPOZORILO!

SI

Ne odpirajte pokrova. V notranjosti ni nobenih delov, ki jih uporabnik lahko sam popravlja. Popravilo prepustite usposobljenemu osebi.

Ne postavljajte izdelka na lokacijo v bližini vira toplote, kot je radiator, ali na območje, ki je izpostavljeno neposredni sončni svetlobi, pretiranem prahu, mehanskim tresljajem ali udarcem.

Izdelek ne sme biti izpostavljen kapljanju ali brizganju in nobeni predmeti, napolnjeni z vodo, kot so vaze, se ne smejo postaviti na izdelek.

Nobenega od virov odprtega ognja, kot so žgane sveče, se ne sme

postavljati na izdelek. Iz tega izdelka ne poskušajte odstraniti polnilne litij-ionske baterije za ponovno polnje. Za odstranitev se obrnite na za to usposobljenega strokovnjaka.

¡ADVERTENCIA!

ES

No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado.

No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo. Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato.

No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato.

No intente quitar la batería recargable de iones de litio de este producto. Póngase en contacto con personal cualificado para su extracción.

WARNING!

SE

Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal.

Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock.

Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten.

18

Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten. Försök inte avlägsna uppladdningsbart litium-jon-batteri från denna produkt. Kontakta en kvalificerad professionell för avlägsning.

19