

Installation Instruction for Shadow SH 099 Undersaddle Piezo Pickup for Classic and Acoustic Guitar

Content:

Piezo undersaddle pickup

1. Loosen strings and remove original bridge.
2. Place piezo pickup with the output cable towards the lower E-string (E6) and mark, where to drill the 3mm hole.
3. To accommodate the height of the pickup reduce the height of the saddle (see fig. 2). Be sure that the bottom of the saddle is absolutely flat.
4. Put the pickup cable through the hole in the bridge, place the pickup into the bridge and connect the electronics.
5. Install the bridge and the pickup, put strings on and tune your instrument. Make sure the strings do not pull the pickup saddle forward to the slot (see fig. 2 and 3).

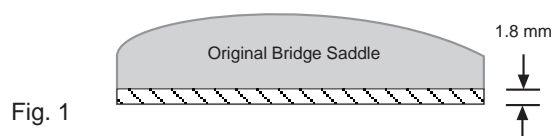


Fig. 1

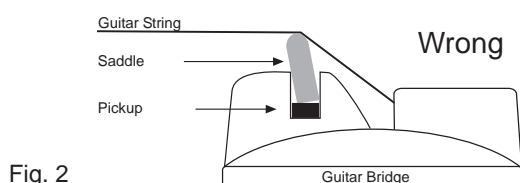


Fig. 2

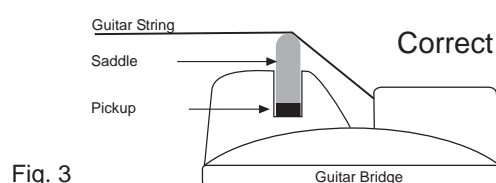


Fig. 3

Note:

Piezo pickups and transducers have a very high output impedance. In order to get the optimum sound output we recommend an amplifier with low impedance.