


# STEINBERGER™ GEARLESS TUNERS

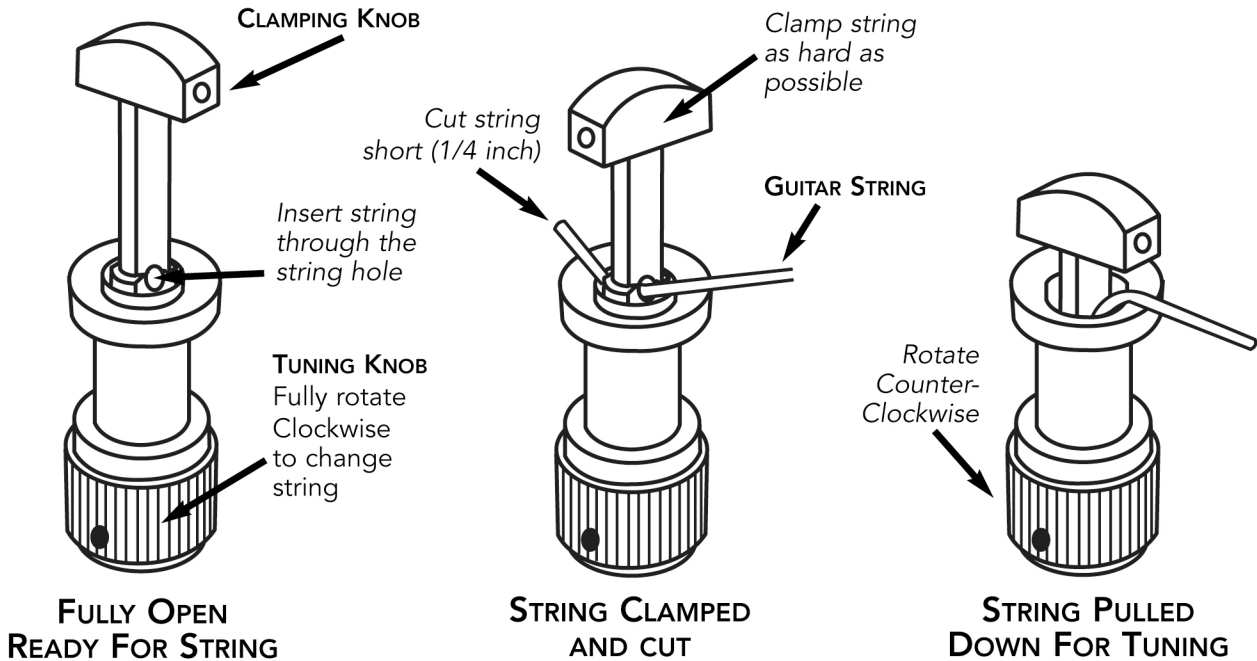

## TO INSTALL STRINGS:

- **IMPORTANT NOTE:** *(Plain [G, B, & E] strings must have steel or silk wrapping at the twist, or be soldered, or they will detune during severe bends.*

1. Unscrew **Tuning Knob** (larger knob on the back of the headstock) Clockwise all the way so the string hole is fully exposed.
2. Unscrew **Clamping Knob** (smaller knob on the front of the headstock) Counter Clockwise until the string hole is fully open. Remove old string.
3. Slide the new string first through the bridge and then through the string hole in the tuner. (Pull string tight)
4. Crush string by turning the top **Clamping Knob**, Clockwise as hard

as you can, using your fingers. Do NOT use any kind of wrench or tool, Finger tight is enough.

- **IMPORTANT NOTE:** *Because the high E string stretches so much, tilt the Trem forward and pull the string tight before clamping. This should be done on the **high E string only**. Clamping Knob must be tightened **very hard** to assure stable tuning.*

5. Cut string approximately 1/4 inch from the tuner.

- 6: Tune the strings with the lower, **Tuning Knobs**.

**STEINBERGER™**  
STATE OF THE INSTRUMENT.  
a part of the Gibson family of brands

645 Massman Drive  
Nashville, TN 37210 USA  
[www.steinberger.com](http://www.steinberger.com)