

NEWFANGLED AUDIO

Copyright 2020, Newfangled Audio

P/N: 141344, Rev 1

Newfangled Audio and Generate are trademarks of Orthogonal Art and Science, LLC.

AAX and Pro Tools are trademarks of Avid Technology. Names and logos are used with permission.

Audio Units is a trademark of Apple, Inc.

VST is a trademark of Steinberg Media Technologies GmbH.

All other trademarks contained herein are the property of their respective owners.

Newfangled Audio www.newfangledaudio.com


Contents

1	New	angled Audio Generate	1
2	Pres 2.1 2.2 2.3 2.4 2.5 2.6 2.7 2.8 2.9	Preset Selector Preset Load and Save Buttons Compare Info Jpdate SETTINGS MPE RND Color Scheme	3 3 3 4 4 4 4 5 5 5
3	Para	meters and Metering	6
	3.1 3.2	Controls	6
	3.3		7 8 10
	3.4	Modulators and Global Voice Settings	13
		· · · · · · · · · · · · · · · · · · ·	13 16
		3.4.3 LFO 1&2	17
			18 20
	3.5		22
			22
			24 25
			26
			27 28
4	Inete	lation and Instantiation	30
-	4.1 4.2 4.3	Registering Your Plug-in	30 31 31

	4.4 Moving or Removing an Activation	31
5	Conclusion	
6	About Newfangled Audio	34

Chapter 1

Newfangled Audio Generate

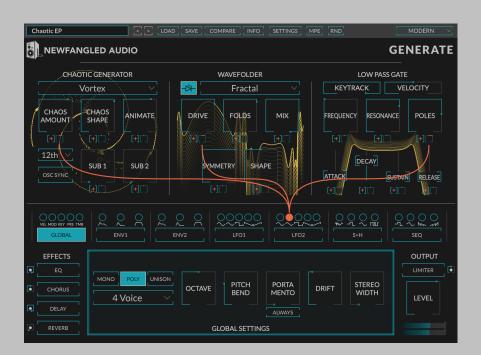

cha-os

- 1. (Physics) behavior so unpredictable as to appear random, owing to great sensitivity to small changes in conditions. Generate is a synthesizer built on a chaotic oscillator.
- 2. the formless matter supposed to have existed before the creation of the universe.

Generate is a novel synthesizer based on a chaotic generator (essen-

tially an oscillator). The chaos adds a complex, and at times unpredictable, character to the synthesizer, allowing it to make sounds I'm sure you've never heard before, but which you'll want to hear again. There are 5 flavors of chaotic generator, which are run through a wavefolder section, and followed by a low pass gate. Every parameter in these sections can be modulated by two envelope generators, two LFOs, a sample and hold module, and a step sequencer. This synth architecture is available in 1, 4, or 8 voices, which are also routable through eq, limiter, chorus, delay, and reverb effects. The manual will break out each of these sections and give you some tips about how to get most out of this unique synth.

Chapter 2

Preset Bar

At the very top of the Generate plug-in is a preset bar which allows you to load and save preset, as well as a couple other features. These are the preset bar sections.



2.1 Preset Selector

On the far left is a drop-down menu which allows you to select preset from a tree structure. You shouldn't need to access these presets on your computer, however, if you do, on the Mac these presets are stored in your <User>/Music/Newfangled Audio/Generate/Presets folder. On Windows these presets are stored in your <Documents>/Newfangled Audio/Generate/Presets folder.

Next to the preset drop-down menu is a left and right arrow, which allow you to quickly scroll through presets.

2.2 Preset Load and Save Buttons

To the right of the preset selection arrows is a LOAD and SAVE button. LOAD will allow you to load a .tide preset from anywhere on your computer. Save will allow you to save a new preset to anywhere on your computer, however, we suggest that you place it somewhere in the presets folder so you can access it from the file dropdown.

2.3 Compare

The COMPARE button will allow you to toggle between the current settings and the last saved or loaded preset. If you have settings that you like, save them as a preset, and as you tweak you can always return to them using the COMPARE button.

2.4 Info

The INFO button will open this manual for you to read about the plugin.

2.5 Update

If there is a software update available an UPDATE button will appear in the preset bar. Clicking it will bring you to a web page where you can download the new installers.

2.6 SETTINGS

The SETTINGS button pops down a page which contains settings for whether meter animations will be drawn, how they will be drawn, and parameter locks for preset loading.



The RENDERING button allows you to toggle between two different rendering engines. Most people will want to use OPENGL set to on, which will select a rendering engine that uses your computer's onboard GPU to do all graphics rendering for Generate. However, some computers do not have a separate GPU processor, or have a GPU that doesn't use the specific OpenGL features used by Generate. In these cases, having OPENGL set to "on" may cause graphics errors or an extreme load on your computers CPU. To turn OpenGL rendering off, set the OPENGL button to "off", close the plug-in window, then open it again.

The VISUALIZATIONS button will turn on or off the animations behind each of the CHAOTIC GENERATOR, WAVEFOLDER, and LOW PASS GATE sections.

Alternatively the SHOW CONTROLS button will turn the UI controls on or off. When the UI controls are off you can't modify the settings, but you can look at the visualizations.

The SHOW CABLES button will turn the modulations cables on all the time, rather than dynamically showing them while you're patching.

The VOICE LOCK button prevents the number of voices from changing as you scroll through presets, allowing all poly synths to open in either 4 voice, or 8 voice mode, allowing you to control your CPU resources.

The PITCH BEND LOCK button allows you to lock the amount of PITCH BEND as you scroll through presets. Many people prefer a certain PITCH BEND amount on all presets, and many MPE controllers require this to have the same setting as the controller.

Finally, the TIMBRE MIDI CC knob allows you to override the MIDI controller message which is routed to the TIMBRE modulation output. By default this is set to MIDI CC #74, which is often set as the Y-Axis on MPE controllers, but you can change this to be any MIDI CC and use it to route your controller into the modulation engine.

2.7 MPE

Generate supports a relatively new MIDI mode called Midi Polyphonic Expression, or MPE. If you're using an MPE compatible controller and an MPE compatible host, turning on the MPE button will allow you to have polyphonic pitch bend, pressure, and timbre controls. Generate is already amazing with a normal midi setup, but MPE allows you to add another level of expressiveness.

2.8 RND

Generate also has a random preset generator. You can engage this by hitting the RND button.

2.9 Color Scheme

On the far right is a drop-down labeled COLOR SCHEME. This will allow you to choose one of several different color schemes for your viewing pleasure.

Chapter 3

Parameters and Metering

3.1 Controls

Generate has several control types, including vertical sliders, rotary knobs, drop-down menus, and toggle and radio buttons, all of which have tooltips which will give you more information about their function if you hover your mouse above them.

In general, all sliders and knobs can be double clicked to type in a specific value, option-clicked (alt-click on windows) to return them to their default value, or command-clicked or control-clicked to enter a vernier mode for fine tuning.

3.2 Patching Modulation




The large knobs in Generate allow you to patch up any of the Modulation Outputs to each control. There is no limit on the number of modulation connections that can be created. When you click on a Modulation Output a small square knob appears below each modulatable control.

When the Modulation Output is highlighted you can patch it to a control by clicking on the small square knob, or, turn the small square knob to dial in just a small amount of modulation. When the small square knob is set to top dead center, there is no modulation being applied. Turn to the right to add the modulation signal, or turn to the left to subtract it.

Alternatively, you can patch multiple Modulation Outputs to a knob by clicking the (+) button under a knob. Doing this will turn each Modulation Output into a knob which will control the amount of that modulation output routed to that control.

Clicking on an existing modulation knob will toggle it between its current value and off. Right clicking it will totally clear the modulation route. Moving your mouse off of a modulation route that's set to 0 will remove it from the UI.

If too many Modulation Outputs are routed to one knob the UI will display ellipses (...) to show that all the connections cannot be displayed, but you can still modify these connections by clicking the (+) button.

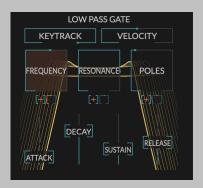


A parameter knob that is connected to a modulator will give visual feed-back on the amount of modulation being applied to the signal as the orange glow becomes more saturated, the parameter is more strongly affected.

3.3 Main Voice

The top half of Generate is broken into three main synth voice sections, the CHAOTIC GENERATOR, the WAVEFOLDER, and the LOW PASS GATE (LPG). The bottom half contains the Modulation Outputs, the Modulation Page buttons, the Effect Page buttons, the display area for the selected page, and the Output Level section.

3.3.1 Chaotic Generator

This section is called a generator rather than an oscillator because it does more than just oscillate between two points. The Chaotic Generator page is actually comprised of 4 "oscillators": a sine wave oscillator at the keyed note, a chaotic "oscillator" called a generator which interacts with the sine wave oscillator, a sub oscillator one octave below the keyed note, and a sub oscillator 2 octaves below the keyed note.

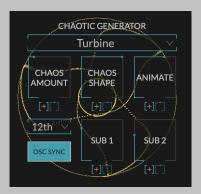

Chaotic Generator Type

The chaotic generator in the stack isn't an oscillator at all, but a chaotic nonlinear system which interacts with the keyed oscillator. Different nonlinear systems will give different results and we've spent a lot of time designing some that sound very interesting. They are:

- Pendulum is based on the modified equations of a double pendulum system. If you're not familiar with double pendulums an internet search will keep you occupied for hours. Very cool for organ and bass sounds.
- 2. **Vortex** has a nonlinearity which causes the signal path to get sucked into the center. This can cause hard transitions and high harmonics. Very biting lead sounds.
- 3. **Pulsar** is similar to **Pendulum**, but less stable. These unstable jumps can can add a unique, almost vintage character to your sound. Interesting for pads.
- 4. **Discharge** can sound almost like static, which can give either a soft or grainy quality depending on how it's set. Can be nice for vintage sounds.
- 5. **Turbine** can be very unpredictable, but I keep having fun with it. It's called Turbine because of the propeller shape it can often make when SYNC is on.

Chaos Amount

The CHAOS AMOUNT knob blends between the keyed sinewave oscillator and the chaotic generator. The chaotic generator often has higher harmonics than the keyed oscillator, so it usually sounds brighter - but not always.

Chaos Shape

The CHAOS SHAPE changes the shape of the chaotic generator. This is where the magic happens, turning it up usually means less predictability but not always. Small changes can sometimes make a big difference, but hey, it's a chaos generator.

Animate

The ANIMATE knob detunes the chaotic generator from the keyed oscillator to add motion to the sound. It's a very unique effect.

Interval

The INTERVAL dropdown sets the relative interval between the keyed oscillator and the chaotic generator. The effect of this is really only apparent when the Chaos Shape is at or near 0. When Chaos Shape is much higher than that there is a subtle effect, but it's mostly swamped by the chaotic system.

Osc Sync

The OSC SYNC button syncs the chaotic generator to the keyed oscillator. This can drastically change the sound and often has the effect of dropping the apparent sound an octave and adding gritty harmonics.

Sub 1


The SUB 1 knob controls the level of the 1-octave-down sub oscillator.

Sub 2

The SUB 2 knob controls the level of the 2-octave-down sub oscillator.

3.3.2 Wavefolder

A wavefolder is a type of waveshaping that folds the wave back on itself several times. This creates a rich set of harmonics for the input signal and is a type of additive synthesis originated by Buchla and common in modular synthesis. The knobs control the shape of the wavefolding, and therefore, the harmonics generated. Modulating the wavefolder creates a set of moving harmonics that sound quite interesting and pleasant.

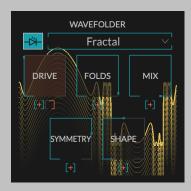

VCA Type

This button toggles the kind of VCA will be used. When active, an analog modeled Vactrol VCA will be used. When inactive, a digital VCA is used.

Wavefolder Type

This dropdown menu allows you to select one of three Wavefolder Types:

- 1. **259** is a model of the original Buchla 259 wavefolder
- 2. Animated is based on a warped and animated sine wave
- 3. **Fractal** is based on the fractal geometry of a specific mathematical function, it can create a lot of harmonics very quickly

Drive

The DRIVE knob sets the amount of drive going into the wavefolder.

Folds

The FOLDS knob controls the number of folds the wavefolder is adding to the signal. More folds produces more harmonics.

Mix

The MIX knob controls the mix between the dry input and the wavefolder output.

Symmetry (259 and Fractal)

The SYMMETRY knob controls the DC offset into the wavefolder, by making the fold asymmetric it can add even harmonics to the output, instead of just odd harmonics. This can sound really great when modulated.

Animate (Animated Only)

The ANIMATE knob controls the animation rate of the Animated wavefolder. This animation is actually a different effect than modulating one of the knobs, but it can still produce even harmonics.

Shape (Animated and Fractal)


The SHAPE knob controls the shape of the wavefolder. For the Animated wavefolder this controls the warping of the sinewave. It's subtle on the display, but turning it up will make it sound brighter. For the Fractal wavefolder this controls the jaggedness of the fractal pattern. Turning it up will produce more harmonics.

Cutoff (259 Only)

The CUTOFF control modulates the cutoff frequency of a gentle (6dB/octave) low pass filter. The filter's cutoff defaults at 1.3kHz, the cutoff point used in the 259's output filter.

3.3.3 Low Pass Gate

A Low Pass Gate (LPG) is a combination of a VCA and Low Pass Filter which can create a very natural, pleasing sound. The one used in Generate is a modified version of one based on a design by Don Buchla.

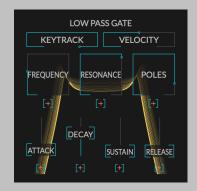

Key Track

KEY TRACK allows the cutoff frequency of the LPG to be set by the note you're playing. If KEYTRACK is 0% the cutoff frequency of the LPG is not effected by the note value and is set by the FREQUENCY knob only. If it's 100% it is modified by the FREQUENCY knob, but also scales with frequency so all notes will have the same timbre.

Frequency

The FREQUENCY knob loosely controls the maximum cutoff of the filter. It's not exact because the underlying modeled circuit doesn't really map to frequency well.

Resonance

The RESONANCE knob controls resonance of the LPG filter when the POLES control is turned greater than 1. This control is not active at all when POLES is at 1 and becomes more apparent the higher POLES is turned.

Poles

The POLES knob morphs between a VCA style Low Pass Gate (one pole low pass filter) and a resonant (three pole) Low Pass Filter. Modulate it.

Attack

The ATTACK slider controls the attack time of the ADSR which drives the LPG.

Decay

The DECAY slider controls the decay time of the ADSR which drives the LPG.

Sustain

The SUSTAIN slider controls the sustain level of the ADSR which drives the LPG.

Release

The RELEASE slider controls the release time of the ADSR which drives the LPG.

3.4 Modulators and Global Voice Settings

Generate contains seven pages of modulation sources that can be applied to the main voice.

3.4.1 Global Voice Settings

The Global Settings page allows you you to set the main parameters for voice and pitch (TK). The modulation outputs situated above the GLOBAL parameter button allows you to map MIDI and MPE modulation sources to different parameters.

The Global Page contains modulations sources that come from the keyboard or midi sequencer and parameters which are global to Generate.



Mono/Poly/Unison

The MONO/POLY/UNISON set of radio buttons allows you to select between a monophonic synth architecture, a polyphonic synth architecture.

ture, or a unison synth architecture - which is a poly synth with all the voices representing slightly detuned versions of the same note.

Voices Selector

The VOICES dropdown selects how many voices are used in POLY or UNI-SON modes. In MONO mode it does nothing.

Legato

The LEGATO button toggles a legato mode. When LEGATO is off, each note press will go through the entire ADSR cycle. However, when LEGATO is on, only staccato notes will trigger a new attack, legato notes will not.

Octave

The OCTAVE knob selects the base octave for the synth. This can be anywhere from -2 to +2 octaves.

Pitch Bend

The PITCH BEND knob controls the Pitch Bend amount. This is useful in general. When MPE is active this must be set to the same amount as the MPE controller to work correctly.

To prevent this setting being overwritten when a preset loads, enable Pitch Bend Lock in the Settings menu.

Portamento

The PORTAMENTO knob controls the Portamento time in mS. For MONO and UNISON operation, this control uses the previously played note as the starting point for its transition to the newly pressed note. In POLY mode, portamento uses the active note closest to the newly played one as the starting point.

Always

When ALWAYS is active, portamento will always be applied to all new notes. When inactive, portamento will only occur for notes that have been activated while another note is already playing (staccato notes). Great when combined with LEGATO!

Drift (MONO and POLY mode)

The DRIFT knob controls the amount of pitch drift in each voice. This is an important "feature" of analog poly synths and gives a great effect when used here.

Detune (UNISON only)

The DETUNE knob controls the amount of detune applied to each voice in UNISON mode. Big. Thick. Sounds.

Stereo Width

The STEREO WIDTH knob controls the stereo image at the output of the LOW PASS GATE. In MONO mode this uses the X and Y axis of the GENERATOR output to create very wide lead sounds. In POLY and UNISON mode it pans the various voices in the stereo field to create stereo width.

Global Modulation Outputs

These modulation outputs allow common MIDI and MPE controller signals to be mapped to parameters.



- 1. **VEL** maps the the current MIDI note's velocity to any Modulation Input.
- 2. MOD maps the MIDI Mod Wheel Output to any Modulation Input.
- 3. **KEY** maps the relative pitch from the currently pressed KEY to any Modulation Input. This can be used for adding key following to any parameter.
- 4. **PRS** maps the midi Pressure output to any Modulation Input. When MPE is active this is per note.
- 5. **TMB** is the MPE Timbre Modulation Output, also known as MIDI CC74. It's often mapped to the height along the key on several common MPE controllers. This is only available when MPE is enabled.

3.4.2 Envelope 1&2

There are two envelope generators which are triggered by a note on event. These each create three modulation signals when a note is pressed. These are a full ADSR envelope, an AD envelope, and an ASR envelope. All three of these envelopes can be used as modulators.



Attack

The ATTACK slider is the attack time of the envelope in mS.

Decay

The DECAY slider is the decay time of the envelope in mS.

Sustain

The SUSTAIN slider is the sustain level of the envelope.

Release

The RELEASE is the release time of the envelope in mS.



Envelope Outputs

1. **ADSR** maps the envelope's ADSR output to a Modulation Destination.

- 2. **ADR** maps the envelope's ADR output to a Modulation Destination. This envelope will always return to zero when it has completed its decay phase, so the Sustain control will not affect its operation. If a note is released before the envelope has finished decaying, the signal will continue to decay using the Release time.
- ASR maps the envelope's ASR output to a Modulation Destination.
 This envelope rises according to the Attack time and remains at the Sustain level until the note is release. The decay control does not affect its operation.

3.4.3 LFO 1&2

There are two LFOs, each of which have a sine, triangle, pulse, sawtooth, and ramp output.



BEATS

The BEATS knob to set the LFO Rate in Beats. This knob is only available when the TEMPO button is on.

FREQUENCY

The FREQUENCY knob to set the LFO Rate in Hz. This knob is only available when the TEMPO button is off.

TEMPO

The TEMPO button toggles whether the BEATS or FREQUENCY knob is active.

LFO SYNC

The LFO SYNC dropdown determines what your LFO does when a new note is played.

- 1. **Free Run:** The LFO will never retrigger when it receives a note on event.
- 2. **Retrigger:** The LFO will retrigger when it receives a note on event. Retrigger is applied on a per-voice basis.
- 3. **Play Sync:** If your DAW's transport isn't in "Play", the LFO will retrigger when it receives a note on event. Setting your DAW's transport to "Play" will cause the LFO to retrigger and ignore note events while in "Play". Retrigger is applied across all voices.

PULSE WIDTH

The PULSE WIDTH knob will set the pulse width of the triangle and pulse waves.

PHASE

The PHASE knob will set the LFO's phase offset.



LFO Outputs

- 1. Sine outputs a sine wave
- 2. **Triangle** outputs a triangle wave. Control the triangle's width using the Pulse Width knob.
- 3. **Pulse** outputs a pulse wave, also known as a square wave. Control pulse/square's width using the Pulse Width knob.
- 4. Saw outputs a down-going sawtooth wave.
- 5. Ramp outputs an upward-going ramp wave.

3.4.4 Sample + Hold

The Sample and Hold (S+H) module provides a source of randomness to the modulation section.



Beats

The BEATS knob sets the sample and hold sampling rate in beats. It also sets the likelihood of the glitch output flipping state. This knob is only visible when TEMPO is set to on.

Frequency

The FREQUENCY knob sets the sample and hold sample rate in Hz. It also sets the likelihood of the glitch output flipping state. This knob is only visible when the TEMPO is set to on.

Tempo

The TEMPO button controls whether the sample frequency is set in Beats or Hz.

S+H SYNC

Use the S+H SYNC dropdown to determine what the Sample and Hold module does when a new note is played.

- 1. **Free Run:** The Sample and Hold will never retrigger when it receives a note on event.
- 2. **Retrigger:** The Sample and Hold will retrigger, capturing a new noise sample and continuing operation at the chosen rate when it receives a note on event. Retrigger is applied on a per-voice basis. Does not affect the noise output.
- 3. **Play Sync:** If your DAW's transport isn't in "Play", the S+H will retrigger when it receives a note on event. Setting your DAW's transport to "Play" will cause the Sample and Hold to retrigger and ignore note events while in "Play". Retrigger is applied across all voices. Does not affect the noise output.
- 4. **Oneshot:** The Sample and Hold will retrigger when it receives a new note event, capturing a new noise sample value. It will output this

value until another key is pressed. Glitch output is not affected by this setting.




Sample and Hold Outputs

- 1. **Noise** outputs white noise. The Sample and Hold module controls have no effect on this output.
- 2. **Sample and Hold** outputs the sample and hold signal. This signal periodically samples the noise signal based on the rate and holds it until the next period.
- 3. **Sample and Glide** outputs the sample and glide signal. This periodically samples the noise output, but instead of holding it glides to the next value.
- 4. **Glitch** outputs either 0 or 1, randomly flipping between the two. How often this flip happens is random, but it's based on the rate as set by the Frequency or Beats control.

3.4.5 Step Sequencer

The SEQ module provides an 8-step step sequencer allowing you to sequence any of the Modulation Destinations.

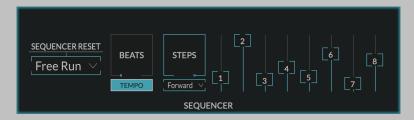

BEATS

The BEATS knob allows you to set the sequence step interval in beats. This knob is only available when the TEMPO button is on.

FREQUENCY

The FREQUENCY knob allows you to set the sequence step interval in Hz. This knob is only available when the TEMPO button is off.

TEMPO

The TEMPO button determines whether the sequence step interval is set in beats or Hz.

STEPS

The STEPS knob determines the number of steps available to the sequencer.

SEQUENCER RESET

The SEQUENCER RESET dropdown to determine what the Sequencer module does when a new note is played.

- 1. Free Run: The sequencer will not reset when it receives a note on event.
- 2. **Retrigger:** The sequencer will reset when it receives a note on event. Reset is applied on a per-voice basis.
- 3. **Play Sync:** If your DAW's transport isn't in "Play", the sequencer will reset when it receives a note on event. Setting your DAW's transport to "Play" will cause the sequencer to reset and ignore note events while in "Play". Reset is applied across all voices.

Sequencer Direction

The SEQUENCER DIRECTION dropdown, located beneath the STEPS parameter knob, allows you to select the Sequencer direction. You can select one of four:

- 1. **Forward** runs through the steps left to right, then starts at 1 again.
- 2. **Backward** runs through the steps right to left, then starts at the highest again.
- 3. **Pendulum** runs the step sequencer forward, the backward, then forward again, then backward again...
- 4. **Random** randomly selects a new step each interval.



Sequencer Outputs

- 1. Step Out outputs the step value for the current step.
- 2. Glide Out glides from one step value to the next.
- 3. Ramp Down Out ramps from the step value to zero during each step interval.
- 4. Ramp Up Out ramps from zero to the step value during each step interval.

3.5 Effects and Output


Generate also contains a series of output effects and an output section. The small knob next to each effects page controls the amount of effect being applied. Press the button and dive into the page to fine tune the effect. Each of the modules in the section also have Mini Knobs, which are placed on next to the button that reveals that module's parameter page. These Mini Knobs allow you to change how much an effect is applied to the output signal. Clicking a Mini Knob will change the bypass state of its associated module. When the module is active, a small dot will appear in the center of the associated Mini Knob. When bypassed, this dot will disappear, and the knob will dim.





3.5.1 EQ

The EQ section is first in line. It consists of 4 nodes with variable GAIN, FREQUENCY, Q and EQ TYPE.



GAIN

Each EQ node can set a gain by dragging it up and down.

FREQUENCY

Each EQ node can set a frequency by dragging it left and right.

Type

Each EQ node can function as a low/high shelf, low/high cut, and peak filter. Option-click (alt-click on Windows) a node to cycle through different types.

Q

Increasing the Q setting decreases the EQ node's bandwidth. Q affects low and high shelf Types a little differently, increasing and decreasing the gain of frequencies surrounding the center frequency. This boost/cut effect becomes more intense and localized (e.g., the bandwidth decreases) as Q increases. Increasing Q on the low shelf increases frequencies below the cutoff and decreases higher frequencies, and vice versa.


Hovering over an EQ node will reveal handles on either side. Drag these towards or away from the node to increase or decrease the Q.

Amount

Controls the amount of eq applied to the output by scaling all the gain controls. Please note that this does not scale the amount of any selected Highpass or Lowpass filters. This control does not appear on the main EQ page, but is accessible via the module's Mini Knob.

3.5.2 Chorus

The Chorus section is next, using a series of modulated all pass filters to add subtle width or seasick pitch drift to your signal.

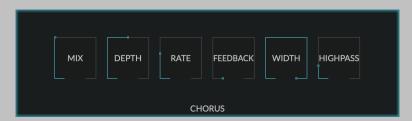

Mix

The MIX knob controls the amount of chorus applied to the output. Also mapped to the Chorus module's Mini Knob.

Depth

The DEPTH knob controls the depth of the chorus effect.

Rate

The RATE knob controls the chorus' modulation rate.

Feedback

The FEEDBACK knob controls the feedback of the chorus effect.

Width

The WIDTH knob controls the stereo width of the chorus effect.

Highpass

The HIGHPASS knob allows you to highpass the chorus effect. This can be useful for creating chorused bass sounds that still maintain their dignity.

3.5.3 **Delay**

Generate's Delay module can be used to achieve subtle slapback, rich echoes, or even as a free running looper. There is a limiter in the feedback path that will saturate and limit the signal, and which can be used as a ducker.



Beats

The BEATS knob controls the delay time in beats. It is only displayed when the TEMPO button is on.

Time

The TIME knob controls the delay time in mS. It is only displayed when the TEMPO button is off.

TEMPO

The TEMPO button controls whether the delay time is set in Beats or mS.

Feedback

The FEEDBACK knob controls the amount of feedback in the delay. Settings this knob above 100% will cause the delayed signal to increase and volume and eventually oscillate.

Delay Mod

The DELAY MOD knob controls the amount of modulation applied to the delay.

Highpass

The HIGHPASS knob sets the frequency of a highpass filter on the delay.

Lowpass

The LOWPASS knob sets the frequency of a lowpass filter on the delay.

Ducking

The DUCKING knob set the amount of ducking applied to the delay.

Level

The LEVEL knob controls the level of the delay that is mixed in with the dry signal. Also mapped to the Delay module's Mini Knob.

3.5.4 Reverb

Generate's reverb algorithm can add a small amount of space to your sounds or create endless soundscapes from simple inputs.



Mix

The MIX knob sets the reverb mix, or the amount of reverb that you hear at the output. Also mapped to the Reverb module's Mini Knob.

Predelay

The PREDELAY knob sets the amount of delay before the reverb tail.

Decay Time

The DECAY TIME knob sets the decay time of the reverb in seconds.

Mod

The MOD knob sets the amount of modulation applied to the Decay Time, this will create a rich detuned sound.

Low Freq

The LOW FREQ knob sets the cutoff frequency of the Reverb's highpass filter.

High Freq

The HIGH FREQ knob sets the cutoff frequency of the Reverb's lowpass filter.

Color

The COLOR knob sets affects the resonance of the reverbs modes. Turning it down will result in a flatter tail, while turning it up will result in a more resonant effect. Both sound nice.

3.5.5 Limiter

By default, the limiter is placed after EQ processing, but it can also be placed before the EQ or at the very end of the effects chain.



Input Level Meter

This meter shows the input level to the Limiter section from -60dB to 0dB. The peak hold meter is there simply to show if the peak was above 0dB, but no clipping occurs at this point. It can be clicked to be cleared.

Limiter Position

The LIMITER POSITION dropdown allows the limiter to be placed before or after the EQ module, or at the end of the effects chain.

Gain

The GAIN knob sets the gain that is applied to the signal before limiting. This can be set negative if you're settings are very loud and you want to decrease them, or it can be pushed up to +24dB if you want to really overdrive the limiter.

Make Up

Activating the MAKE UP button will turn up the signal's gain after limiting based on the Gain setting. Turning it off will reduce the threshold of the limiter as you turn up the GAIN.

Compress

The COMPRESS knob increases the amount of compression applied in the limiter. When it's turned down the limiter will create distortion, when turned up with limiter will create compression instead.

Highpass

The HIGHPASS knob sets the cutoff frequency of the highpass filter applied to the sidechain signal. Use this to decrease the limiter's sensitivity to low frequencies.

Output Level Meter

This meter shows the output level of the limiter, as well as the gain reduction being applied.

3.5.6 **Output**

This is the final output of the effects section and the level control for the whole instrument. Turning the OUTPUT knob down to -100dB will mute the output.



The output level meter shows the final output level of the plug-in from -60dB to 0dB. A peak hold meter shows if any clipping of the output occurred and can be cleared by clicking.

Chapter 4

Installation and Instantiation

Newfangled Audio plug-ins are distributed by Eventide and like other plug-ins Eventide distributes, Generate uses PACE's ilok.com licensing system, with or without and iLok hardware dongle. Each license provides two activations which can reside on either your computer or on an iLok license dongle. Once you've purchased your plug-in, you'll need to register it on Eventide's website, activate your license, and install the plug-in on to your computer

4.1 Registering Your Plug-in

When you purchase Generate, you'll receive a Serial Number and License Key. The Serial Number will be two letters followed by 6 numbers. If you have an individual Generate license, the Serial Number will start with NQ (i.e. NQ-#######). The License Key will be 3 sets of 4 characters, a letter or a number, each; like XXXX-XXXX.

Once you've received these codes, you can register your plug-in on the Eventide website. To do so, please log in to http://www.eventideaudio.com, navigate to My Account in the top right corner, and select Register a New Product. Then, fill out the form by selecting Native Plug-in (VST, AU, AAX) in the Product Category field, select Generate in the Product list, and enter your Serial Number, License Key, and iLok.com account name. If you don't yet have an ilok.com account, you can create one for free at http://www.ilok.com. Once you've done so, press Register.

Once you've entered this information and pressed the Register button, Eventide will send the applicable plug-in license to your ilok.com account, which you will need to activate to your computer or iLok dongle.

4.2 Activating Your License

To activate and manage your plug-in licenses you'll need to install PACE's iLok License Manager software which you can download from http://www.ilok.com. If you don't have this software installed, please download and install it now.

Once you have installed and launched iLok License Manager you should be able to log in to your account by clicking the large "Sign In" button in the upper left hand corner of the application. Once you have, you should be able to see available licenses by choosing the Available tab at the top of the iLok License Manager application. If you have successfully registered your plugin, your Generate Native license will be available in this list. Please activate this license by dragging it to either your computer or iLok dongle listed on the left. When you do so, you will be asked to confirm the activation, and you will be able to see it by clicking on the location you have chosen. At this point your license is activated.

4.3 Installing Your Plug-In

You should have been given a link to the Generate plug-in installer when you purchased your plug-in, but if you haven't, you can find downloads for all of our plug-ins at http://www.newfangledaudio.com/downloads. Please download and launch the correct installer for your system.

Once you've launched the plug-in installer, it will take you through several pages of options. We have tried to choose defaults for these options which will best serve the majority of users, but it is worth a minute to make sure you understand these options before clicking through to the next page. A common issue with Windows VST plug-ins is choosing the correct VST directory, which can be different on each system. Please pay special attention to this setting. Once you have followed through the installer, your plug-ins and presets should be in your chosen locations, and you can hit finish to end the installer application.

At this point, you should be ready to use your Generate Plug-In.

4.4 Moving or Removing an Activation

If at any point, you decide to move your plug-in activation, you can do so in iLok license manager. To move an activation between an iLok dongle and your computer, simply plug in the iLok, locate the license in its current location, and drag it to its new location. To deactivate a license, find it in its location, right click on it, and choose deactivate.

Remember that each Generate Plug-In License comes with two activations, which can be used on either a computer or iLok dongle, meaning you can use Generate in two locations at the same time.

Chapter 5

Conclusion

We hope you enjoy Newfangled Audio's Generate plug-in. If you have any questions, comments, or concerns please write us at support@newfangledaudio.com

Chapter 6

About Newfangled Audio

The Oxford English Dictionary defines Newfangled as "objectionably new".

Music technology can sometimes be a backward looking pursuit. This is understandable, the purpose of music technology should be to help musicians make great music. There have been many great pieces of gear in the past and we should seek to keep these pieces and make them available to people who want to use them, and the time and dedication required to master a musical instrument means that changes in their design are often evolutionary rather than revolutionary.

However, the great pieces of gear from yesteryear are more often than not those that contained new ideas in their time. The reverence we have for these pieces can sometimes turn into fetishism, and mindless re-creation of classic gear can fail to inspire musicians and artists to take new risks. It's important to make sure artists and engineers have access to good tools that inspire them and don't stand in their way, but these tools should never be used as a security blanket to stand in the way of an artist or engineers ears and taste.

Newfangled Audio seeks to only make gear that incorporates new ideas. We want to make gear that is great, but only using ideas that others are not. We realize that deviation from the norm might sometimes be objectionable. The Oxford English Dictionary defines Newfangled as "objectionably new".