### Getting started with the Suzi Pre

# **Configurations options**

## 1.0 Power supply

Before playback, with all connections made and with volume set to zero, connect the unit to the supplied power supply: the unit will automatically turn on. The Suzi Pre will initiate start-up (the power button displays white along with the selected input colour). Once complete, the white light extinguishes and the unit is ready to use.

• CHORD •

Chord Electronics Ltd.

### 2.0 Connectivity

Connections include:

Inputs: 1x stereo RCA turntable input (MC/MM), 2x stereo RCA Outputs: 1x 3.5 mm headphone, 1x 6.3 mm headphone, 1x stereo RCA

### 3.0 Manual


For more information on how to use the Suzi Pre with additional units, please refer to the manual below or use the QR code:

https://chordelectronics.co.uk/product/suzi-pre



# 1.0 Configurations

Illustrated below are the five core configuration options for the Suzi amplifiers.

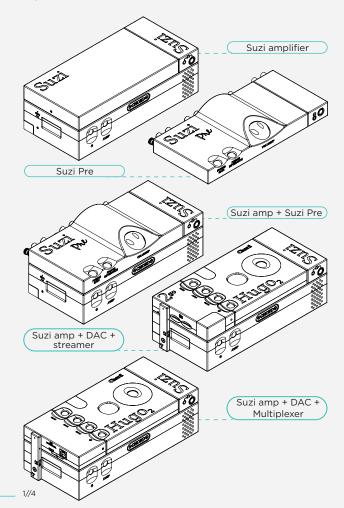



# Get started with the Suzi (power) amplifer

## 1.0 Power supply

Before playback, connect the supplied power supply and the power button will display red. Press the power button to wake the unit from standby to on; the power button briefly displays green before settling on teal.

## 2.0 Connectivity


Connections include:

Inputs: 2 x sets of RCA inputs


Outputs: 1 x pair of banana sockets for speakers,  $1 \times 12 \text{ V DC}$  jack output for use with other products, 5 V Micro USB (for use with the Hugo 2 /multiplexer or 2go).


# 3.0 Removing the Suzi cover block

To remove the block, unscrew the hex bolt at the far end of the cover block. Carefully lift the cover block while gently sliding it apart from the unit. Unscrew the attached grub screw from the Suzi, keeping them both safe for reattachment.

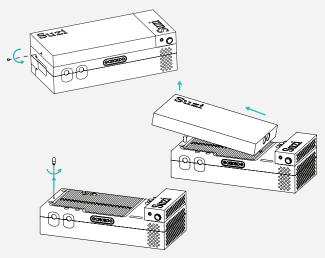

Carefully place a connecting unit on top of the Suzi power amp and ensure they are aligned. Gently slide the partnering device towards the Suzi to connect any (female) outputs to Suzi's (male) inputs.





#### 4.0 Manual

For more information on how to use the Suzi with additional units, please refer to the manual below or use the QR code:

https://chordelectronics.co.uk/product/suzi



2//4