

# EQUINOX

## Super Boogie

User Manual



Order code: EQLED203

### WARNING

### FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!

- Before your initial start-up, please make sure that there is no damage caused during transportation.
- Should there be any damage, consult your dealer and do not use the equipment.
- To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.
- Please note that damages caused by user modifications to this equipment are not subject to warranty.



### IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.

- Never let the power cable come into contact with other cables. Handle the power cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the unit.
- Do not open the equipment and do not modify the unit.
- Do not connect this equipment to a dimmer pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not sit the equipment on a flat surface as this can block the air intake to cool the LED.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available mains supply voltage is between 100~240V AC, 50/60Hz.
- Make sure that the power cable is never crimped or damaged. Check the equipment and the power cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately and have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not connect power or switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, stop use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Pro Light dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- This lighting fixture is for professional use only - it is not designed for or suitable for household use. The product must be installed by a qualified technician in accordance with local territory regulations. The safety of the installation is the responsibility of the installer. The fixture presents risks of severe injury or death due to fire hazards, electric shock and falls.
- Warning! Risk Group 2 LED product according to EN 62471. Do not view the light output with optical instruments or any device that may concentrate the beam.
- WARRANTY: One year from date of purchase.

### OPERATING DETERMINATIONS

- If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void. Incorrect operation may lead to danger e.g: short-circuit, burns and electric shocks etc.
- Do not endanger your own safety and the safety of others!



Incorrect installation or use can cause serious damage to people and/or property.


### Super Boogie

The extremely wide coverage effect with super bright LEDs makes the Super Boogie ideal for both installation and mobile applications. Brilliant beams of colour along with versatile light shows make this effect impressive under both DMX and built-in show modes.

- 24 x 3W LEDs (R: 6, G: 6, B: 6, A: 6)
- Beam angle: 78°
- DMX channels: 4/6 or 26 selectable
- Auto, sound active and master/slave modes
- 0-100% dimming and variable strobe
- IR remote control included
- Supplied with mounting bracket
- 4 push button menu with LED display
- IEC power input/output
- 3-Pin XLR input/output
- Convection cooled

Specifications	
Power consumption	72W
Power supply	100~240V, 50/60Hz
Fuse	F3A 250V
Dimensions	277 x 265 x 240mm
Weight	2.9kg
Order code	EQLED203

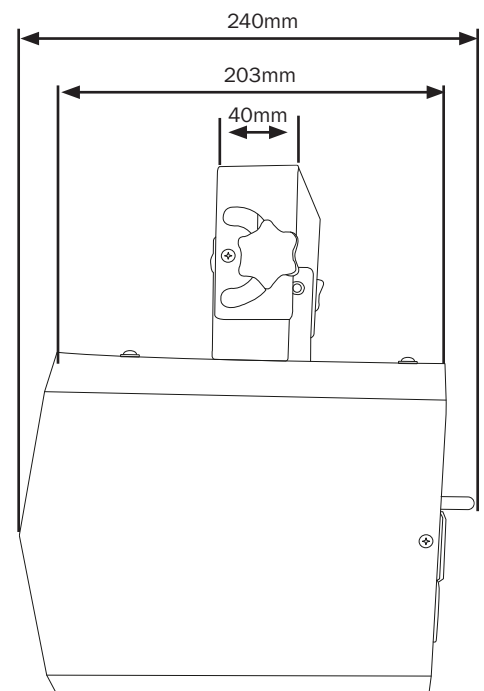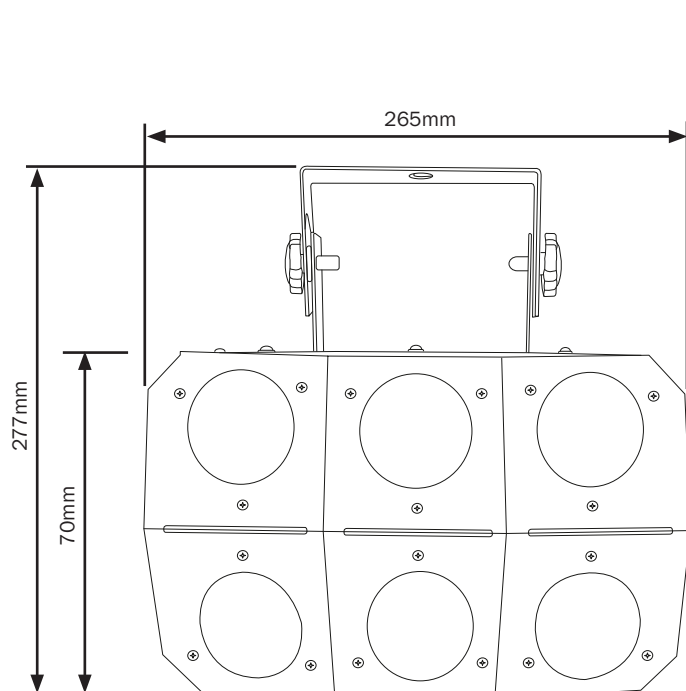


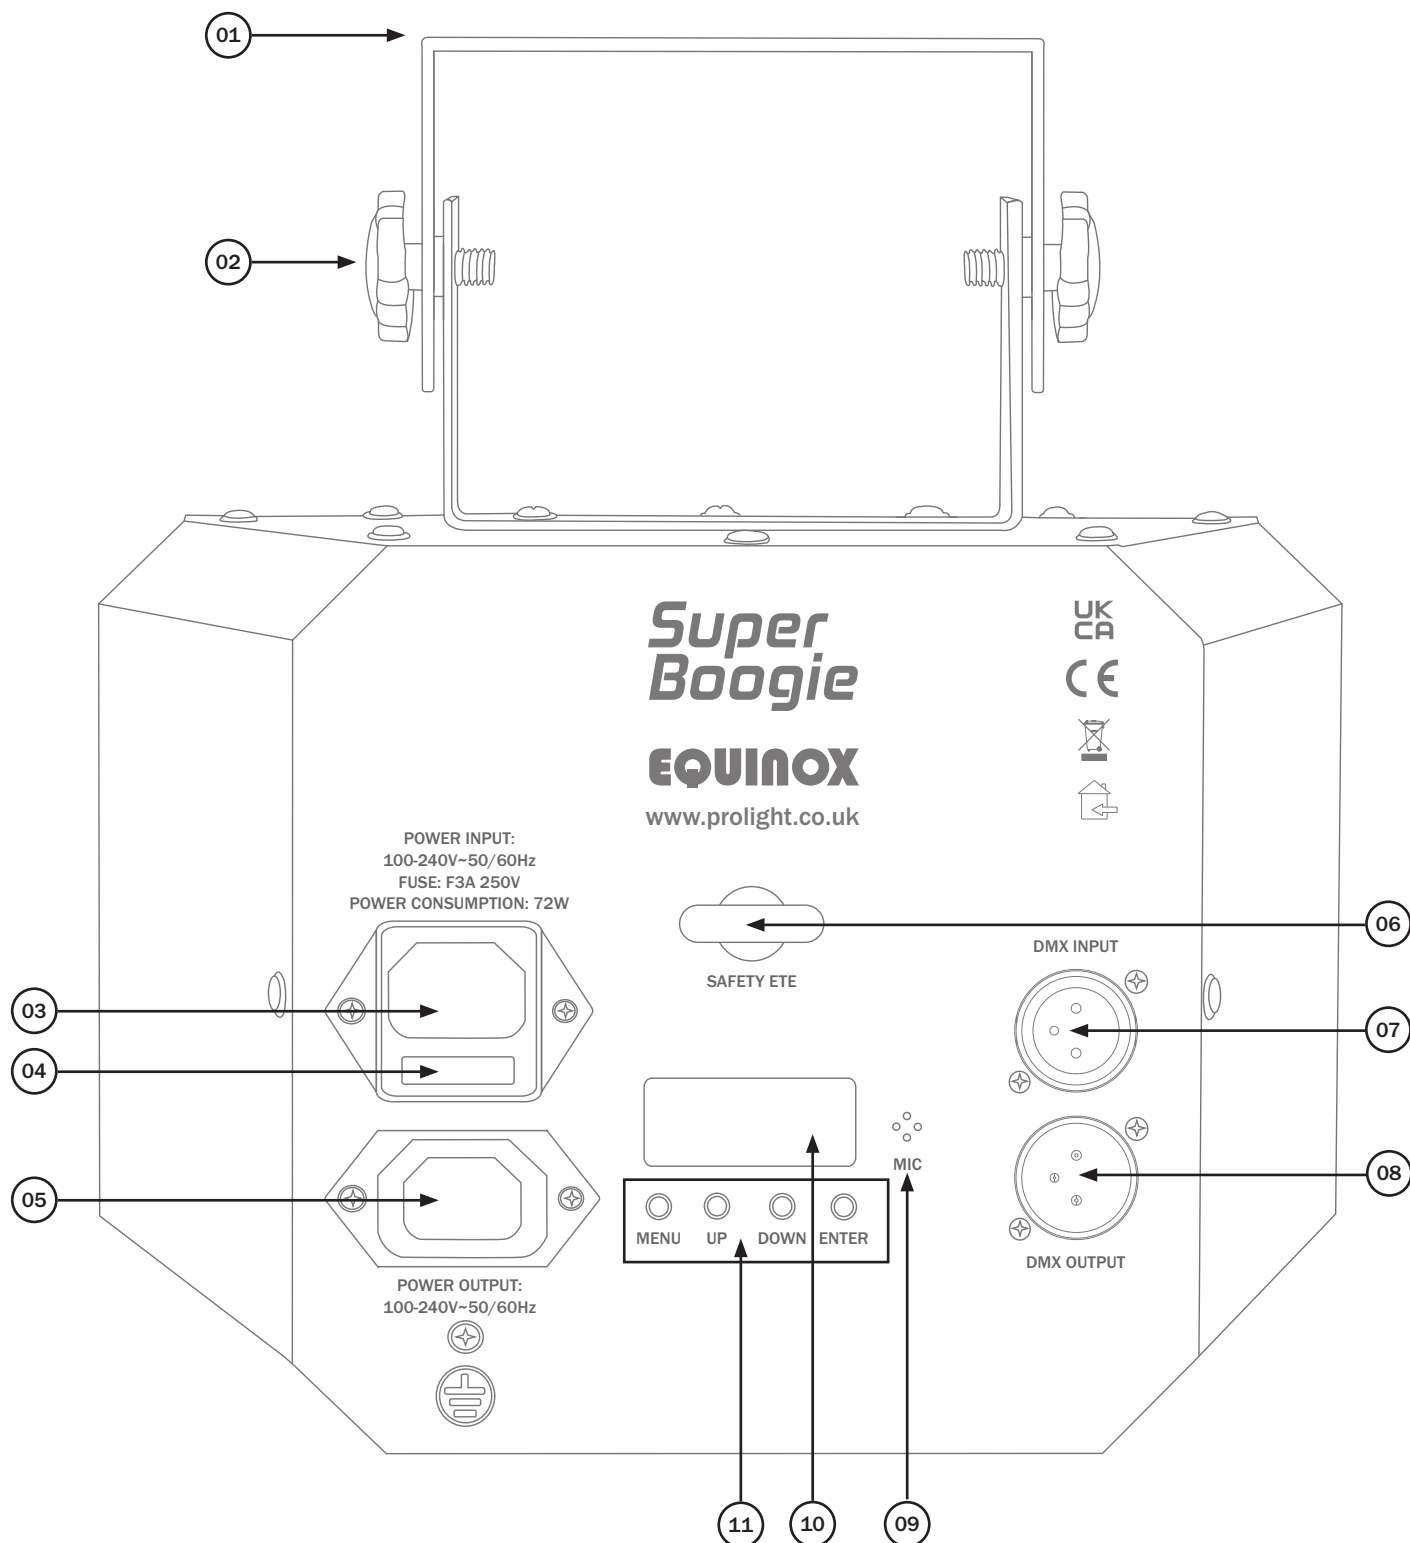

- 01 - Hanging bracket
- 02 - Adjustment knobs
- 03 - IEC power input
- 04 - Fuse F3A 250V
- 05 - IEC power output
- 06 - Safety eye

- 07 - 3-Pin DMX input
- 08 - 3-Pin DMX output
- 09 - Microphone
- 10 - LED display
- 11 - Function buttons

In the box: **1 x fixture,**  
**1 x power cable**  
**& 1 IR remote**

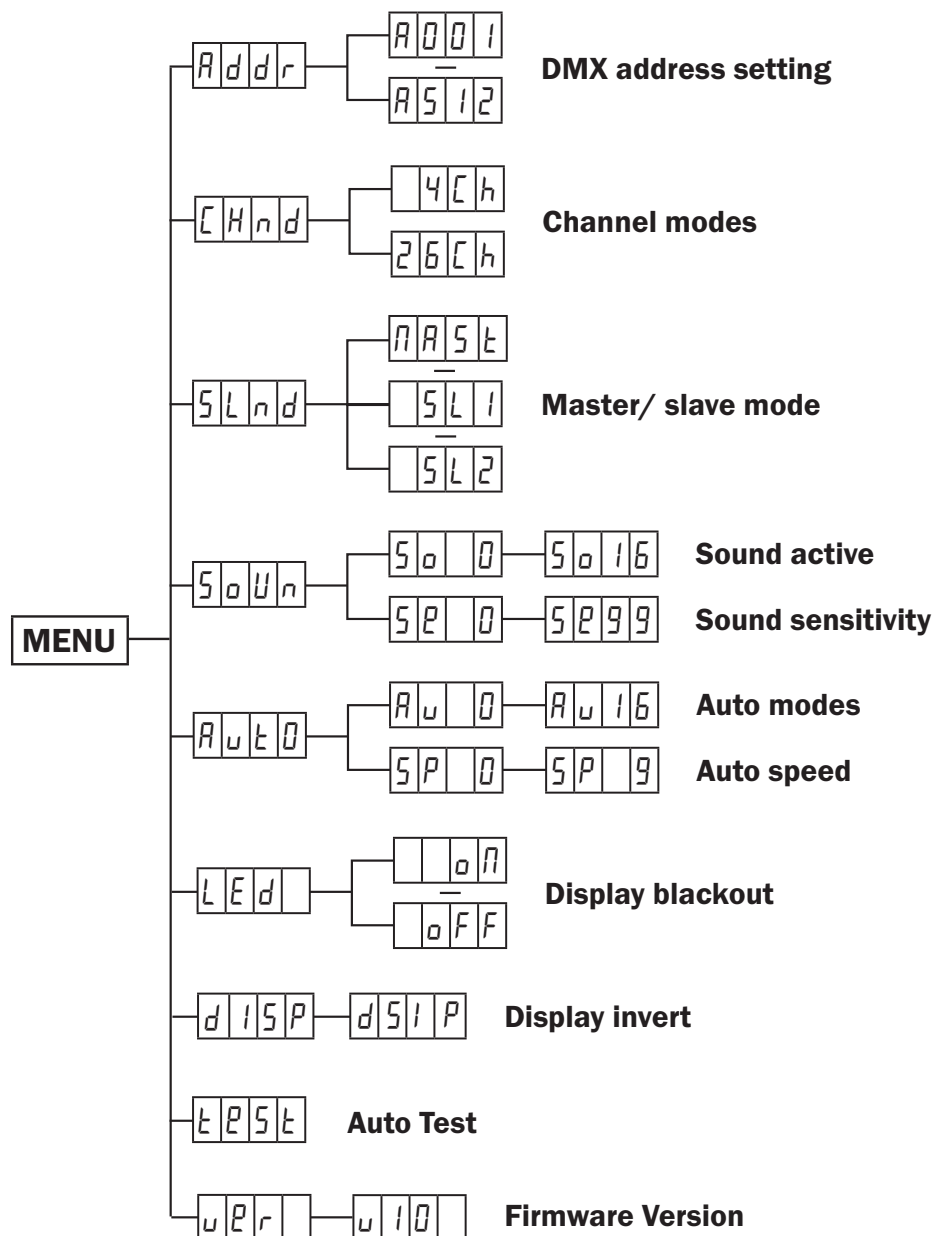

### DMX mode:

Operating in a DMX control mode environment gives the user the greatest flexibility when it comes to customising or creating a show. In this mode you will be able to control each individual trait of the fixture and each fixture independently.

To access the DMX address mode, press the **"MENU"** button and use the **"UP"** and **"DOWN"** buttons on the rear of the unit to show *Addr* on the LED display. Now press the **"ENTER"** button and use the **"UP"** and **"DOWN"** buttons to set the required DMX address. Press the **"ENTER"** button to confirm the setting. To exit out of any of the above options, press the **"MENU"** button.

### DMX channel mode:

To access the DMX channel mode, press the **"MENU"** button and use the **"UP"** and **"DOWN"** buttons on the rear of the unit to show *Chnd* on the LED display. Now press the **"ENTER"** button and use the **"UP"** and **"DOWN"** buttons to choose one of the 4 or 26 DMX channel modes. Press the **"ENTER"** button to confirm the setting. To exit out of any of the above options, press the **"MENU"** button.

4 Channel	26 Channel	Function		Value
1	1	Master dimmer (0-100%)		000-255
2	2	No function		000-007
		Strobe (slow-fast)		008-255
3		Colour Chase	No function	000-007
			Chase 01	008-022
			Chase 02	023-037
			Chase 03	038-052
			Chase 04	053-067
			Chase 05	068-082
			Chase 06	083-097
			Chase 07	098-112
			Chase 08	113-127
			Chase 09	128-142
			Chase 10	143-157
			Chase 11	158-172
			Chase 12	173-187
			Chase 13	188-202
			Chase 14	203-217
			Chase 15	218-232
			Chase 16	233-247
			All Chase	248-255
6		Chase Auto Speed (slow-fast)		000-127
		Chase Sound Sensitivity (slow-fast)		128-255
	3	Red 1 dimmer (0-100%)		000-255
	4	Green 1 dimmer (0-100%)		000-255
	5	Blue 1 dimmer (0-100%)		000-255
	6	White 1 dimmer (0-100%)		000-255
	7	Red 2 dimmer (0-100%)		000-255

4-ch Mode	26-ch Mode	Function	Value
	8	Green 2 dimmer (0-100%)	000-255
	9	Blue 2 dimmer (0-100%)	000-255
	10	White 2 dimmer (0-100%)	000-255
	11	Red 3 dimmer (0-100%)	000-255
	12	Green 3 dimmer (0-100%)	000-255
	13	Blue 3 dimmer (0-100%)	000-255
	14	White 3 dimmer (0-100%)	000-255
	15	Red 4 dimmer (0-100%)	000-255
	16	Green 4 dimmer (0-100%)	000-255
	17	Blue 4 dimmer (0-100%)	000-255
	18	White 4 dimmer (0-100%)	000-255
	19	Red 5 dimmer (0-100%)	000-255
	20	Green 5 dimmer (0-100%)	000-255
	21	Blue 5 dimmer (0-100%)	000-255
	22	White 5 dimmer (0-100%)	000-255
	23	Red 6 dimmer (0-100%)	000-255
	24	Green 6 dimmer (0-100%)	000-255
	25	Blue 6 dimmer (0-100%)	000-255
	26	White 6 dimmer (0-100%)	000-255

### Master/slave mode:

To set the master unit, press the **"MENU"** button and use the **"UP"** and **"DOWN"** buttons on the rear of the unit to show **SLnd** on the LED display. Press the **"ENTER"** button and use the **"UP"** and **"DOWN"** buttons on the rear of the unit to show **MASt**. Press the **"ENTER"** button to confirm the setting.

To set the other units in slave mode, press the **"MENU"** button and use the **"UP"** and **"DOWN"** buttons on the rear of the unit to show **SLnd** on the LED display. Now press the **"ENTER"** button and use the **"UP"** and **"DOWN"** buttons to choose either **SL 1** or **SL 2**.

Press the **"ENTER"** button to confirm the setting.

The unit/s will now run in sequence with the master unit.

To exit out of any of the above options, press the **"MENU"** button.

Please ensure that all slave units are set to the same DMX channel mode as the master unit.

### Sound active:

To access the sound active setting, press the **"MENU"** button and use the **"UP"** and **"DOWN"** buttons on the rear of the unit to show **SOUn** on the LED display. Now press the **"ENTER"** button and use the **"UP"** and **"DOWN"** buttons to choose between **SO 0** to **SO 16**. Press the **"ENTER"** button and use the **"UP"** and **"DOWN"** buttons to select the sound sensitivity between **SE 0** to **SE99**. Press the **"ENTER"** button to confirm the setting.

Value: 0 - 99 (0 = low, 99 = high)

To exit out of any of the above options, press the **"MENU"** button.

### Auto Modes:

To access the auto setting, press the **"MENU"** button and use the **"UP"** and **"DOWN"** buttons on the rear of the unit to show **Aut 0** on the LED display. Now press the **"ENTER"** button and use the **"UP"** and **"DOWN"** buttons to choose between **Aut 0** to **Aut 16**. Press the **"ENTER"** button and use the **"UP"** and **"DOWN"** buttons to select the auto speed between **SP 0** to **SP 9**.

Press the **"ENTER"** button to confirm the setting. To exit out of any of the above options, press the **"MENU"** button.

### Display blackout:

To access the display blackout setting, press the **"MENU"** button and use the **"UP"** and **"DOWN"** buttons on the rear of the unit to show **LEd** on the **LED** display. Now press the **"ENTER"** button and use the **"UP"** and **"DOWN"** buttons to choose between **on** (display blacks out) or **off** (display always on).

Press the **"ENTER"** button to confirm the setting. To exit out of any of the above options, press the **"MENU"** button.



### Display invert setting:

To access the display invert setting, press the “MENU” button and use the “UP” and “DOWN” buttons on the rear of the unit to show *dl SP* on the LED display. Now press the “ENTER” button and use the “UP” and “DOWN” buttons to choose between *dl SP* or *ds IP*. Press the “ENTER” button to confirm the setting. To exit out of any of the above options, press the “MENU” button.

### Software version:

To access the fixtures software version, press the “MENU” button and use the “UP” and “DOWN” buttons on the rear of the unit to show *uEr* on the LED display. Now press the “ENTER” button.


The unit will now display the fixtures software version e.g. *u 10*.

To exit out of any of the above options, press the “MENU” button.

### IR remote functions:

#### Button functions:

- 01 - Sets the unit into blackout on or off
- 02 - Runs the Auto modes - Use the Auto ‘+’ and ‘-’ buttons to change the desired program
- 03 - Runs the Sound 1 mode
- 04 - Runs the Sound 2 mode
- 05 - Runs the Sound 3 mode
- 06 - Runs the Strobe mode
- 07 - Sets the auto program - Use the ‘+’ and ‘-’ buttons to change the desired program
- 08 - Sets the run speed/sensitivity - Use the ‘+’ and ‘-’ buttons to change the desired speed (auto mode)/sensitivity (sound mode)
- 09 - Sets the strobe mode run speed - Use the ‘+’ and ‘-’ buttons to change the desired speed

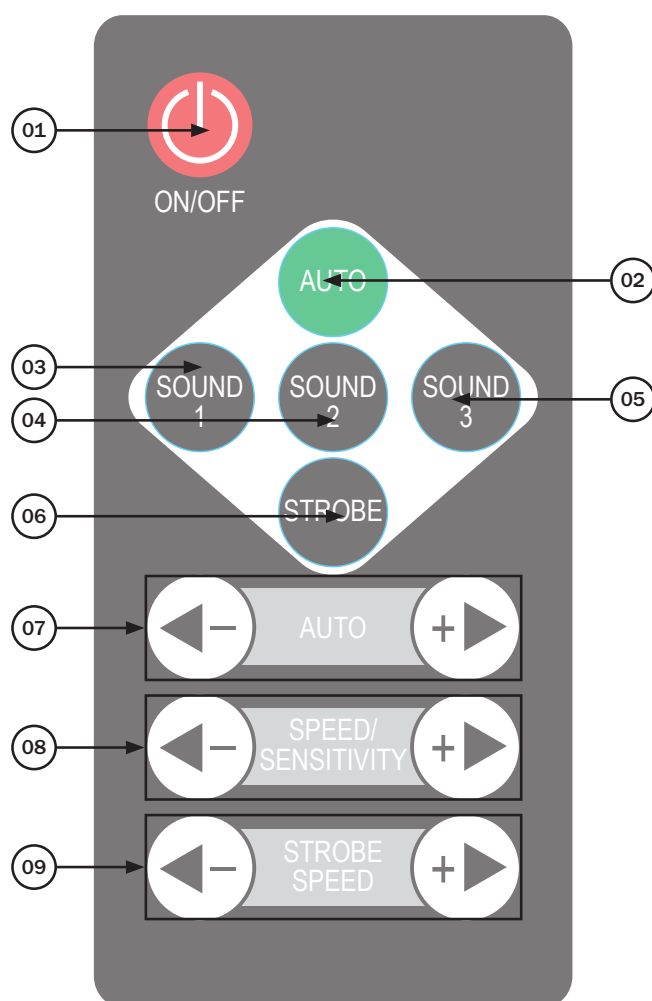

### Setting the DMX address:

The DMX mode enables the use of a universal DMX controller. Each fixture requires a “start address” from 1- 512. A fixture requiring one or more channels for control begins to read the data on the channel indicated by the start address. For example, a fixture that occupies or uses 7 channels of DMX and was addressed to start on DMX channel 100, would read data from channels: 100, 101, 102, 103, 104, 105 and 106. Choose a start address so that the channels used do not overlap. E.g. the next unit in the chain starts at 107.

### DMX 512:

DMX (Digital Multiplex) is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a data “out” terminal).

### DMX linking:

DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned to a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

### DATA cable (DMX cable) requirements (for DMX operation):

This fixture can be controlled via DMX-512 protocol. The DMX address is set on the back of the unit. Your unit requires either a standard 3-pin or 5-pin XLR connector for data input/output, see images below.



Further DMX cables can be purchased from all good sound and lighting suppliers or Prolight Concepts dealers.



Please quote:	3-Pin:	<b>CABL10 – 2m</b>	<b>CABL11 – 5m</b>	<b>CABL12 – 10m</b>
	5-Pin:	<b>CABL185 – 2m</b>	<b>CABL187 – 5m</b>	<b>CABL188 – 10m</b>

Also remember that DMX cable must be daisy chained and cannot be split.

### Notice:

Be sure to follow the diagrams below when making your own cables. Do not connect the cables shield conductor to the ground lug or allow the shield conductor to come in contact with the XLRs outer casing. Grounding the shield could cause a short circuit and erratic behaviour.

Pin Configuration	
3-Pin	5-Pin
Pin 1 - Ground	
Pin 2 - Negative	
Pin 3 - Positive	
-	Pin 4 - N/C
-	Pin 5 - N/C

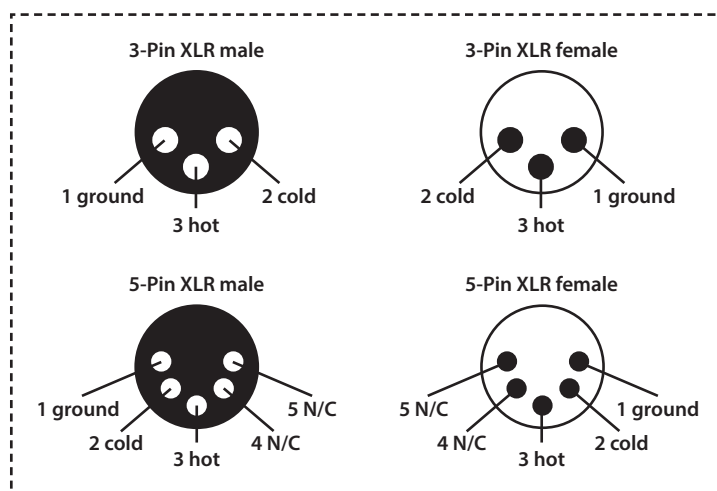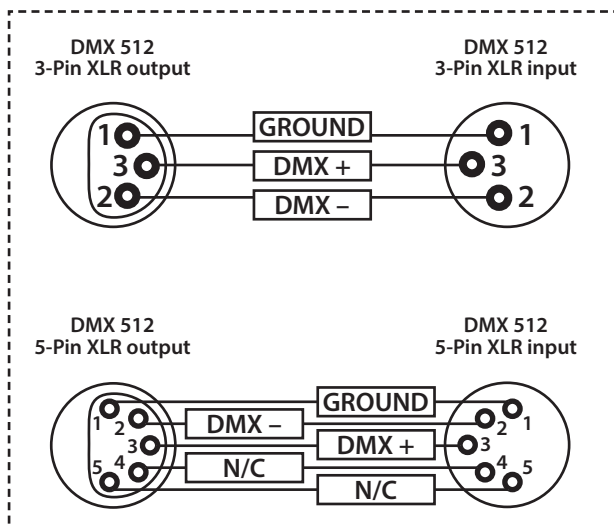


### Line termination:

When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behaviour.

Using a cable terminator will decrease the possibilities of erratic behaviour.


(3-pin - Order ref: CABL90,

5-pin - Order ref: CABL89)

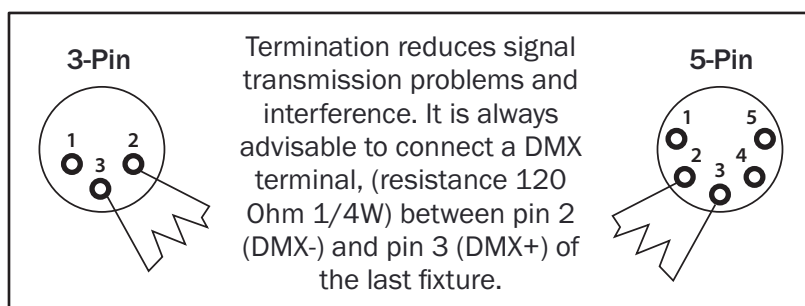

### 5-pin XLR DMX connectors:


Some manufactures use 5-pin XLR connectors for data transmission in place of 3-pin. 5-pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used. The diagram below details the correct cable conversion.

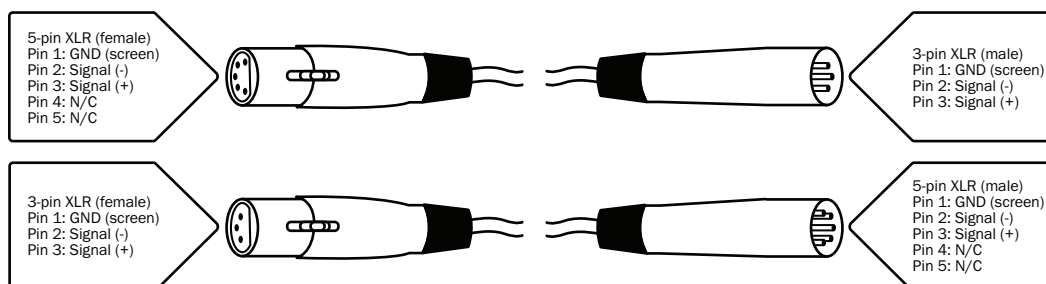

### Power linking:

This fixture provides power linking via the power output on the rear allowing multiple units to be connected together. The maximum number of fixtures that can be connected is 20 fixtures @ 240V or 10 fixtures @ 120V (including the first fixture). After the maximum number of fixtures are connected a new power run will need to be started.

Please note: Caution should be used when power linking other fixtures to the Super Boogie as the power consumption of other fixtures will vary. Fixtures fitted with lamps often require 2/3 times more current on startup, these may require their own power source..

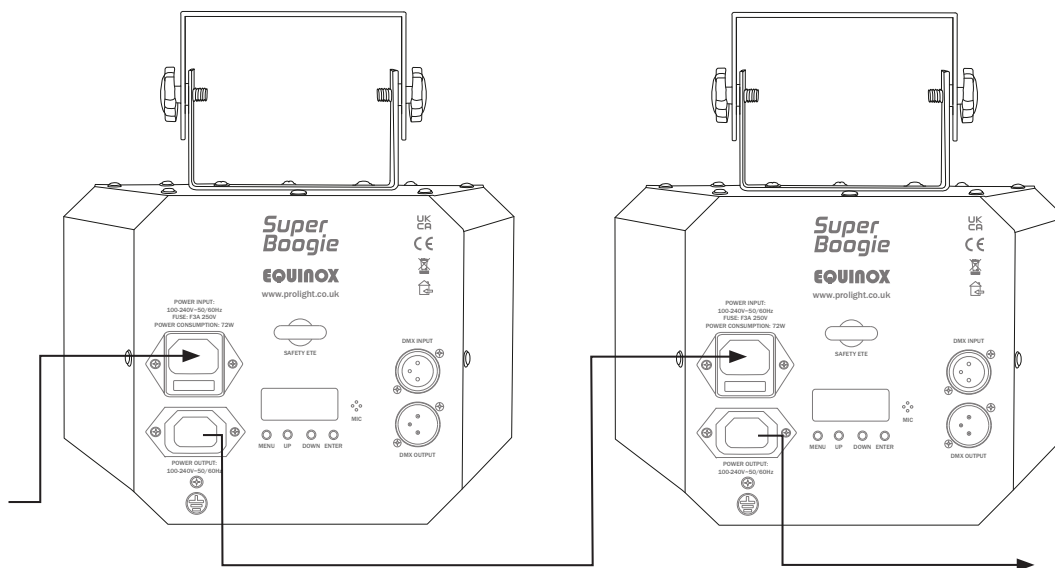

### **Correct Disposal of this Product (Waste Electrical & Electronic Equipment)**

**(Applicable in the European Union and other European countries  
with separate collection systems)**

This marking shown on the product or its literature, indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.